
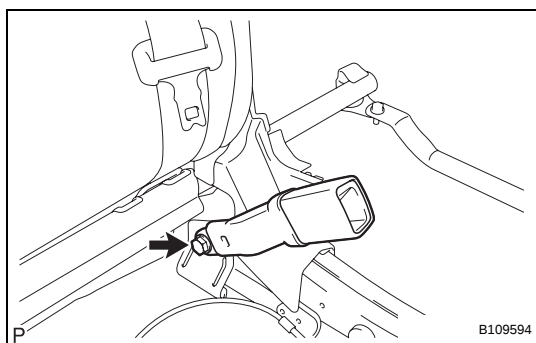


REMOVAL

1. REMOVE REAR SEAT TRACK BRACKET COVER (See page [SE-62](#))
2. REMOVE REAR SEAT ASSEMBLY RH (See page [SE-62](#))
3. REMOVE RECLINING COVER PROTECTOR LH (See page [SE-62](#))
4. REMOVE CENTER SEAT HINGE COVER UPPER LH (See page [SE-62](#))
5. REMOVE CENTER SEAT ASSEMBLY (See page [SE-62](#))
6. REMOVE REAR SEAT CUSHION MOULDING RH (See page [SE-65](#))
7. REMOVE REAR SEAT CUSHION MOULDING REAR RH (See page [SE-65](#))
8. REMOVE SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY (See page [SE-65](#))
9. REMOVE REAR SEAT TRACK BRACKET COVER (See page [SE-50](#))
10. REMOVE REAR SEAT ASSEMBLY LH (See page [SE-50](#))
11. REMOVE REAR SEAT CUSHION MOULDING LH (See page [SE-50](#))
12. REMOVE REAR SEAT CUSHION MOULDING REAR LH (See page [SE-50](#))
13. REMOVE SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY (See page [SE-50](#))
14. REMOVE REAR SEAT BELT ASSEMBLY INNER
 - (a) Disengage the bolt and remove the rear seat belt assembly inner.

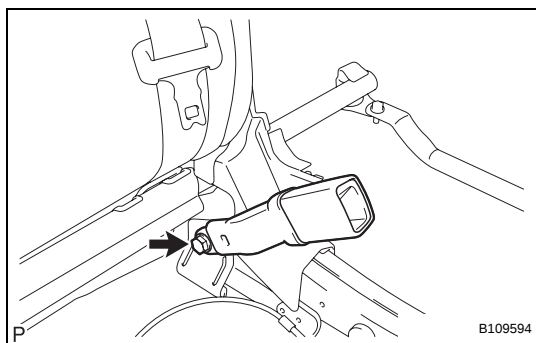

INSTALLATION

1. INSTALL REAR SEAT BELT ASSEMBLY INNER
 - (a) Install the rear seat belt assembly inner with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
2. INSTALL SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY LH (See page [SE-54](#))
3. INSTALL REAR SEAT CUSHION MOULDING REAR LH

4. INSTALL REAR SEAT CUSHION MOULDING LH
5. INSTALL REAR SEAT ASSEMBLY LH (See page [SE-55](#))
6. INSTALL REAR SEAT TRACK BRACKET COVER
7. INSPECT SLIDE ADJUSTER LOCK
SIMULTANEOUSLY (See page [SE-56](#))
8. INSTALL SEPARATE TYPE REAR SEAT CUSHION
ASSEMBLY (See page [SE-70](#))
9. INSTALL REAR SEAT CUSHION MOULDING REAR
RH
10. INSTALL REAR SEAT CUSHION MOULDING RH
11. INSTALL CENTER SEAT ASSEMBLY (See page [SE-71](#))
12. INSTALL CENTER SEAT HINGE COVER UPPER LH
13. INSTALL RECLINING COVER PROTECTOR LH
14. INSTALL REAR SEAT ASSEMBLY RH (See page [SE-72](#))
15. INSTALL REAR SEAT TRACK BRACKET COVER
16. INSPECT SLIDE ADJUSTER LOCK (See page [SE-73](#))