





REMOVAL

1. REMOVE REAR SEAT TRACK BRACKET COVER
(See page [SE-50](#))
2. REMOVE REAR SEAT ASSEMBLY LH (See page [SE-50](#))
3. REMOVE REAR SEAT TRACK BRACKET COVER
(See page [SE-62](#))
4. REMOVE REAR SEAT ASSEMBLY RH (See page [SE-62](#))
5. REMOVE TONNEAU COVER ASSEMBLY
6. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-7](#))
7. REMOVE DECK FLOOR BOX FRONT (See page [IR-8](#))
8. REMOVE DECK FLOOR BOX REAR (See page [IR-8](#))
9. REMOVE DECK NO.3 BOARD SUB-ASSEMBLY (See page [IR-8](#))
10. REMOVE DECK NO.2 BOARD SUB-ASSEMBLY (See page [IR-8](#))
11. REMOVE BACK DOOR WEATHERSTRIP
12. REMOVE REAR FLOOR FINISH PLATE (See page [IR-8](#))
13. REMOVE JACK CARRIER SUPPORT
14. REMOVE JACK ASSEMBLY
15. REMOVE JACK CARRIER ASSEMBLY
16. REMOVE DECK SIDE TRIM LH BOX (See page [IR-8](#))
17. REMOVE DECK SIDE TRIM RH BOX
18. REMOVE REAR DOOR SCUFF LH PLATE (See page [IR-6](#))
19. REMOVE REAR DOOR OPENING TRIM LH WEATHERSTRIP
20. REMOVE DECK SIDE TRIM LH COVER (See page [IR-8](#))
21. DISCONNECT REAR SEAT OUTER BELT ASSEMBLY
(a) Remove the bolt and disconnect the floor side of the rear seat outer belt assembly.
22. REMOVE REAR SEAT SIDE LH COVER (See page [IR-9](#))
23. REMOVE REAR FLOOR FINISH SIDE LH PLATE (See page [IR-8](#))
24. REMOVE ROPE HOOK (See page [IR-9](#))
25. REMOVE DECK TRIM SIDE LH PANEL ASSEMBLY
(See page [IR-9](#))

SB

26. REMOVE ROOM LAMP ASSEMBLY NO.2 (See page [IR-9](#))
27. REMOVE TONNEAU COVER HOLDER CAP NO.1
28. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER (See page [IR-10](#))
29. REMOVE REAR SEAT OUTER BELT ASSEMBLY

(a) Disconnect the bolt and the shoulder side of the rear seat outer belt assembly.

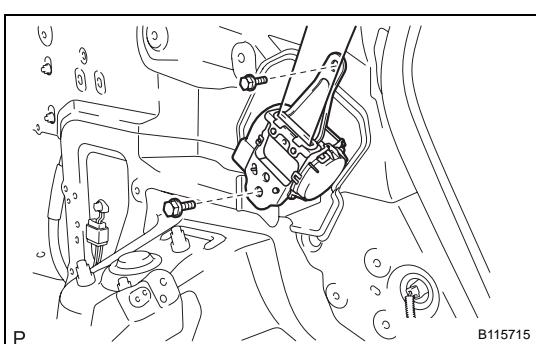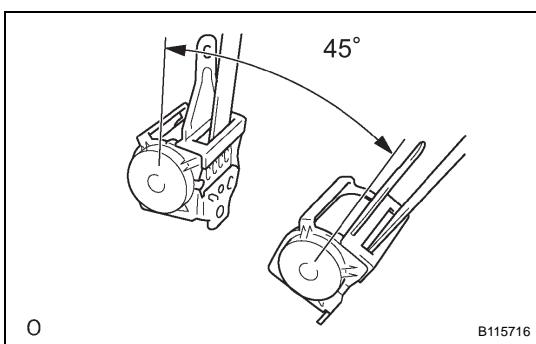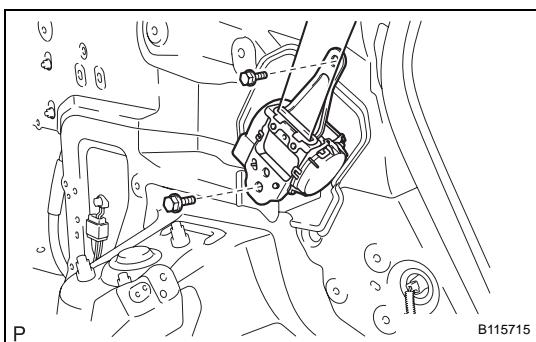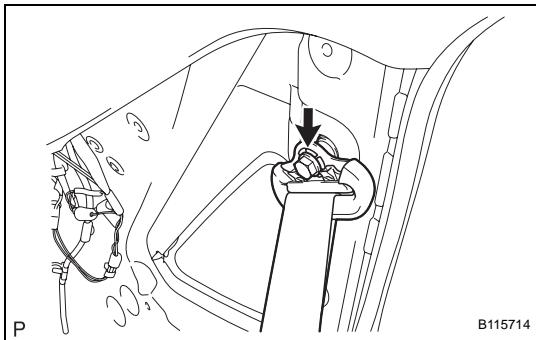

SB

(b) Remove the 2 bolts and rear seat outer belt assembly.

INSTALLATION

1. INSTALL REAR SEAT OUTER BELT ASSEMBLY

(a) Check the degree of tilt when the ELR begins to lock.

- (1) Check that the belt does not lock at less than 15 degrees of tilt in any direction but locks at over 45 degrees of tilt when gently moving the installed retractor.

NOTICE:

Do not disassemble the retractor.



(b) Install the rear seat outer belt assembly with the 2 bolts.

Torque: For upper bolt

7.5 N*m (77 kgf*cm, 66 in.*lbf)

For lower bolt

42 N*m (428 kgf*cm, 31 ft.*lbf)

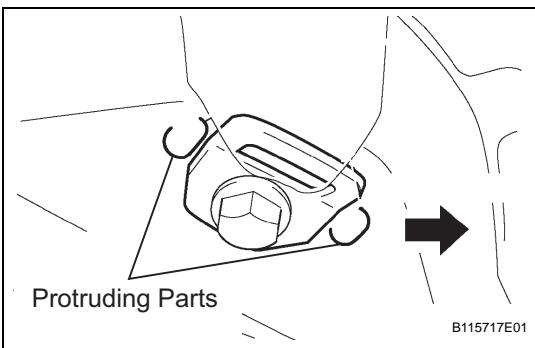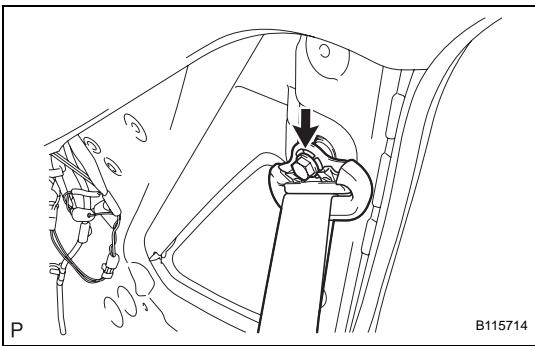

(c) Connect the shoulder side of the rear seat outer belt assembly with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

2. **INSTALL ROOF SIDE GARNISH ASSEMBLY INNER**
3. **INSTALL TONNEAU COVER HOLDER CAP NO.1**
4. **INSTALL ROOM LAMP ASSEMBLY NO.2**
5. **INSTALL DECK TRIM SIDE LH PANEL ASSEMBLY**
6. **INSTALL ROPE HOOK**
7. **INSTALL REAR FLOOR FINISH SIDE LH PLATE**
8. **INSTALL REAR SEAT SIDE LH COVER**
9. **CONNECT REAR SEAT OUTER BELT ASSEMBLY**
 - (a) Connect the floor side of the rear seat outer belt assembly with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - NOTICE:**
Do not allow the anchor part of the rear seat outer belt assembly and the protruding parts of the floor panel to overlap.
 - (b) Check if the ELR locks.

NOTICE:
The check should be performed with the outer belt assembly installed.

 - (1) With the belt assembly installed, check that the belt locks when it is pulled out quickly.
10. **INSTALL DECK SIDE TRIM LH COVER**
11. **INSTALL REAR DOOR OPENING TRIM LH WEATHERSTRIP**
12. **INSTALL REAR DOOR SCUFF LH PLATE**
13. **INSTALL DECK SIDE TRIM LH BOX**
14. **INSTALL DECK SIDE TRIM RH BOX**
15. **INSTALL JACK CARRIER ASSEMBLY**
16. **INSTALL JACK ASSEMBLY**
17. **INSTALL JACK CARRIER SUPPORT**
18. **INSTALL REAR FLOOR FINISH PLATE**
19. **INSTALL BACK DOOR WEATHERSTRIP**
20. **INSTALL DECK NO.2 BOARD SUB-ASSEMBLY**
21. **INSTALL DECK NO.3 BOARD SUB-ASSEMBLY**
22. **INSTALL DECK FLOOR BOX REAR**
23. **INSTALL DECK FLOOR BOX FRONT**
24. **INSTALL DECK BOARD SUB-ASSEMBLY**
25. **INSTALL TONNEAU COVER ASSEMBLY**
26. **INSTALL REAR SEAT ASSEMBLY RH (See page **SE-72**)**

27. INSTALL REAR SEAT TRACK BRACKET COVER
28. INSPECT SLIDE ADJUSTER LOCK (See page [SE-73](#))
29. INSTALL REAR SEAT ASSEMBLY LH (See page [SE-55](#))
30. INSTALL REAR SEAT TRACK BRACKET COVER
31. INSPECT SLIDE ADJUSTER LOCK (See page [SE-56](#))

SB