



SEAT BELT WARNING SYSTEM

PARTS LOCATION

w/ Navigation System:

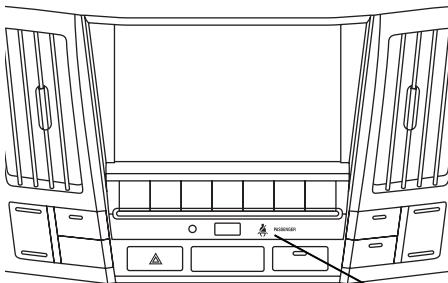


w/o Navigation System:

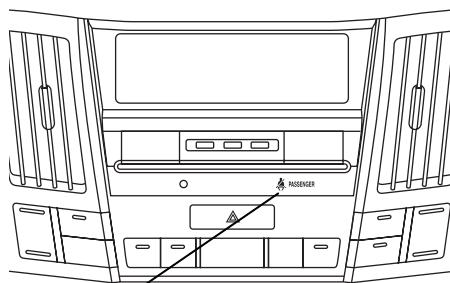

Passenger Side Seat Belt Warning Light

Combination Meter Assembly
(Driver Side Seat Belt Warning Light)

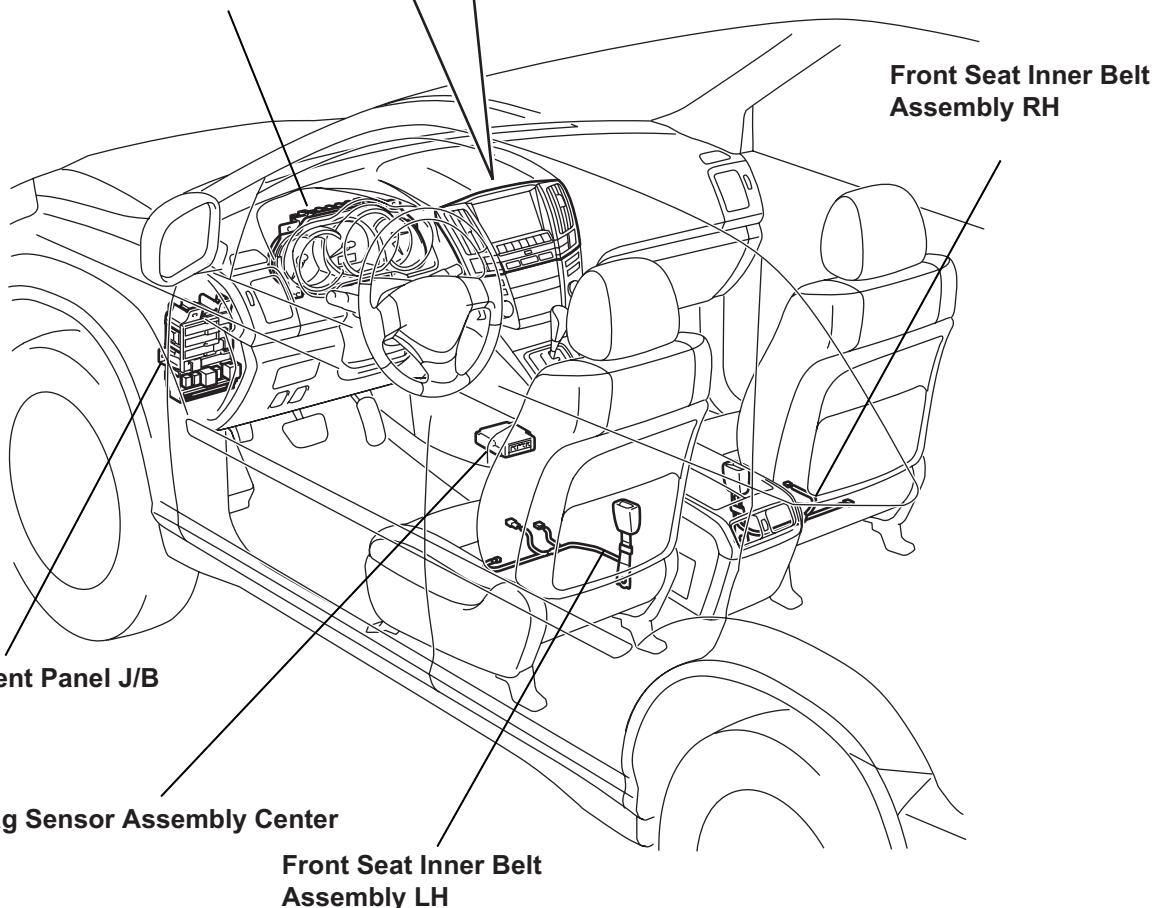

PROBLEM SYMPTOMS TABLE

SEAT BELT WARNING SYSTEM

Symptom	Suspected area	See page
Driver side seat belt warning light does not operate	1. Troubleshooting	SB-7
	2. Driver side seat belt inner buckle	SB-15
	3. Airbag sensor assembly center	RS-35
	4. Combination meter assembly	-
Front passenger side seat belt warning light does not operate	1. Troubleshooting	SB-9
	2. Integration control panel (w/o navigation system), Multi-display (w/ navigation system)	-
	3. Airbag sensor assembly center	RS-35
	4. Occupant detection ECU	-
	5. Occupant detection sensor	-
	6. Front passenger side seat belt inner buckle	SB-15

SB