


## REMOVAL


1. REMOVE REAR SEAT TRACK BRACKET COVER (See page [SE-62](#))
2. REMOVE REAR SEAT ASSEMBLY RH (See page [SE-62](#))
3. REMOVE RECLINING COVER PROTECTOR LH (See page [SE-62](#))
4. REMOVE CENTER SEAT HINGE COVER UPPER LH (See page [SE-62](#))
5. REMOVE CENTER SEAT ASSEMBLY (See page [SE-62](#))
6. REMOVE REAR SEATBACK COVER (See page [SE-63](#))
7. REMOVE REAR SEATBACK BOARD CARPET ASSEMBLY (See page [SE-65](#))
8. REMOVE REAR SEAT CUSHION MOULDING RH (See page [SE-65](#))
9. REMOVE REAR SEAT CUSHION MOULDING REAR RH (See page [SE-65](#))
10. REMOVE SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY (See page [SE-65](#))
11. REMOVE REAR SEAT BELT ASSEMBLY INNER (See page [SB-28](#))
12. REMOVE REAR SEAT HEADREST ASSEMBLY
13. REMOVE REAR SEATBACK LOCK STRIKER COVER (See page [SE-65](#))
14. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY (See page [SE-66](#))
15. REMOVE REAR SEAT HEADREST SUPPORT (See page [SE-66](#))
16. REMOVE REAR SEAT HEADREST SUPPORT (See page [SE-66](#))
17. REMOVE REAR SEATBACK LOCK BEZEL UPPER (See page [SE-66](#))
18. REMOVE REAR SEATBACK LOCK STRIKER PROTECTOR (See page [SE-66](#))
19. REMOVE REAR SEAT LOCK STRIKER (See page [SE-66](#))
20. REMOVE SEPARATE TYPE REAR SEATBACK COVER WITH PAD (See page [SE-66](#))

SB

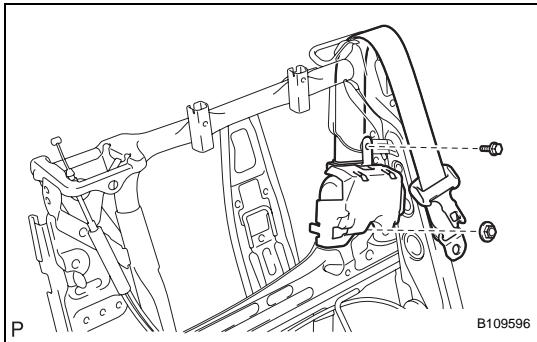

**21. REMOVE REAR CENTER SEAT OUTER BELT ASSEMBLY**

(a) Remove the bolt, nut and rear center seat outer belt assembly.

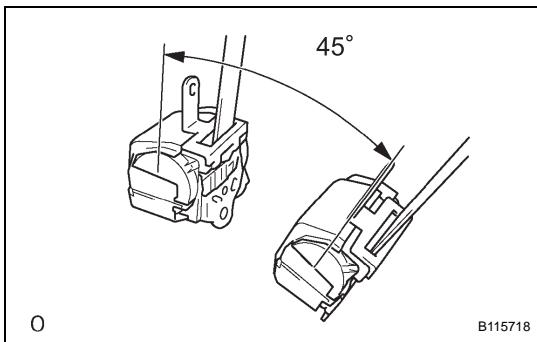

**INSTALLATION**

**1. INSTALL REAR CENTER SEAT OUTER BELT ASSEMBLY**

(a) Check the degree of tilt when the ELR begins to lock.  
 (1) Check that the belt does not lock at less than 15 degrees of tilt in any direction but locks at over 45 degrees of tilt when gently moving the installed retractor.

**NOTICE:**

**Do not disassemble the retractor.**

(b) Install the rear center seat outer belt assembly with the bolt and nut.

**Torque: Bolt**

7.5 N\*m (77 kgf\*cm, 66 in.\*lbf)

**Nut**

42 N\*m (428 kgf\*cm, 31 ft.\*lbf)

**2. INSTALL SEPARATE TYPE REAR SEATBACK COVER WITH PAD (See page [SE-69](#))**

**3. INSTALL REAR SEAT LOCK STRIKER (See page [SE-69](#))**

**4. INSTALL REAR SEATBACK LOCK STRIKER PROTECTOR**

**5. INSTALL REAR SEATBACK LOCK BEZEL UPPER**

**6. INSTALL REAR SEAT HEADREST SUPPORT**

**7. INSTALL REAR SEAT HEADREST SUPPORT**

**8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY**

**9. INSTALL REAR SEATBACK LOCK STRIKER COVER**


**10. INSTALL REAR SEAT HEADREST ASSEMBLY**

**11. INSTALL REAR CENTER SEAT INNER BELT ASSEMBLY (See page [SB-28](#))**

**12. INSTALL SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY (See page [SE-70](#))**

**13. INSTALL REAR SEAT CUSHION MOULDING REAR RH**

**14. INSTALL REAR SEAT CUSHION MOULDING RH**

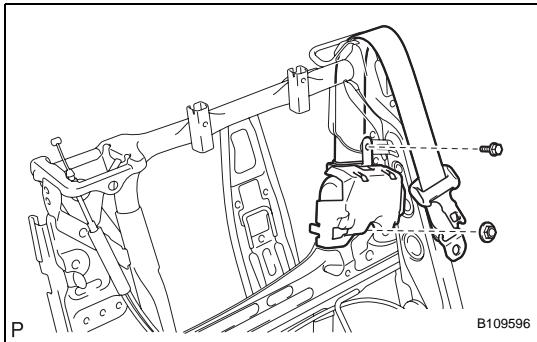

15. INSTALL REAR SEAT BACK BOARD CARPET ASSEMBLY
16. INSTALL REAR SEATBACK COVER
17. INSTALL CENTER SEAT ASSEMBLY
18. INSTALL CENTER SEAT HINGE COVER UPPER LH
19. INSTALL RECLINING COVER PROTECTOR LH
20. INSTALL REAR SEAT ASSEMBLY RH (See page [SE-72](#))
21. INSTALL REAR SEAT TRACK BRACKET COVER
22. INSPECT SLIDE ADJUSTER LOCK (See page [SE-73](#))

SB