

## COMPONENT LOCATION

Name	Symbol	Name	Symbol
A/C relay	A	Fuel pump relay	U
A/C switch	S	GDI ECO indication lamp	R
Accelerator pedal position sensor (1st and 2nd channels)	T	Ignition coil	L
		Inhibitor switch <A/T>	Q
Air flow sensor (with intake air temperature sensor and barometric pressure sensor)	J	Injectors	C
		Injector driver	E
Camshaft position sensor	M	Injector driver relay	F
Clutch switch <M/T>	T	M/T oil temperature sensor <M/T>	W
Crank angle sensor	B	Oxygen sensor	X
Detonation sensor	D	Power steering fluid pressure switch	K
Diagnosis connector	T	Purge control solenoid valve	G
EGR valve	G	Throttle position sensor	H
Engine control relay	U	Throttle valve controller	U
Engine coolant temperature sensor	N	Throttle valve control servo	I
Engine-ECU	V	Throttle valve control servo relay	U
Engine warning lamp (CHECK ENGINE lamp)	R	Vehicle speed sensor	P
Fuel pressure sensor	O		

