

MITSUBISHI

ENGINE

4M4 SERIES

WORKSHOP MANUAL

FOREWORD

This Workshop Manual contains procedures for removal, disassembly, inspection, adjustment, reassembly and installation, etc. for service mechanics.

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

4M40 engine

11A

4M41 engine

11B

FILING INSTRUCTION

Please keep these manual pages in the binder No. BN940001.

File these pages according to the signs "Added", "Revised" and "Deleted" on the "List of effective pages" which are interpreted below.

Added: File the pages with this sign additionally in your manual.

Revised. Deleted: Replace the existing pages with the corresponding pages with this sign.

Missing sheets will be supplied upon request.

This 4M4 Engine Workshop Manual is issued as a complete renewal and supersedence.
So, please discard the former 4M4 Engine Workshop Manual (Pub. No. PWEE9311).

 MITSUBISHI MOTORS CORPORATION

INTRODUCTION

EXPLANATION OF MANUAL CONTENTS

Maintenance and Servicing Procedures

- (1) A diagram of the component parts is provided near the front of each section in order to give the reader a better understanding of the installed condition of component parts.
- (2) The numbers provided within the diagram indicate the sequence for maintenance and servicing procedures; the symbol **N** indicates a non-reusable part; the tightening torque is provided where applicable.

- Removal steps:
The part designation number corresponds to the number in the illustration to indicate removal steps.
- Disassembly steps:
The part designation number corresponds to the number in the illustration to indicate disassembly steps.
- Installation steps:
Specified in case installation is impossible in reverse order of removal steps. Omitted if installation is possible in reverse order of removal steps.
- Reassembly steps:
Specified in case reassembly is impossible in reverse order of disassembly steps. Omitted if reassembly is possible in reverse order of disassembly steps.

Classification of Major Maintenance/Service Points

When there are major points relative to maintenance and servicing procedures (such as essential maintenance and service points, maintenance and service standard values, information regarding the use of special tools, etc.), these are arranged together as major maintenance and service points and explained in detail.

◆A◆ or ◀A▶: Indicates that there are essential points for removal or disassembly.
◆A◀ or ▶A◀: Indicates that there are essential points for installation or reassembly.

NOTE

11A: ◆A◆ ◆A◀
11B: ◀A▶ ▶A◀

Symbols for Lubrication, Sealants and Adhesives

Information concerning the locations for lubrication and for application of sealants and adhesives is provided, by using symbols, in the diagram of component parts, or on the page following the component parts page, and explained.



.....Grease

(multipurpose grease unless there is a brand or type specified)



.....Sealant or adhesive



.....Brake fluid, automatic transmission fluid or air conditioner compressor oil




.....Engine oil or gear oil

Indicates the group title.
Indicates the section title.
Indicates the group number.
Indicates the section number.
Indicates the page number.

6A1 ENGINE – Water Pump and Water Pipe

11A-7-1

7. WATER PUMP AND WATER PIPE REMOVAL AND INSTALLATION

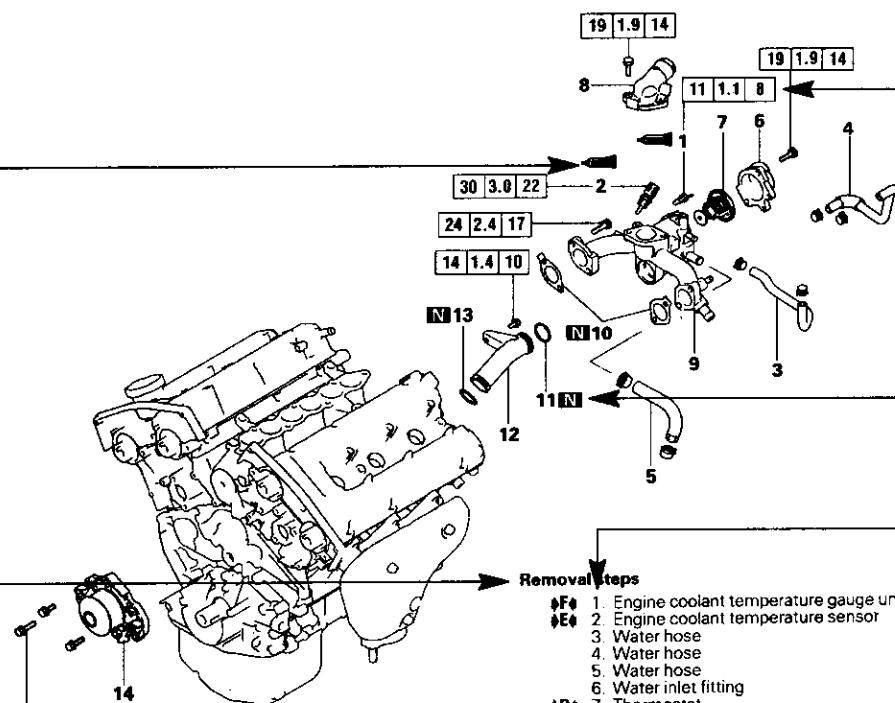

Denotes tightening torque.

11A:

Nm kgm ft.lbs.

11B:
Torque values are given only SI unit.


Denotes non-reusable part.

This number corresponds to the number appearing in "Removal steps", "Disassembly steps", "Installation steps" or "Reassembly steps".

Removal steps

- F1 1. Engine coolant temperature gauge unit
- E2 2. Engine coolant temperature sensor
- E3 3. Water hose
- E4 4. Water hose
- E5 5. Water hose
- D6 6. Water inlet fitting
- D7 7. Thermostat
- C8 8. Water outlet fitting
- C9 9. Thermostat housing
- C10 10. Gasket
- B11 11. O-ring
- B12 12. Water pipe
- B13 13. O-ring
- A14 14. Water pump

6AE0189

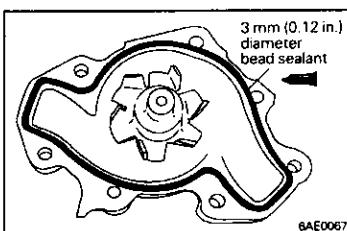

© Mitsubishi Motors Corporation Dec. 1992

6AE0067

INSTALLATION SERVICE POINTS

•A SEALANT APPLICATION TO WATER PUMP

Specified sealant:
Mitsubishi Genuine Part No. MD970389 or equivalent

Operating procedures, cautions, etc. on removal, installation, disassembly and reassembly are described.

Issue date

Publication number-Revision code

PWE0262

List of Effective Pages

Page	Revision code	Date	Remarks	Page	Revision code	Date	Remarks
11A-0-1	D	Feb. 2000		11A-22-3		Jan. 1995	
11A-0-3 to 11A-0-5		Jan. 1995		11A-22-4	F	Apr. 2002	Revised
11A-1-1		Jan. 1995		11A-22-5	D	Feb. 2000	
11A-1-2 to 11A-1-5	F	Apr. 2002	Revised	11A-22-6		Jan. 1995	
11A-1-6	D	Feb. 2000		11A-23-1		Jan. 1995	
11A-1-7	C	July 1999		11A-24-1 and 11A-24-2		Jan. 1995	
11A-1-8 to 11A-1-10		Jan. 1995		11A-24-3	F	Apr. 2002	Revised
11A-2-1 to 11A-2-3		Jan. 1995		11A-24-3a and 11A-24-3b	F	Apr. 2002	Added
11A-2-4	B	Apr. 1996		11A-24-4 and 11A-24-5	B	Apr. 1996	
11A-3-1		Jan. 1995		11A-25-1 to 11A-25-4		Jan. 1995	
11A-4-1	D	Feb. 2000		11A-25-5	A	Nov. 1995	
11A-4-1a and 11A-4-1b	D	Feb. 2000		11A-26-1		Jan. 1995	
11A-4-2		Jan. 1995		11A-26-2	F	Apr. 2002	Revised
11A-5-1	F	Apr. 2002	Revised	11A-26-3	F	Apr. 2002	Added
11A-5-2	C	July 1999		11A-27-1 to 11A-27-3		Jan. 1995	
11A-6-1 to 11A-6-3	C	July 1999		11A-28-1	D	Feb. 2000	
11A-6-3a and 11A-6-3b	D	Feb. 2000		11A-28-2 to 11A-28-7		Jan. 1995	
11A-6-4	C	July 1999		11B-0-1 to 11B-0-3	D	Feb. 2000	
11A-7-1		Jan. 1995		11B-1-1 to 11B-1-4	E	July 2001	
11A-8-1	D	Feb. 2000		11B-1-5 to 11B-1-8	D	Feb. 2000	
11A-9-1 to 11A-9-4	C	July 1999		11B-2-1 to 11B-2-4	D	Feb. 2000	
11A-10-1 and 11A-10-2		Jan. 1995		11B-3-1	D	Feb. 2000	
11A-11-1	F	Apr. 2002	Revised	11B-4-1	D	Feb. 2000	
11A-11-1a	F	Apr. 2002	Revised	11B-5-1 and 11B-5-2	D	Feb. 2000	
11A-12-1 to 11A-12-4	F	Apr. 2002	Revised	11B-6-1	E	July 2001	
11A-13-1	A	Nov. 1995		11B-6-2	D	Feb. 2000	
11A-13-2		Jan. 1995		11B-7-1 and 11B-7-2	D	Feb. 2000	
11A-13-3	F	Apr. 2002	Revised	11B-8-1 to 11B-8-3	E	July 2001	
11A-13-4	B	Apr. 1996		11B-9-1 to 11B-9-3	E	July 2001	
11A-13-5	D	Feb. 2000		11B-10-1 and 11B-10-2	D	Feb. 2000	
11A-13-6	A	Nov. 1995		11B-11-1	D	Feb. 2000	
11A-14-1		Jan. 1995		11B-12-1 to 11B-12-3	D	Feb. 2000	
11A-14-2 and 11A-14-3	B	Apr. 1996		11B-13-1 to 11B-13-3	D	Feb. 2000	
11A-14-4 to 11A-14-8		Jan. 1995		11B-14-1 to 11B-14-4	D	Feb. 2000	
11A-14-9 and 11A-14-10	D	Feb. 2000		11B-15-1 to 11B-15-9	D	Feb. 2000	
11A-14-11 and 11A-14-12	B	Apr. 1996		11B-16-1 to 11B-16-8	D	Feb. 2000	
11A-15-1 and 11A-15-2	F	Apr. 2002	Revised	11B-16-9	F	Apr. 2002	Revised
11A-16-1 and 11A-16-2	B	Apr. 1996		11B-16-10 to 11B-16-14	D	Feb. 2000	
11A-17-1 to 11A-17-3	C	July 1999		11B-17-1 and 11B-17-2	D	Feb. 2000	
11A-18-1	B	Apr. 1996		11B-18-1 and 11B-18-2	D	Feb. 2000	
11A-18-2	C	July 1999		11B-19-1 to 11B-19-7	D	Feb. 2000	
11A-18-3 and 11A-18-4	B	Apr. 1996		11B-20-1 and 11B-20-2	D	Feb. 2000	
11A-19-1	D	Feb. 2000		11B-21-1 and 11B-21-2	D	Feb. 2000	
11A-19-2 to 11A-19-9		Jan. 1995		11B-22-1 and 11B-22-2	D	Feb. 2000	
11A-20-1	D	Feb. 2000		11B-23-1 to 11B-23-12	D	Feb. 2000	
11A-20-2		Jan. 1995		11B-24-1 and 11B-24-2	D	Feb. 2000	
11A-21-1		Jan. 1995		11B-25-1 to 11B-25-7	D	Feb. 2000	
11A-21-2	A	Nov. 1995		11B-25-8	F	Apr. 2002	Revised
11A-21-3 and 11A-21-4		Jan. 1995		11B-26-1 to 11B-26-4	D	Feb. 2000	
11A-22-1 and 11A-22-2	D	Feb. 2000					

Missing sheets will be supplied upon request.

PWEE9409-F