

GROUP 37A

STEERING

GENERAL

OUTLINE OF CHANGES

The following maintenance service points have been established to correspond to changes in the power steering oil pump. Maintenance service procedures not listed below are the same as before.

POWER STEERING OIL PUMP


REMOVAL AND INSTALLATION

Pre-removal Operation

- Power Steering Fluid Draining

Post-installation Operation

- Power Steering Fluid Supplying
- Drive-belt Tension Adjusting
- Power Steering Fluid Line Bleeding
- Oil Pump Pressure Check

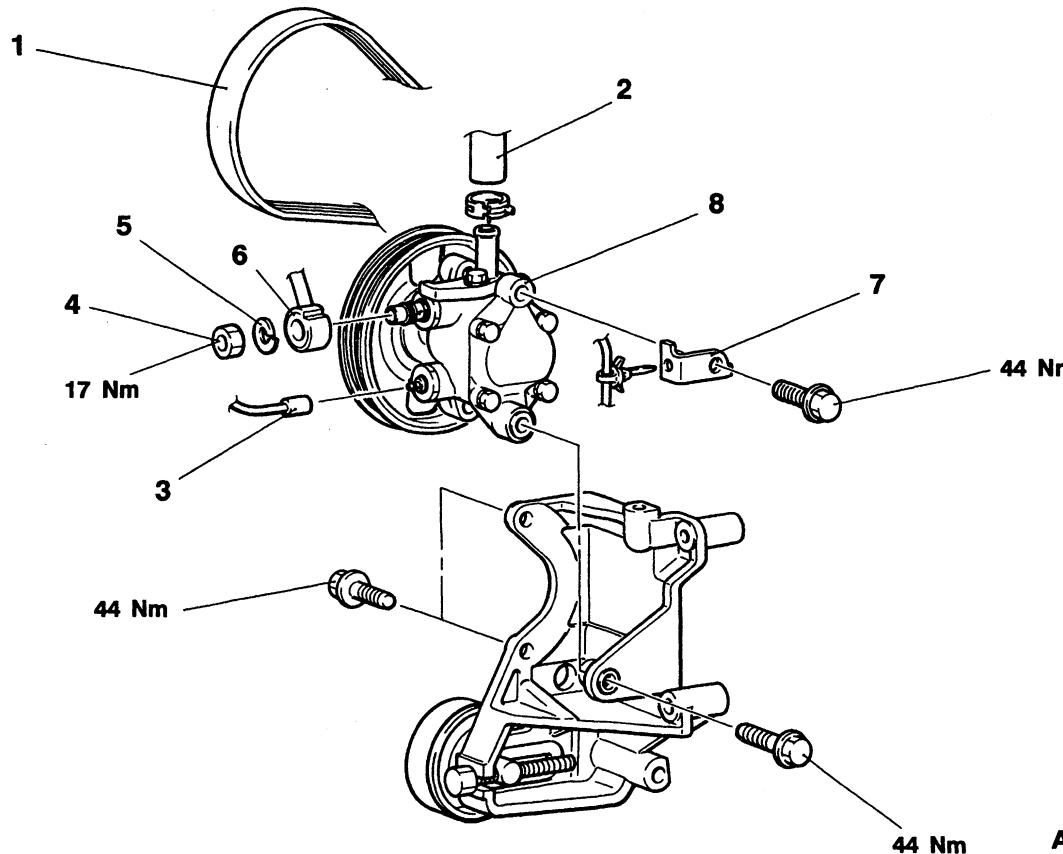

Removal steps

1. Drive belt
2. Suction hose
3. Pressure switch connector
4. Eye bolt
5. Washer
6. Banjo block
7. Power steering switch bracket
8. Oil pump

INSPECTION

Check the drive-belt for cracks.

Check the pulley assembly for uneven rotation.