

GROUP 16

ENGINE ELECTRICAL

IGNITION SYSTEM

GENERAL


OUTLINE OF CHANGE

The crank angle sensor for the 4G9 engine has been changed.

CRANK ANGLE SENSOR <4G9>

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation
Timing Belt Cover Removal and Installation
(Refer to GROUP 11A.)

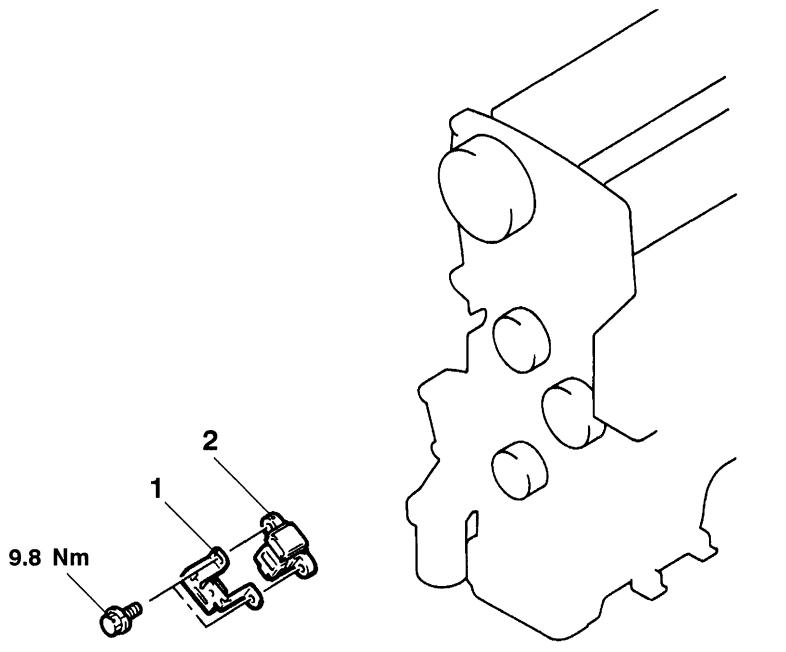

Removal steps

1. Bracket
2. Crank angle position sensor