

GROUP 34

REAR SUSPENSION

GENERAL

OUTLINE OF CHANGES

- The specifications of the coil spring have been revised.
- Due to the change on the stabilizer link, the service procedures have been revised.

COIL SPRING

Items	Sedan	Hatchback
Wire dia. × O.D. × free length mm	13 × 86 × 400	10 × 86 × 414


SERVICE SPECIFICATIONS

Items	Standard value
Protruding length of stabilizer bar mounting bolt mm	3 – 5

STABILIZER BAR

REMOVAL AND INSTALLATION

Post-installation Operation
Wheel Alignment Check

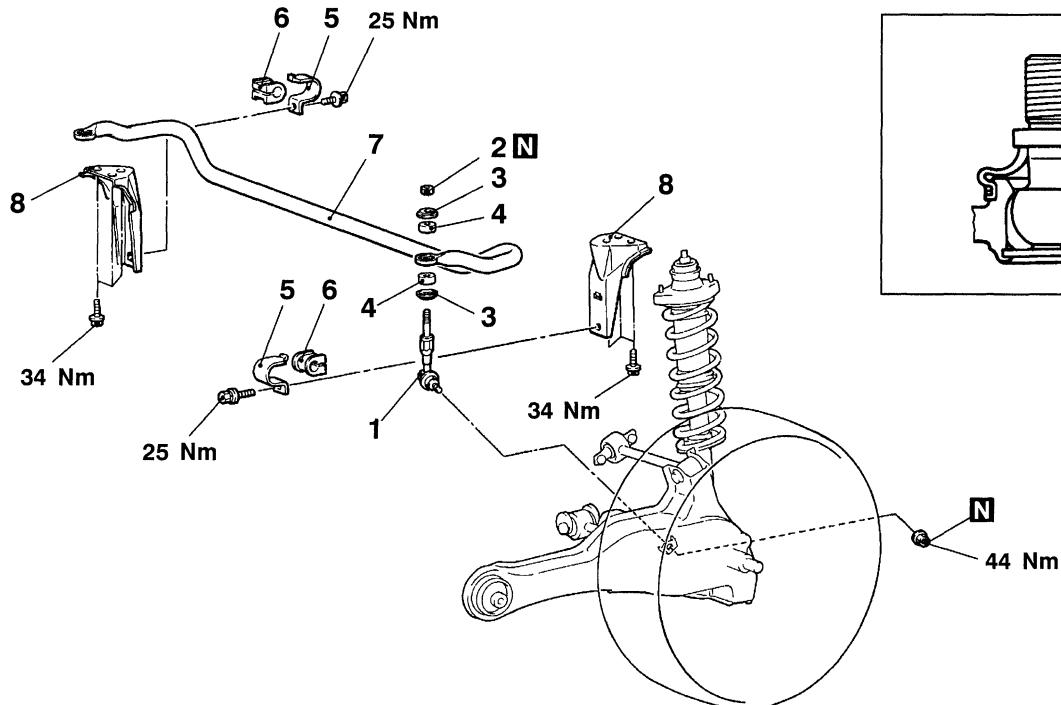


A12U0024

Removal steps

►C
►C
1. Stabilizer link
2. Self-locking nut
3. Joint cup
4. Stabilizer rubber


5. Fixture
6. Bushing
7. Stabilizer bar
8. Stabilizer bracket

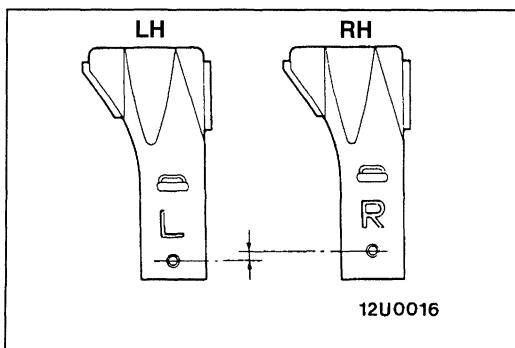

INSTALLATION SERVICE POINTS


►A STABILIZER BRACKET INSTALLATION

Because the left and right installation positions of the fixtures are different, be careful not to make a mistake when installing the stabilizer bracket.

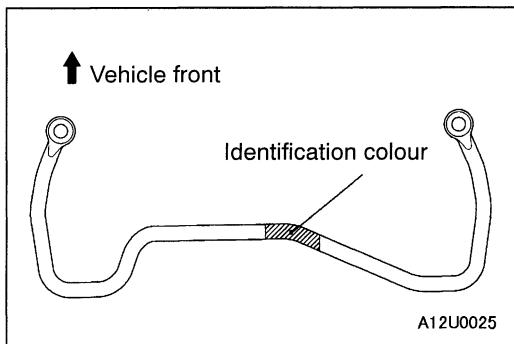

►B◄ STABILIZER BAR INSTALLATION

Install the stabilizer bar so that its identification colour is positioned in the right of the vehicle.

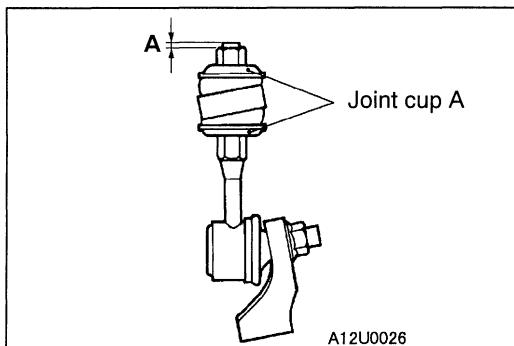

►C◄ SELF-LOCKING NUT INSTALLATION

Check that the joint cup faces as shown, and then tighten the self-locking nut so that the shown dimension (A) is at the standard value.

Standard value (A): 3 – 5 mm

INSPECTION

The inspection procedures are the same as before.

NOTES