

# MITSUBISHI COLT/LANCER

## WORKSHOP MANUAL

### SUPPLEMENT

### FOREWORD

This manual outlines changes in servicing procedures related to the chassis including vehicle inspections, adjustments and improvements in the newly equipped models.

Use the following manuals in combination with this manual as required.

#### TECHNICAL INFORMATION MANUAL

PYME9116  
PYME9116-1

#### WORKSHOP MANUAL

##### CHASSIS GROUP

PWME9117  
(Looseleaf edition)

PWME9123

PWME9123-1

PWME9123-2

PWME9123-3

##### ENGINE GROUP

PWEET□□□□

(Looseleaf edition)

##### ELECTRICAL WIRING

PHME9107-E

PHME9339-1

##### BODY REPAIR MANUAL

PBME9107

#### PARTS CATALOGUE

B6068005A□

B8068005A□

BFA68005A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

General .....	00
Engine .....	11
Engine Electrical .....	16
Emission Control .....	17
Manual Transmission .....	22
Wheel and Tyre .....	31
Front Suspension .....	33A
Rear Suspension .....	34
Steering .....	37A
Body .....	42
Supplemental Restraint System (SRS) .....	52B
Chassis Electrical .....	54

# WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

## WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and front passenger (from rendering the SRS Inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or in drying after painting, remove the SRS components (air bag modules, SRS diagnosis unit) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.

## NOTE

Section titles with the asterisks (\*) in the table of contents in each group indicate operations requiring warnings.