



Connector disconnected or improperly connected

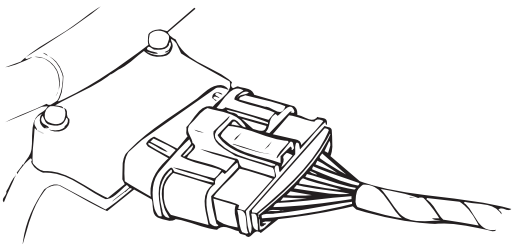

Stretched or broken wires

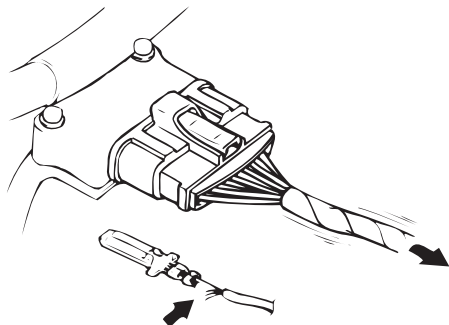

**Harness wire breakage
at terminal section**

**Low contact
pressure**

