

Apply engine oil to
all moving parts
before installation.

