
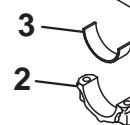


Apply engine oil to  
all moving parts  
before installation.

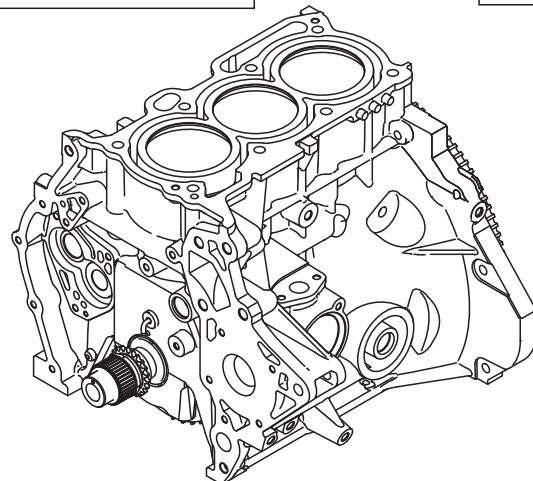

$15 \pm 2 \text{ N}\cdot\text{m} \rightarrow +90^\circ \text{ to } 94^\circ$

AK603494AB