



Apply engine oil to  
all moving parts  
before installation.

