


4

Apply engine oil to  
all moving parts  
before installation.

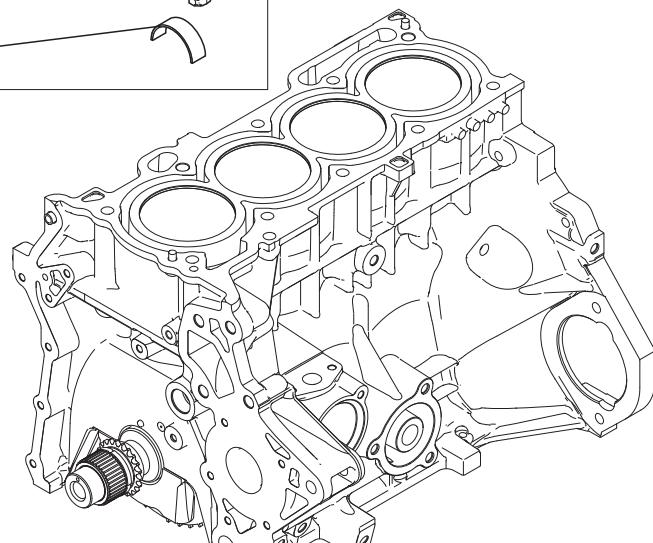

3

2

14.7 N·m → +90°

