
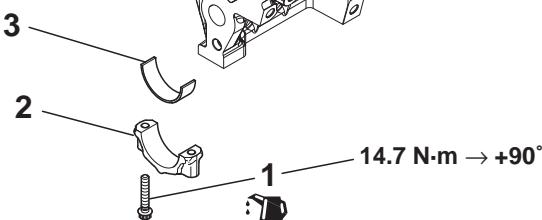


 Apply engine oil to all moving parts before installation.

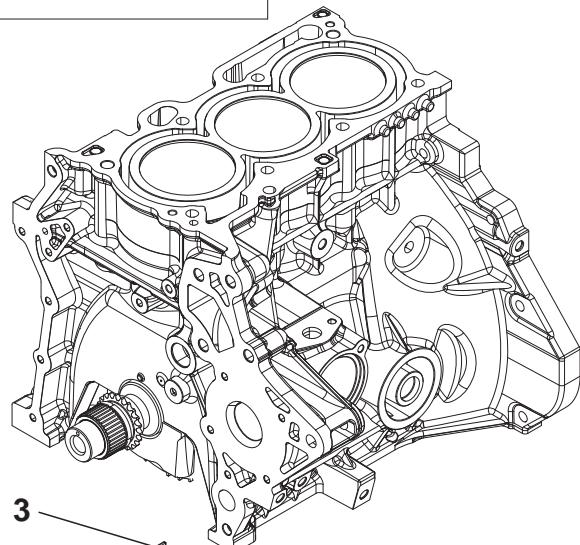

14.7 N·m → +90°