



Apply engine oil to
all moving parts
before installation.

AKA00370AB