

Apply engine oil to the O-ring before installation.

