

 Apply engine oil to
the O-ring before
installation.

