

Starting

Fixed timing
(5°BTDC)

Normal driving

Timing advance map value
in accordance with
engine speed
and intake manifold vacuum

Engine coolant
temperature sensor

Intake air
temperature sensor

Engine
coolant
temperature
correction

Intake air
temperature
correction

Power
transistor

Ignition coil
primary current

Checking ignition timing

Fixed timing
(5°BTDC)

