



Injector

The diagram shows a detailed view of an engine's internal components, specifically the fuel injection system. A line points from the 'Injector' label to a specific part of the engine. Another line points from the 'Equipment side connector' label to a connector on the right. A legend in the top right corner shows a symbol with the number '1' and '2' inside circles, with a 'M' symbol above them. The engine is shown with various pipes, hoses, and mechanical parts.

Equipment side  
connector

AK305812AB