


- ★ 1 Oxygen sensor (front)
- ★ 2 Air flow sensor
- ★ 3 Intake air temperature sensor
- ★ 4 Throttle position sensor (sub)
- ★ 5 Camshaft position sensor
- ★ 6 Crank angle sensor
- ★ 7 Engine coolant temperature sensor
- ★ 8 Detonation sensor
- ★ 9 Oxygen sensor (rear)
- ★ 10 Throttle position sensor (main)

- Power supply
- Ignition switch-IG
- Ignition switch-ST
- Accelerator pedal position sensor (main)
- Accelerator pedal position sensor (sub)
- Clutch switch
- Alternator FR terminal
- Alternator L terminal
- Oil pressure switch

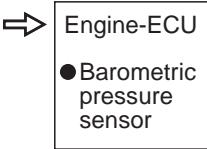

- ★ 1 Injector
- ★ 2 Purge control solenoid valve
- ★ 3 Throttle valve control servo
- ★ 4 Oil control valve
- ★ 5 Waste gate solenoid valve
- ★ 6 Fuel pressure control solenoid valve

- Engine control relay
- Fuel pump relay
- Starter relay
- Throttle valve control servo relay
- Ignition coil
- Alternator G terminal
- Oxygen sensor heater
- A/C compressor relay

