



- Air flow sensor
- Barometric pressure sensor
- Intake air temperature sensor
- Engine coolant temperature sensor
- Throttle position sensor (main,sub)
- Accelerator pedal position sensor (main,sub)
- Crank angle sensor
- Camshaft position sensor
- Detonation sensor
- Ignition switch-ST
- Oxygen sensor (front, rear)
- Clutch switch