

- ★ 1 Oxygen sensor (rear)
- ★ 2 Oxygen sensor (front)
- ★ 3 Crank angle sensor
- ★ 4 Camshaft position sensor
- ★ 5 Detonation sensor
- ★ 6 Engine coolant temperature sensor
- ★ 7 Manifold absolute pressure sensor
- ★ 8 Intake air temperature sensor
- ★ 9 Throttle position sensor (main)
- ★ 10 Throttle position sensor (sub)

- Power supply
- Ignition switch-IG
- Ignition switch-ST
- Oil pressure switch
- Alternator FR terminal
- Alternator L terminal
- Accelerator pedal position sensor (main)
- Accelerator pedal position sensor (sub)
- Neutral position sensor*1
- Battery current sensor*1
- Battery temperature sensor*1
- Brake vacuum sensor*1
- Auto stop & go (AS&G) OFF switch*1
- Clutch switch (A)*1
- Clutch switch (B)*1
- Hood buzzer switch*1

→ Engine-ECU or engine-A/M/T-ECU

→

- ★ 1 Oil control valve <135 engine>
- ★ 2 Injector
- ★ 3 Throttle valve control servo
- ★ 4 Purge control solenoid valve

- Engine control relay
- Fuel pump relay
- Throttle valve control servo relay
- Starter relay*2
- Starter cut relay*1
- Starter control relay*1
- Capacitor relay*1
- Ignition coil
- Alternator G terminal
- Oxygen sensor heater
- A/C compressor relay

NOTE:

*1: Vehicles with AS&G system

*2: Vehicles without AS&G system

