


From ETACS-ECU

From ignition switch

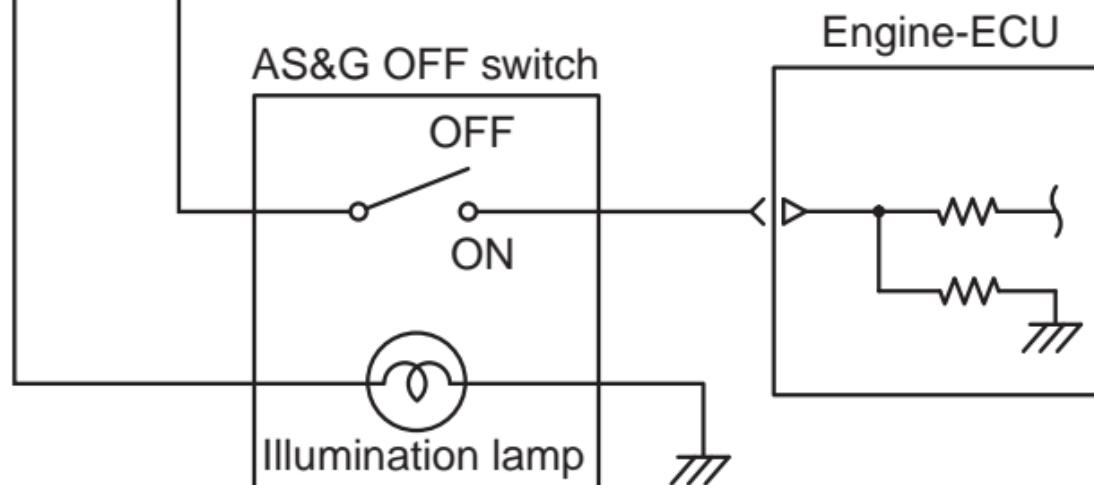

Engine-ECU
terminal voltage (V)

Period of time switch is
depressed

