

Apply new engine oil  
to the O-ring before  
installation.

