

Apply new engine oil
to the O-ring before
installation.

