


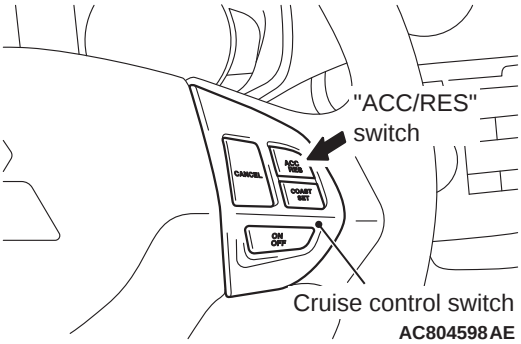

The diagram shows a close-up of a vehicle's cruise control switch assembly. It features four buttons: a large 'CANCEL' button on the left, a smaller 'ACC/RES' button at the top right, a 'COAST SET' button below it, and a 'ON/OFF' button at the bottom. A thick black arrow points to the 'ACC/RES' button, and a thin black line points to the 'ON/OFF' button. The background shows a simplified line drawing of the car's interior, including the steering wheel and dashboard.

"ACC/RES"
switch

Cruise control switch

AC804598 AE