



 Apply gear oil to
all moving parts
before installation.

85 ± 5 N·m

AK704674AB