

Front-left wheel speed sensor

Rear-left wheel speed sensor

Rear-right wheel speed sensor

Front-right wheel speed sensor

Brake fluid level switch

Parking brake switch

Master cylinder pressure sensor

Stop lamp switch

Power supply to TCL/ASC-ECU


Steering wheel sensor

G and yaw rate sensor

Electric power steering-ECU

Engine-ECU <M/T> or engine-A-M/T-ECU <Automated manual transmission>

TCL/ASC-ECU

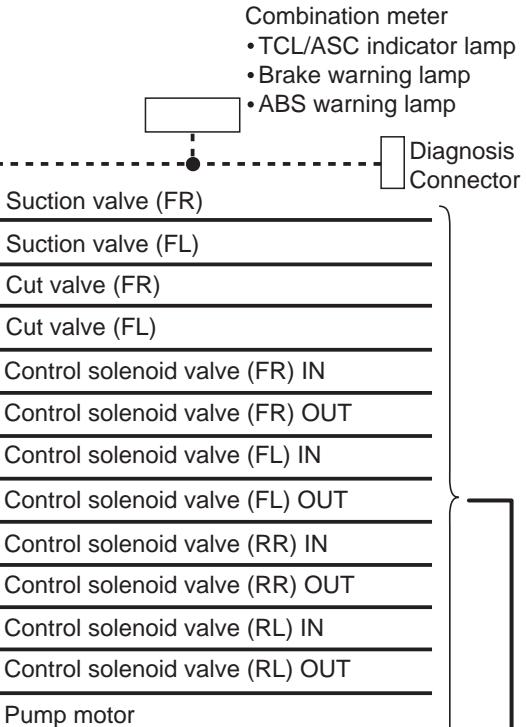

Front-right wheel (FR)

Wheel speed sensor

Parking brake switch

Steering wheel sensor

Stop lamp switch

G and yaw rate sensor

Electric power steering-ECU

Rear-right wheel (RR)

Wheel speed sensor

Engine-ECU <M/T> or engine-A-M/T-ECU <Automated manual transmission>

Hydraulic unit

Wheel speed sensor

Front-left wheel (FL)

Wheel speed sensor

Rear-left wheel (RL)