


ETACS-ECU
(incorporating receiver and antenna)

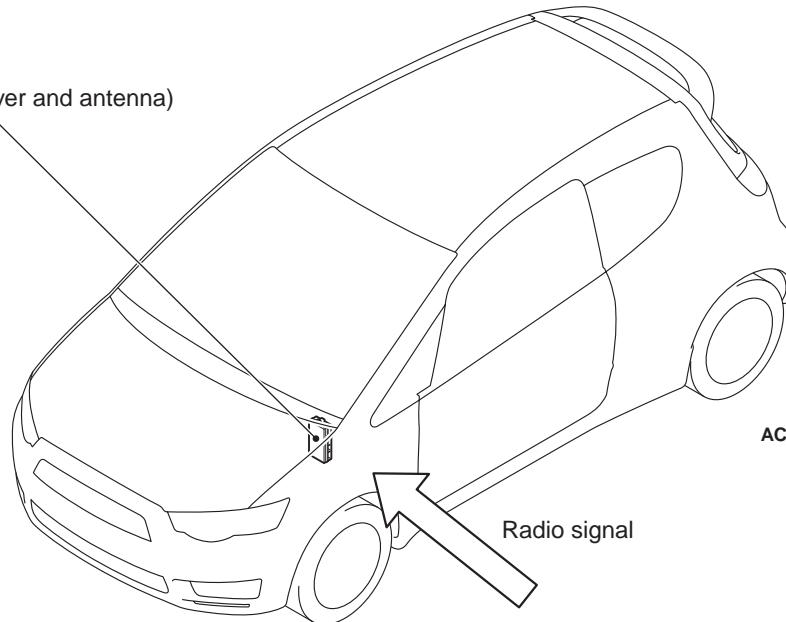


Electric signal



The signal causes the room lamp to extinguish when the door is locked, or come on for 15 seconds when the door is unlocked.

The signal causes the hazard warning lamp to flash once when the door is locked, or flash twice when the door is unlocked.

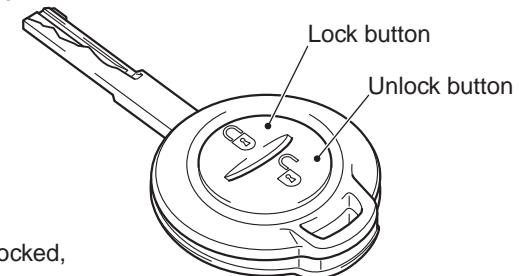

AC311765

AC805086AB