


B

<AS&G>

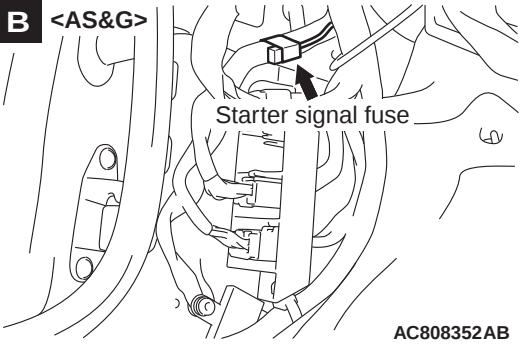

The diagram shows a detailed view of a vehicle's fuse box. A black arrow points to a specific fuse, which is labeled 'Starter signal fuse'. The fuse box is located within the engine compartment, and various other components like hoses and wiring are visible in the background.

Starter signal fuse

AC808352AB