



## NOTE

- ★ 1: ABS
  - ABS AND ASC
  - AS&G
  - AUTOMATED MANUAL TRANSMISSION SYSTEM
  - CAN
  - CENTRAL DOOR LOCKING SYSTEM
  - CHARGING SYSTEM
  - COOLING SYSTEM
  - CRUISE CONTROL SYSTEM
  - ELECTRIC POWER STEERING SYSTEM
  - EMERGENCY STOP SIGNAL SYSTEM
  - ENGINE CONTROL SYSTEM
  - FRONT FOG LAMP

- FUEL WARNING LAMP,
- OIL PRESSURE
- WARNING LAMP AND
- BRAKE WARNING LAMP
- HEADLAMP
- IMMOBILIZER SYSTEM
- METER AND GAUGE
- REAR FOG LAMP
- ROOM LAMP AND
- LUGGAGE
- COMPARTMENT LAMP
- SEAT BELT
- WARNING BUZZER
- SEMI-AUTOMATIC
- AIR CONDITIONER
- SRS
- TURN-SIGNAL LAMP AND
- HAZARD WARNING LAMP
- WINDSHIELD WIPER
- AND WASHER

- \*2 : AS&G
- CAN
- CENTRAL DOOR LOCKING SYSTEM
- COOLING SYSTEM
- EMERGENCY STOP SIGNAL SYSTEM
- FRONT FOG LAMP
- FUEL WARNING LAMP,
- OIL PRESSURE
- WARNING LAMP AND BRAKE WARNING LAMP
- HEADLAMP
- HEADLAMP LEVELLING SYSTEM
- IMMOBILIZER SYSTEM
- METER AND GAUGE

POWER WINDOWS  
REAR FOG LAMP  
REAR WIPER  
AND WASHER  
ROOM LAMP AND  
LUGGAGE  
COMPARTMENT LAMP  
SEAT BELT  
WARNING BUZZER  
SEMI-AUTOMATIC  
AIR CONDITIONER  
TAIL LAMP, POSITION LAMP,  
LICENCE PLATE LAMP  
AND LIGHTING  
MONITOR BUZZER  
TURN-SIGNAL LAMP AND  
HAZARD WARNING LAMP  
WINDSHIELD WIPER  
AND WASHER

- ABS
- ABS AND ASC
- AS&G
- AUTOMATED MANUAL TRANSMISSION SYSTEM
- CAN
- CENTRAL DOOR LOCKING SYSTEM
- CHARGING SYSTEM
- COOLING SYSTEM
- CRUISE CONTROL SYSTEM
- ELECTRIC POWER STEERING SYSTEM
- EMERGENCY STOP SIGNAL SYSTEM
- ENGINE CONTROL SYSTEM
- FRONT FOG LAMP
- FUEL WARNING LAMP, OIL PRESSURE WARNING LAMP AND BRAKE WARNING LAMP
- HEADLAMP
- HEADLAMP LEVELLING SYSTEM

IMMobilizer system  
METER AND GAUGE  
POWER WINDOWS  
REAR FOG LAMP  
REAR WIPER  
AND WASHER  
ROOM LAMP AND  
LUGGAGE  
COMPARTMENT LAMP  
SEAT BELT  
WARNING BUZZER  
SEMI-AUTOMATIC  
AIR CONDITIONER  
SRS  
STARTING SYSTEM  
TAIL LAMP,  
POSITION LAMP,  
LICENCE PLATE LAMP  
AND LIGHTING  
MONITOR BUZZER  
TURN-SIGNAL LAMP AND  
HAZARD WARNING LAMP  
WINDSHIELD WIPER  
AND WASHER

- \*4: ·ABS
- ABS AND ASC
- AS&G
- AUTOMATED MANUAL TRANSMISSION SYSTEM
- CAN
- CHARGING SYSTEM
- COOLING SYSTEM
- CRUISE CONTROL SYSTEM
- ELECTRIC POWER STEERING SYSTEM
- ENGINE CONTROL SYSTEM
- FUEL WARNING LAMP, OIL PRESSURE WARNING LAMP AND BRAKE WARNING LAMP
- HEADLAMP
- IMMOBILIZER SYSTEM
- METER AND GAUGE
- SEMI-AUTOMATIC AIR CONDITIONER
- STARTING SYSTEM
- TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING
- MONITOR BUZZER
- WINDSHIELD WIPER AND WASHER

- \*5: ·ABS
- ABS AND SAC
- AS&G
- AUTOMATED MANUAL TRANSMISSION SYSTEM
- CAN
- CRUISE CONTROL SYSTEM
- ELECTRIC POWER STEERING SYSTEM
- EMERGENCY STOP SIGNAL SYSTEM
- ENGINE CONTROL SYSTEM
- FUEL WARNING LAMP, OIL PRESSURE WARNING LAMP AND BRAKE WARNING LAMP
- HEADLAMP
- METER AND GAUGE
- TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
- WINDSHIELD WIPER AND WASHER

B-03

MU801515

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

B-107)

MU801515

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

B-118

MU801515

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22