

WIRING DIAGRAMS

Fig. 1: Engine Compartment & Headlights (Grid 1-3)

1991 Mitsubishi Eclipse

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Sunday, December 17, 2000 03:01PM

COMPONENT LOCATOR:

A/C CONTROL UNIT	D 42
A/C SW ILLUM	D 37
ABS CONTROL UNIT	A 28-30
ABS POWER RELAY	C 28
ACCELERATOR PEDAL SW	B 35
ALTERNATOR	D 3
ALTERNATOR RELAY	E 3
AUTO-CRUISE CONTROL UNIT	D-E 28
BATTERY	A 2
BLOWER MOTOR (W/ A/C)	E 43
BLOWER MOTOR (W/O A/C)	E 41
BLOWER SW (W/ A/C)	D 43
BLOWER SW (W/O A/C)	E 40
CIG LIGHTER	B 38
COLUMN SW	A-E 36
CONDENSER FAN MOTOR	
HI-LO RELAY	D 7
CONDENSER FAN RELAY	E 7
COOLANT TEMP SW	
(2.0L NON TURBO)	C 14
COOLANT TEMP SW (2.0L TURBO)	C 18
COURTESY LTS	D-E 37-38
CRC FILTER (1.8L)	D 11
DEFOG RELAY	E 51
DEFOG SW	E 51
DEFOG TIMER	E 16
DIAG CONN (1.8L)	D 8
DIAG CONN (2.0L NON TURBO)	E 15
DIAG CONN (2.0L TURBO)	E 19
DIMMER/PASSING SW	D 36
DIODE C-33	C 4
DOME LT	D 39
DOOR LOCK CONTROL UNIT	E 39
(W/O THEFT-ALARM)	
DOOR LOCK RELAY	A 47
DUAL PRES SW	E 35
ELC 4-SPEED A/T CONTROL UNIT	A 32-35
FLASHER	C 39
FOG LT RELAY	B 7
FOG LT SW	A 39
FUEL PUMP (FWD)	C 18
FUEL PUMP/GAUGE UNIT (AWD)	B 43
GLOVE BOX LT/SW	D 39
HAZARD SW	B 39
HEADLT RELAY	B 8
HYDRAULIC UNIT	A-B 28
IGNITION COIL (2.0L NON TURBO)	D 12
IGNITION COIL (2.0L TURBO)	D 16
IGNITION SW	A 27
INHIBITOR SW (A/T)	B-C 32
INSTRUMENT CLUSTER	A-D 40
INTERIOR RELAY BOX	D-E 40
JUNCTION BLOCK	A-E 21-25
KEY REMINDER SW	C 44
LEFT DOOR LATCH SW	E 46
LEFT POP UP MOTOR	E 1
LEFT RELAY BOX (W/ A/C)	E 7
LEFT SEAT BELT MOTOR RELAY	D 47
MAGNETIC CLUTCH RELAY	E 7
MAIN FUS LINK BOX	A 3
MPI CONTROL RELAY (1.8L)	E 8
MPI CONTROL RELAY (2.0L NON TURBO)	B 12
MPI CONTROL RELAY (2.0L TURBO)	B 16
MPI CONTROL UNIT (1.8L)	A 8-11
MPI CONTROL UNIT (2.0L NON TURBO)	A 12-15
MPI CONTROL UNIT (2.0L TURBO)	A 16-19
OVERDRIVE SW	E 35
PASSING CONTROL RELAY	E 3
POP UP MOTOR RELAY	B 5
POP UP SW	A 38
POWER ANTENNA	D 49
POWER MIRROR SW	A-B 46
POWER TRANSISTOR (2.0L NON TURBO)	E 12
POWER TRANSISTOR (2.0L TURBO)	E 16
POWER WINDOW MAIN SW	B-C 48
POWER WINDOW RELAY	B 50
POWER/ECONOMY CHANGE OVER SW	C 25
RADIATOR FAN RELAY	B 7
RADIO (PARTIAL)	D 60
REAR INTERMITTENT WIPER RELAY	D 48
REAR WIPER/WASHER SW	E 48
RHEOSTAT	C 39
RIGHT POP UP MOTOR	B 1
RIGHT RELAY BOX	A-3 4-7
RIGHT/LEFT DOOR SW	D-E 44
SEAT BELT CONTROL UNIT	C 3
STARTER RELAY	C 3
STOP LT SW (W/ AUTO-CRUISE)	D 31
STOP LT SW (W/O AUTO-CRUISE)	A 50
TAILLT RELAY	B 6
THEFT-ALARM CONTROL RELAY	A-B 44
THEFT-ALARM STARTER RLY (A/T)	C 3
THEFT-ALARM STARTER RLY (M/T)	C 3
WIPER MOTOR	E 38

