 




# SERVICE BULLETIN

QUALITY INFORMATION ANALYSIS  
OVERSEAS SERVICE DEPT. MITSUBISHI MOTORS CORPORATION

<b>SERVICE BULLETIN</b>		No.: MSB-99E00-002	
		Date: 1999-12-15	<b>&lt;Model&gt;</b> (EC) GALANT (EA0A)
<b>Subject:</b> AVAILABILITY OF 1999 MODEL SPECIAL SPECIFICATION GALANTS		<b>&lt;M/Y&gt;</b> 99-10	
<b>Group:</b> GENERAL		<b>Draft No.:</b> 99JY041513	
<b>INFORMATION</b>	INTERNATIONAL CAR ADMINISTRATION OFFICE	 T.NITTA - PROJECT LEADER AFTER SALES SERVICE & CS PROMOTION	

## 1. Description:

This Service Bulletin informs you that the 1999 model special specification Galants have been made available.

## 2. Applicable Manuals:

Manual	Pub. No.	Language	Page(s)
'99 GALANT Workshop Manual chassis	PWDE9611-A	(English)	
	PWDS9612-A	(Spanish)	
	PWDF9613-A	(French)	
	PWDG9614-A	(German)	
	PWDD9615-A	(Dutch)	
	PWDW9616-A	(Swedish)	

## 3. Effective Date:

From June 8, 1999


## 5. Service Procedure:

With installation of the steering wheel of MOMO make, large-sized front rear bumpers, and large-sized side and rear side air dams, the applicable service procedures have been established as shown in the following pages.

## STEERING – Steering Wheel

---

Steering wheel of MOMO make

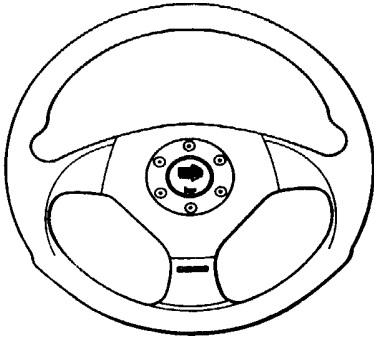

13S0160


### **STEERING WHEEL REMOVAL AND INSTALLATION**

The removal and installation procedures for the steering wheel are the same as for the conventional air bag equipped car.

### FRONT BUMPER REMOVAL AND INSTALLATION

#### Pre-removal and Post-installation Operation

- Splash Shield Removal and Installation  
(Refer to GROUP 42 – Fender)\*
- Radiator Grille Removal and Installation

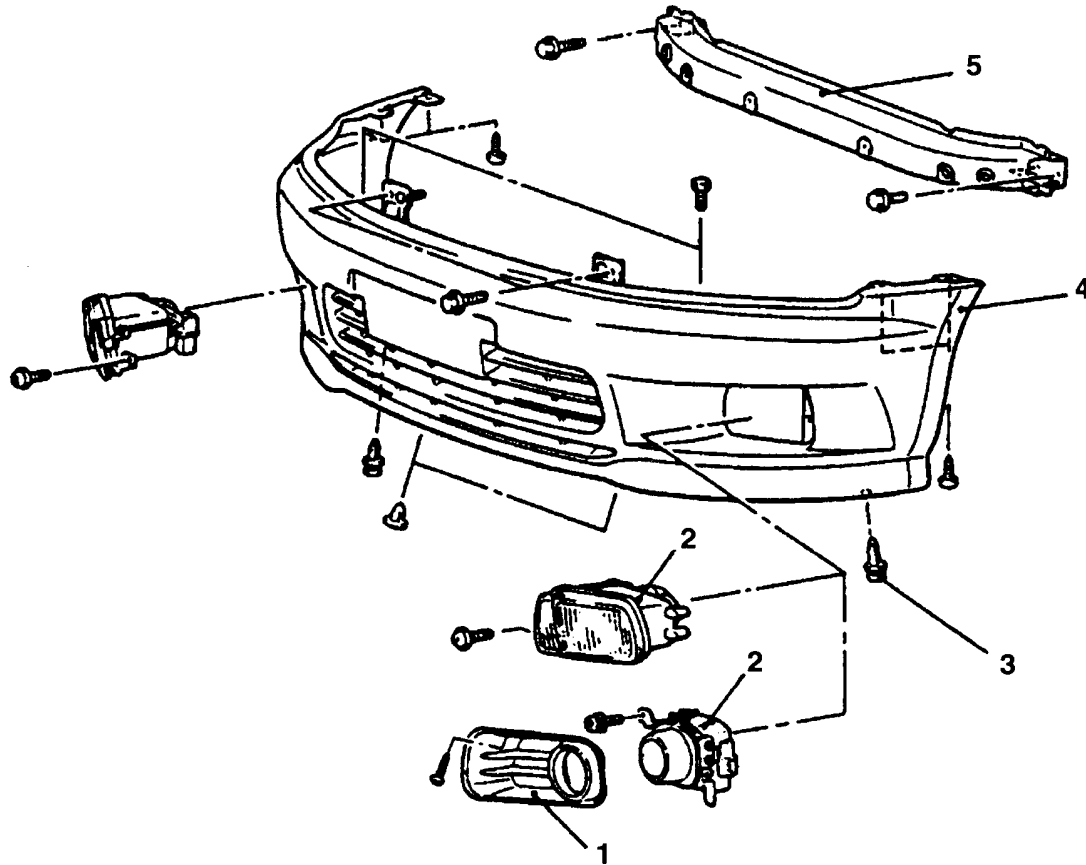

#### Removal steps

1. Front bumper lower bracket
- ▶▲ 2. Front bumper assembly
3. Front bumper reinforcement assembly


#### NOTE

\*: Refer to '97 GALANT Workshop Manual Chassis

A18I0172

## EXTERIOR – Front Bumper

### DISASSEMBLY AND REASSEMBLY

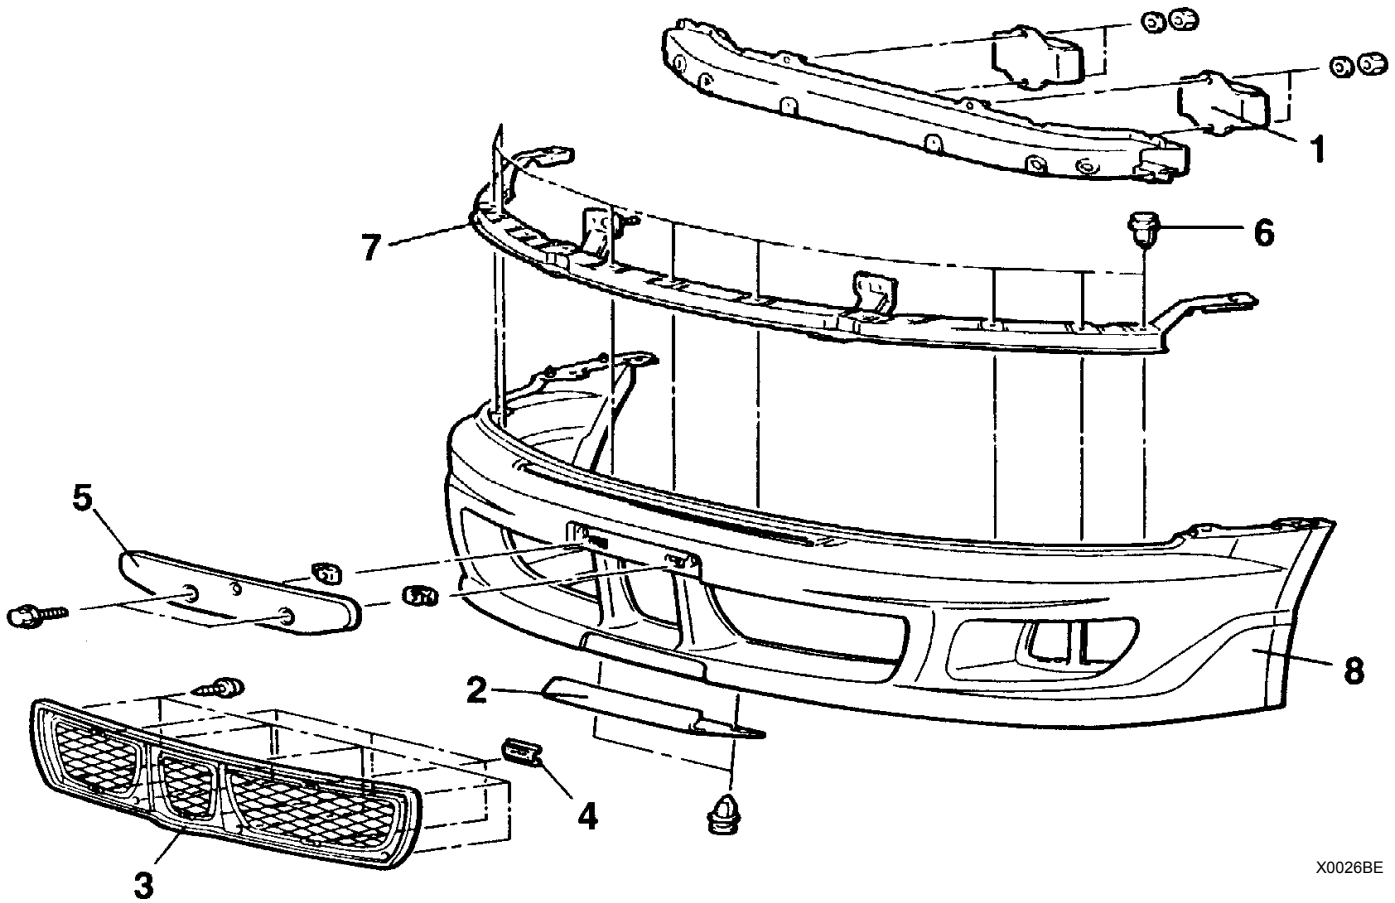

X0026BE

#### Steps


1. Dynamic dumper assembly <Except V6-24>
2. Front bumper lower cover
3. Under grille
4. Clip
5. Licence plate bracket
6. Clip
7. Front bumper upper reinforcement
8. Front bumper face

◀A▶

#### DISASSEMBLY SERVICE POINT


##### ◀A▶ CLIP REMOVAL

1. Use the special tool to pull up the centre pin in the clip.
2. Remove the clip.

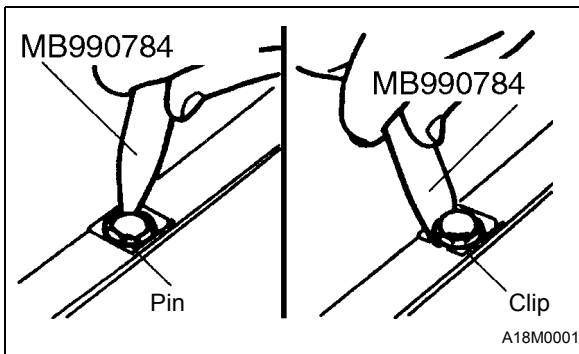

## EXTERIOR – Rear Bumper <Sedan>


### REAR BUMPER <SEDAN> DISASSEMBLY AND REASSEMBLY

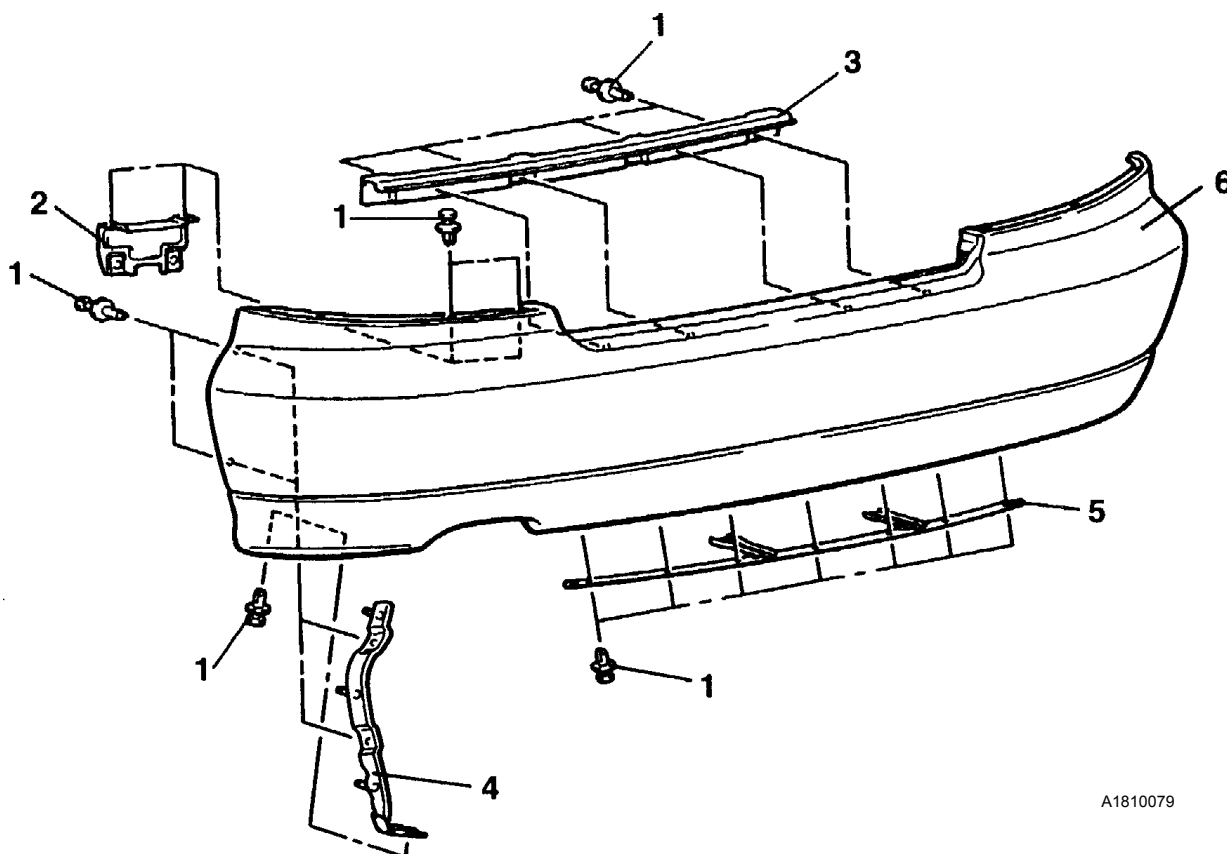

#### ◀ A ▶ Disassembly steps

1. Clip
2. Side upper bracket
3. Rear bumper reinforcement
4. Side retainer

5. Rear bumper lower plate
6. Rear bumper face

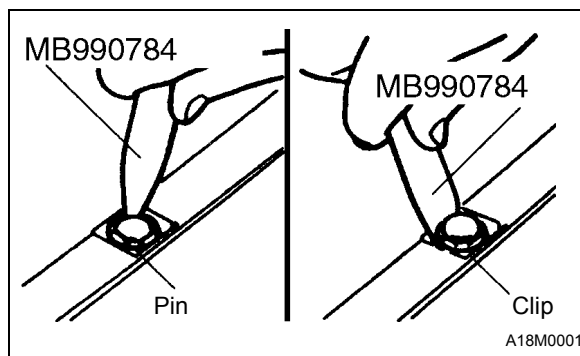


#### DISASSEMBLY SERVICE POINT



##### ◀ A ▶ CLIP REMOVAL

1. Use the special tool to pull up the centre pin in the clip.
2. Remove the clip.

## AERO PARTS REMOVAL AND INSTALLATION

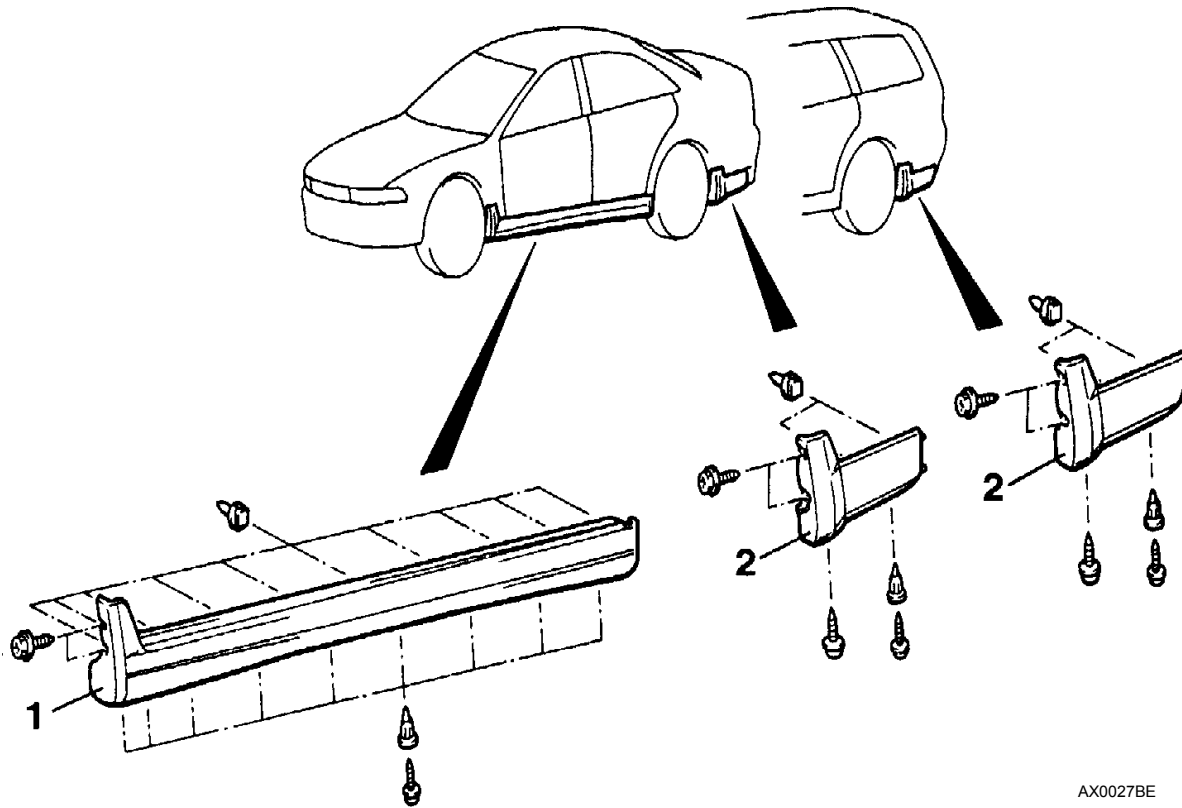

AX0027BE

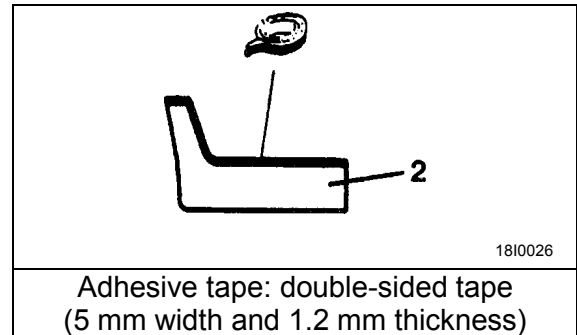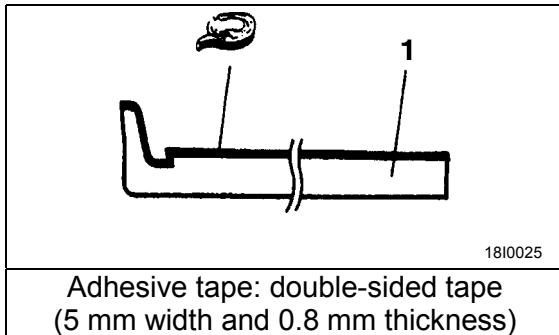

### Removal steps

- ◀A▶ ▶A◀ 1. Side air dam
- ◀A▶ ▶A◀ 2. Rear Side air dam

### REMOVAL SERVICE POINT

#### ◀A▶ SIDE AIR DAM/REAR SIDE AIR DAM REMOVAL

Removal the side air dam in the same manner as for the side protect moulding

### INSTALLATION SERVICE POINT

#### ▶A◀ REAR SIDE AIR DAM/REAR SIDE AIR DAM

### INSTALLATION

Installation the side air dam in the same manner as for the side protect moulding