

GROUP 70

COMPONENT
LOCATIONS

 
 
CONTENTS

FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR.	70-2	INSPECTION TERMINAL.....	70-9
GROUNDING CABLE	70-3	SENSOR.....	70-9
GROUNDING	70-5	CONTROL UNIT.....	70-19
RELAY	70-8	OTHER DEVICES.....	70-21
		SOLENOID AND SOLENOID VALVE	70-23





FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR



M1701000100885

NAME	SYMBOL	NAME	SYMBOL
Fuses No.1 to 24 (Passenger compartment)	D	Fusible link No.27 (Engine compartment)	A
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.1 to 5, 28 (Engine compartment)	B
Fusible link No.26 (Engine compartment)	C	IOD or storage connector	B

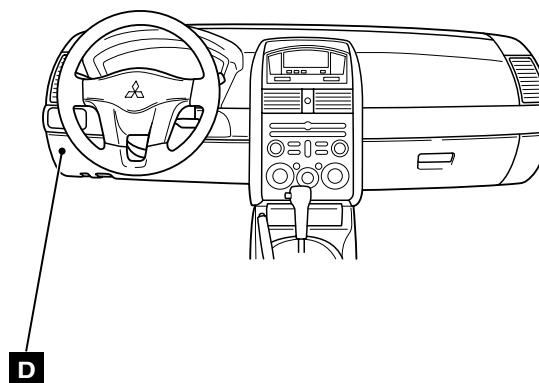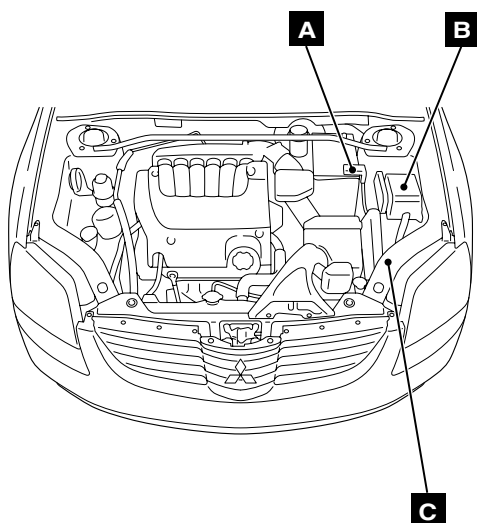

AC600981AB

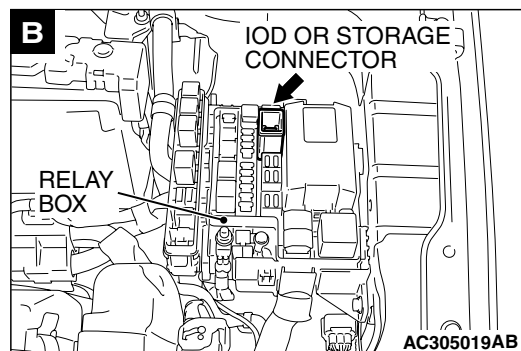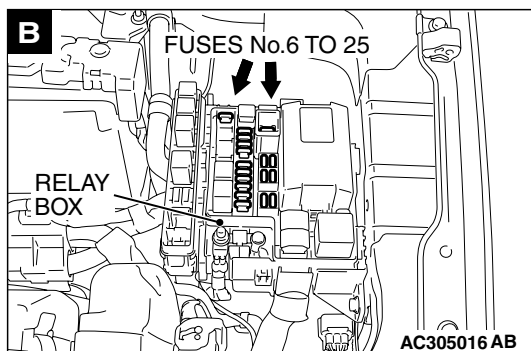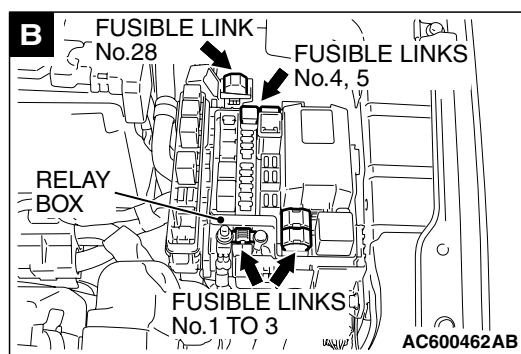   
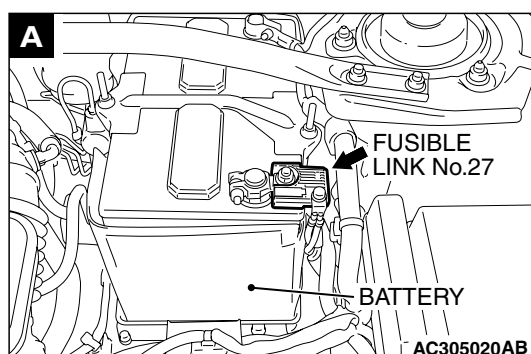 


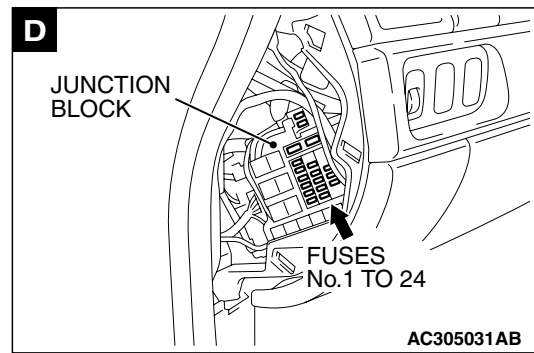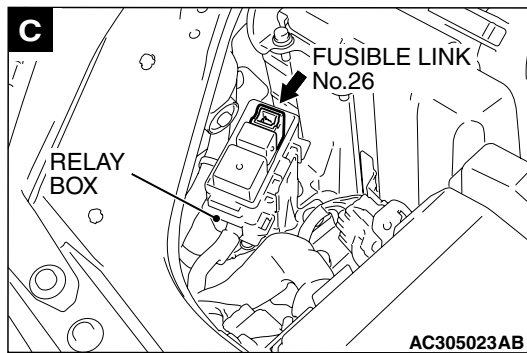  



GROUNDING CABLE

M1701001000706
  
<2.4L ENGINE>

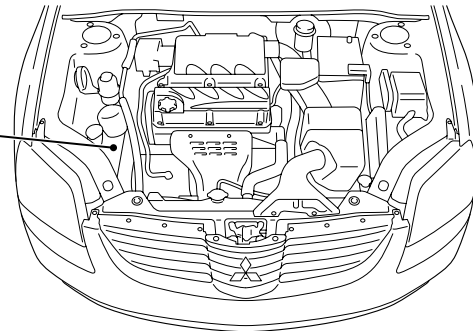
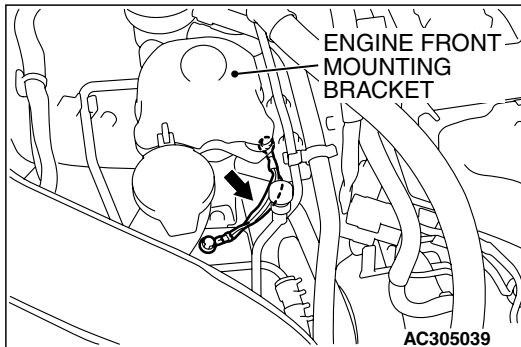


<3.8L ENGINE (EXCEPT MIVEC)>

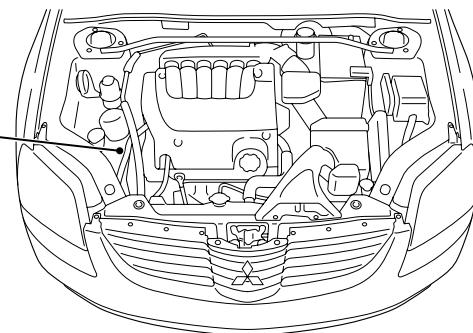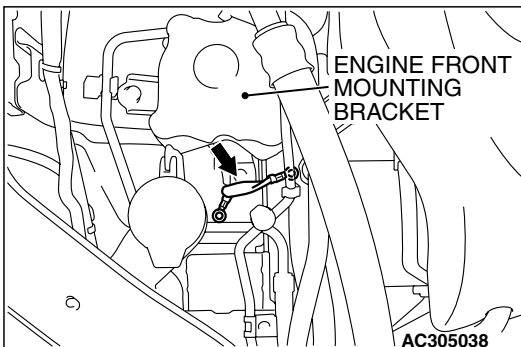  

AC600982AB

  
<3.8L ENGINE-MIVEC>

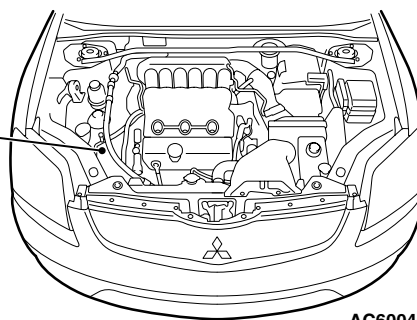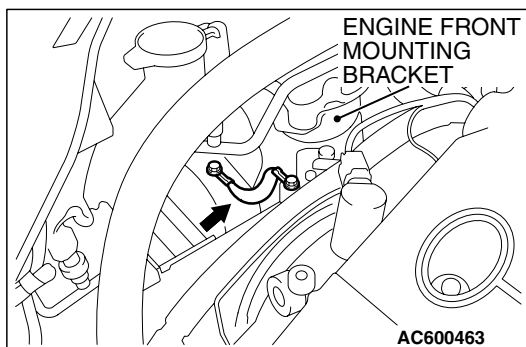

AC600501AB



GROUNDING








 
M1701000300919







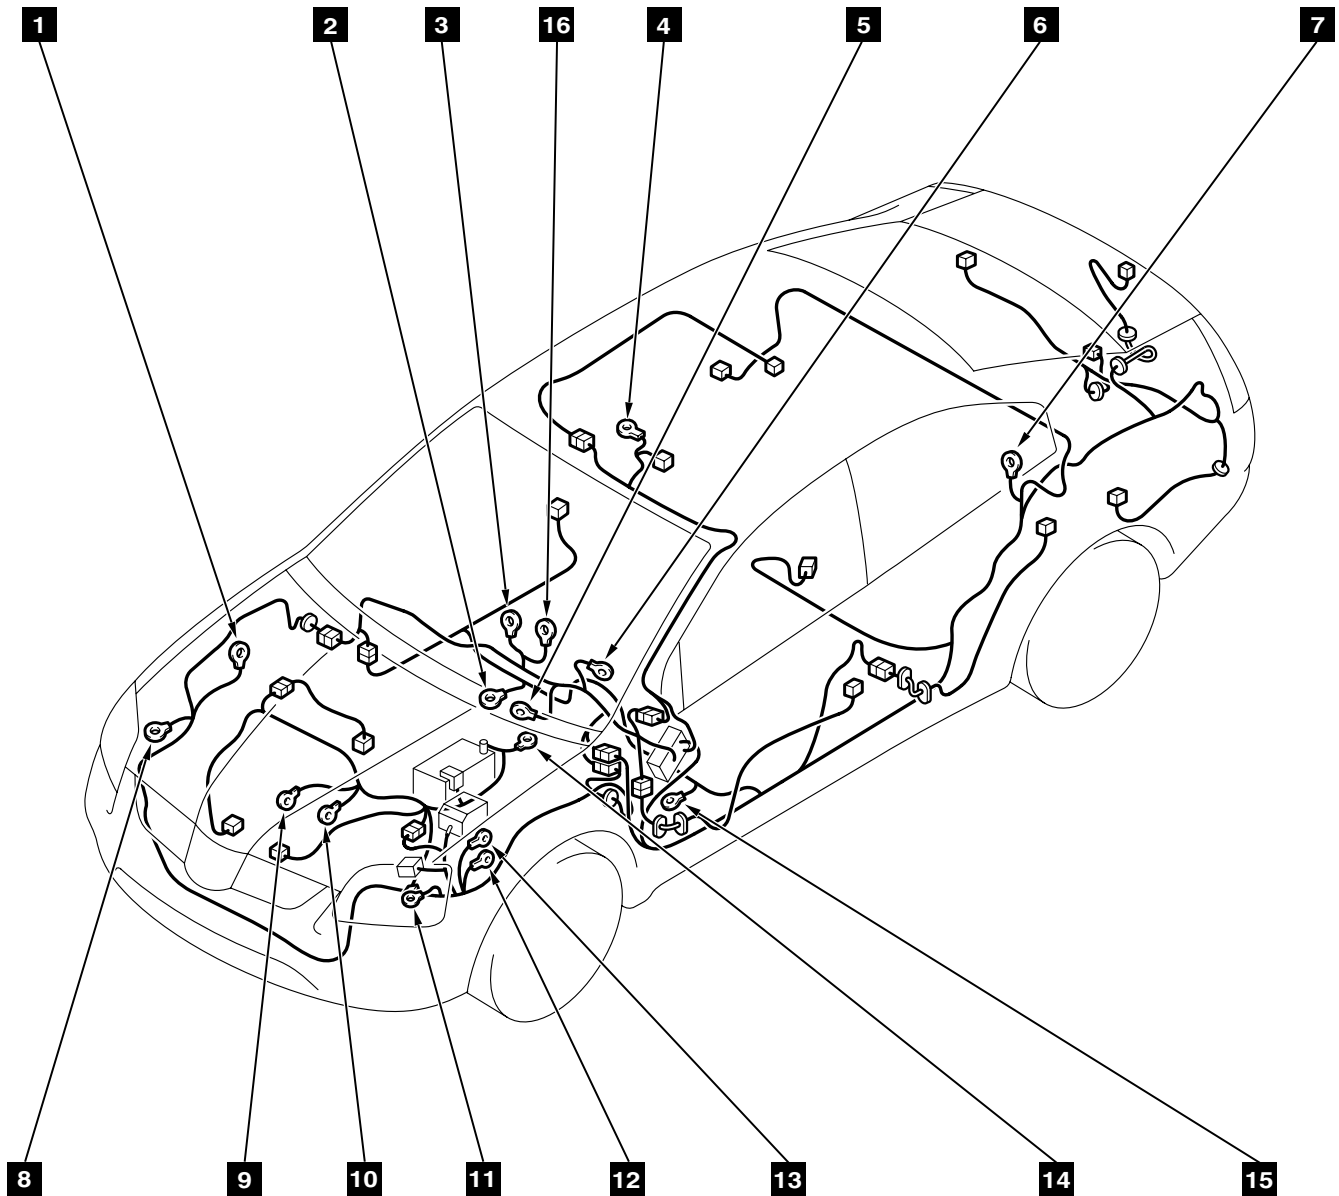


AC600502AB

          NOTE: 1 to 16 numbers correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

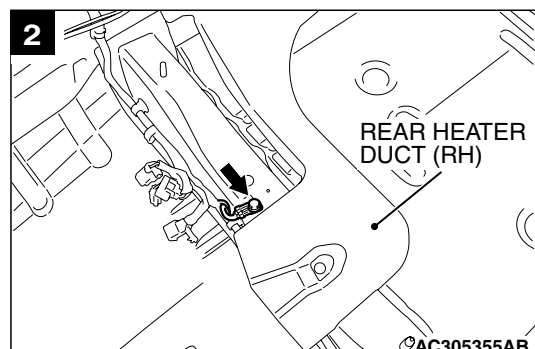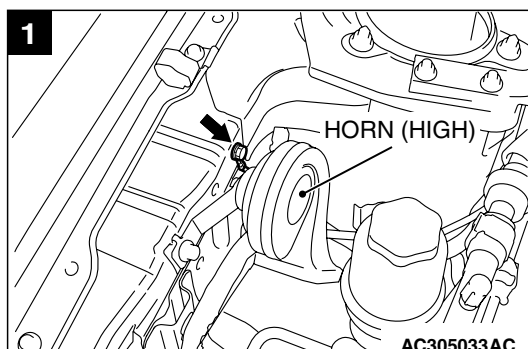

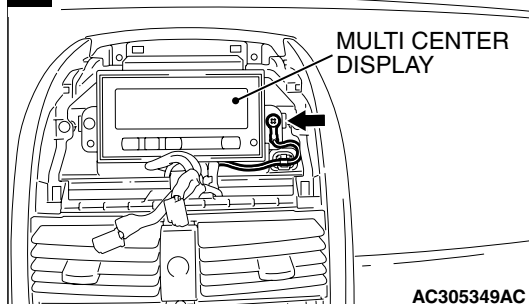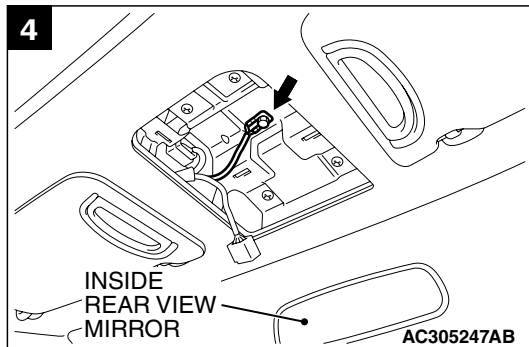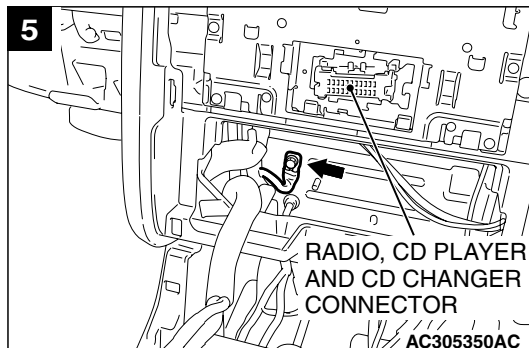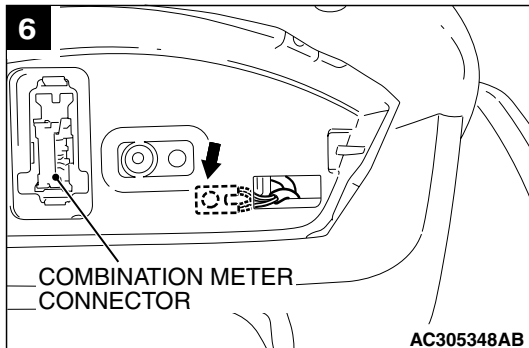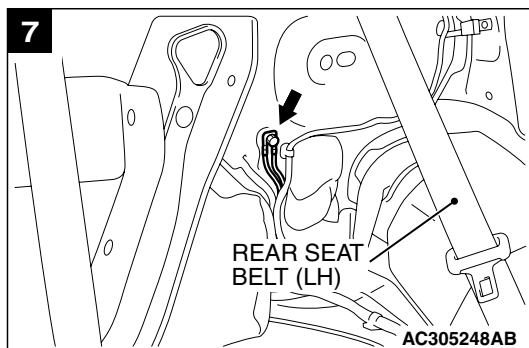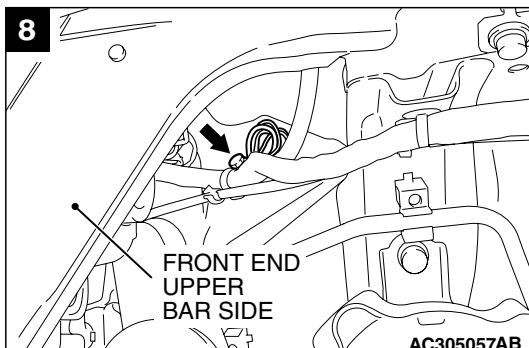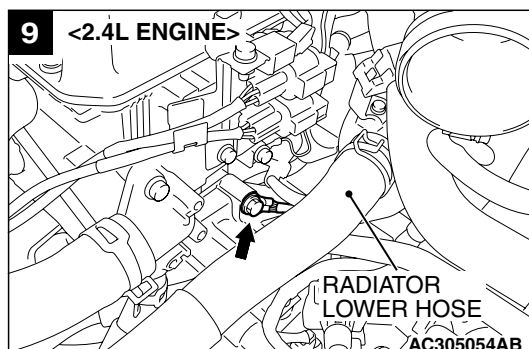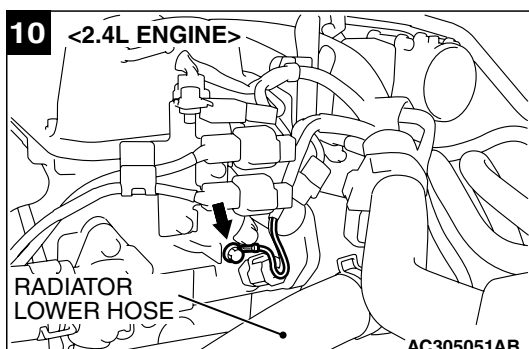       
3 <WITHOUT MMCS>**4****5****6****7****8****9** <2.4L ENGINE>**10** <2.4L ENGINE>

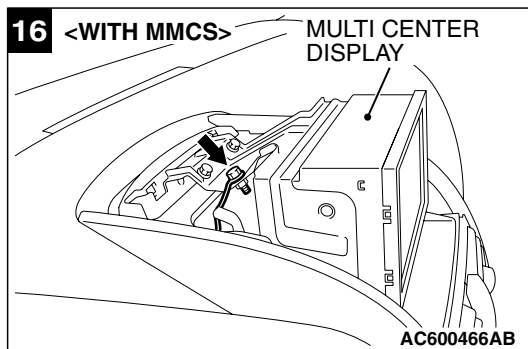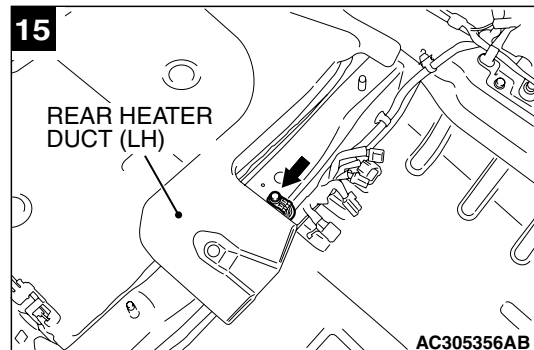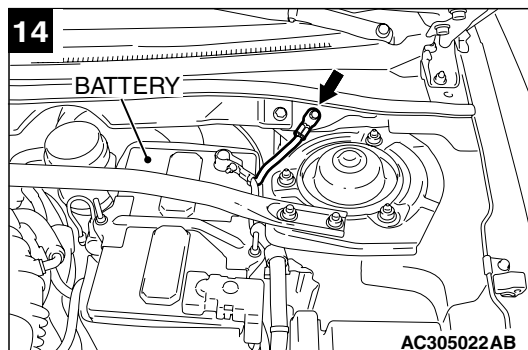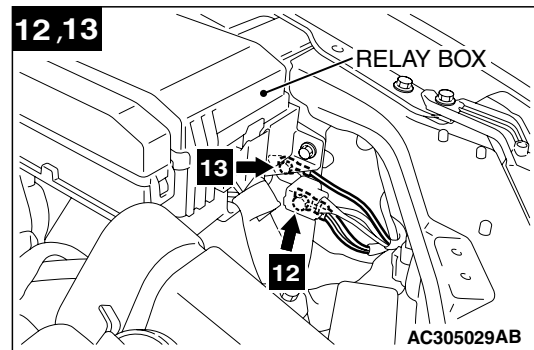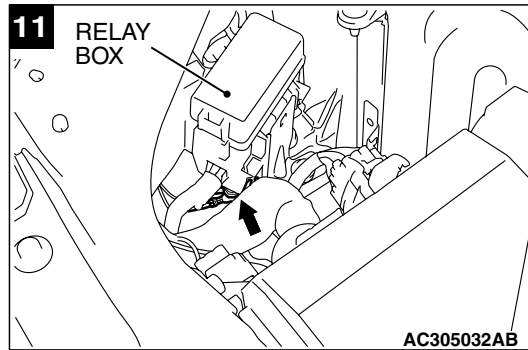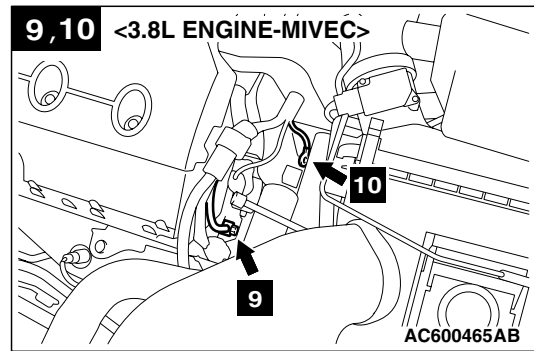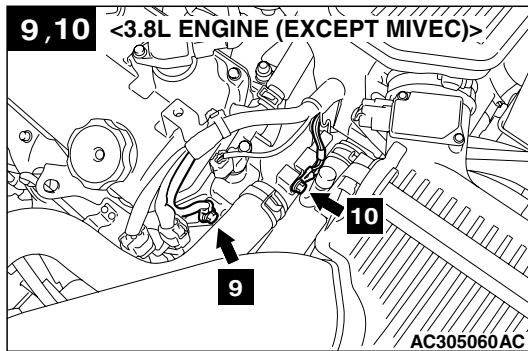


RELAY

M1701000401027


NAME	SYMBOL	NAME	SYMBOL
A/C compressor clutch relay	A	Fuel pump relay (2)	C
A/T control relay	A	Heated seat relay	C
Accessory socket relay	C	Horn relay	A
Blower relay	C	MFI relay	A
Condenser fan relay	B	Power window relay	C
Fan control relay	A	Radiator fan relay	B
Fog light relay	A	Rear window defogger relay	C
Fuel pump relay (1)	C	Throttle actuator control motor relay	A

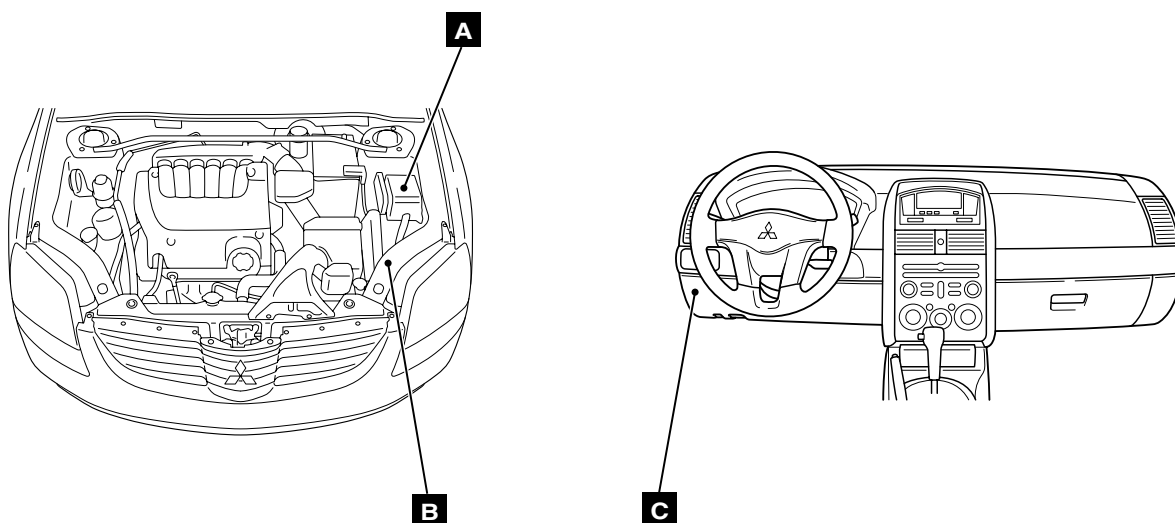 


AC600981AC

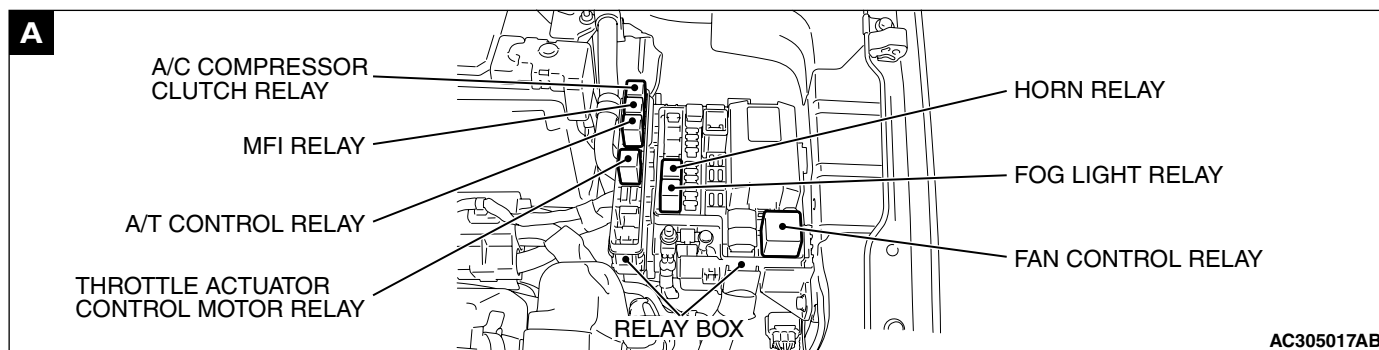 

AC305017AB

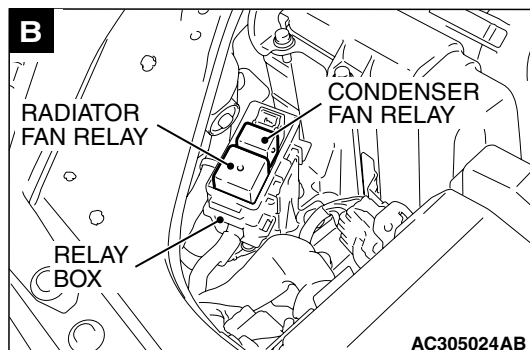 


AC305024AB

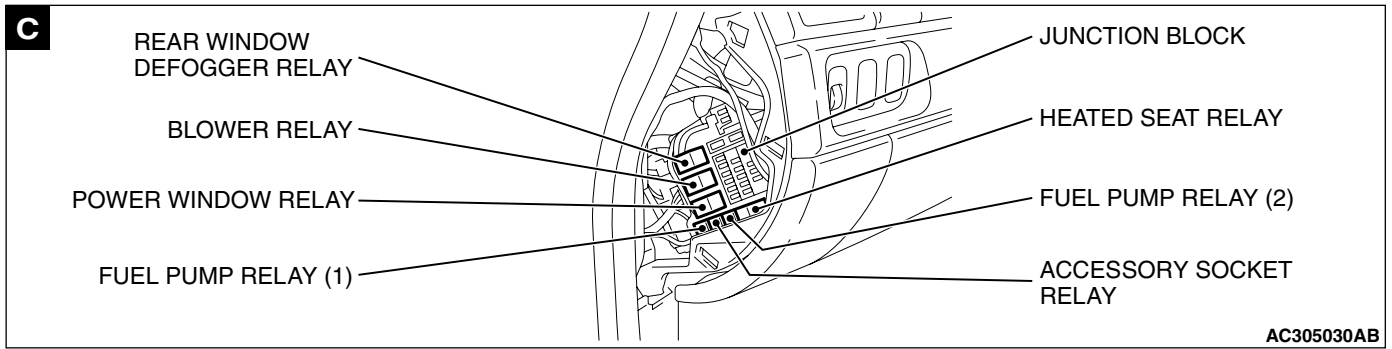 

INSPECTION TERMINAL

 M1701000200774

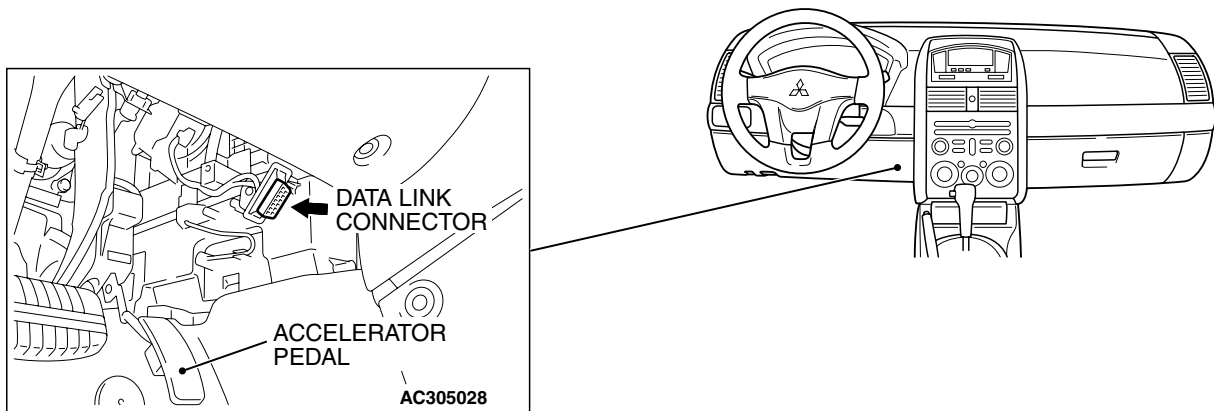

AC600983AB


SENSOR

M1701000601128


NAME	SYMBOL	NAME	SYMBOL
A/C pressure sensor	I	Left bank heated oxygen sensor (front) <3.8L Engine>	Q
A/T control solenoid valve assembly (Incorporating transmission fluid temperature sensor)	O	Left bank heated oxygen sensor (rear) <3.8L Engine>	Q
Accelerator pedal position sensor	S	Manifold absolute pressure sensor	B
Air thermo sensor	U	Mass airflow sensor	G
Ambient temperature sensor	L	Occupant classification sensor (LH), (RH)	a
Camshaft position sensor	D	Output shaft speed sensor	H
Crankshaft position sensor	A	Photo sensor <Automatic A/C>	R

NAME	SYMBOL	NAME	SYMBOL
Cylinder 1, 4 heated oxygen sensor (front) <2.4L Engine>	J	Radiator sensor <2.4L Engine>	M
Cylinder 1, 4 heated oxygen sensor (rear) <2.4L Engine>	J	Rear light sensor <Automatic anti-dazzling mirror>	V
Cylinder 2, 3 heated oxygen sensor (front) <2.4L Engine>	J	Right bank heated oxygen sensor (front) <3.8L Engine>	P
Cylinder 2, 3 heated oxygen sensor (rear) <2.4L Engine>	J	Right bank heated oxygen sensor (rear) <3.8L Engine>	P
Engine coolant temperature sensor	F	Seat slide sensor	d
Front impact sensor	N	Side impact sensor (Front)	e
Front light sensor <Automatic anti-dazzling mirror>	V	Side impact sensor (Rear)	Z
Fuel level sensor (sub)	X	Sunroof assembly (Incorporating pulse sensor)	W
Fuel pump module (Incorporating fuel level sensor (main) and fuel tank temperature sensor)	Y	Throttle body assembly (Incorporating throttle position sensor)	E
Fuel tank differential pressure sensor	Y	TPMS transmitter (Incorporating tire pressure sensor)	b
Input shaft speed sensor	K	Wheel speed sensor (front) <ABS>	c
Interior temperature sensor <Automatic A/C>	T	Wheel speed sensor (rear) <ABS>	f
Knock sensor	C		
 
<2.4L ENGINE>


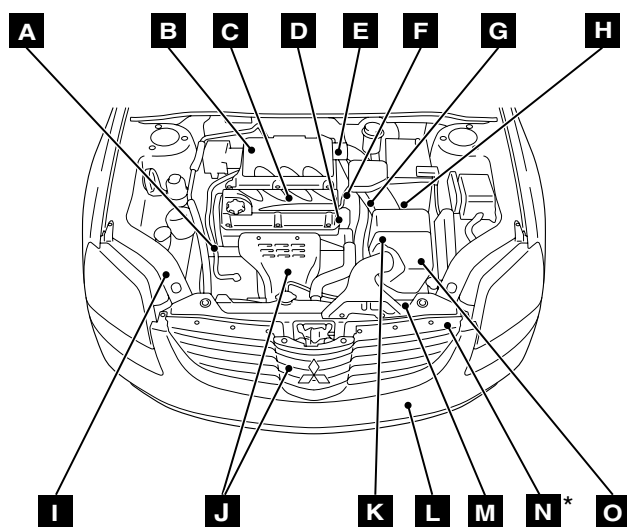


<3.8L ENGINE (EXCEPT MIVEC)>

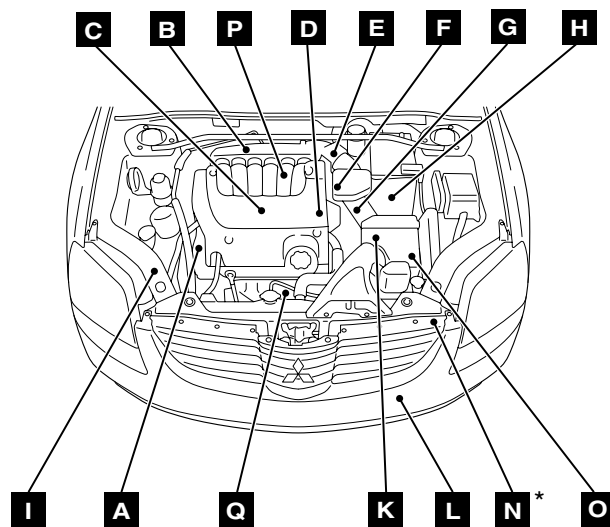 


AC600988AB
  
<3.8L ENGINE-MIVEC>

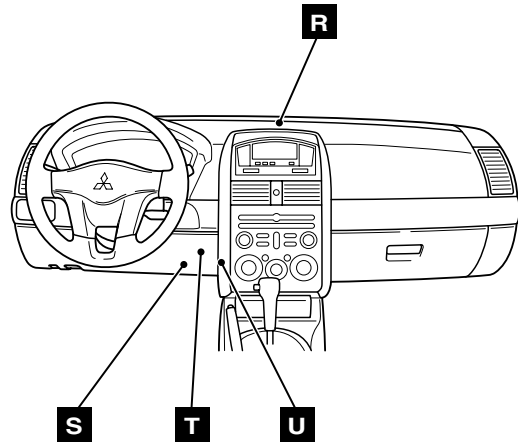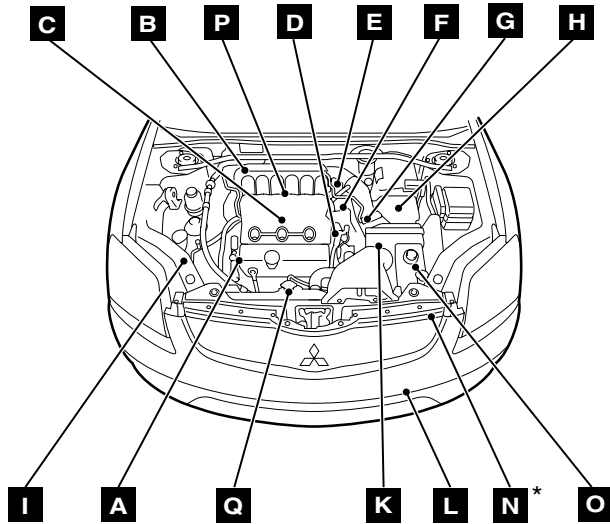


AC600503AC

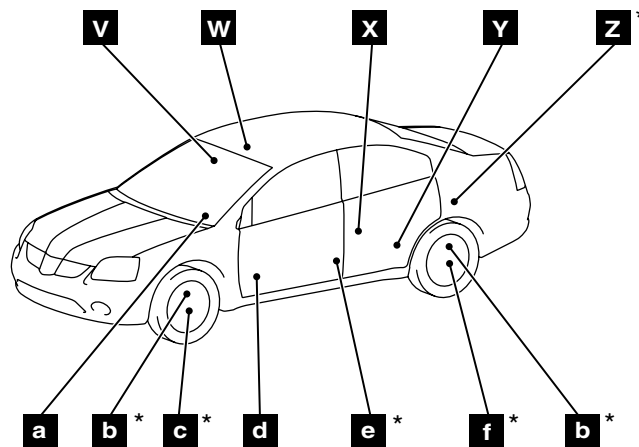 


AC600508AC

 
NOTE: The * symbols indicate equipped at both sides.

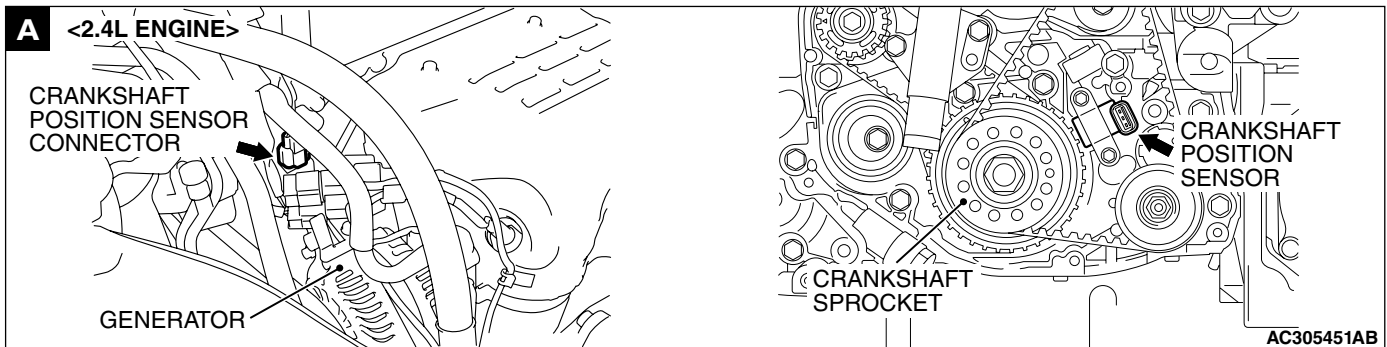


AC305451AB

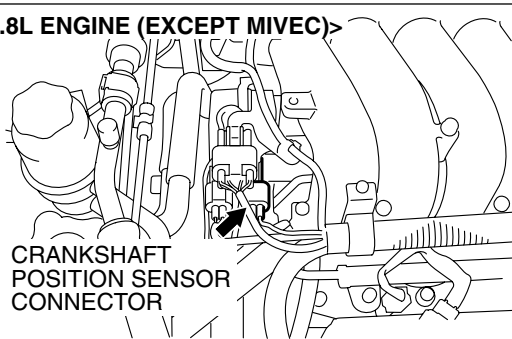 A <3.8L ENGINE (EXCEPT MIVEC)>

 
CRANKSHAFT
POSITION SENSOR
CONNECTOR

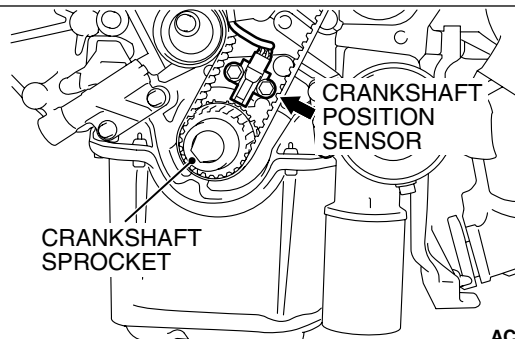


AC305452AC

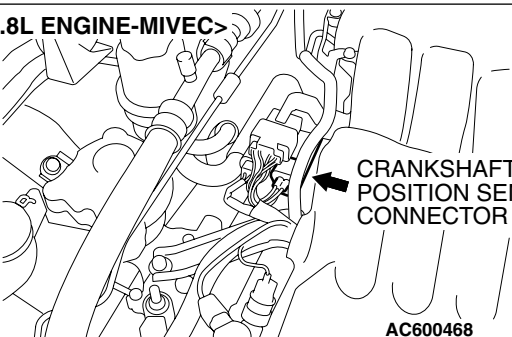 
A <3.8L ENGINE-MIVEC>


CRANKSHAFT
POSITION SENSOR
CONNECTOR

 AC600468

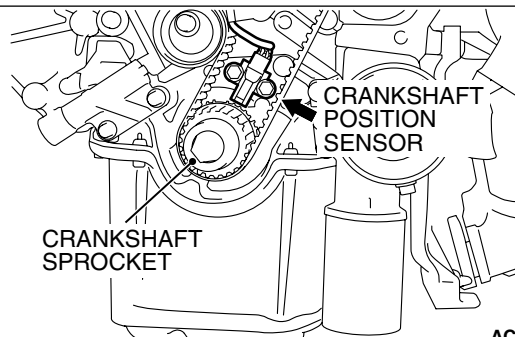


AC600504AB

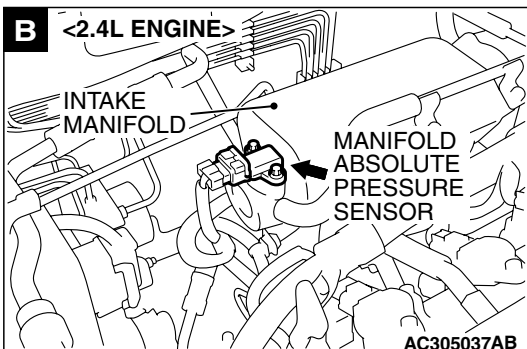 B <2.4L ENGINE>


INTAKE
MANIFOLD

MANIFOLD
ABSOLUTE
PRESSURE
SENSOR

 
AC305037AB

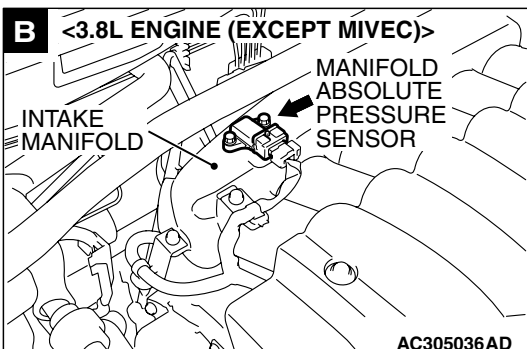B <3.8L ENGINE (EXCEPT MIVEC)>


INTAKE
MANIFOLD

MANIFOLD
ABSOLUTE
PRESSURE
SENSOR

 
AC305036AD

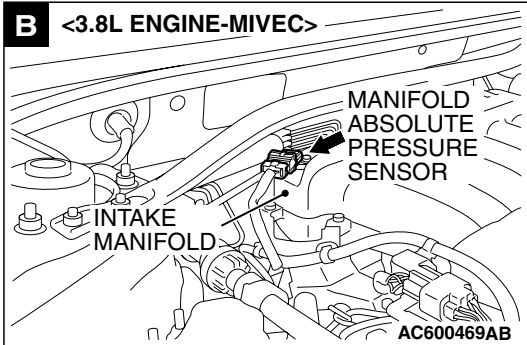B <3.8L ENGINE-MIVEC>


INTAKE
MANIFOLD


MANIFOLD
ABSOLUTE
PRESSURE
SENSOR

 AC600469AB

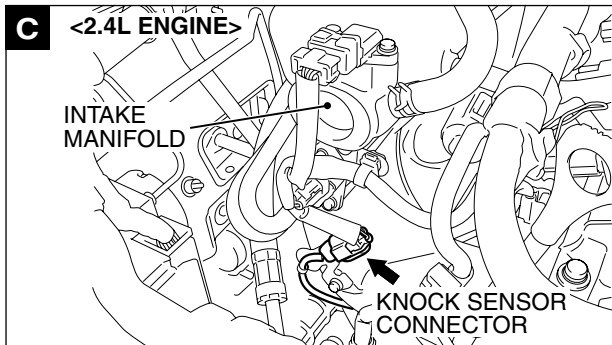C <2.4L ENGINE>


INTAKE
MANIFOLD










 
KNOCK SENSOR
CONNECTOR







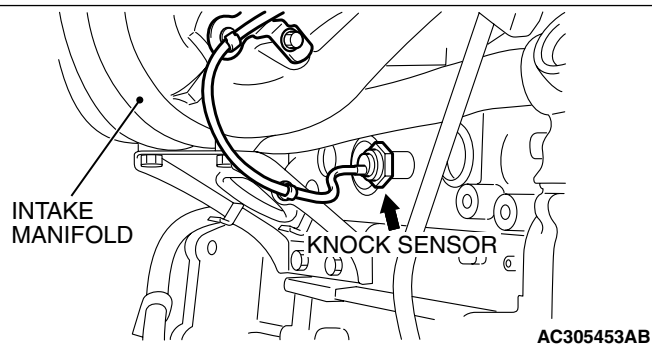









INTAKE
MANIFOLD








KNOCK SENSOR

                                
 
 
 
 
 
 
 
AC305453AB

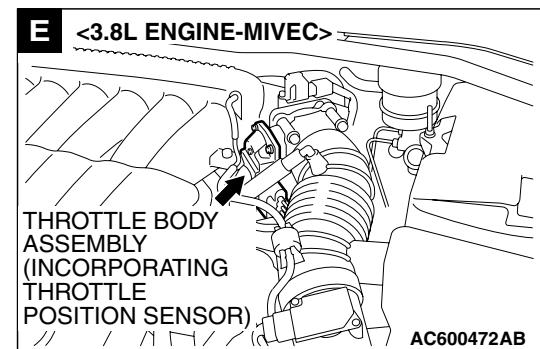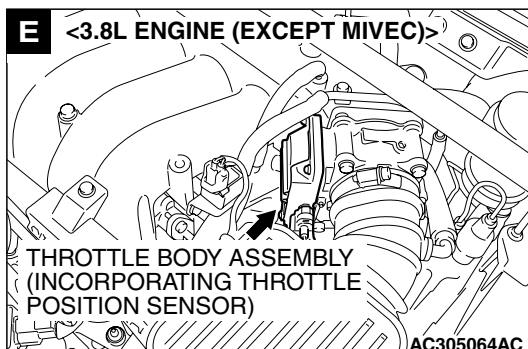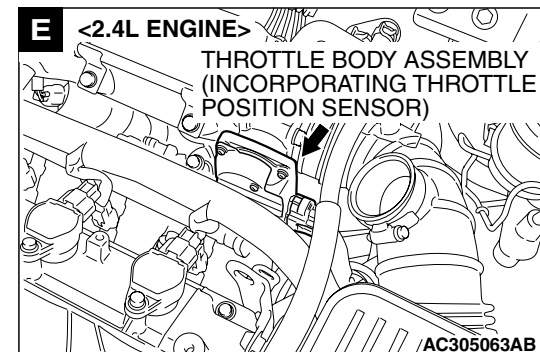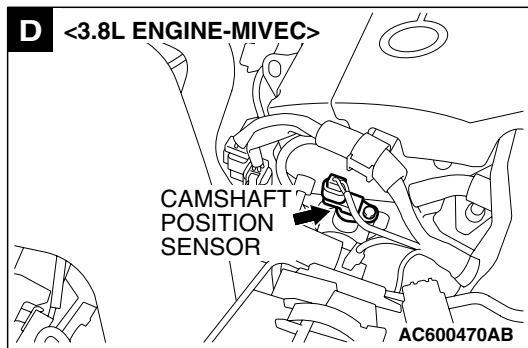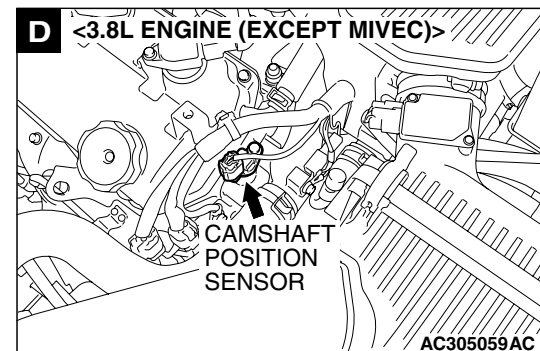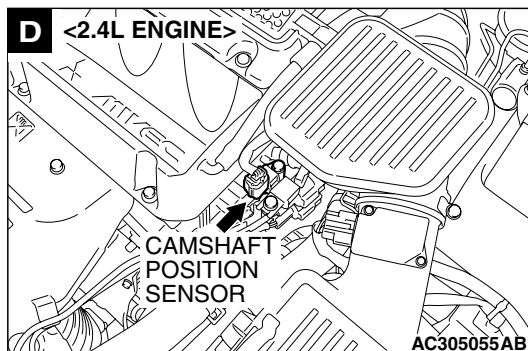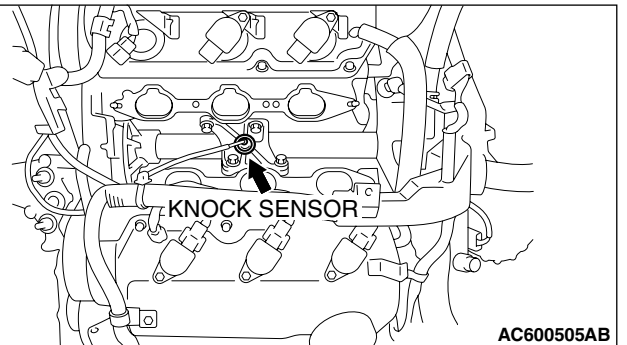 
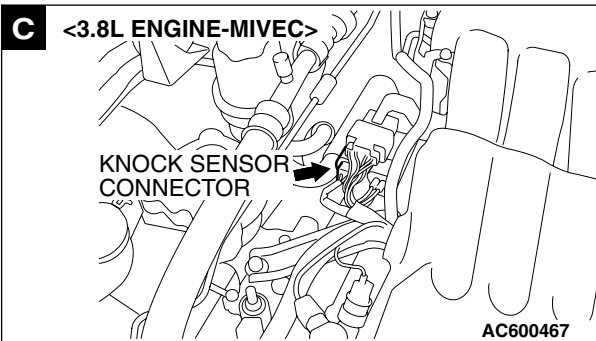 
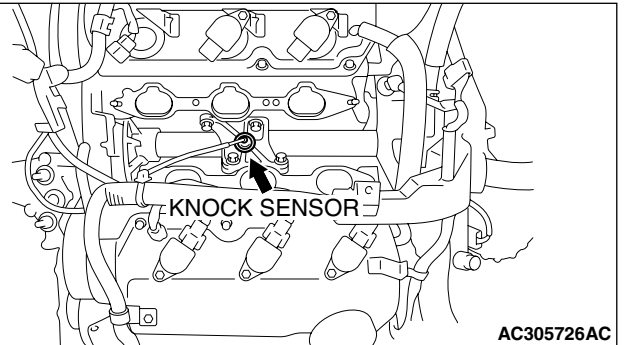 
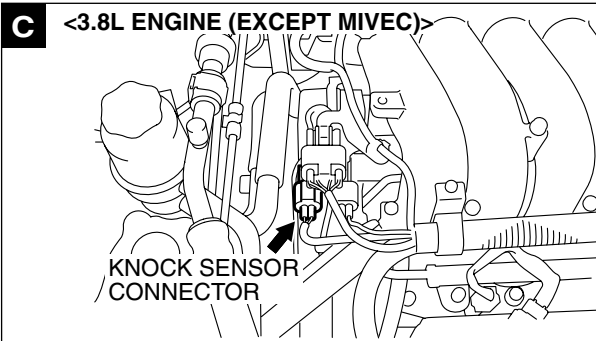 


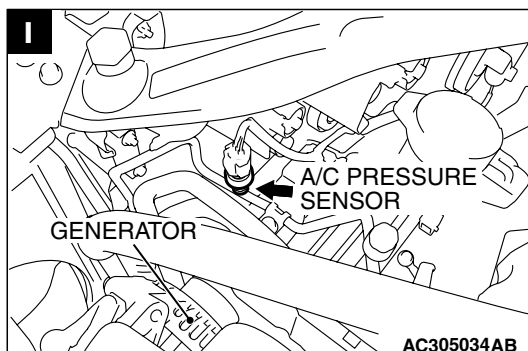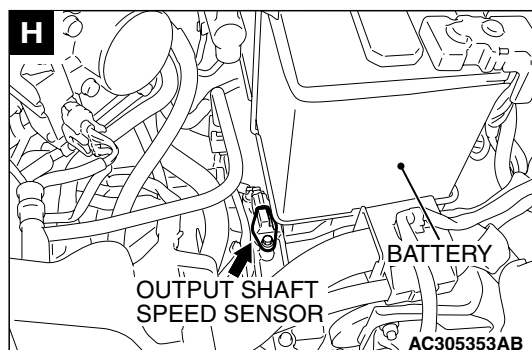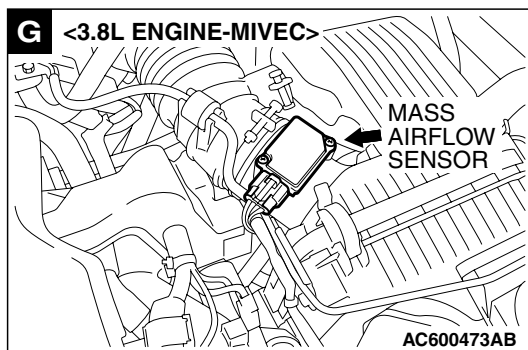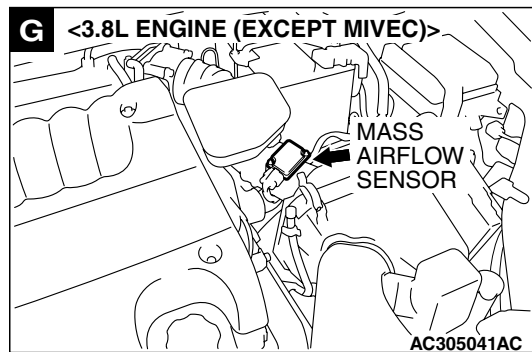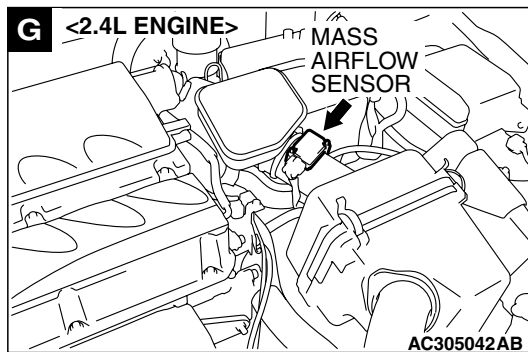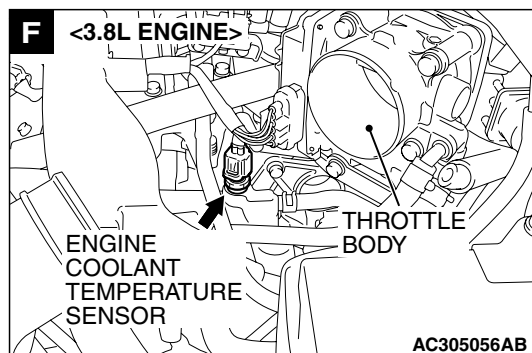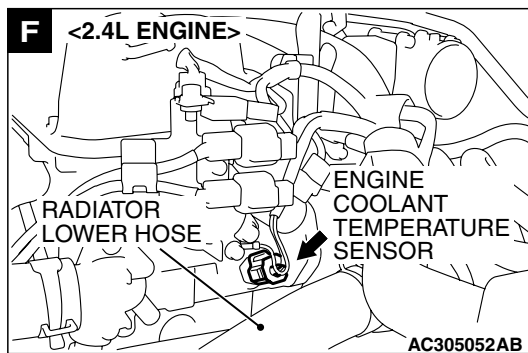

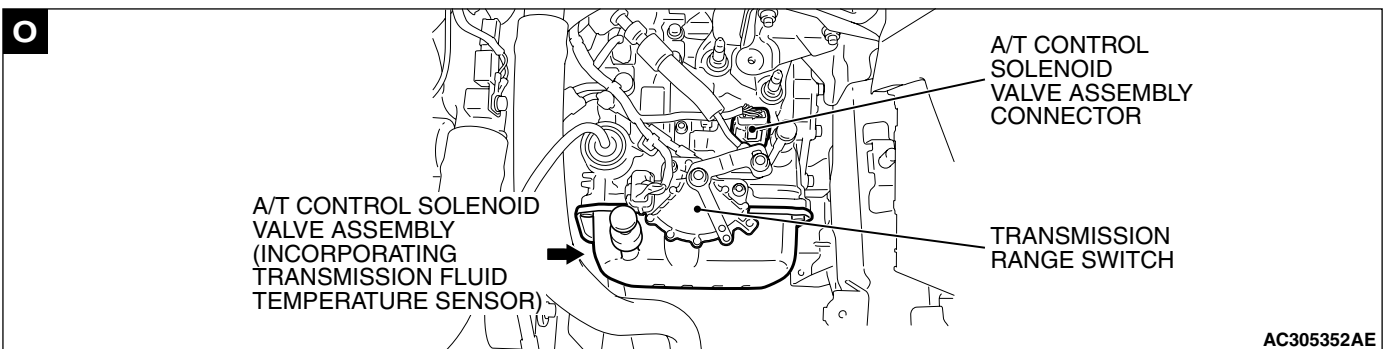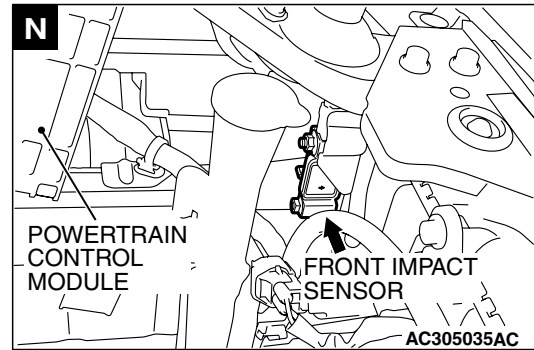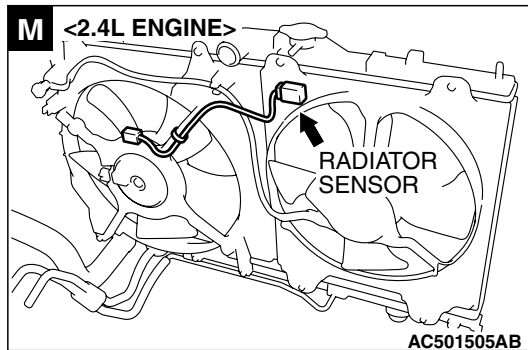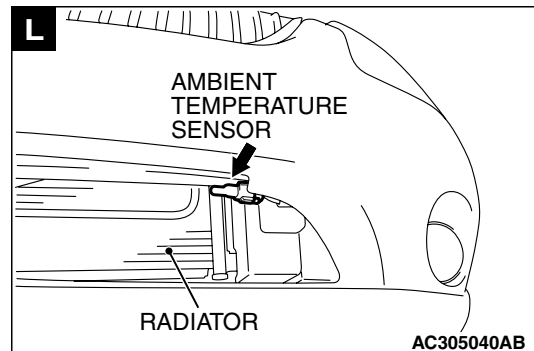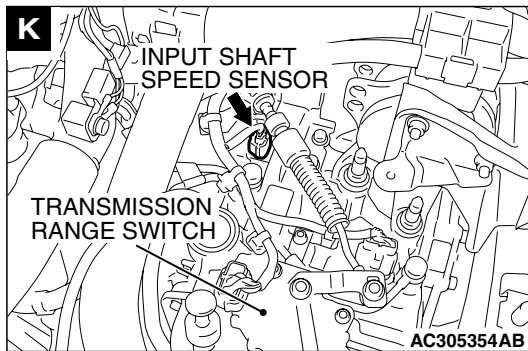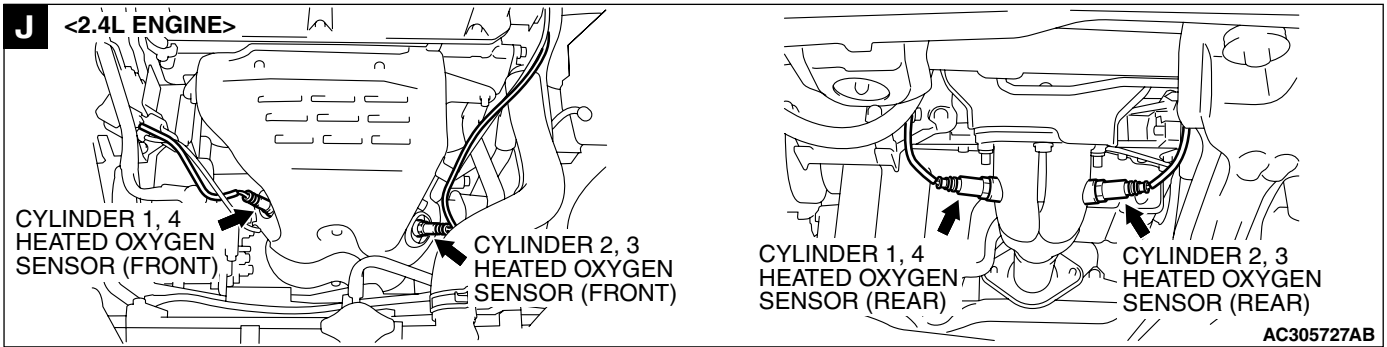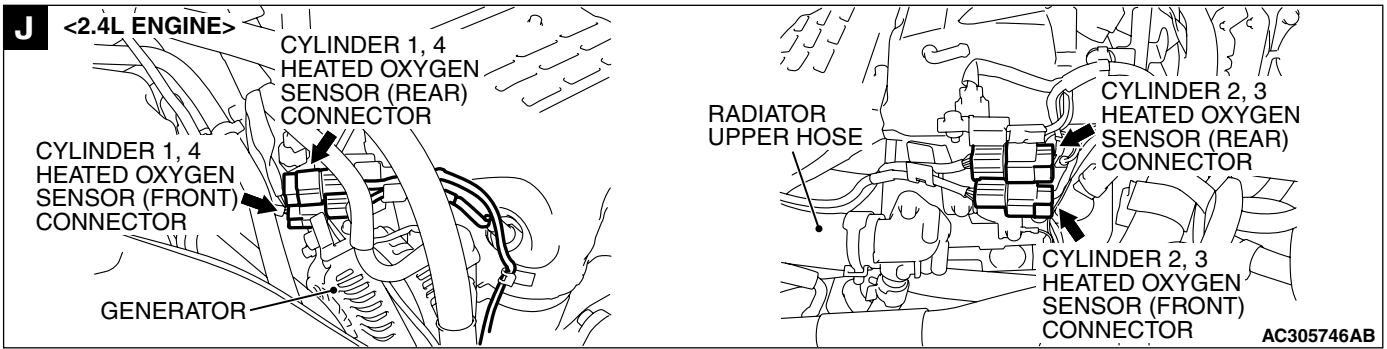

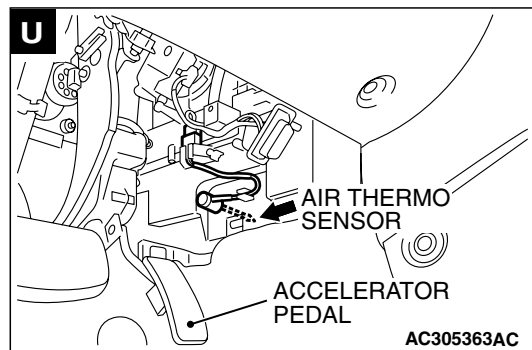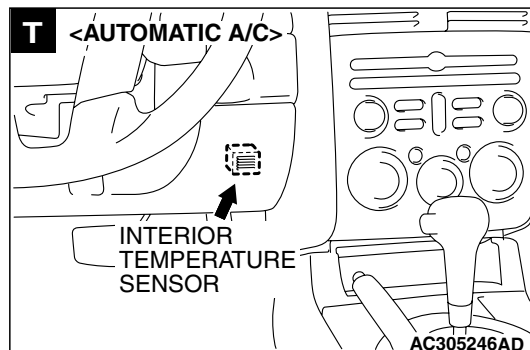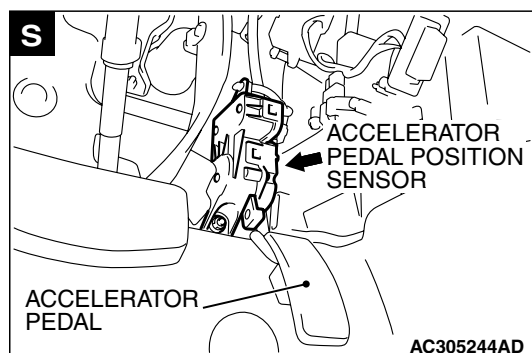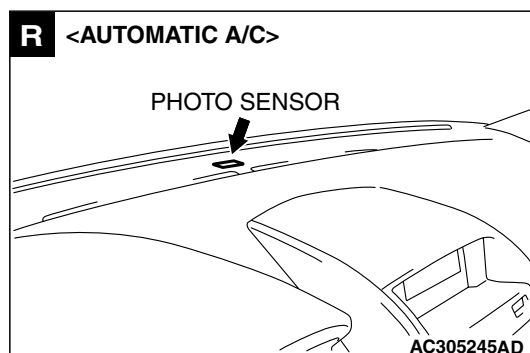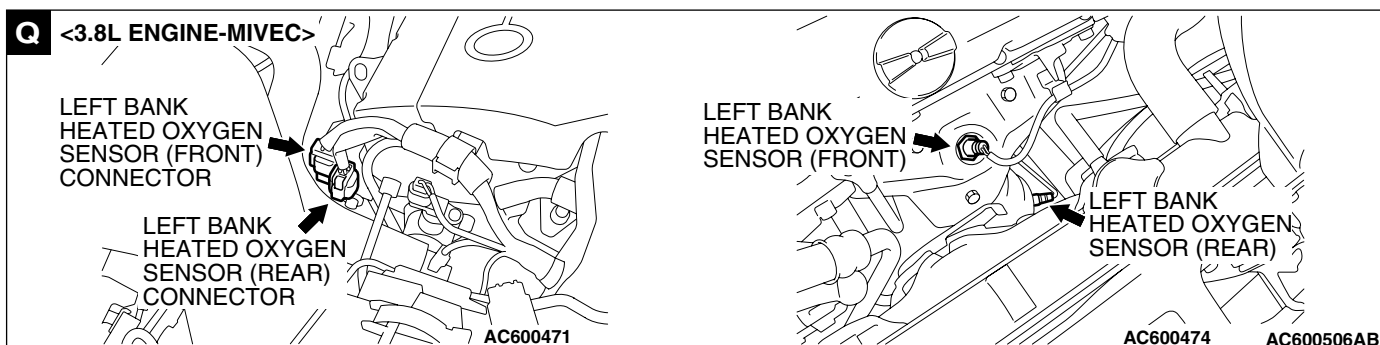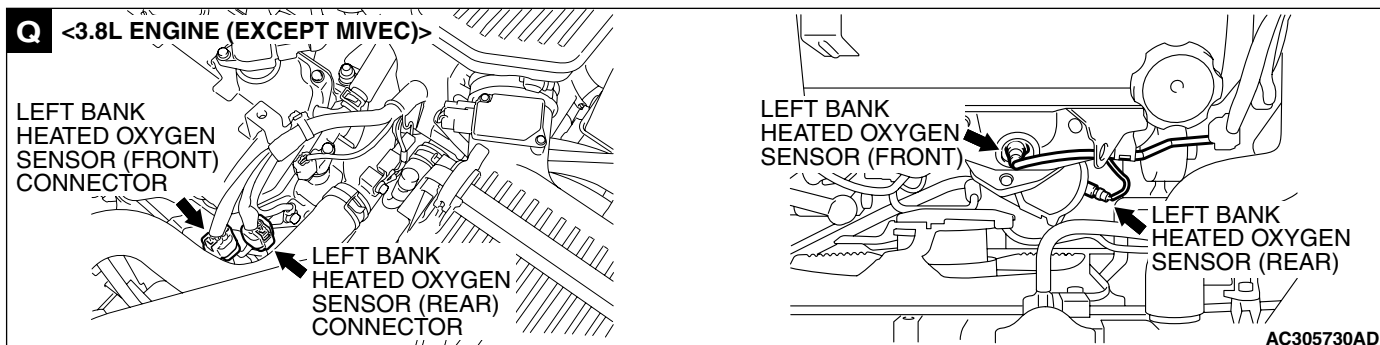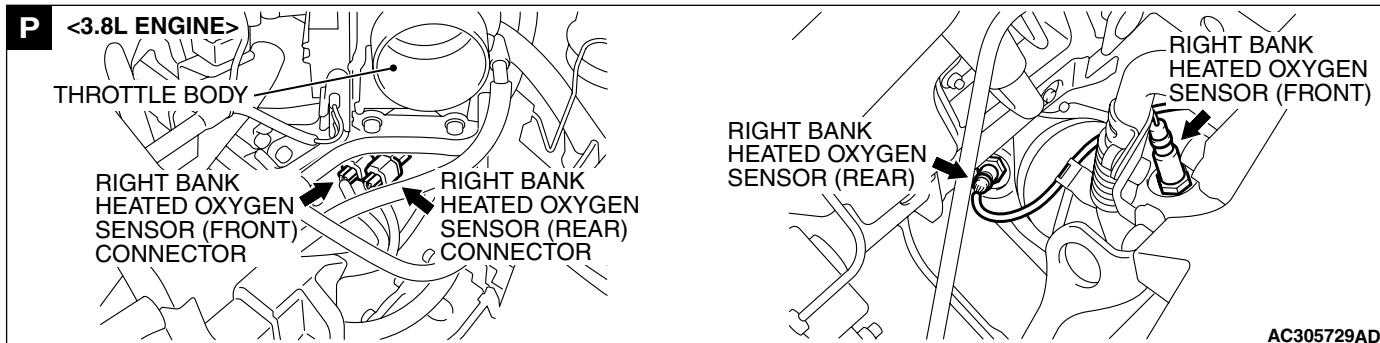

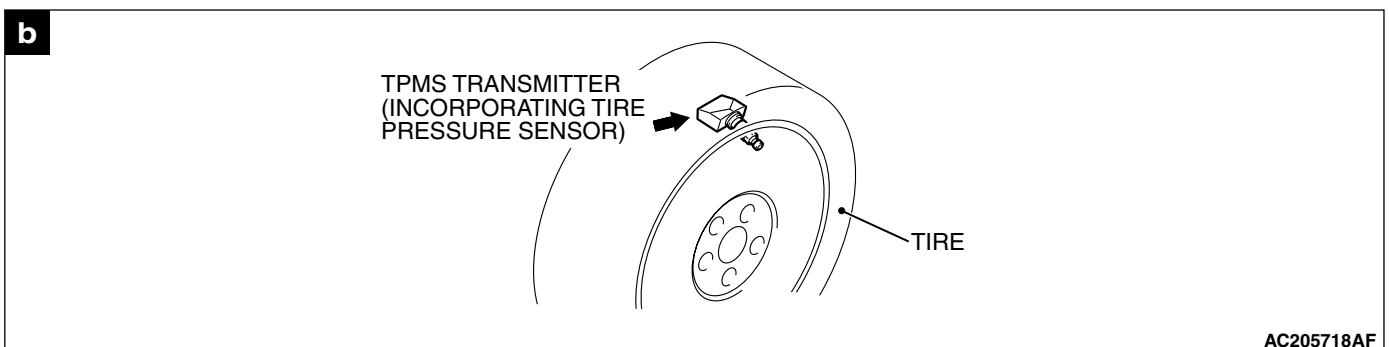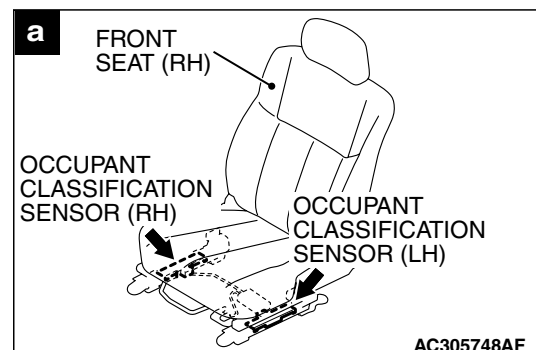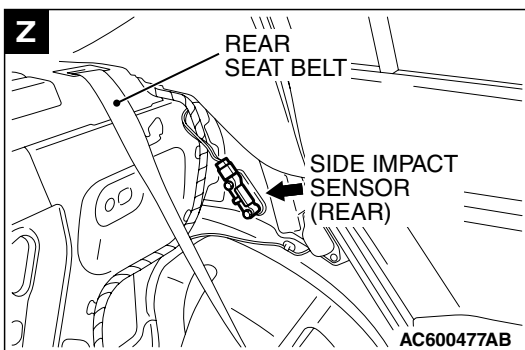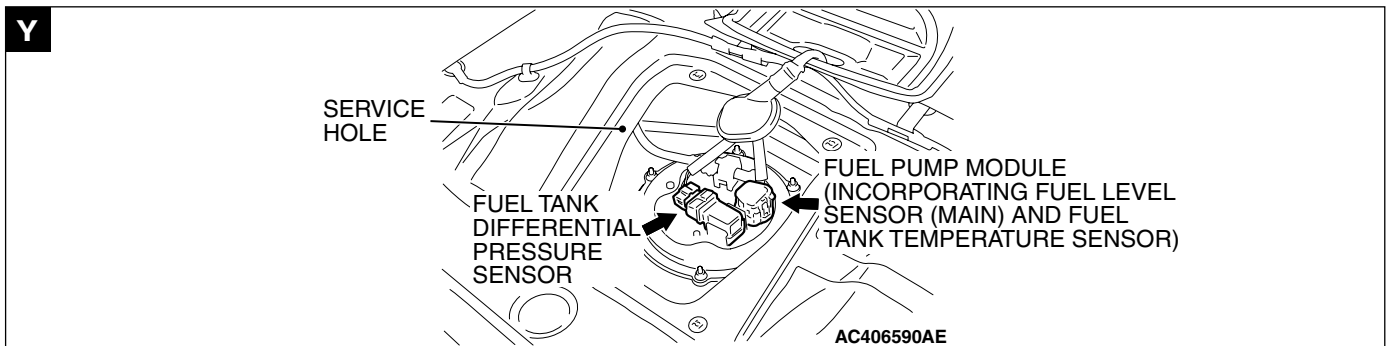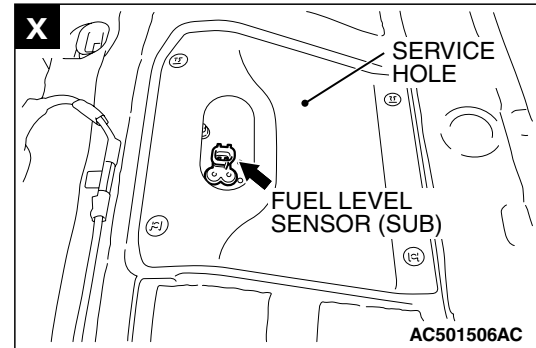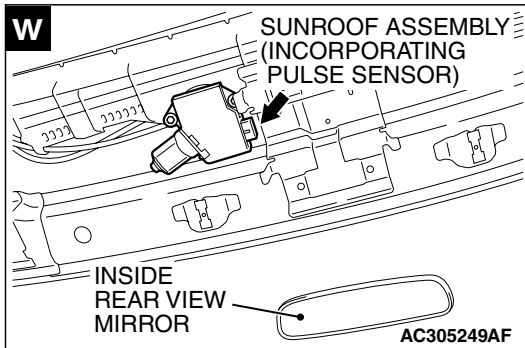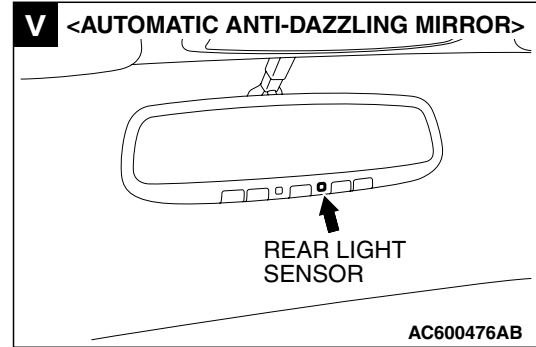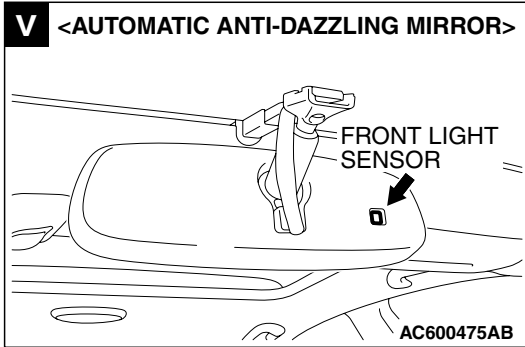


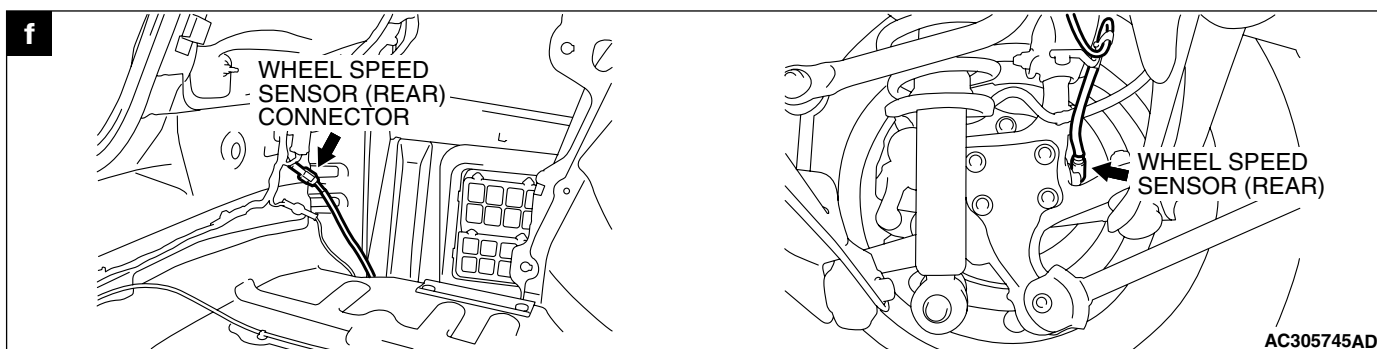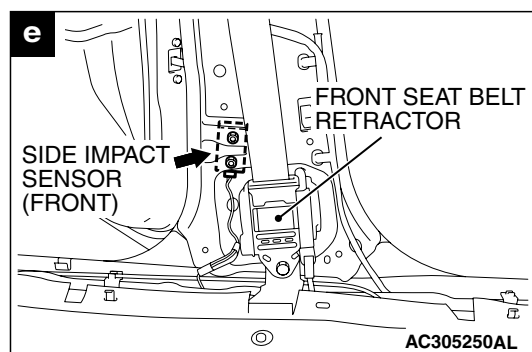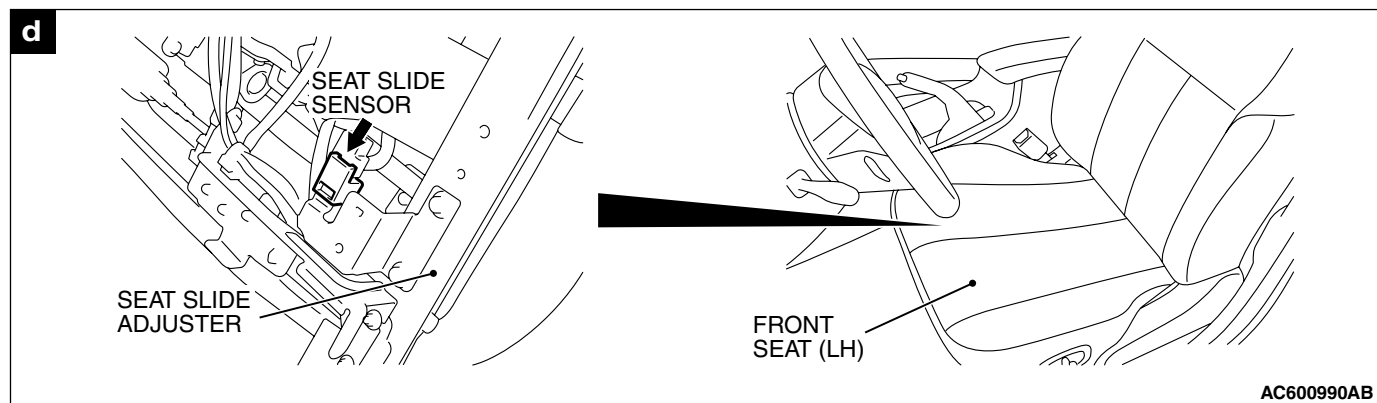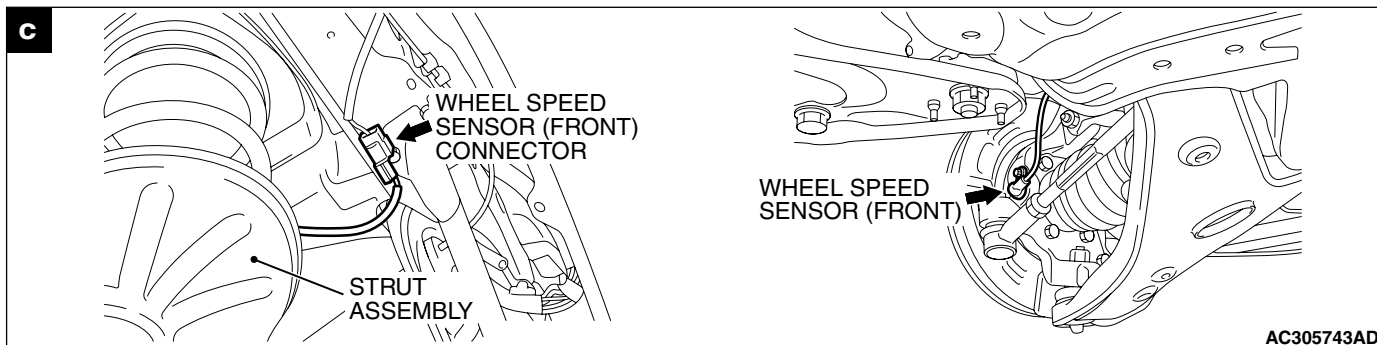









CONTROL UNIT







M1701000700638

NAME	SYMBOL	NAME	SYMBOL
ABS-ECU or ABS/TCL-ECU	A	Occupant classification-ECU	L
A/C-ECU	J	Power window main switch (incorporating CPU)	M
Column switch (incorporating column-ECU)	D	Powertrain control module	B
Combination meter (incorporating CPU)	E	SRS-ECU	H
ETACS-ECU	G	Sunroof assembly (incorporating sunroof-ECU)	K
Front-ECU	C	TPMS receiver	I
Multi center display unit	F		

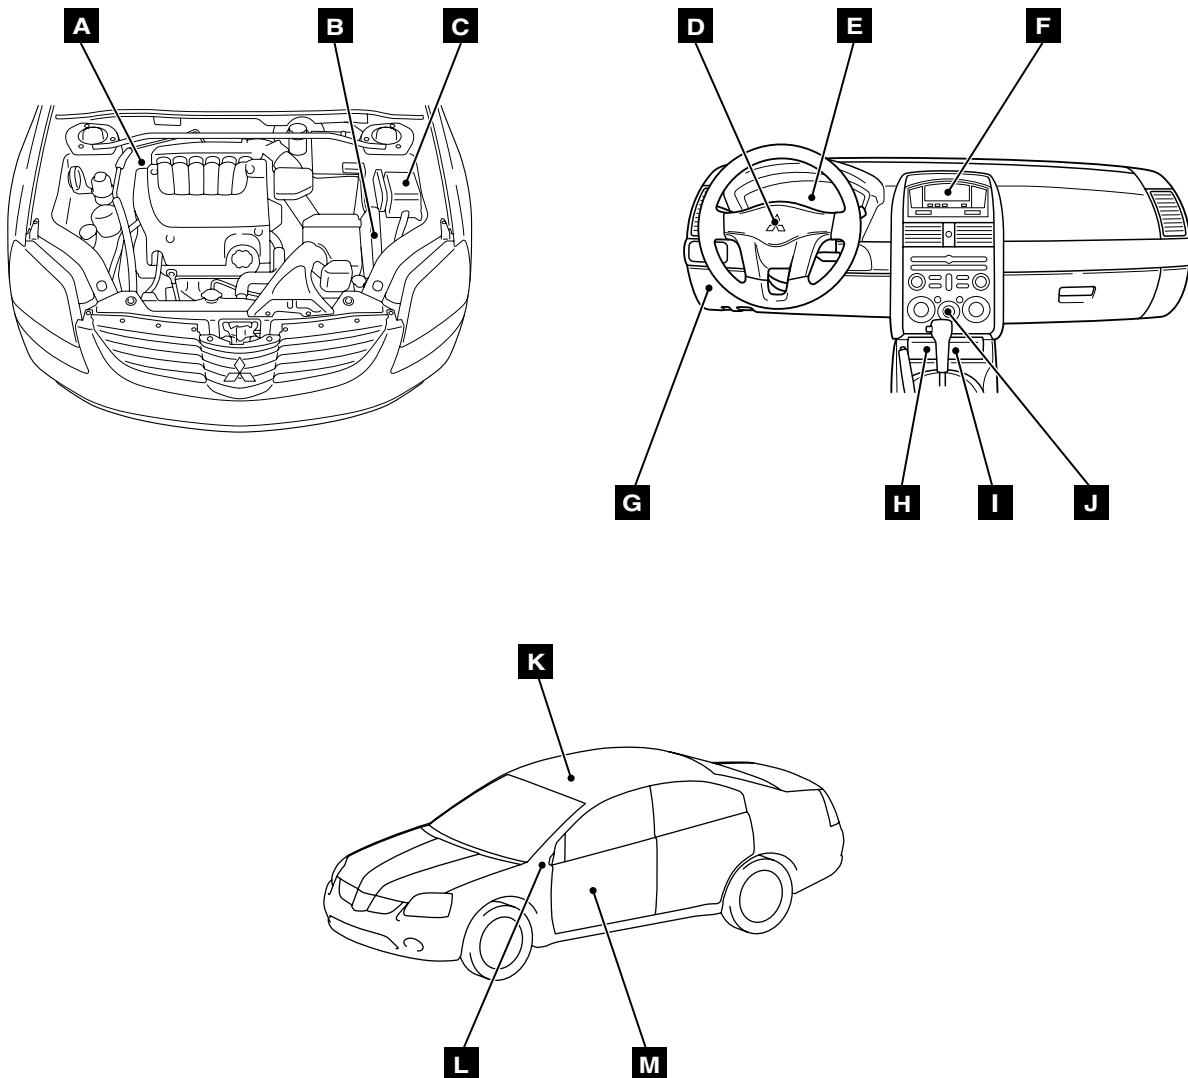 

AC600989AB

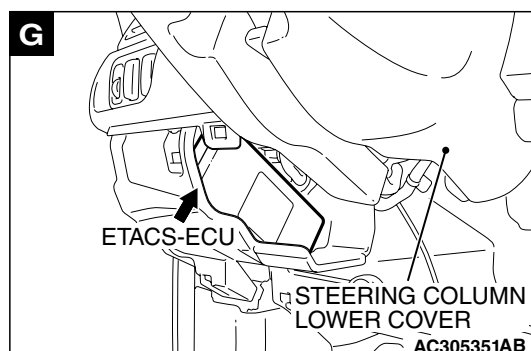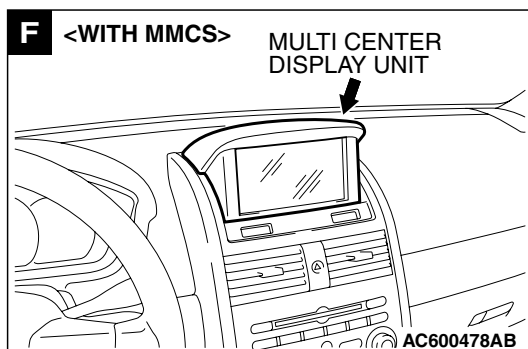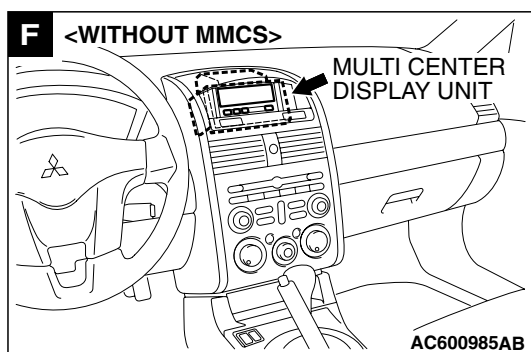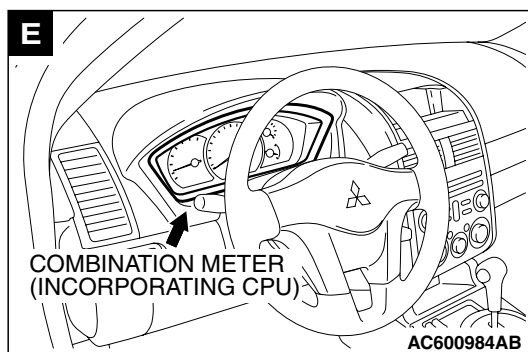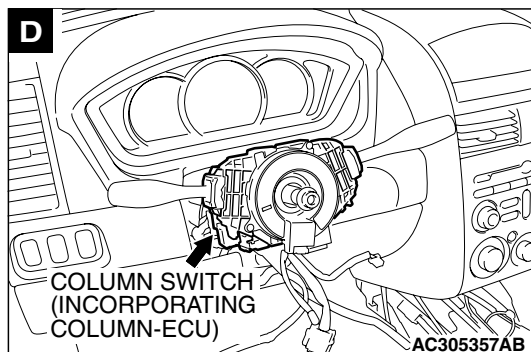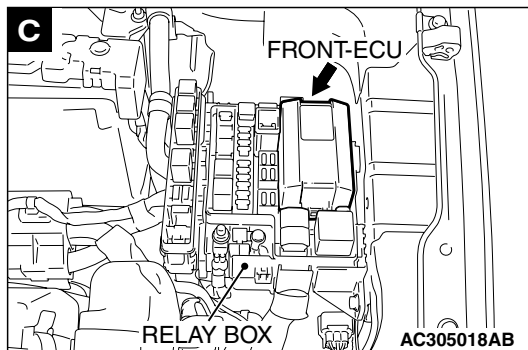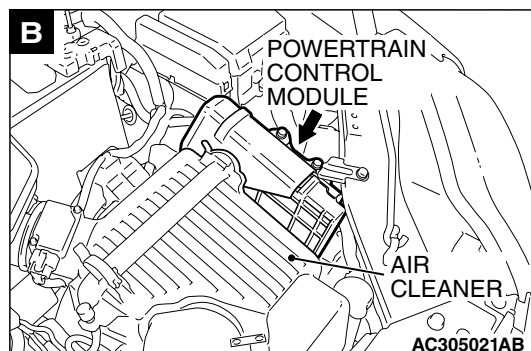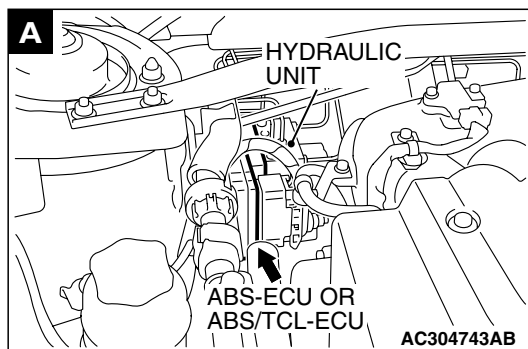        

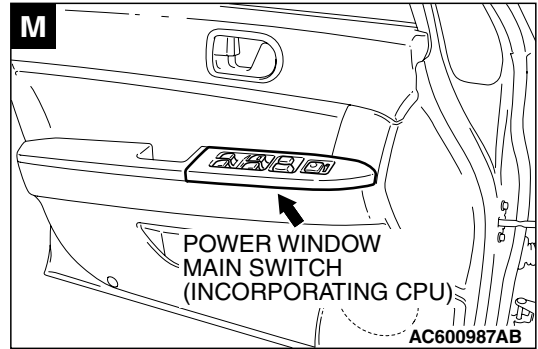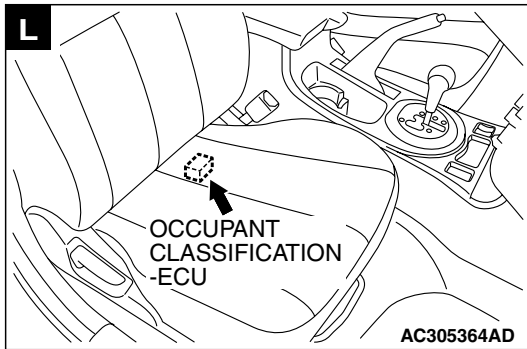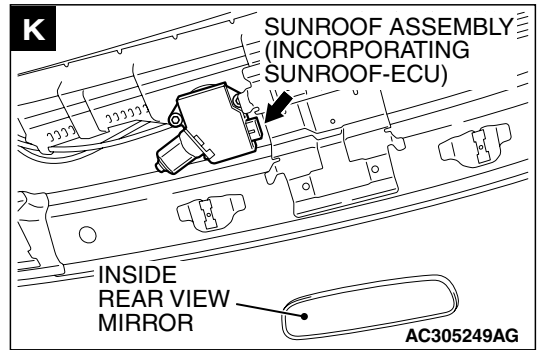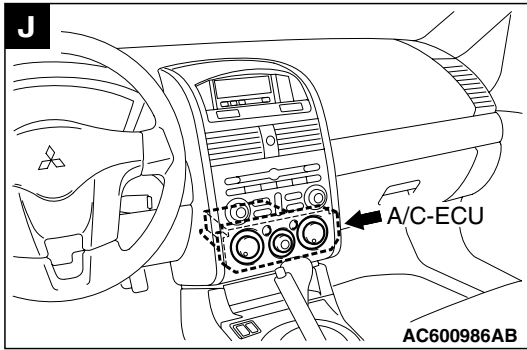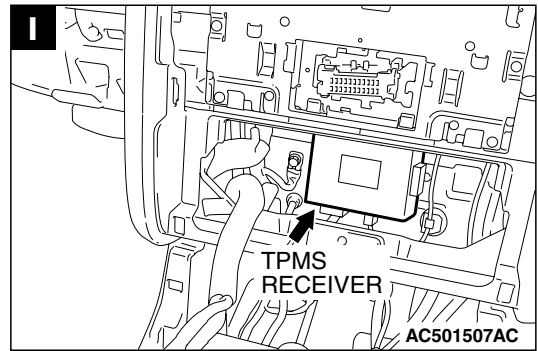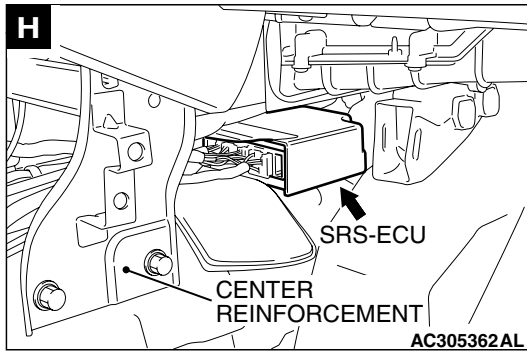      


OTHER DEVICES


M1701005600465

NAME	SYMBOL	NAME	SYMBOL
A/C compressor assembly (incorporating A/C refrigerant temperature switch)	B	Power steering pressure switch	A
 
<2.4L ENGINE>

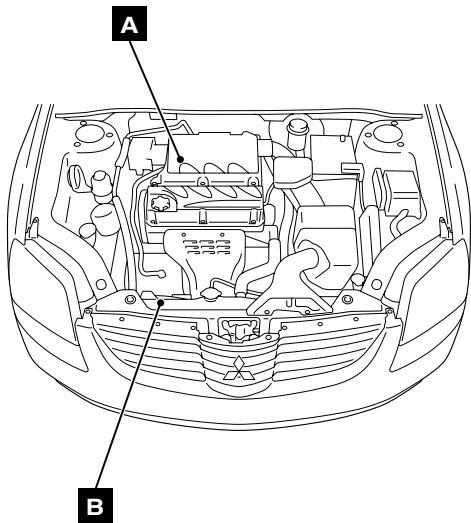


<3.8L ENGINE (EXCEPT MIVEC)>


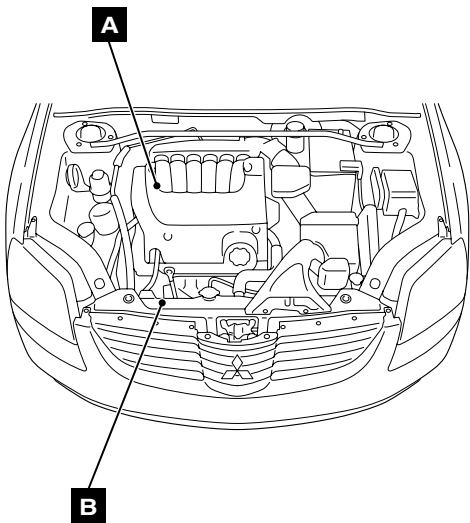 



AC600988AC
 
<3.8L ENGINE-MIVEC>

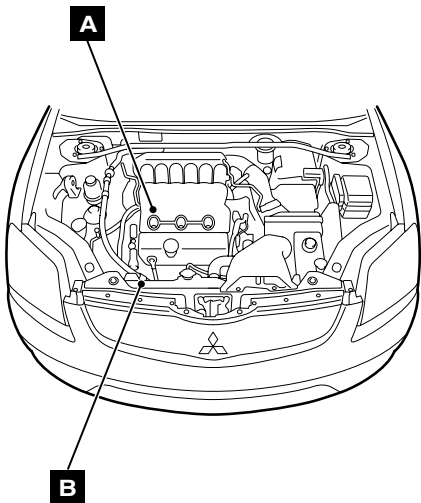

AC600507AB

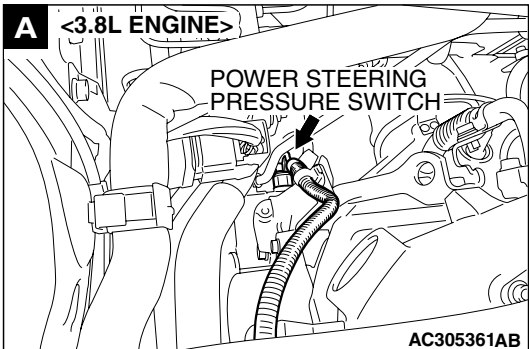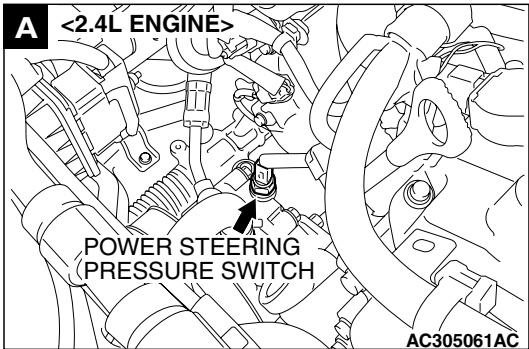  

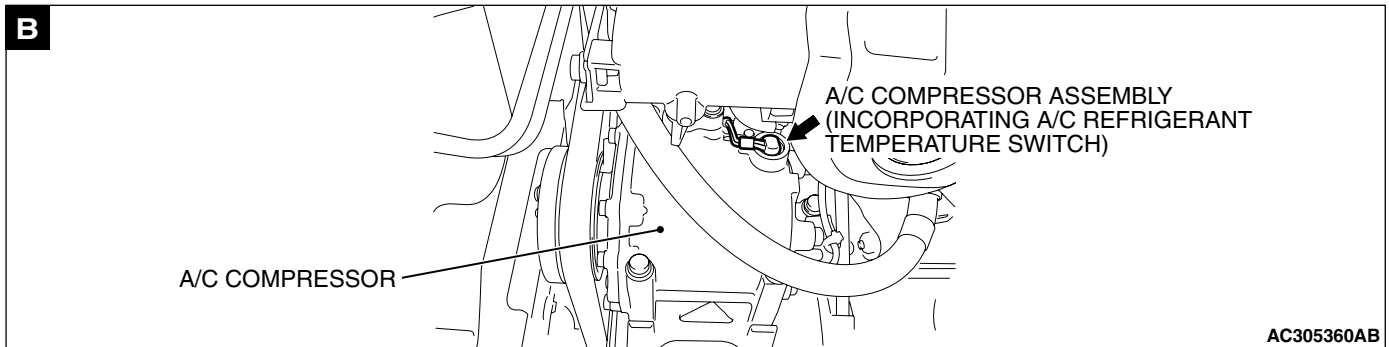 


SOLENOID AND SOLENOID VALVE


M1701000800925

NAME	SYMBOL	NAME	SYMBOL
A/T control solenoid valve assembly	E	Hydraulic unit (incorporating ABS solenoid valve)	A
Engine oil control valve <2.4L Engine>	D	Left bank engine oil control valve <3.8L Engine-MIVEC>	F
Evaporative emission purge solenoid	B	Right bank engine oil control valve <3.8L Engine-MIVEC>	G
Evaporative emission ventilation solenoid	I	Variable air intake solenoid <3.8L Engine-MIVEC>	H
Exhaust gas recirculation valve	C		
 
<2.4L ENGINE>


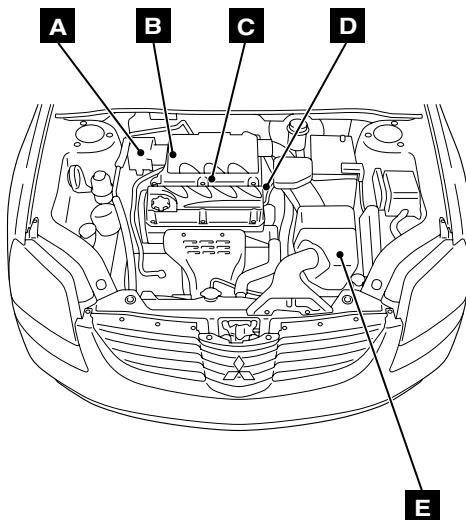


<3.8L ENGINE (EXCEPT MIVEC)>

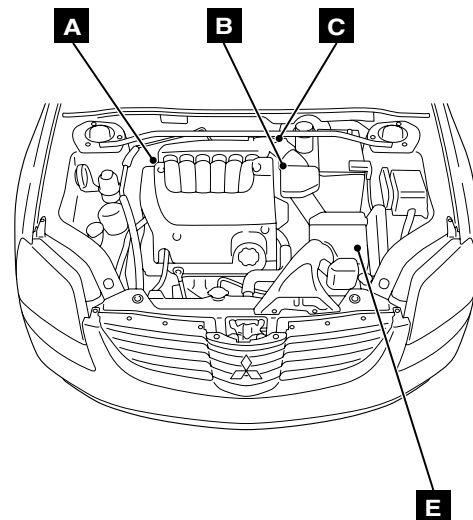 

AC600988AD
  
<3.8L ENGINE-MIVEC>

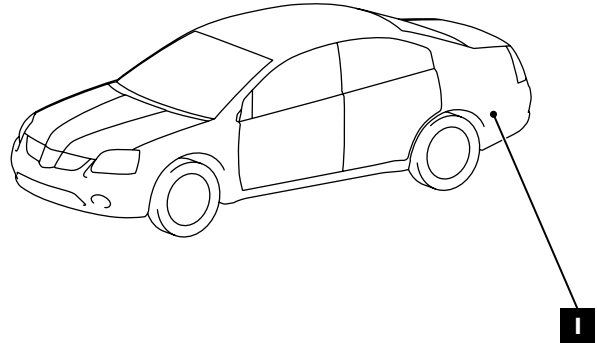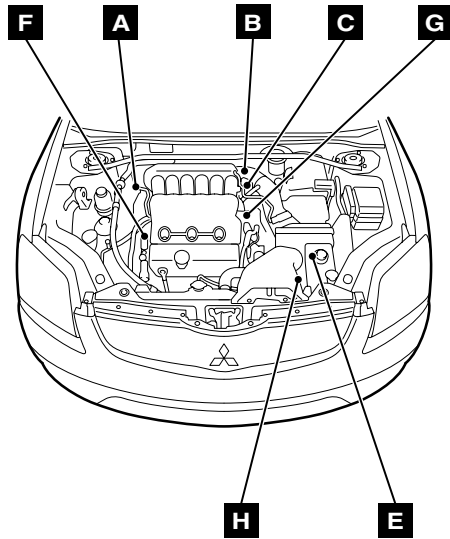

AC600779AB

