

GROUP 80A


CONFIGURATION
DIAGRAMS

CONTENTS

OVERALL CONFIGURATION DIAGRAM	(EXCEPT MIVEC)>	80A-2	80A-7
HOW TO READ CONFIGURATION DIAGRAMS	ENGINE AND TRANSAXLE <3.8L ENGINE- MIVEC>	80A-2	80A-9
ENGINE COMPARTMENT.....	DASH PANEL.....	80A-4	80A-11
ENGINE AND TRANSAXLE <2.4L ENGINE>	FLOOR AND ROOF	80A-5	80A-15
ENGINE AND TRANSAXLE <3.8L ENGINE	DOOR		80A-16
	LUGGAGE COMPARTMENT.....		80A-17

OVERALL CONFIGURATION DIAGRAM

M1801000100558

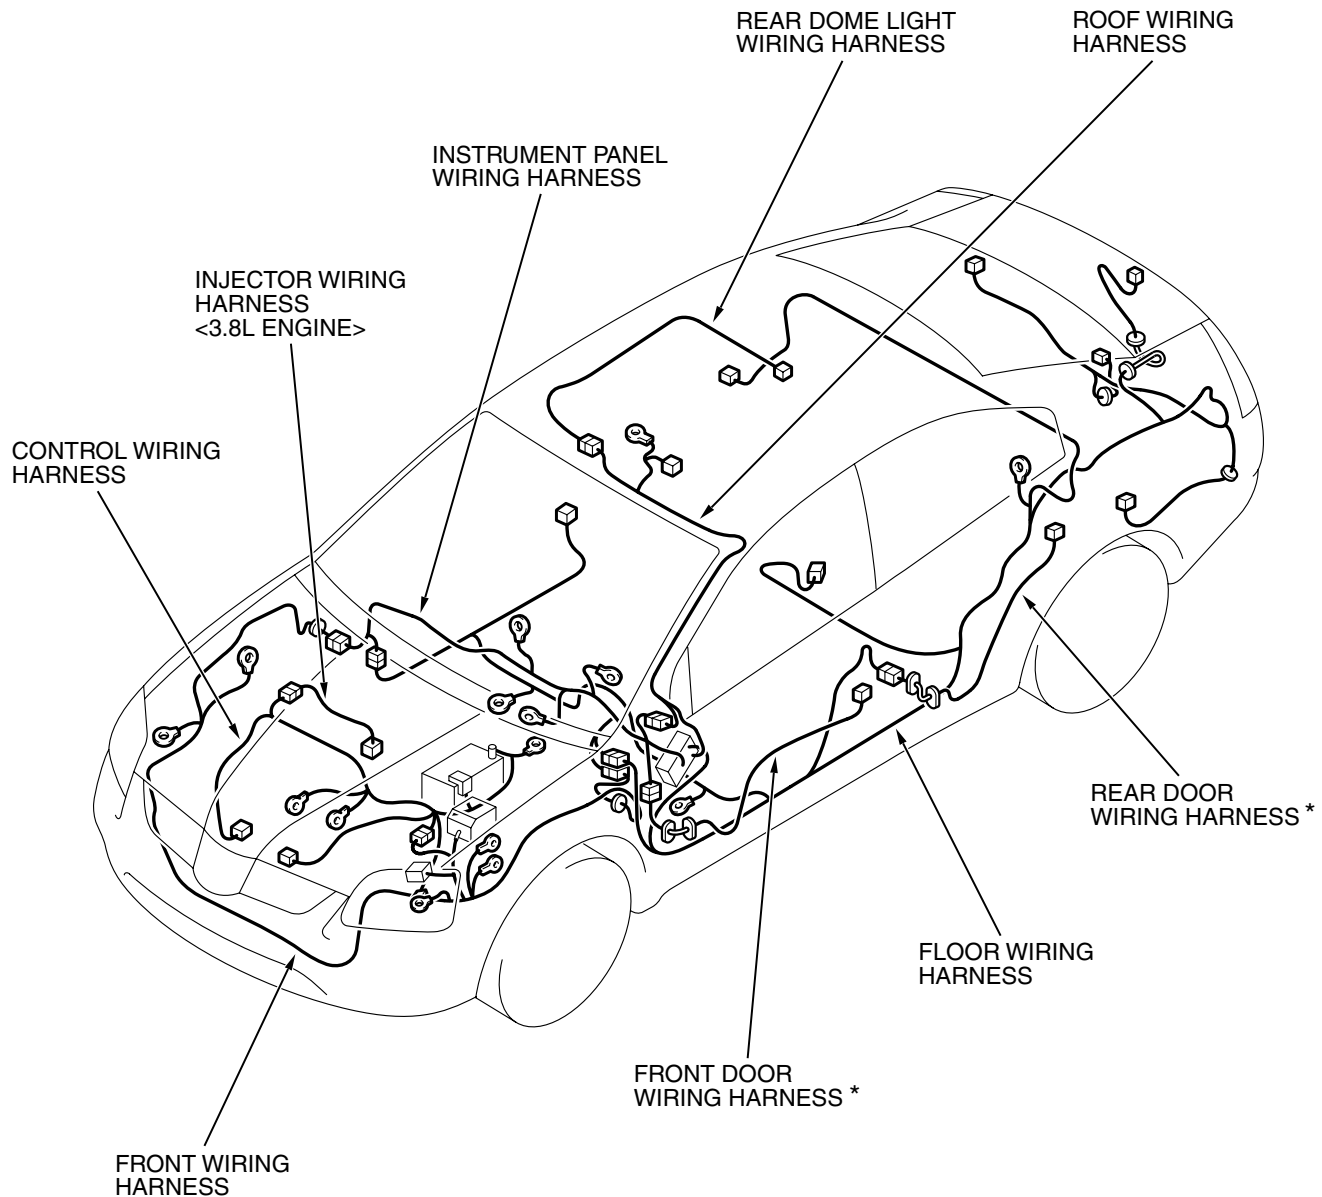

AC304369AB

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

HOW TO READ CONFIGURATION DIAGRAMS

M1801000200629

The wiring harness diagrams clearly show the connector locations and harness configurations on actual vehicles. Some variations are included in one configuration diagram. Accordingly, some diagrams may not be applicable for individual vehicles.

Denotes connector No.

The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.

The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number. Numbers are usually assigned to parts in clockwise order on the diagram.

Example: A-19

Number specific to connector (serial number)

Connector location site symbol

A: ENGINE COMPARTMENT
 B: ENGINE AND TRANSAXLE
 C: DASH PANEL

D: FLOOR AND ROOF

E: DOOR

F: LUGGAGE COMPARTMENT

Denotes ground point.

Same ground number is used throughout circuit diagrams to facilitate search of ground point. Refer to GROUP 70 COMPONENT LOCATIONS -GROUND MOUNTING LOCATIONS for details of ground points.

Denotes harness name.

Denotes a section covered by a corrugated tube.

The mark ★ shows the standard mounting position of wiring harness.

Denotes the color of the tube
 (If not specified, it is black).
 R: Red
 Y: Yellow

The number of connector pins and the connector color (except milk white)* are shown for ease of retrieval.

Example: (2-B)

Connector color
 (milk white if no color is indicated)

Number of connector pins

*: Typical connector colors

B: Black	BR: Brown
Y: Yellow	V: Violet
L: Blue	O: Orange
G: Green	GR: Gray
R: Red	NONE: Milk white

A-19

1

FRONT
 WIRING
 HARNESS
 (RH)

A-18

A-17

A-16

A-15

A-15 (2)
 A-16 (2-GR)
 A-17 (2-B)
 A-18 (2-B)
 A-19 (2-GR)

 
FOG LIGHT (RH)
 HORN (LOW)
 HEADLIGHT (RH)
 WINDSHIELD WASHER MOTOR
 DUAL PRESSURE SWITCH

Indicates the device to which the connector is connected.


AC208446AK

ENGINE COMPARTMENT

M1801000302912



CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW


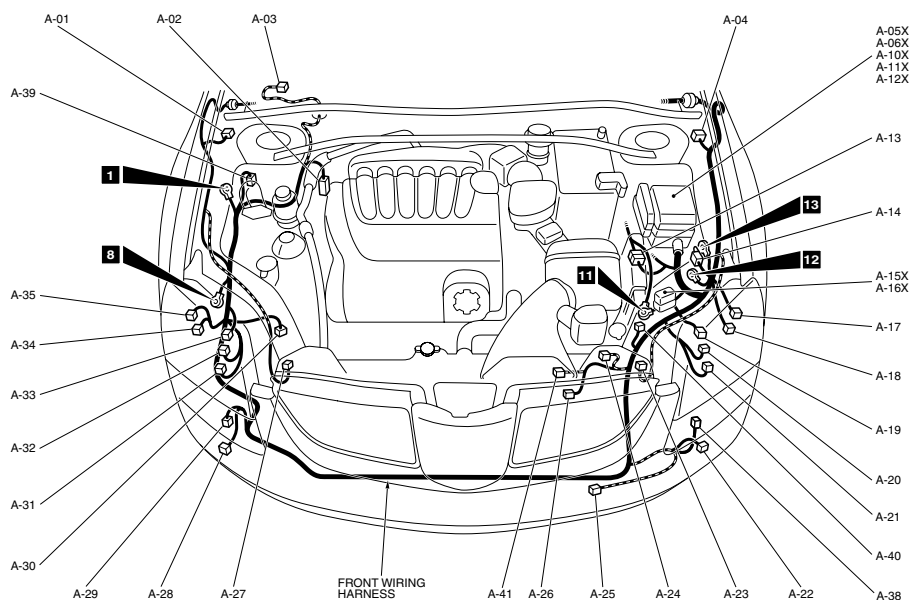


AC501510AB

A-01	(2-B)	WHEEL SPEED SENSOR (FRONT: RH)	A-23	(2-Y)	FRONT IMPACT SENSOR (LH)
A-02	(28-GR)	ABS-ECU OR ABS/TCL-ECU	A-24	(2-GR)	CONDENSER FAN MOTOR <3.8L ENGINE>
A-03	(5-B)	WINDSHIELD WIPER MOTOR	A-25	(2-BR)	AMBIENT TEMPERATURE SENSOR
A-04	(2-B)	WHEEL SPEED SENSOR (FRONT: LH)	A-26	(2-GR)	RADIATOR FAN MOTOR
A-05X	(4)	FOG LIGHT RELAY	A-27	(2-Y)	FRONT IMPACT SENSOR (RH)
A-06X	(4)	HORN RELAY	A-28	(2-B)	FOG LIGHT (RH)
A-10X	(4)	FAN CONTROL RELAY	A-29	(2)	WINDSHIELD WASHER MOTOR
A-11X	(11)	FRONT-ECU	A-30	(2-B)	A/C PRESSURE SENSOR
A-12X	(11)	FRONT-ECU	A-31	(2-B)	HEADLIGHT (HIGH: RH) <4-BULB TYPE>
A-13	(17-GR)	FRONT WIRING HARNESS AND CONTROL WIRING HARNESS COMBINATION	A-32	(2-BR)	HEADLIGHT (LOW: RH) <4-BULB TYPE>
A-14	(6-GR)	GROUNDING CONNECTOR	A-33	(3-GR)	HEADLIGHT (RH) <2-BULB TYPE>
A-15X	(4)	CONDENSER FAN RELAY	A-34	(3-GR)	FRONT COMBINATION LIGHT (RH)
A-16X	(5)	RADIATOR FAN RELAY	A-35	(2)	FRONT SIDE MARKER LIGHT (RH)
A-17	(2)	FRONT SIDE MARKER LIGHT (LH)	A-37	(2-B)	CONDENSER FAN MOTOR <2.4L ENGINE>
A-18	(3-GR)	FRONT COMBINATION LIGHT (LH)	A-38	(1-B)	HORN (LOW)
A-19	(3-GR)	HEADLIGHT (LH) <2-BULB TYPE>	A-39	(1-B)	HORN (HIGH)
A-20	(2-BR)	HEADLIGHT (LOW: LH) <4-BULB TYPE>	A-40	(2-B)	HOOD SWITCH <THEFT-ALARM SYSTEM>
A-21	(2-B)	HEADLIGHT (HIGH: LH) <4-BULB TYPE>	A-41	(3-B)	RADIATOR SENSOR <2.4L ENGINE>
A-22	(2-B)	FOG LIGHT (LH)			

ENGINE AND TRANSAXLE <2.4L ENGINE>

 M1801000402179

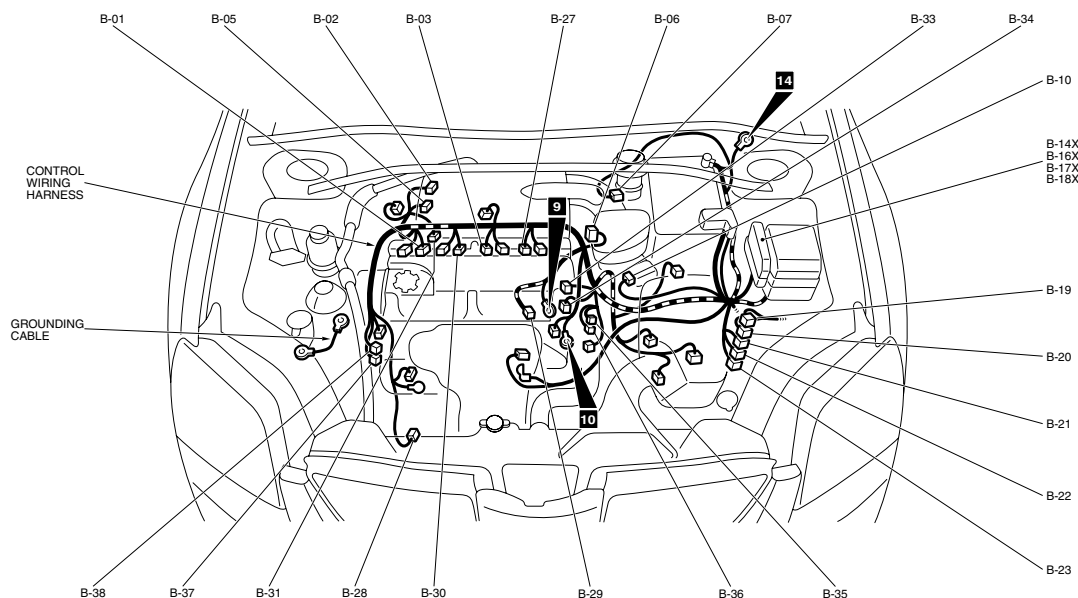


CONNECTOR COLOR CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

ACS11748AB


B-01	(2-GR)	INJECTOR 1	B-23	(33)	POWERTRAIN CONTROL MODULE
B-02	(3-B)	MANIFOLD ABSOLUTE PRESSURE SENSOR	B-27	(2-GR)	INJECTOR 4
B-03	(2-GR)	INJECTOR 3	B-28	(1-B)	A/C COMPRESSOR ASSEMBLY
B-05	(2-B)	EVAPORATIVE EMISSION PURGE SOLENOID	B-29	(1-B)	ENGINE OIL PRESSURE SWITCH
B-06	(6-B)	THROTTLE BODY ASSEMBLY	B-30	(2-GR)	INJECTOR 2
B-07	(2-GR)	BRAKE FLUID LEVEL SWITCH	B-31	(1-B)	POWER STEERING PRESSURE SWITCH
B-10	(4-GR)	MASS AIRFLOW SENSOR	B-33	(2-B)	ENGINE OIL CONTROL VALVE
B-14X	(4)	THROTTLE ACTUATOR CONTROL MOTOR RELAY	B-34	(1-B)	ENGINE OIL PRESSURE SWITCH (FOR ENGINE OIL CONTROL VALVE)
B-16X	(4)	A/T CONTROL RELAY	B-35	(4-B)	CYLINDER 2, 3 HEATED OXYGEN SENSOR (REAR)
B-17X	(4)	MFI RELAY	B-36	(4-GR)	CYLINDER 2, 3 HEATED OXYGEN SENSOR (FRONT)
B-18X	(4)	A/C COMPRESSOR CLUTCH RELAY	B-37	(4-GR)	CYLINDER 1, 4 HEATED OXYGEN SENSOR (FRONT)
B-19	(18-B)	POWERTRAIN CONTROL MODULE	B-38	(4-B)	CYLINDER 1, 4 HEATED OXYGEN SENSOR (REAR)
B-20	(23)	POWERTRAIN CONTROL MODULE			
B-21	(33-B)	POWERTRAIN CONTROL MODULE			
B-22	(23-B)	POWERTRAIN CONTROL MODULE			

ENGINE AND TRANSAXLE <2.4L ENGINE> (CONTINUED)

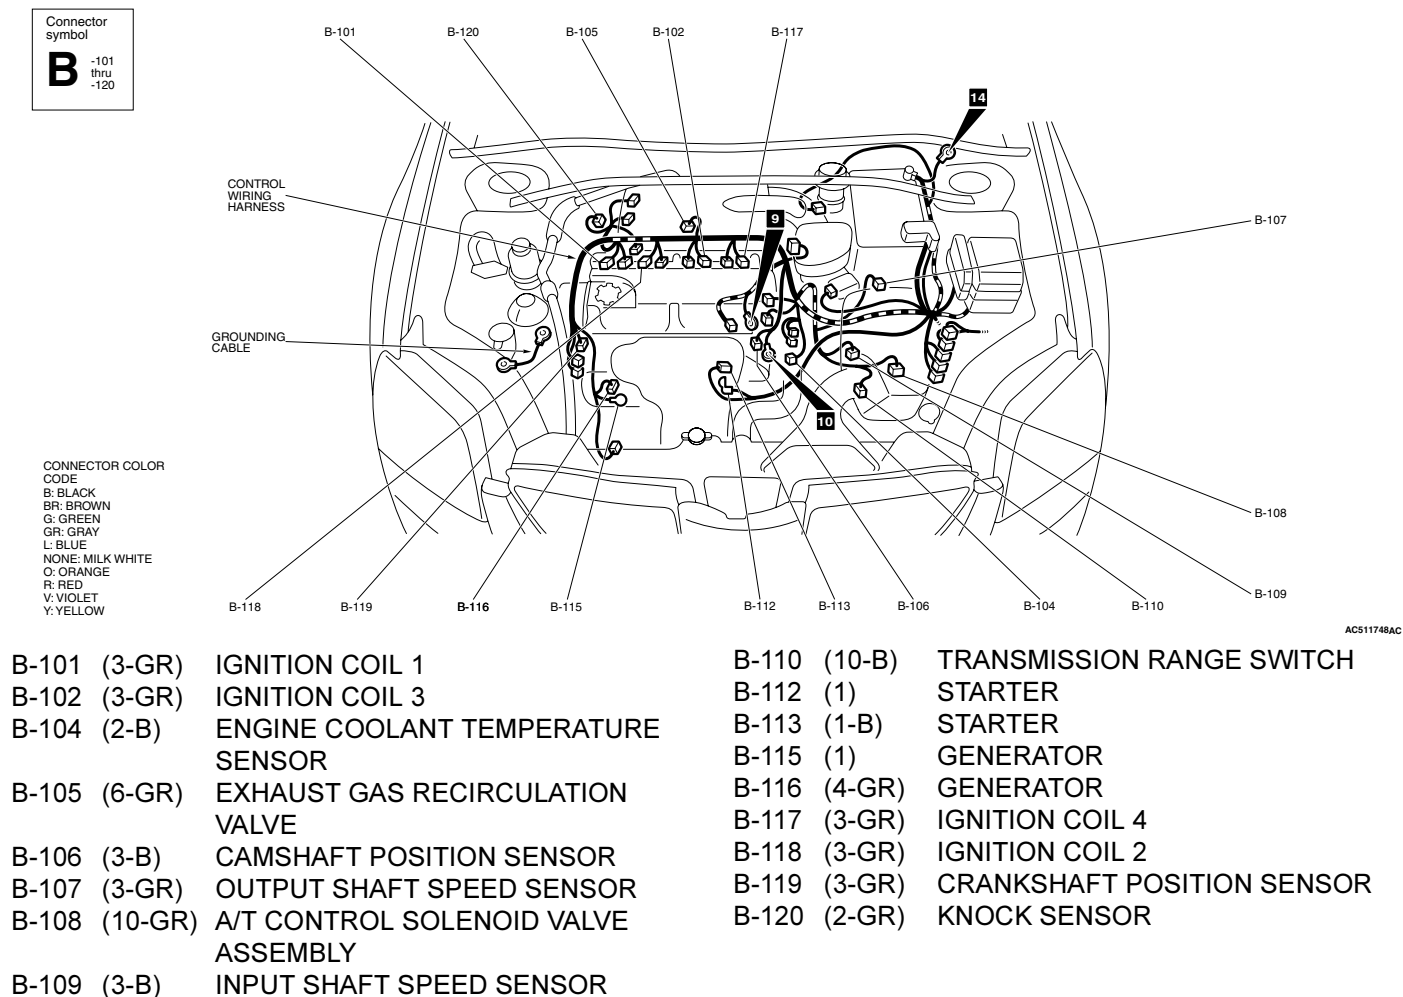

ENGINE AND TRANSAXLE <3.8L ENGINE (EXCEPT MIVEC)>


M1801000402209

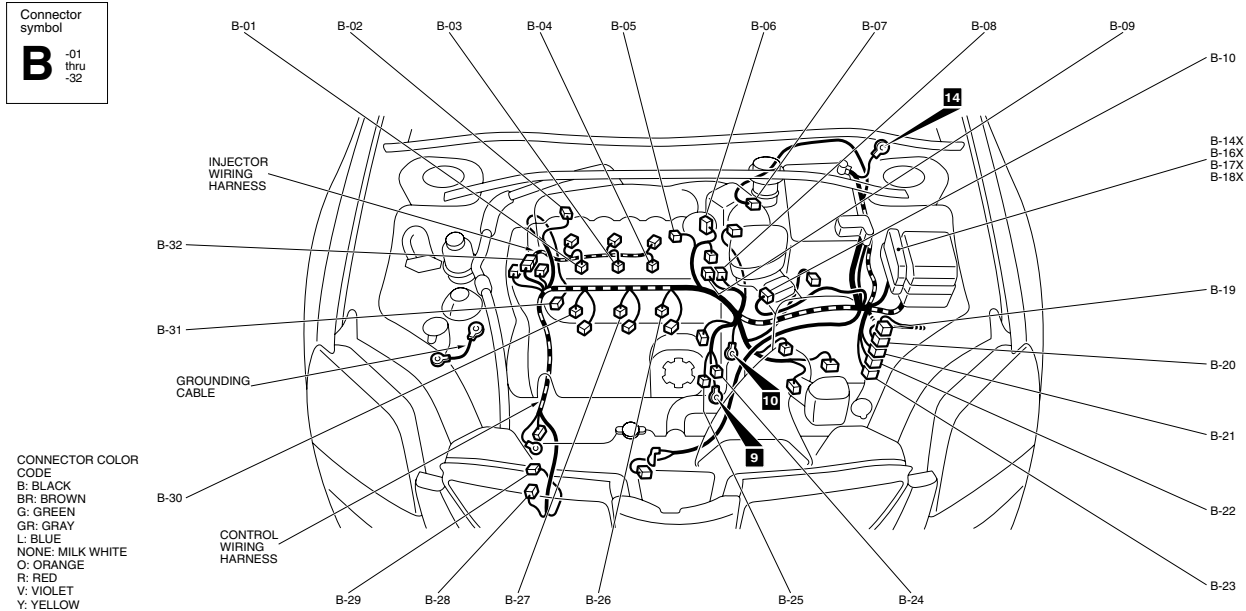

AC400216AB

B-01	(2-GR)	INJECTOR 1	B-19	(18-B)	POWERTRAIN CONTROL MODULE
B-02	(3-B)	MANIFOLD ABSOLUTE PRESSURE SENSOR	B-20	(23)	POWERTRAIN CONTROL MODULE
B-03	(2-GR)	INJECTOR 3	B-21	(33-B)	POWERTRAIN CONTROL MODULE
B-04	(2-GR)	INJECTOR 5	B-22	(23-B)	POWERTRAIN CONTROL MODULE
B-05	(2-B)	EVAPORATIVE EMISSION PURGE SOLENOID	B-23	(33)	POWERTRAIN CONTROL MODULE
B-06	(6-B)	THROTTLE BODY ASSEMBLY	B-24	(4-GR)	LEFT BANK HEATED OXYGEN SENSOR (REAR)
B-07	(2-GR)	BRAKE FLUID LEVEL SWITCH	B-25	(4-B)	LEFT BANK HEATED OXYGEN SENSOR (FRONT)
B-08	(4-GR)	RIGHT BANK HEATED OXYGEN SENSOR (REAR)	B-26	(2-GR)	INJECTOR 6
B-09	(4-B)	RIGHT BANK HEATED OXYGEN SENSOR (FRONT)	B-27	(2-GR)	INJECTOR 4
B-10	(4-GR)	MASS AIRFLOW SENSOR	B-28	(1-B)	A/C COMPRESSOR ASSEMBLY
B-14X	(4)	THROTTLE ACTUATOR CONTROL MOTOR RELAY	B-29	(1-B)	ENGINE OIL PRESSURE SWITCH
B-16X	(4)	A/T CONTROL RELAY	B-30	(2-GR)	INJECTOR 2
B-17X	(4)	MFI RELAY	B-31	(1-B)	POWER STEERING PRESSURE SWITCH
B-18X	(4)	A/C COMPRESSOR CLUTCH RELAY	B-32	(10-B)	CONTROL WIRING HARNESS AND INJECTOR WIRING HARNESS COMBINATION

ENGINE AND TRANSAXLE <3.8L ENGINE (EXCEPT MIVEC)> (CONTINUED)

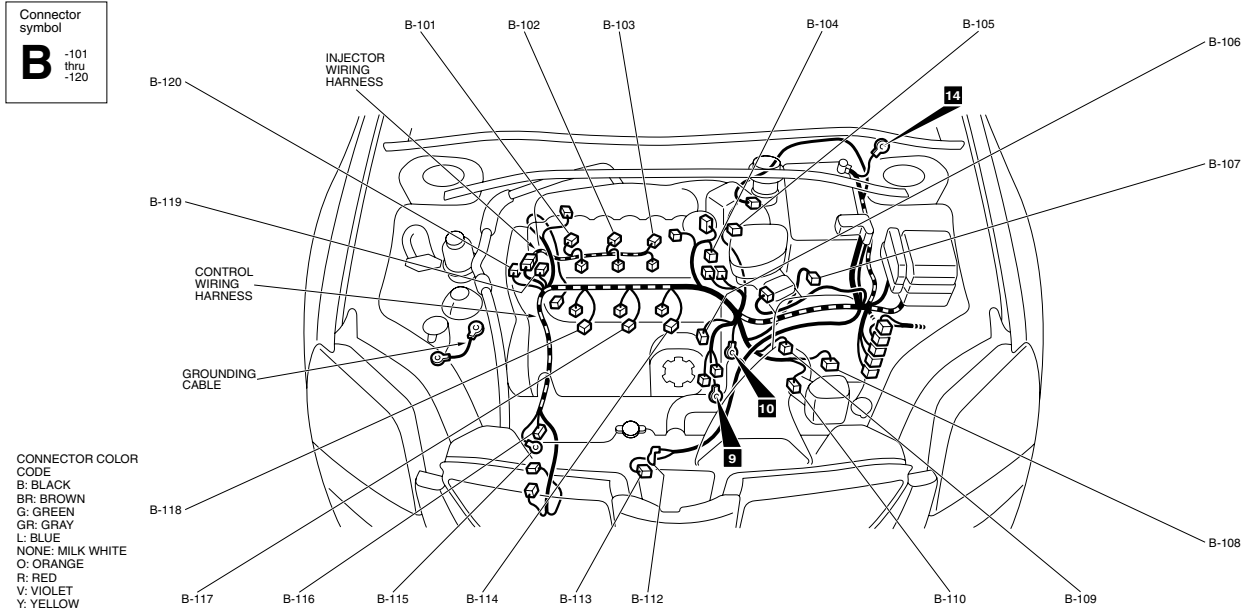


AC400216AC

B-101 (3-GR)	IGNITION COIL 1	B-110 (10-B)	TRANSMISSION RANGE SWITCH
B-102 (3-GR)	IGNITION COIL 3	B-112 (1)	STARTER
B-103 (3-GR)	IGNITION COIL 5	B-113 (1-B)	STARTER
B-104 (2-B)	ENGINE COOLANT TEMPERATURE SENSOR	B-114 (3-GR)	IGNITION COIL 6
B-105 (6-GR)	EXHAUST GAS RECIRCULATION VALVE	B-115 (1)	GENERATOR
B-106 (3-B)	CAMSHAFT POSITION SENSOR	B-116 (4-GR)	GENERATOR
B-107 (3-GR)	OUTPUT SHAFT SPEED SENSOR	B-117 (3-GR)	IGNITION COIL 4
B-108 (10-GR)	A/T CONTROL SOLENOID VALVE ASSEMBLY	B-118 (3-GR)	IGNITION COIL 2
B-109 (3-B)	INPUT SHAFT SPEED SENSOR	B-119 (3-B)	CRANKSHAFT POSITION SENSOR
		B-120 (2-GR)	KNOCK SENSOR

ENGINE AND TRANSAXLE <3.8L ENGINE-MIVEC>


M1801000402191

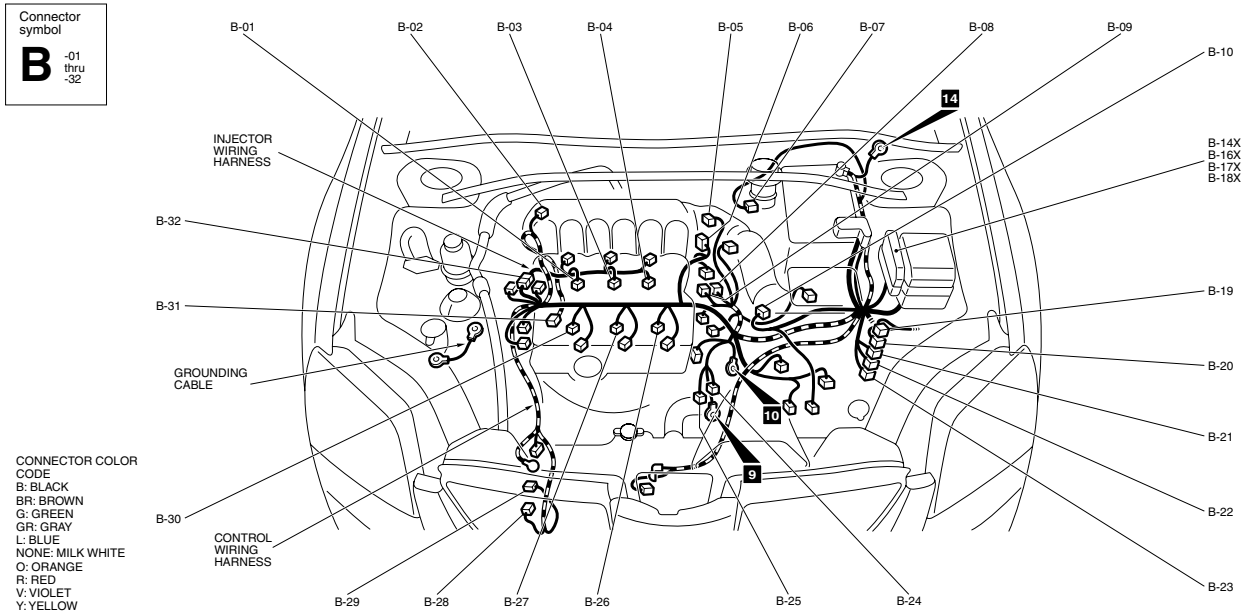

AC511752AC

B-01	(2-GR)	INJECTOR 1	B-19	(18-B)	POWERTRAIN CONTROL MODULE
B-02	(3-B)	MANIFOLD ABSOLUTE PRESSURE SENSOR	B-20	(23)	POWERTRAIN CONTROL MODULE
B-03	(2-GR)	INJECTOR 3	B-21	(33-B)	POWERTRAIN CONTROL MODULE
B-04	(2-GR)	INJECTOR 5	B-22	(23-B)	POWERTRAIN CONTROL MODULE
B-05	(2-B)	EVAPORATIVE EMISSION PURGE SOLENOID	B-23	(33)	POWERTRAIN CONTROL MODULE
B-06	(6-B)	THROTTLE BODY ASSEMBLY	B-24	(4-GR)	LEFT BANK HEATED OXYGEN SENSOR (REAR)
B-07	(2-GR)	BRAKE FLUID LEVEL SWITCH	B-25	(4-B)	LEFT BANK HEATED OXYGEN SENSOR (FRONT)
B-08	(4-GR)	RIGHT BANK HEATED OXYGEN SENSOR (REAR)	B-26	(2-GR)	INJECTOR 6
B-09	(4-B)	RIGHT BANK HEATED OXYGEN SENSOR (FRONT)	B-27	(2-GR)	INJECTOR 4
B-10	(4-GR)	MASS AIRFLOW SENSOR	B-28	(1-B)	A/C COMPRESSOR ASSEMBLY
B-14X	(4)	THROTTLE ACTUATOR CONTROL MOTOR RELAY	B-29	(1-B)	ENGINE OIL PRESSURE SWITCH
B-16X	(4)	A/T CONTROL RELAY	B-30	(2-GR)	INJECTOR 2
B-17X	(4)	MFI RELAY	B-31	(1-B)	POWER STEERING PRESSURE SWITCH
B-18X	(4)	A/C COMPRESSOR CLUTCH RELAY	B-32	(10-B)	CONTROL WIRING HARNESS AND INJECTOR WIRING HARNESS COMBINATION


ENGINE AND TRANSAXLE <3.8L ENGINE-MIVEC> (CONTINUED)

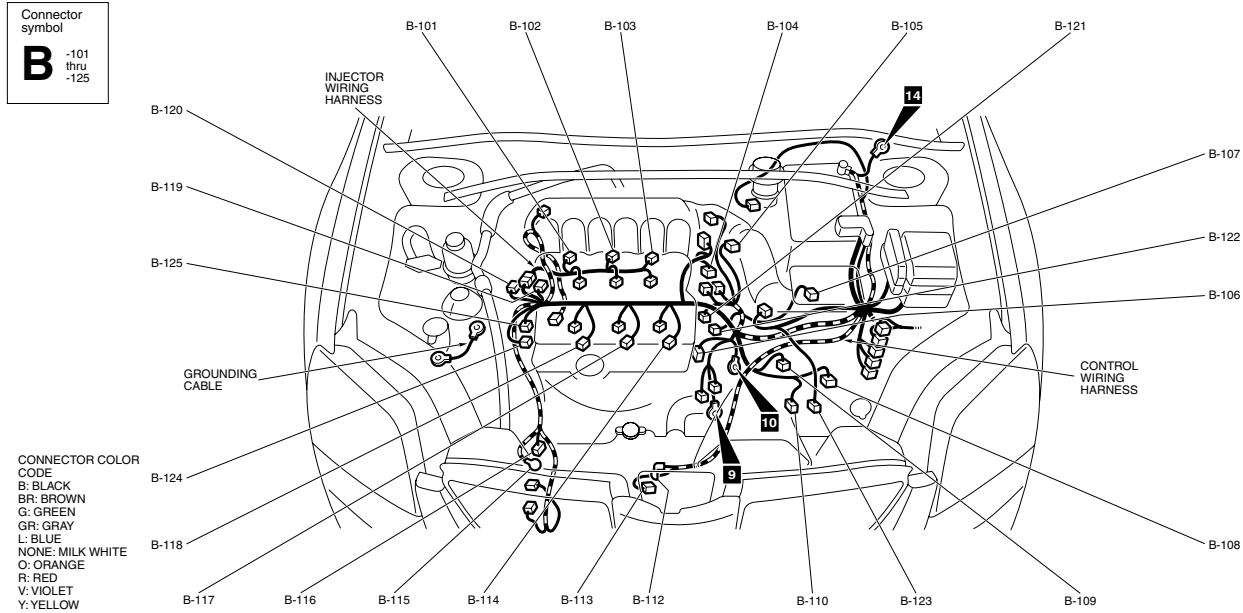


AC511752AC

B-101 (3-GR)	IGNITION COIL 1	B-116 (4-GR)	GENERATOR
B-102 (3-GR)	IGNITION COIL 3	B-117 (3-GR)	IGNITION COIL 4
B-103 (3-GR)	IGNITION COIL 5	B-118 (3-GR)	IGNITION COIL 2
B-104 (2-B)	ENGINE COOLANT TEMPERATURE SENSOR	B-119 (3-B)	CRANKSHAFT POSITION SENSOR
B-105 (6-GR)	EXHAUST GAS RECIRCULATION VALVE	B-120 (2-GR)	KNOCK SENSOR
B-106 (3-B)	CAMSHAFT POSITION SENSOR	B-121 (2-B)	RIGHT BANK ENGINE OIL CONTROL VALVE
B-107 (3-GR)	OUTPUT SHAFT SPEED SENSOR	B-122 (1-B)	RIGHT BANK ENGINE OIL PRESSURE SWITCH (FOR ENGINE OIL CONTROL VALVE)
B-108 (10-GR)	A/T CONTROL SOLENOID VALVE ASSEMBLY	B-123 (2-B)	VARIABLE AIR INTAKE SOLENOID
B-109 (3-B)	INPUT SHAFT SPEED SENSOR	B-124 (2-B)	LEFT BANK ENGINE OIL CONTROL VALVE
B-110 (10-B)	TRANSMISSION RANGE SWITCH	B-125 (1-B)	LEFT BANK ENGINE OIL PRESSURE SWITCH (FOR ENGINE OIL CONTROL VALVE)
B-112 (1)	STARTER		
B-113 (1-B)	STARTER		
B-114 (3-GR)	IGNITION COIL 6		
B-115 (1)	GENERATOR		

 DASH PANEL




CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

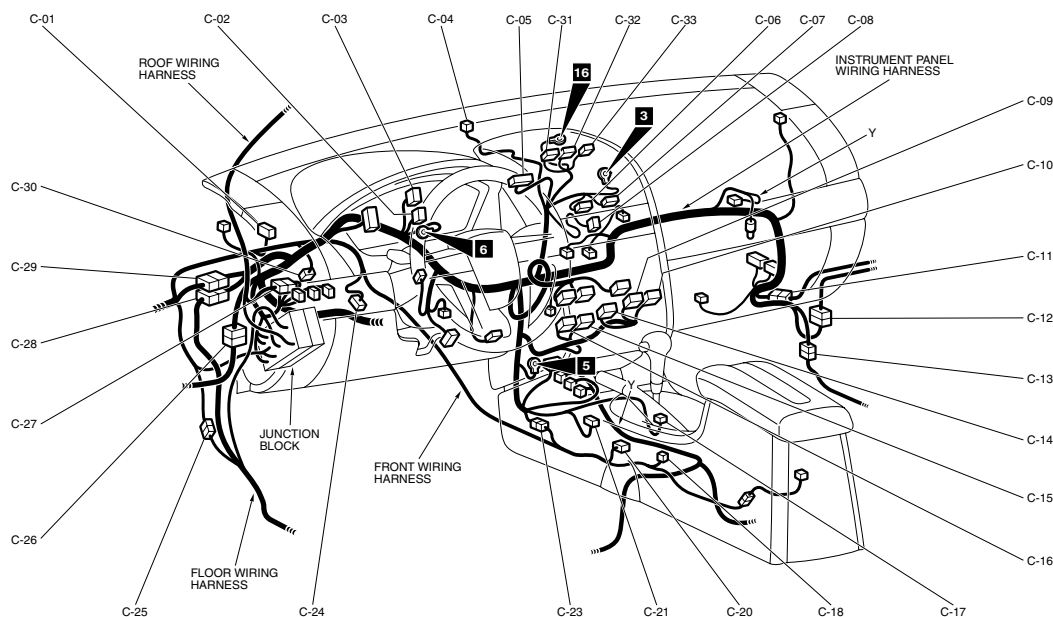


AC511753AB

C-01 (33)	J/C (1)	C-18 (1-B)	PARKING BRAKE SWITCH
C-02 (22)	J/C (3)	C-20 (8)	SHIFT SWITCH ASSEMBLY
C-03 (33)	J/C (2)	C-21 (9)	HEATED SEAT SWITCH
C-04 (4-GR)	PHOTO SENSOR/THEFT-ALARM INDICATOR <AUTOMATIC A/C OR THEFT-ALARM SYSTEM>	C-23 (8)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-05 (20-B)	MULTI CENTER DISPLAY UNIT <WITHOUT MMCS>	C-24 (6-B)	ACCELERATOR PEDAL POSITION SENSOR
C-06 (3)	AIR BAG OFF INDICATOR LIGHT (PASSENGER'S SIDE)	C-25 (16)	FRONT WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
C-07 (4)	SEAT BELT WARNING LIGHT (PASSENGER'S SIDE)	C-26 (32)	INSTRUMENT PANEL WIRING HARNESS AND FRONT DOOR WIRING HARNESS (LH) COMBINATION
C-08 (4)	HAZARD WARNING LIGHT SWITCH	C-27 (4)	INSTRUMENT PANEL WIRING HARNESS AND ROOF WIRING HARNESS COMBINATION
C-09 (12-B)	A/C-ECU <MANUAL A/C (LOW)>	C-28 (43)	INSTRUMENT PANEL WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
C-10 (16-B)	A/C-ECU <MANUAL A/C (LOW)>	C-29 (38)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-11 (2)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION	C-30 (4)	STOPLIGHT SWITCH
C-12 (19)	INSTRUMENT PANEL WIRING HARNESS AND FRONT DOOR WIRING HARNESS (RH) COMBINATION	C-31 (20-B)	MULTI-CENTER DISPLAY UNIT <WITH MMCS>
C-13 (8)	INSTRUMENT PANEL WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION	C-32 (16-B)	MULTI-CENTER DISPLAY UNIT <WITH MMCS>
C-14 (6)	BLOWER SWITCH <MANUAL A/C (LOW)>	C-33 (10)	MULTI-CENTER DISPLAY UNIT <WITH MMCS>
C-15 (20-B)	A/C-ECU <MANUAL A/C (MIDDLE), AUTOMATIC A/C>		
C-16 (16-B)	A/C-ECU <MANUAL A/C (MIDDLE), AUTOMATIC A/C>		
C-17 (2)	ACCESSORY SOCKET (1)		

 DASH PANEL (CONTINUED)






CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

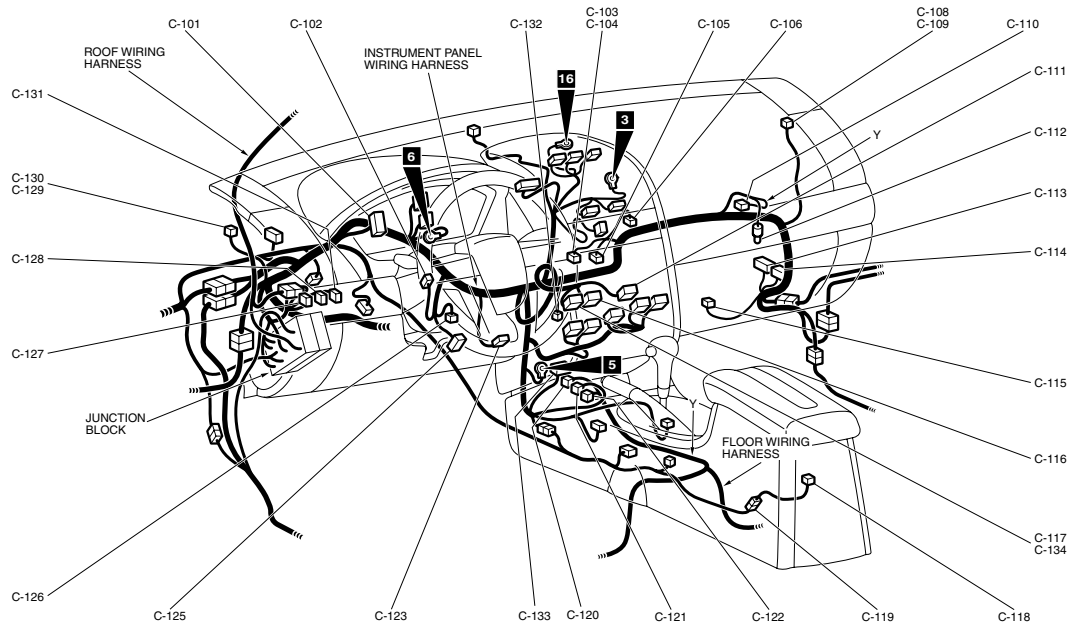

ACS11753AC

C-101 (22)	COMBINATION METER	C-118 (2)	ACCESSORY SOCKET (2)
C-102 (7)	MODE SELECTION DAMPER CONTROL MOTOR AND POTENTIOMETER	C-119 (2)	FRONT WIRING HARNESS AND FLOOR CONSOLE SUB WIRING HARNESS COMBINATION
C-103 (4)	RESISTOR <MANUAL A/C (LOW)>	C-120 (20-Y)	SRS-ECU
C-104 (4)	POWER TRANSISTOR <MANUAL A/ C (MIDDLE), AUTOMATIC A/C>	C-121 (28-Y)	SRS-ECU
C-105 (7)	AIR MIXING DAMPER CONTROL MOTOR AND POTENTIOMETER	C-122 (20-Y)	SRS-ECU
C-106 (5)	OUTSIDE/INSIDE AIR SELECTION DAMPER CONTROL MOTOR	C-123 (2)	INTERIOR TEMPERATURE SENSOR <AUTOMATIC A/C>
C-108 (2-B)	TWEETER (RH) <WITHOUT AUDIO AMPLIFIER>	C-125 (16-B)	DATA LINK CONNECTOR
C-109 (2)	TWEETER (RH) <WITH AUDIO AMPLIFIER>	C-126 (2)	AIR THERMO SENSOR
C-110 (4-Y)	AIR BAG MODULE (SQUIB) (PASSENGER'S SIDE)	C-127 (6-L)	RHEOSTAT
C-111 (14)	RADIO AND CD PLAYER OR RADIO, CD PLAYER AND CD CHANGER	C-128 (6)	FOG LIGHT SWITCH
C-112 (2)	GLOVE BOX LIGHT	C-129 (2-B)	TWEETER (LH) <WITHOUT AUDIO AMPLIFIER>
C-113 (18)	AUDIO AMPLIFIER	C-130 (2)	TWEETER (LH) <WITH AUDIO AMPLIFIER>
C-114 (14)	AUDIO AMPLIFIER	C-131 (6-GR)	TCL SWITCH
C-115 (2)	BLOWER MOTOR	C-132 (1)	GLASS ANTENNA
C-116 (14)	RADIO, CD PLAYER AND CD CHANGER	C-133 (10)	TPMS RECEIVER
C-117 (10)	RADIO, CD PLAYER AND CD CHANGER <WITHOUT AUDIO AMPLIFIER>	C-134 (22)	RADIO, CD PLAYER AND CD CHANGER <WITHOUT AUDIO AMPLIFIER>

 DASH PANEL (CONTINUED)

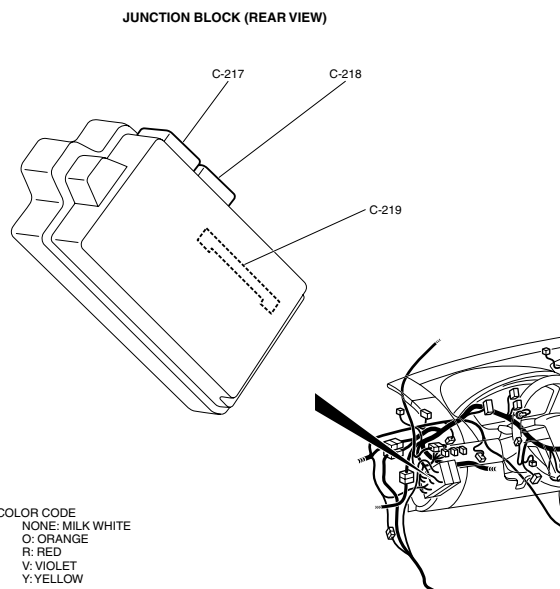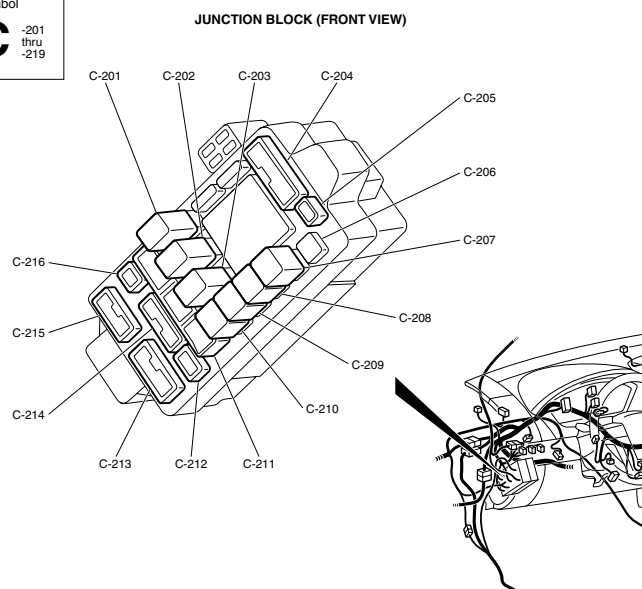

CONNECTOR COLOR CODE
B: BLACK NONE: MILK WHITE
BR: BROWN O: ORANGE
G: GREEN R: RED
GR: GRAY V: VIOLET
L: BLUE Y: YELLOW

AC304373AB


C-201 (5) REAR WINDOW DEFOGGER RELAY
C-202 (5) BLOWER RELAY
C-203 (5) POWER WINDOW RELAY
C-204 (15) FLOOR WIRING HARNESS AND
JUNCTION BLOCK COMBINATION
C-205 (3) ROOF WIRING HARNESS AND
JUNCTION BLOCK COMBINATION
C-206 (4) NO CONNECTION
C-207 (4) HEATED SEAT RELAY
C-208 (4) FUEL PUMP RELAY (2)
C-209 (4) ACCESSORY SOCKET RELAY
C-210 (4) FUEL PUMP RELAY (1)
C-211 (28) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION

C-212 (2) FRONT WIRING HARNESS AND
JUNCTION BLOCK COMBINATION
C-213 (13) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION
C-214 (14) FRONT WIRING HARNESS AND
JUNCTION BLOCK COMBINATION
C-215 (6) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION
C-216 (1-B) INSTRUMENT PANEL WIRING
HARNESS AND JUNCTION BLOCK
COMBINATION
C-217 (24) ETACS-ECU
C-218 (24-GR) ETACS-ECU
C-219 (20) ETACS-ECU

DASH PANEL (CONTINUED)

Connector
symbol**C**
-301
thru
-311

STEERING COLUMN

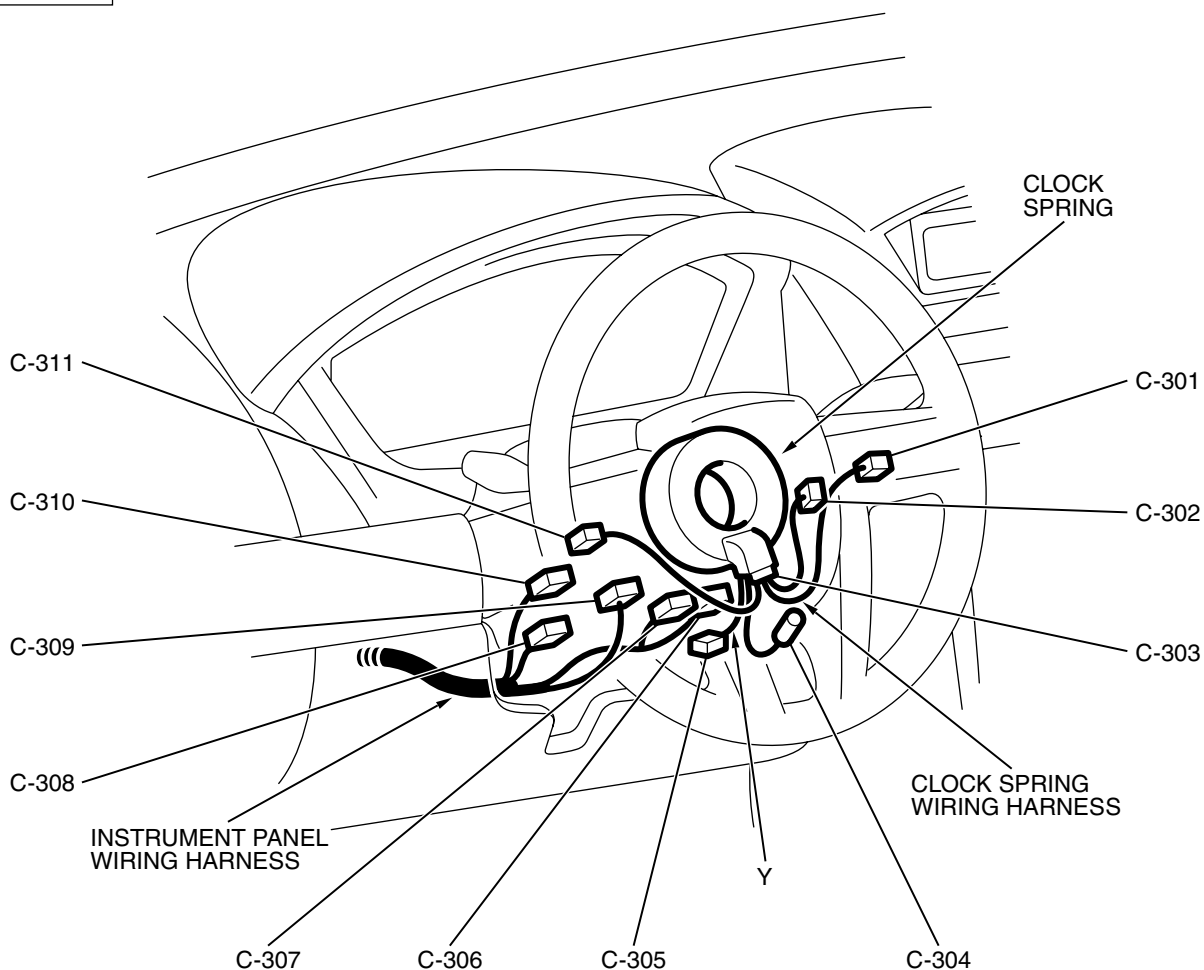


AC304363AB

C-301 (2-B)	REMOTE CONTROLLED RADIO SWITCH (RH)	C-306 (6)	CLOCK SPRING
C-302 (3-Y)	AUTO-CRUISE CONTROL SWITCH	C-307 (4-Y)	CLOCK SPRING
C-303 (5-GR)	CLOCK SPRING AND CLOCK SPRING WIRING HARNESS COMBINATION	C-308 (6)	IGNITION SWITCH
C-304 (1)	HORN SWITCH	C-309 (10)	COLUMN SWITCH
C-305 (4-Y)	AIR BAG MODULE (SQUIB) (DRIVER'S SIDE)	C-310 (7)	KEY REMINDER SWITCH
		C-311 (2-B)	REMOTE CONTROLLED RADIO SWITCH (LH)

FLOOR AND ROOF

M1801000902011

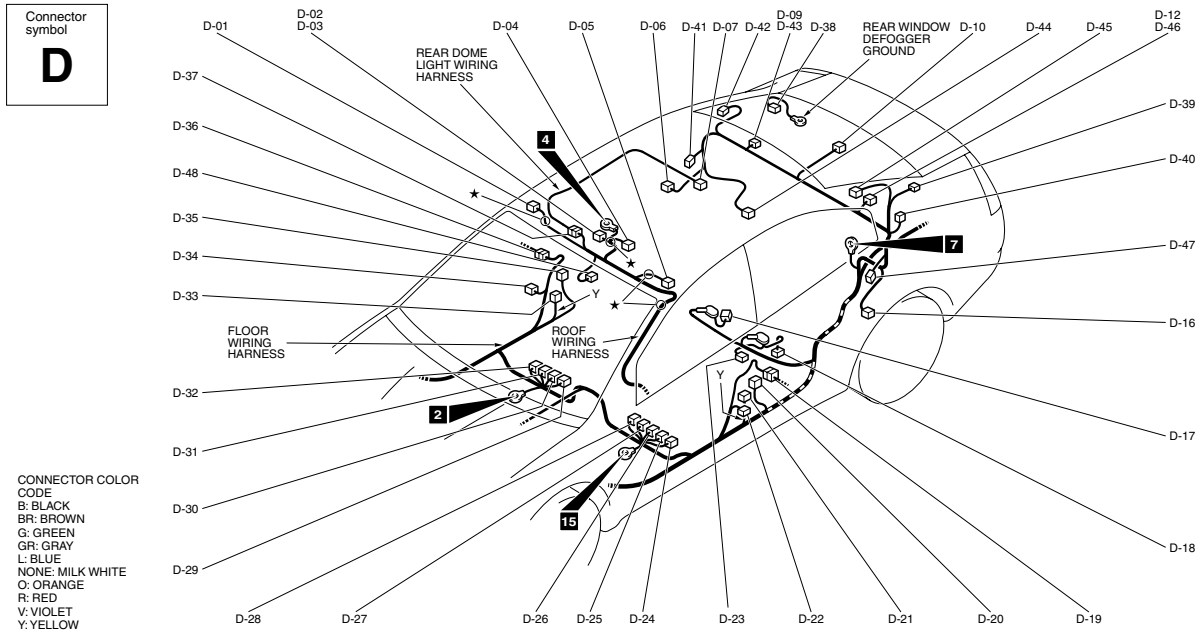


AC511755AB

D-01	(2)	VANITY MIRROR LIGHT (RH)	D-29	(3)	SEAT BELT BUCKLE SWITCH (PASSENGER'S SIDE)
D-02	(4)	MAP LIGHT ASSEMBLY <WITHOUT SUNROOF>	D-30	(3-GR)	OCCUPANT CLASSIFICATION-ECU
D-03	(7)	OVERHEAD CONSOLE ASSEMBLY <WITH SUNROOF>	D-31	(3-B)	HEATED SEAT ASSEMBLY (RH)
D-04	(10)	SUNROOF ASSEMBLY	D-32	(2-R)	SIDE AIR BAG MODULE (SQUIB) (RH)
D-05	(2)	VANITY MIRROR LIGHT (LH)	D-33	(2-B)	SEAT BELT PRETENSIONER (RH)
D-06	(3)	REAR DOOR SWITCH (RH)	D-34	(3)	FRONT DOOR SWITCH (RH)
D-07	(3)	REAR DOME LIGHT	D-35	(2)	SIDE IMPACT SENSOR (FRONT: RH)
D-09	(2)	REAR SPEAKER (RH) <WITHOUT AUDIO AMPLIFIER>	D-36	(10)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (RH) COMBINATION
D-10	(2)	TRUNK LIGHT	D-37	(3)	ROOF WIRING HARNESS AND REAR DOME LIGHT WIRING HARNESS COMBINATION
D-12	(2)	REAR SPEAKER (LH) <WITHOUT AUDIO AMPLIFIER>	D-38	(1)	REAR WINDOW DEFOGGER (-)
D-16	(3)	REAR DOOR SWITCH (LH)	D-39	(1)	REAR WINDOW DEFOGGER (+)
D-17	(2-B)	FUEL LEVEL SENSOR (SUB)	D-40	(1-B)	CAPACITOR
D-18	(5-GR)	FUEL PUMP MODULE	D-41	(2-Y)	SIDE IMPACT SENSOR (REAR: RH)
D-19	(10)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (LH) COMBINATION	D-42	(2-B)	CURTAIN AIR BAG MODULE (SQUIB) (RH)
D-20	(2)	SIDE IMPACT SENSOR (FRONT: LH)	D-43	(4)	REAR SPEAKER (RH) <WITH AUDIO AMPLIFIER>
D-21	(2-B)	SEAT BELT PRETENSIONER (LH)	D-44	(14)	SATELLITE RADIO TUNER
D-22	(3)	FRONT DOOR SWITCH (LH)	D-45	(2-B)	CURTAIN AIR BAG MODULE (SQUIB) (LH)
D-23	(3-B)	FUEL TANK DIFFERENTIAL PRESSURE SENSOR	D-46	(4)	REAR SPEAKER (LH) <WITH AUDIO AMPLIFIER>
D-24	(2-R)	SIDE AIR BAG MODULE (SQUIB) (LH)	D-47	(2-Y)	SIDE IMPACT SENSOR (REAR: LH)
D-25	(2-B)	POWER SEAT ASSEMBLY	D-48	(10-B)	AUTOMATIC ANTI-DAZZLING MIRROR AND UNIVERSAL GARAGE DOOR OPENER
D-26	(3-B)	HEATED SEAT ASSEMBLY (LH)			
D-27	(2-GR)	SEAT SLIDE SENSOR			
D-28	(5-B)	SEAT BELT BUCKLE SWITCH (DRIVER'S SIDE)			

DOOR

M1801001401715

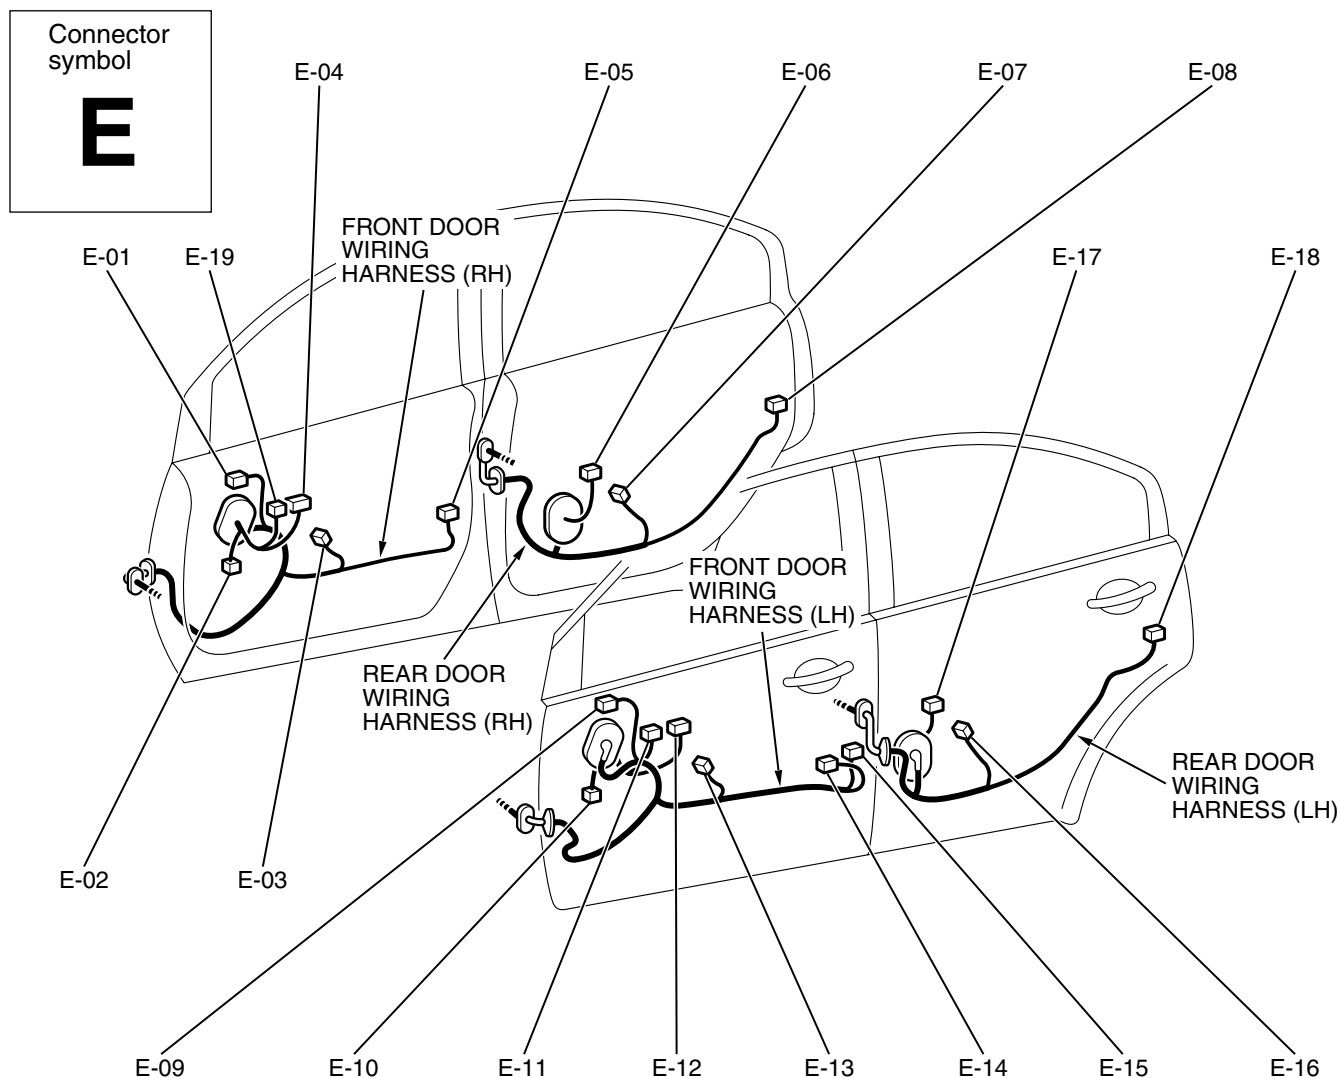

AC511758AB


E-01	(6-GR)	REMOTE CONTROLLED MIRROR (RH)	E-11	(11)	REMOTE CONTROLLED MIRROR SWITCH
E-02	(2)	FRONT DOOR SPEAKER (RH)	E-12	(11)	POWER WINDOW MAIN SWITCH
E-03	(2-GR)	FRONT POWER WINDOW REGULATOR MOTOR (RH)	E-13	(2-GR)	FRONT POWER WINDOW REGULATOR MOTOR (LH)
E-04	(8)	FRONT POWER WINDOW SUB SWITCH	E-14	(3-B)	DOOR LOCK KEY CYLINDER SWITCH
E-05	(6-B)	FRONT DOOR LOCK ACTUATOR (RH)	E-15	(6-B)	FRONT DOOR LOCK ACTUATOR (LH)
E-06	(8)	REAR POWER WINDOW SUB SWITCH (RH)	E-16	(2-GR)	REAR POWER WINDOW REGULATOR MOTOR (LH)
E-07	(2-GR)	REAR POWER WINDOW REGULATOR MOTOR (RH)	E-17	(8)	REAR POWER WINDOW SUB SWITCH (LH)
E-08	(6-B)	REAR DOOR LOCK ACTUATOR (RH)	E-18	(6-B)	REAR DOOR LOCK ACTUATOR (LH)
E-09	(6-GR)	REMOTE CONTROLLED MIRROR (LH)	E-19	(4)	FRONT POWER WINDOW SUB SWITCH
E-10	(2)	FRONT DOOR SPEAKER (LH)			

LUGGAGE COMPARTMENT

M1801001500689

Connector
symbol

F

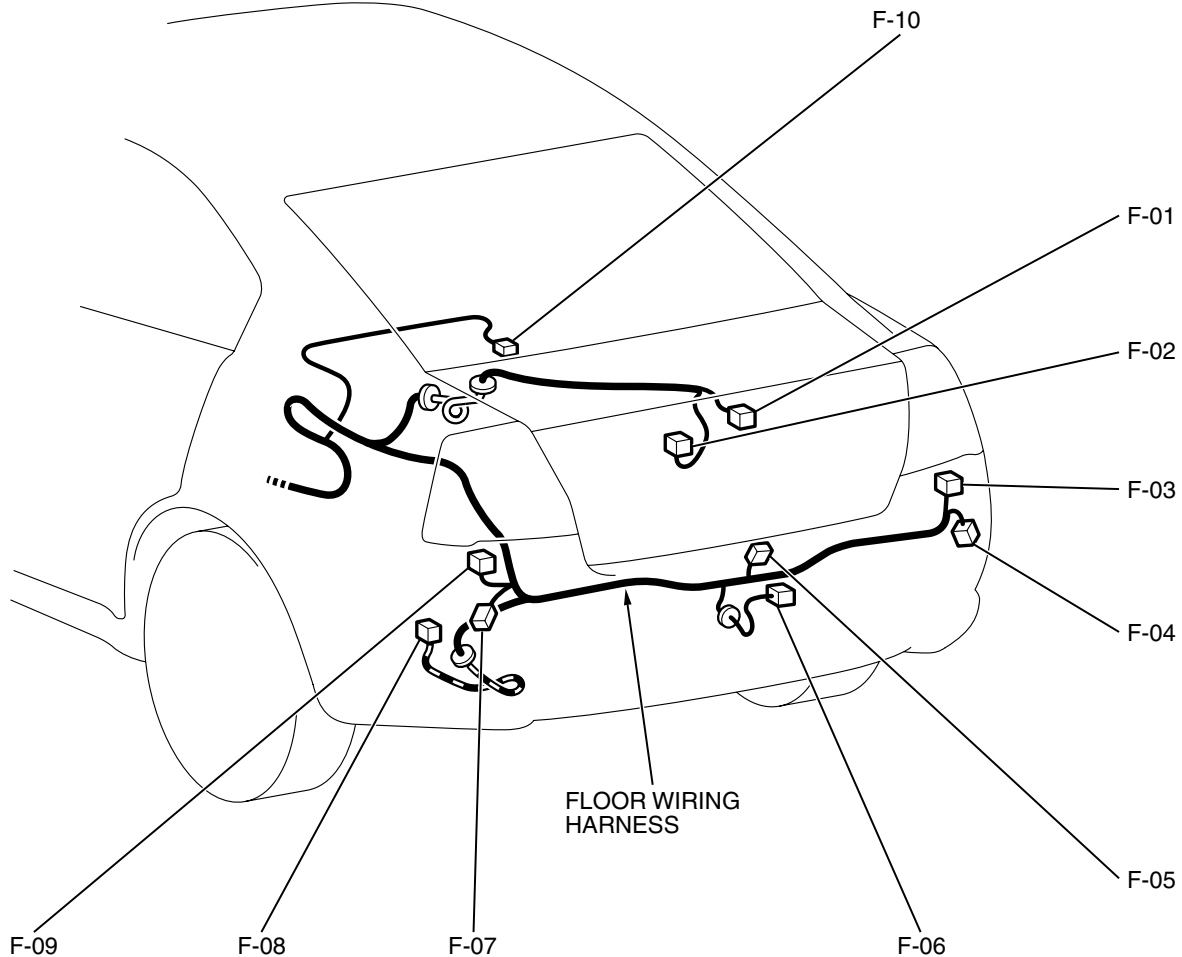

AC511759AB

F-01	(2-GR)	HIGH-MOUNTED STOPLIGHT <WITH TRUNK LID TYPE>	F-06	(2)	LICENSE PLATE LIGHT
F-02	(2)	HIGH-MOUNTED STOPLIGHT <WITH REAR SPOILER TYPE>	F-07	(2)	WHEEL SPEED SENSOR (REAR: LH)
F-03	(6)	REAR COMBINATION LIGHT (RH)	F-08	(2-B)	EVAPORATIVE EMISSION VENTILATION SOLENOID
F-04	(2)	WHEEL SPEED SENSOR (REAR: RH)	F-09	(6)	REAR COMBINATION LIGHT (LH)
F-05	(2)	TRUNK LID LATCH ASSEMBLY	F-10	(8-B)	NAVIGATION UNIT <WITH MMCS>