

GROUP 80B

SPLICE LOCATIONS

CONTENTS

HOW TO READ SPLICE LOCATIONS	80B-2	ENGINE AND TRANSAXLE <3.8L ENGINE- MIVEC>.....	80B-6
INDEX.....	80B-3	DASH PANEL.....	80B-7
ENGINE COMPARTMENT.....	80B-4	FLOOR AND ROOF	80B-8
ENGINE AND TRANSAXLE <2.4L ENGINE>	80B-5	DOOR	80B-8
ENGINE AND TRANSAXLE <3.8L ENGINE (EXCEPT MIVEC)>	80B-5	LUGGAGE COMPARTMENT.....	80B-9

HOW TO READ SPlice LOCATIONS

M1802000100454

"Splice locations" describes splice points of each wiring harness on an actual vehicle. Some variations are included in one splice location. Accordingly, some locations may not be applicable for individual vehicles.


Indicates a splice point number.

The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use. In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

Sequential number

Prefix meaning splice point

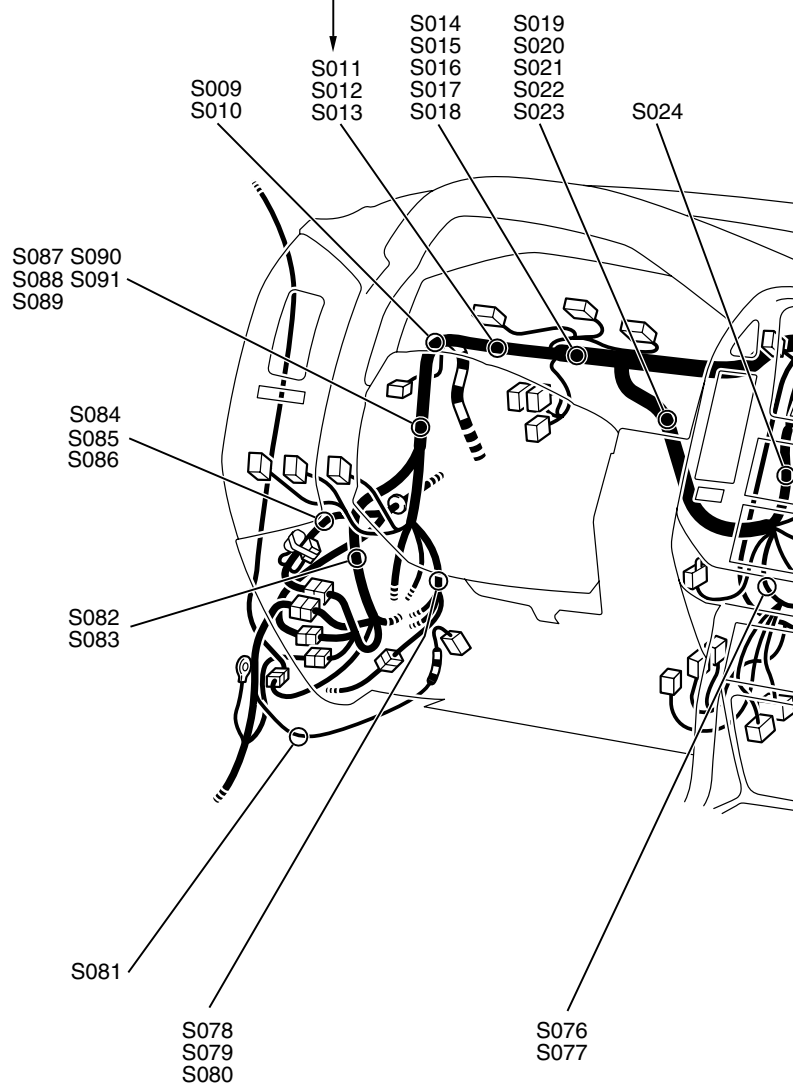

ACX02177 AC

INDEX

M1802000901204


This index shows the page numbers where the splice locations are.

SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE
S001	P.80B-4	S036	P.80B-5	S070	P.80B-7	S101	P.80B-8
S002	P.80B-4	S037	P.80B-5	S071	P.80B-7	S102	P.80B-8
S003	P.80B-4	S038	P.80B-5	S072	P.80B-7	S103	P.80B-8
S004	P.80B-4	S039	P.80B-5	S073	P.80B-7	S104	P.80B-8
S005	P.80B-4	S040	P.80B-5	S074	P.80B-7	S105	P.80B-8
S006	P.80B-4	S041	P.80B-5	S075	P.80B-7	S106	P.80B-8
S007	P.80B-4	S042	P.80B-5	S076	P.80B-7	S107	P.80B-8
S008	P.80B-4	S043	P.80B-5	S078	P.80B-7	S108	P.80B-9
S009	P.80B-4	S044	P.80B-5	S079	P.80B-7	S109	P.80B-9
S010	P.80B-4	S045	P.80B-5	S080	P.80B-7	S110	P.80B-7
S011	P.80B-4	S050	P.80B-5	S081	P.80B-7	S111	P.80B-7
S012	P.80B-4	S051	P.80B-5	S082	P.80B-7	S112	P.80B-7
S013	P.80B-5	S052	P.80B-5	S083	P.80B-7	S113	P.80B-7
S014	P.80B-5	S053	P.80B-7	S084	P.80B-7	S114	P.80B-7
S015	P.80B-5	S054	P.80B-7	S085	P.80B-7	S145	P.80B-6
S016	P.80B-5	S055	P.80B-7	S086	P.80B-7	S146	P.80B-6
S018	P.80B-5	S056	P.80B-7	S087	P.80B-7	S147	P.80B-6
S019	P.80B-5	S057	P.80B-7	S088	P.80B-8	S148	P.80B-6
S020	P.80B-5	S058	P.80B-7	S089	P.80B-8	S149	P.80B-6
S021	P.80B-5	S059	P.80B-7	S090	P.80B-8	S150	P.80B-6
S022	P.80B-5	S060	P.80B-7	S091	P.80B-8	S151	P.80B-6
S023	P.80B-5	S061	P.80B-7	S092	P.80B-8	S152	P.80B-6
S024	P.80B-5	S062	P.80B-7	S093	P.80B-8	S153	P.80B-6
S025	P.80B-5	S063	P.80B-7	S094	P.80B-8	S154	P.80B-6
S026	P.80B-5	S064	P.80B-7	S095	P.80B-8	S155	P.80B-6
S031	P.80B-5	S065	P.80B-7	S096	P.80B-8	S156	P.80B-6
S032	P.80B-5	S066	P.80B-7	S097	P.80B-8	S157	P.80B-6
S033	P.80B-5	S067	P.80B-7	S098	P.80B-8	S158	P.80B-6
S034	P.80B-5	S068	P.80B-7	S099	P.80B-8	S159	P.80B-6
S035	P.80B-5	S069	P.80B-7	S100	P.80B-8	S160	P.80B-6

SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE
S161	P.80B-6	S166	P.80B-6	S171	P.80B-7	S176	P.80B-7
S162	P.80B-6	S167	P.80B-6	S172	P.80B-7	S177	P.80B-7
S163	P.80B-6	S168	P.80B-5	S173	P.80B-7		
S164	P.80B-6	S169	P.80B-5	S174	P.80B-7		
S165	P.80B-6	S170	P.80B-7	S175	P.80B-7		

ENGINE COMPARTMENT


M1802000200837

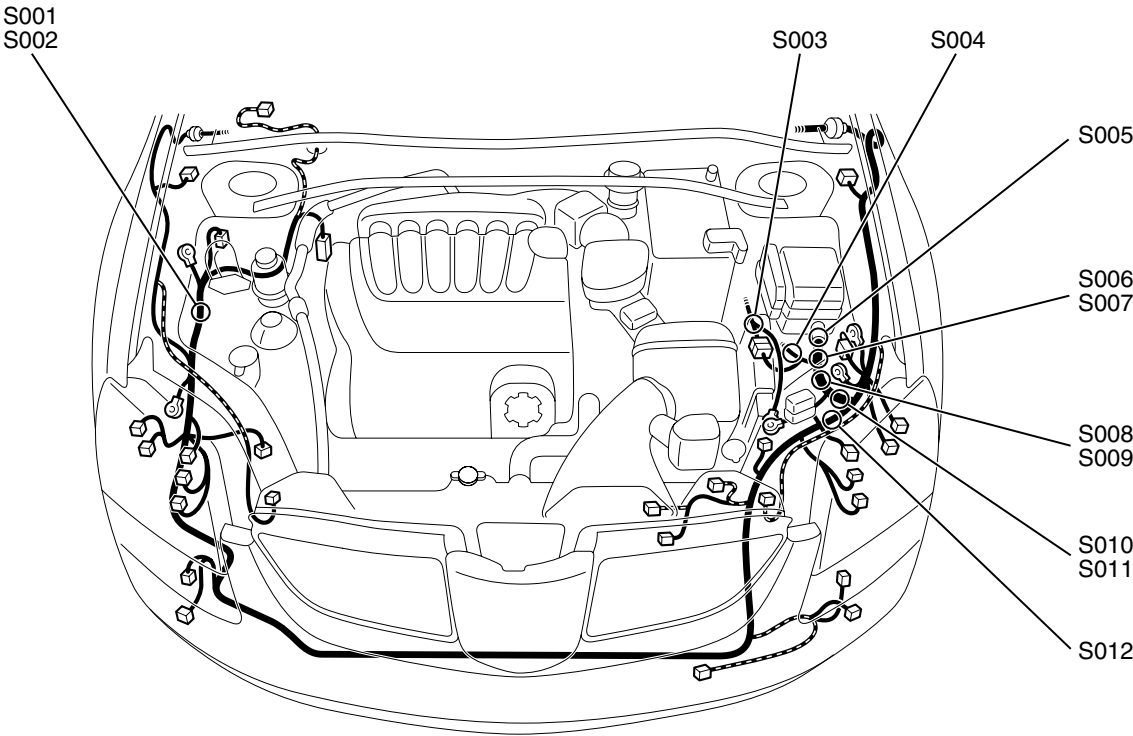

AC501961AC

ENGINE AND TRANSAXLE <2.4L ENGINE>


M1802001400748

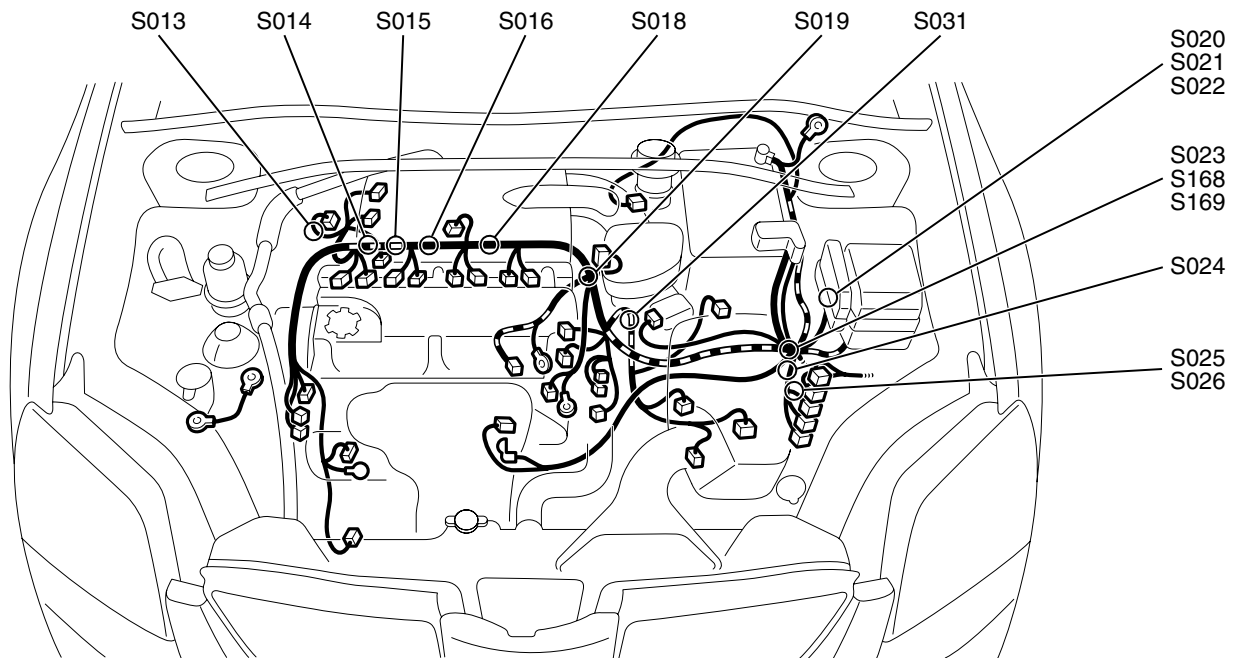

AC600219AB

ENGINE AND TRANSAXLE <3.8L ENGINE (EXCEPT MIVEC)>


M1802001400759

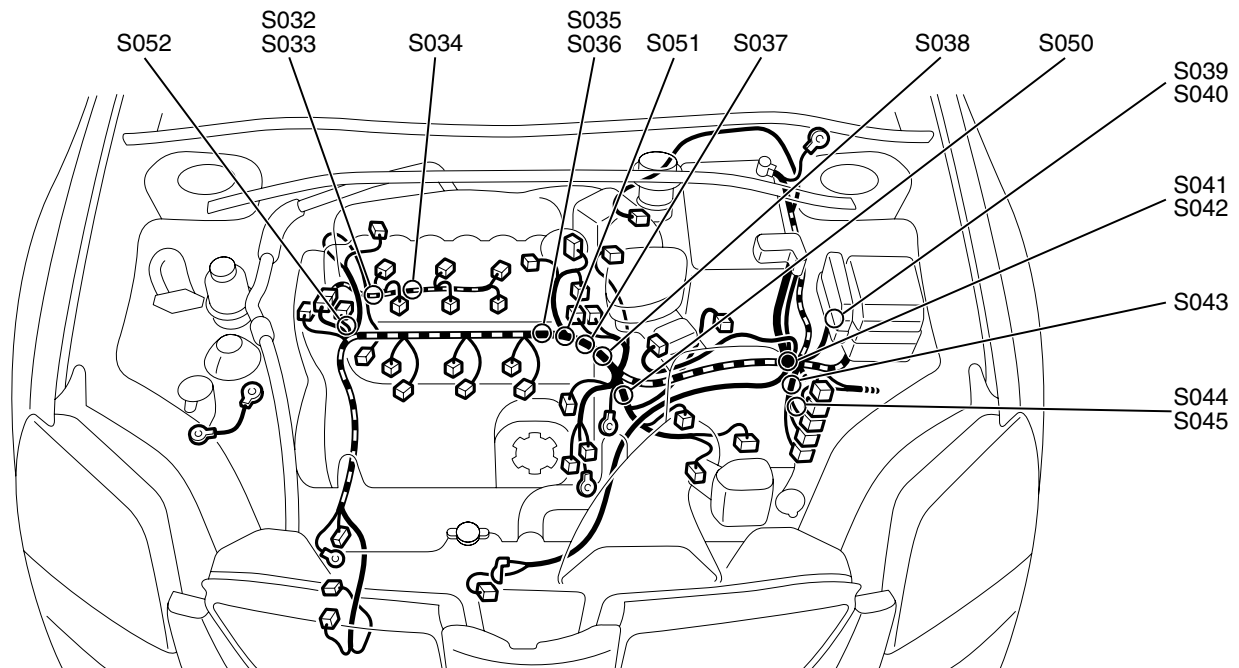

AC501963AB

ENGINE AND TRANSAXLE <3.8L ENGINE-MIVEC>


M1802001400760

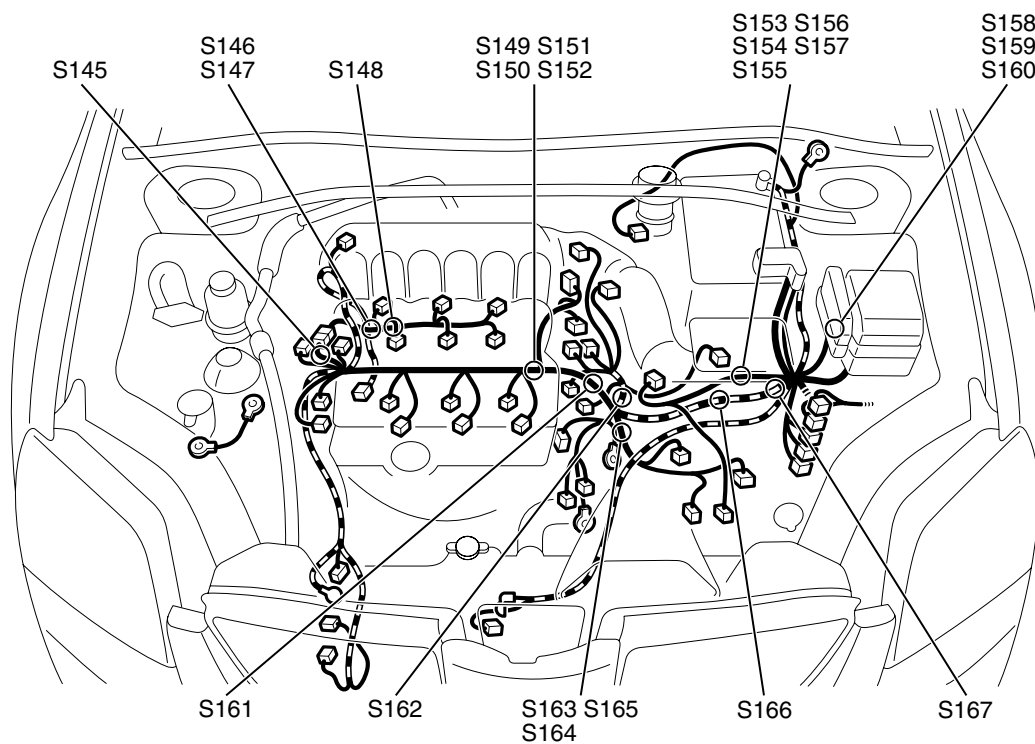

AC600220AB

DASH PANEL


M1802000301053

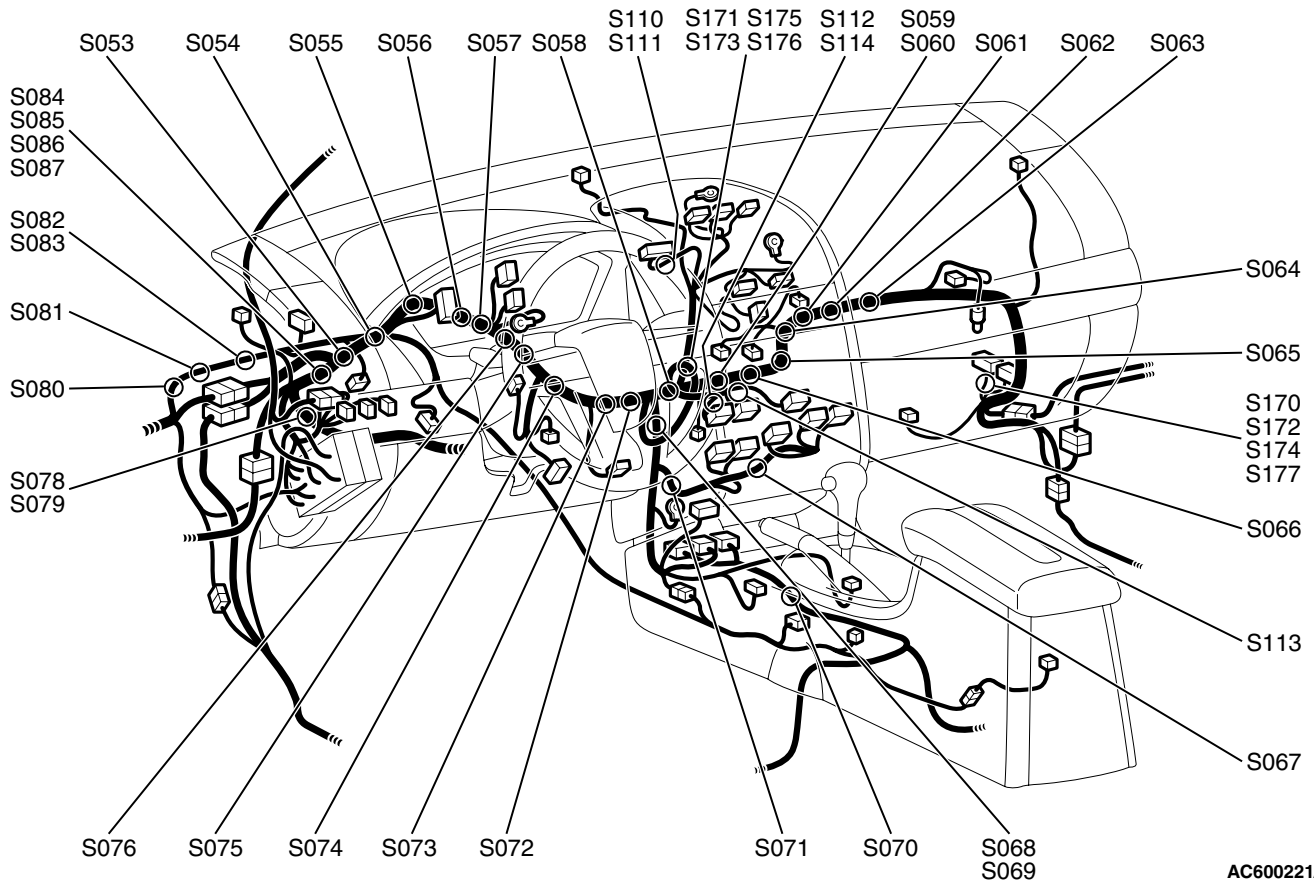

AC600221AB

FLOOR AND ROOF


M1802001200788

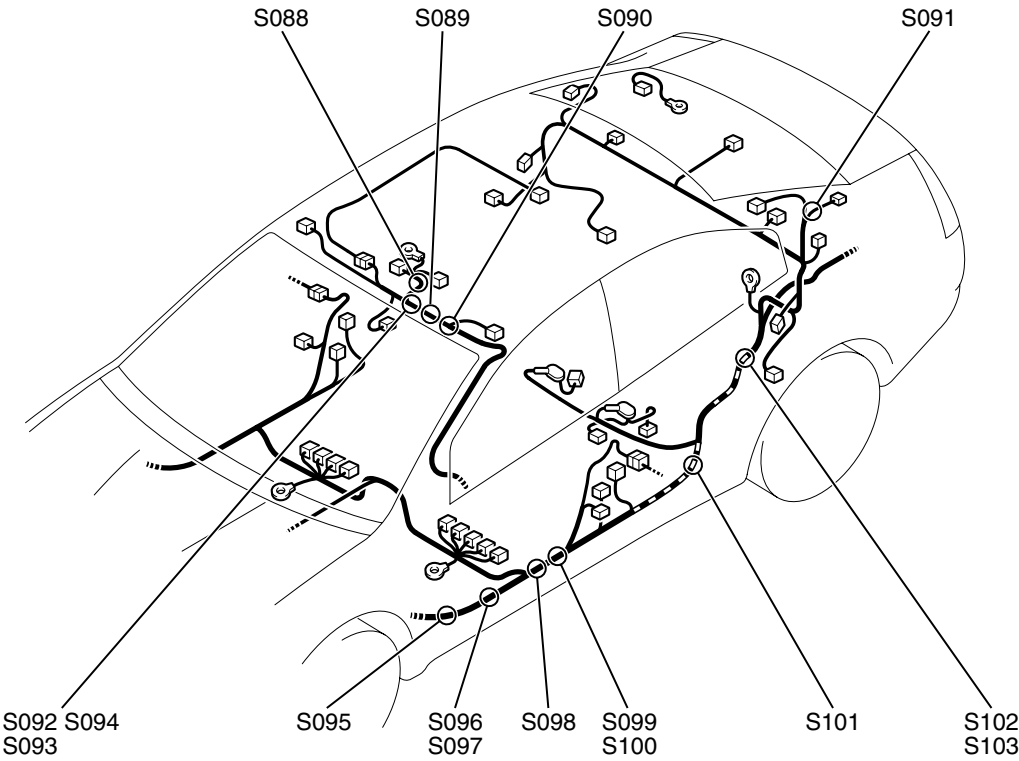

AC600222AB

DOOR


M1802000800680

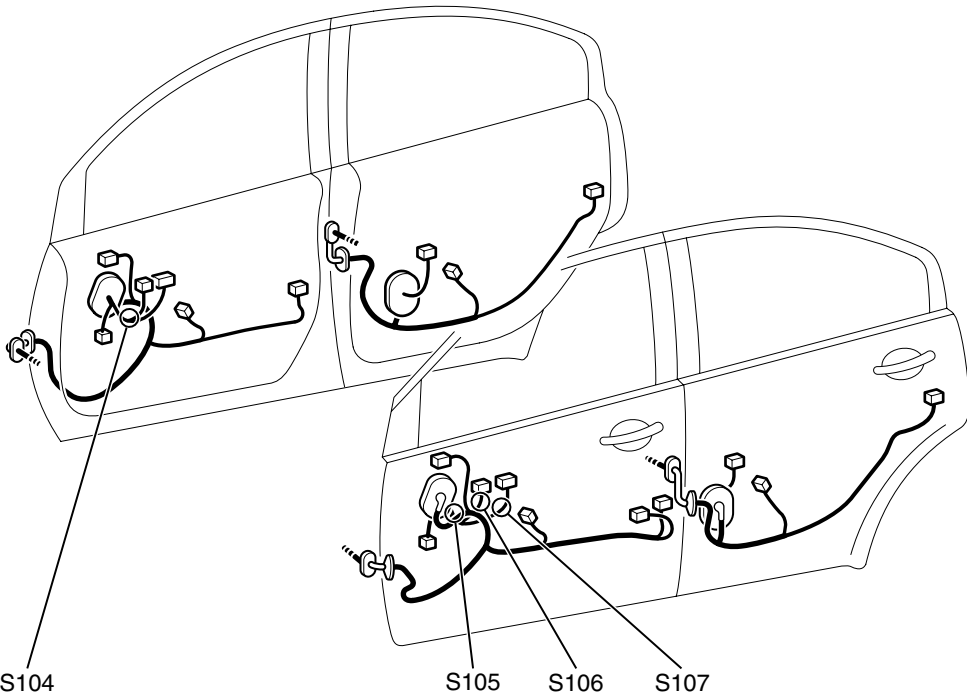

AC600223AB

LUGGAGE COMPARTMENT

M1802000700229

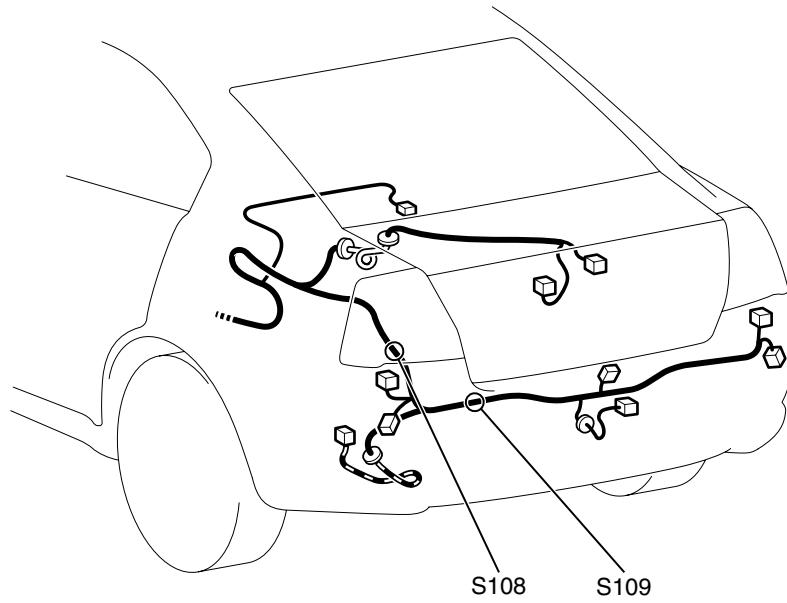

AC600224AB