
GROUP 80


 
CONFIGURATION DIAGRAMS

CONTENTS

ENGINE COMPARTMENT <VEHICLES FOR RUSSIA>	80-2	FLOOR AND ROOF <VEHICLES FOR RUSSIA>.....	80-7
DASH PANEL <VEHICLES FOR RUSSIA>	80-3	LUGGAGE COMPARTMENT <VEHICLES FOR RUSSIA>.....	80-8

ENGINE COMPARTMENT <VEHICLES FOR RUSSIA>

M1801000303131

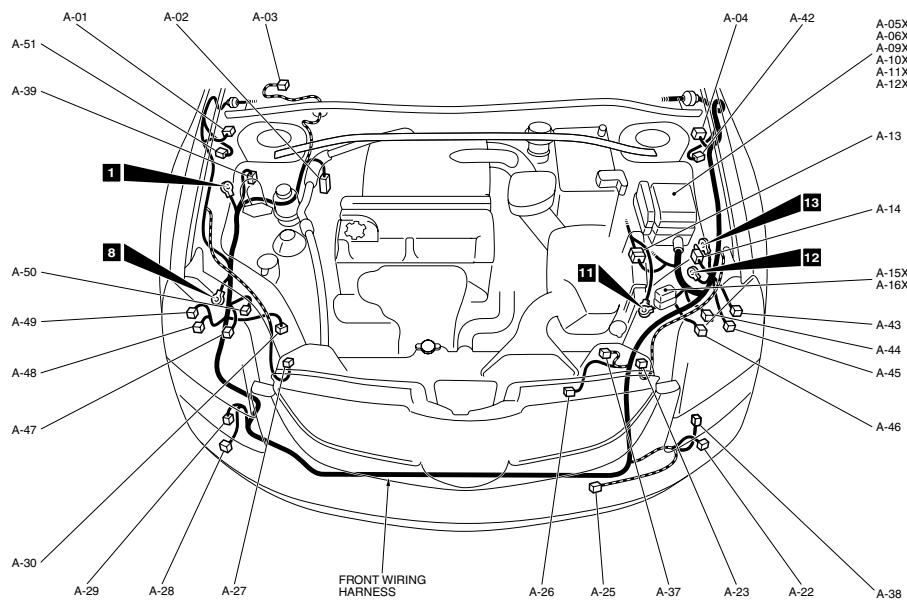

CONNECTOR COLOR CODE
 B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW


AC600391AC

A-01	(2-B)	WHEEL SPEED SENSOR (FRONT: RH)	A-25	(2-BR)	AMBIENT TEMPERATURE SENSOR
A-02	(28-GR)	ABS-ECU	A-26	(2-GR)	RADIATOR FAN MOTOR
A-03	(5-B)	WINDSHIELD WIPER MOTOR	A-27	(2-Y)	FRONT IMPACT SENSOR (RH)
A-04	(2-B)	WHEEL SPEED SENSOR (FRONT: LH)	A-28	(2-B)	FRONT FOG LIGHT (RH)
A-05X	(4)	FRONT FOG LIGHT RELAY	A-29	(2)	WINDSHIELD WASHER MOTOR
A-06X	(4)	HORN RELAY	A-30	(2-B)	A/C PRESSURE SENSOR
A-09X	(4)	REAR FOG LIGHT RELAY	A-37	(2-B)	CONDENSER FAN MOTOR
A-10X	(4)	FAN CONTROL RELAY	A-38	(1-B)	HORN (LOW)
A-11X	(11)	FRONT-ECU	A-39	(1-B)	HORN (HIGH)
A-12X	(11)	FRONT-ECU	A-42	(2-GR)	SIDE TURN-SIGNAL LIGHT (LH)
A-13	(17-GR)	FRONT WIRING HARNESS AND CONTROL WIRING HARNESS COMBINATION	A-43	(2-B)	FRONT TURN-SIGNAL LIGHT (LH)
A-14	(6-GR)	GROUNDING CONNECTOR	A-44	(3-GR)	HEADLIGHT LEVELING UNIT (LH)
A-15X	(4)	CONDENSER FAN RELAY	A-45	(2)	POSITION LIGHT (LH)
A-16X	(5)	RADIATOR FAN RELAY	A-46	(3-B)	HEADLIGHT (LH)
A-22	(2-B)	FRONT FOG LIGHT (LH)	A-47	(3-B)	HEADLIGHT (RH)
A-23	(2-Y)	FRONT IMPACT SENSOR (LH)	A-48	(2)	POSITION LIGHT (RH)
			A-49	(2-B)	FRONT TURN-SIGNAL LIGHT (RH)
			A-50	(3-GR)	HEADLIGHT LEVELING UNIT (RH)
			A-51	(2-GR)	SIDE TURN-SIGNAL LIGHT (RH)

DASH PANEL <VEHICLES FOR RUSSIA>

M1801000602106


Connector symbol
C
-01 thru
-34

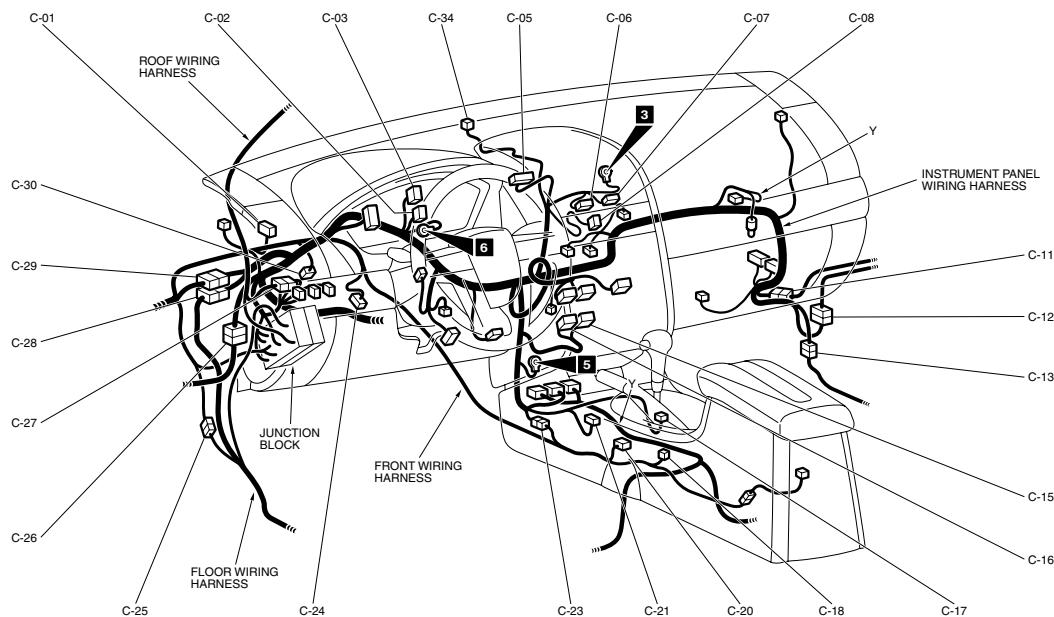

AC600392AB


C-01 (33)	J/C (1)	C-21 (9)	HEATED SEAT SWITCH
C-02 (22)	J/C (3)	C-23 (8)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-03 (33)	J/C (2)	C-24 (6-B)	ACCELERATOR PEDAL POSITION SENSOR
C-05 (20-B)	MULTI CENTER DISPLAY UNIT	C-25 (16)	FRONT WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
C-06 (3)	AIR BAG OFF INDICATOR LIGHT (PASSENGER'S SIDE)	C-26 (32)	INSTRUMENT PANEL WIRING HARNESS AND FRONT DOOR WIRING HARNESS (LH) COMBINATION
C-07 (4)	SEAT BELT WARNING LIGHT (PASSENGER'S SIDE)	C-27 (4)	INSTRUMENT PANEL WIRING HARNESS AND ROOF WIRING HARNESS COMBINATION
C-08 (4)	HAZARD WARNING LIGHT SWITCH	C-28 (43)	INSTRUMENT PANEL WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
C-11 (2)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION	C-29 (38)	INSTRUMENT PANEL WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-12 (19)	INSTRUMENT PANEL WIRING HARNESS AND FRONT DOOR WIRING HARNESS (RH) COMBINATION	C-30 (4)	STOPLIGHT SWITCH
C-13 (8)	INSTRUMENT PANEL WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION	C-34 (2)	PHOTO SENSOR
C-15 (20-B)	A/C-ECU		
C-16 (16-B)	A/C-ECU		
C-17 (2)	ACCESSORY SOCKET (1)		
C-18 (1-B)	PARKING BRAKE SWITCH		
C-20 (8)	SHIFT SWITCH ASSEMBLY		

DASH PANEL <VEHICLES FOR RUSSIA> (CONTINUED)

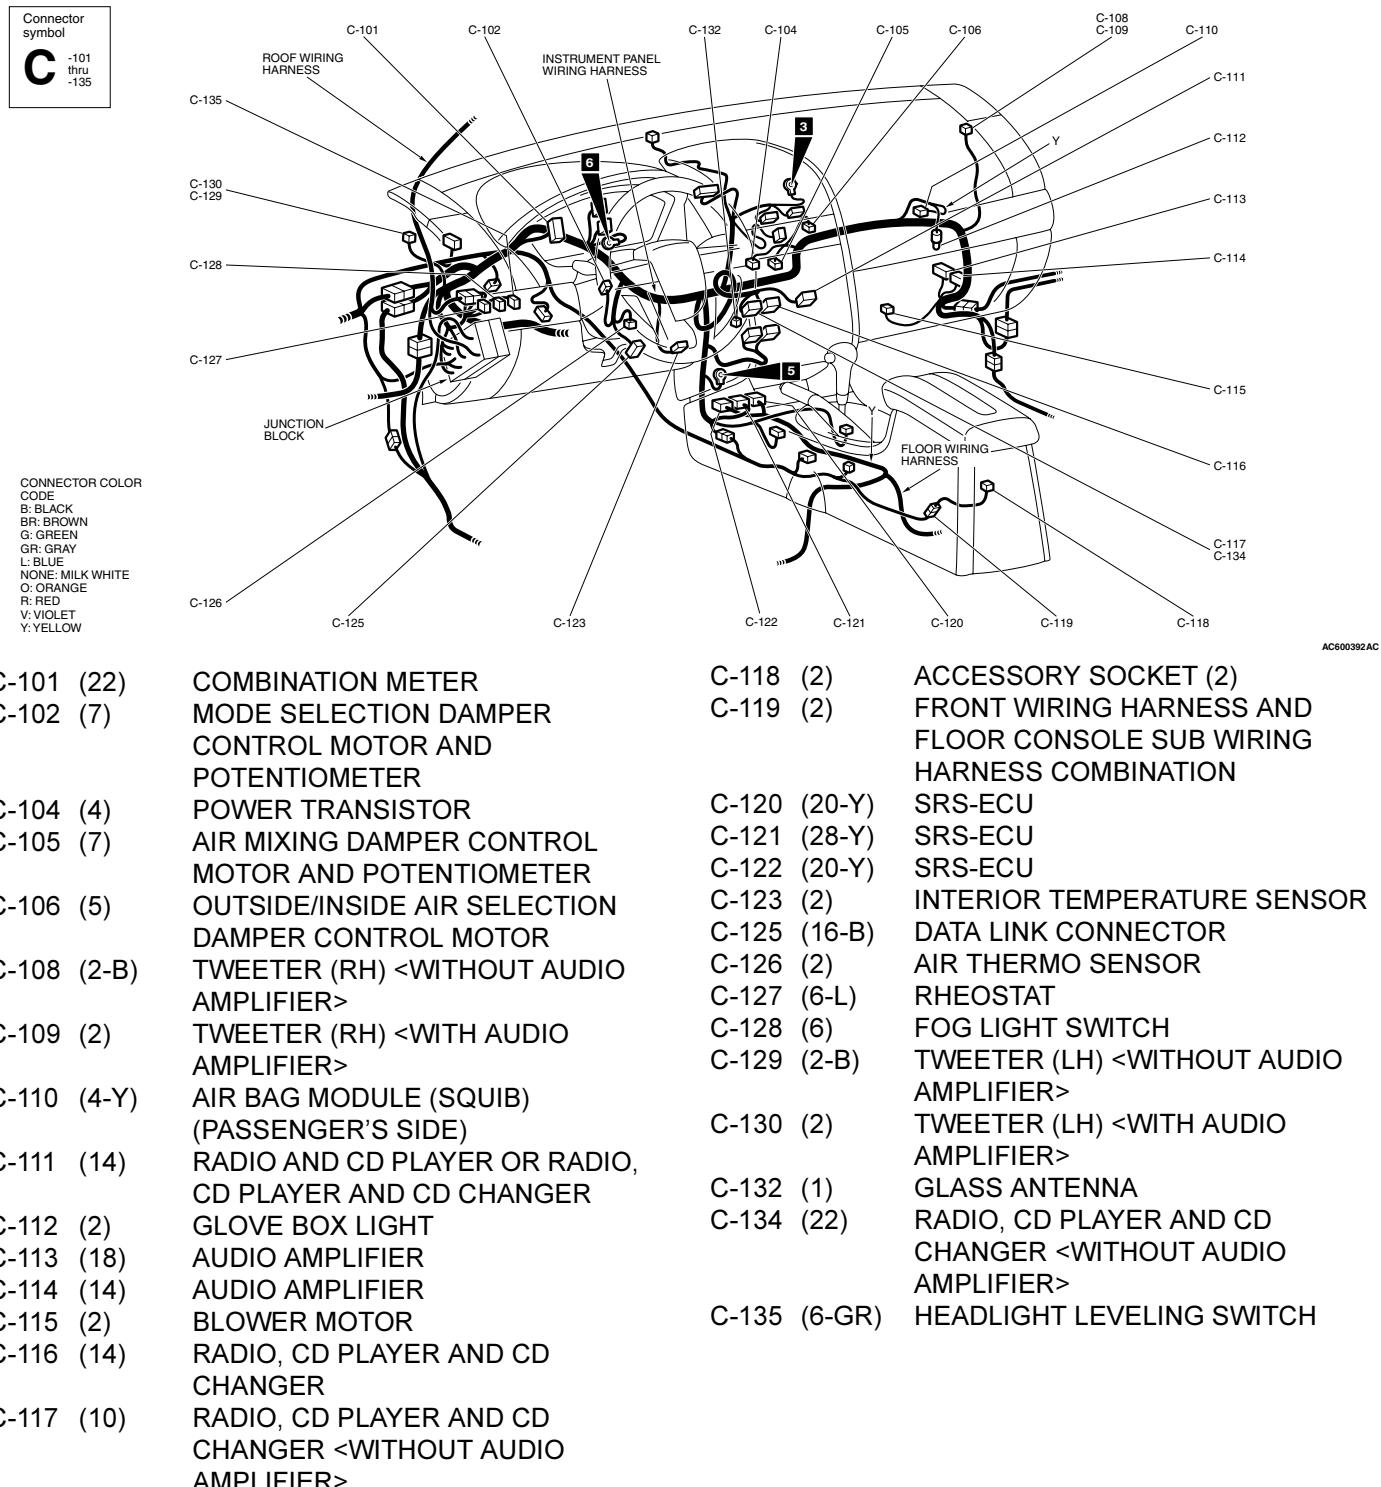


DASH PANEL <VEHICLES FOR RUSSIA> (CONTINUED)

Connector symbol
C
-201 thru
-219

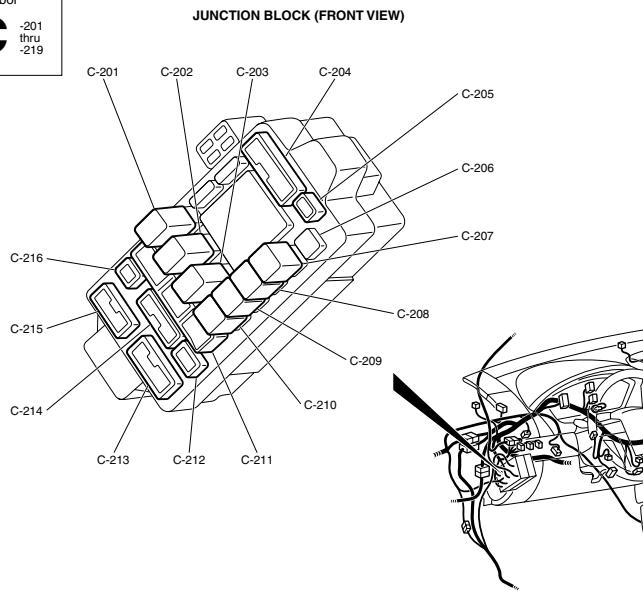

JUNCTION BLOCK (REAR VIEW)

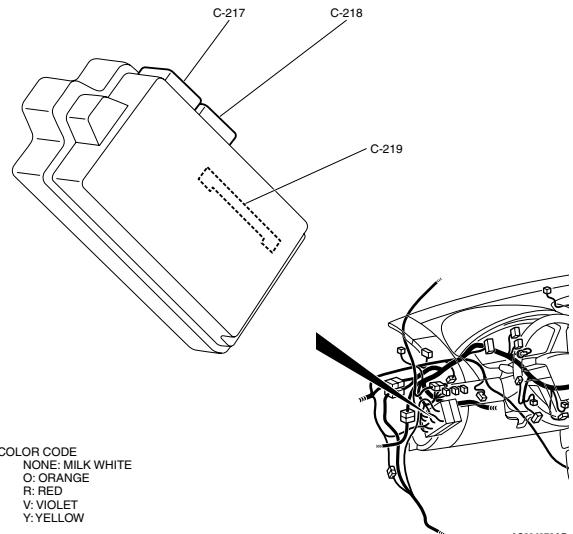


AC304373AB


C-201 (5)	REAR WINDOW DEFOGGER RELAY
C-202 (5)	BLOWER RELAY
C-203 (5)	POWER WINDOW RELAY
C-204 (15)	FLOOR WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-205 (3)	ROOF WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-206 (4)	NO CONNECTION
C-207 (4)	HEATED SEAT RELAY
C-208 (4)	FUEL PUMP RELAY (2)
C-209 (4)	ACCESSORY SOCKET RELAY
C-210 (4)	FUEL PUMP RELAY (1)
C-211 (28)	INSTRUMENT PANEL WIRING HARNESS AND JUNCTION BLOCK COMBINATION

C-212 (2)	FRONT WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-213 (13)	INSTRUMENT PANEL WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-214 (14)	FRONT WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-215 (6)	INSTRUMENT PANEL WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-216 (1-B)	INSTRUMENT PANEL WIRING HARNESS AND JUNCTION BLOCK COMBINATION
C-217 (24)	ETACS-ECU
C-218 (24-GR)	ETACS-ECU
C-219 (20)	ETACS-ECU

DASH PANEL <VEHICLES FOR RUSSIA> (CONTINUED)

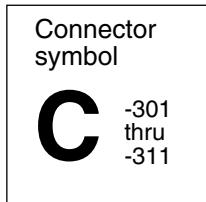

STEERING COLUMN

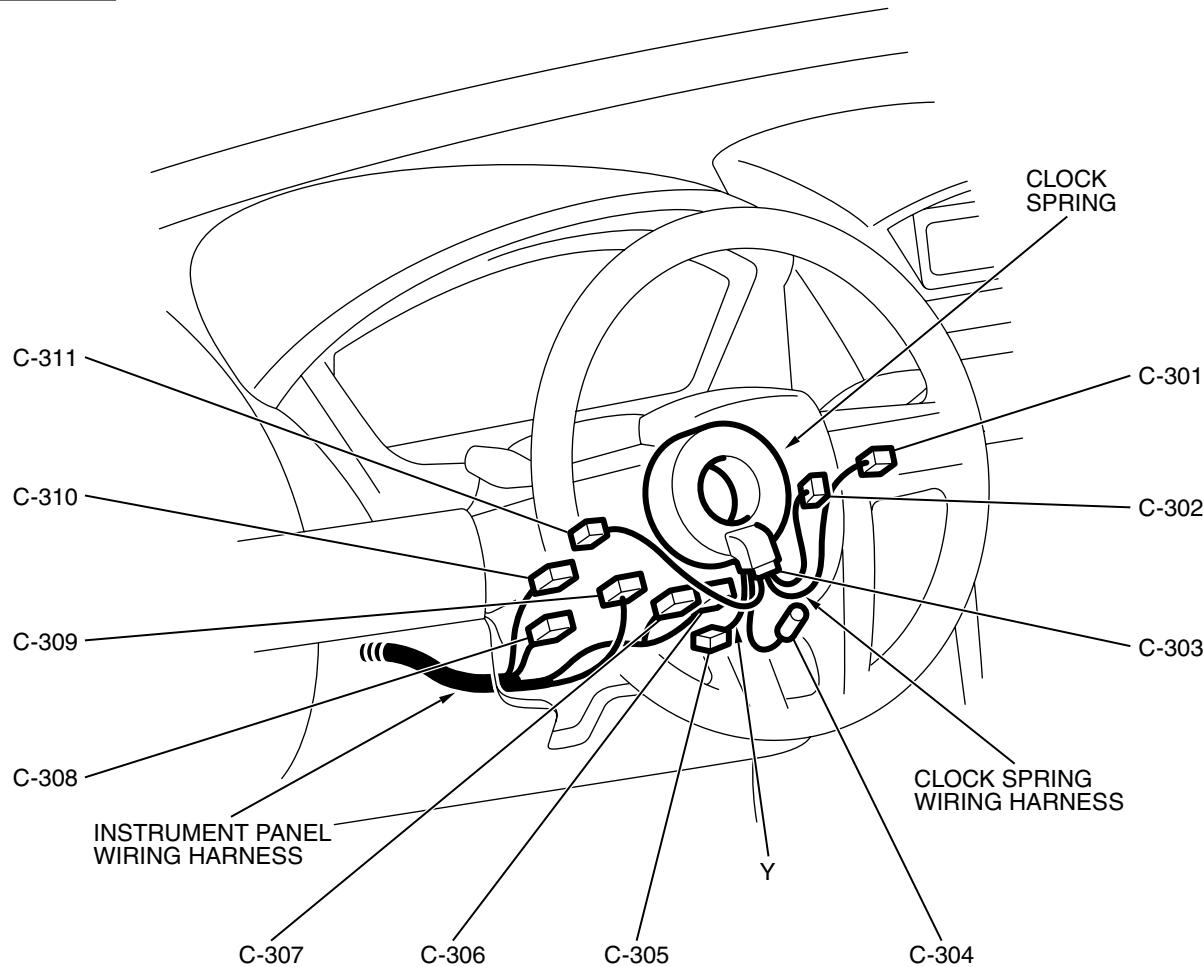


AC304363AB

C-301 (2-B)	REMOTE CONTROLLED RADIO SWITCH (RH)	C-306 (6)	CLOCK SPRING
C-302 (3-Y)	AUTO-CRUISE CONTROL SWITCH	C-307 (4-Y)	CLOCK SPRING
C-303 (5-GR)	CLOCK SPRING AND CLOCK SPRING WIRING HARNESS COMBINATION	C-308 (6)	IGNITION SWITCH
		C-309 (10)	COLUMN SWITCH
C-304 (1)	HORN SWITCH	C-310 (7)	KEY REMINDER SWITCH
C-305 (4-Y)	AIR BAG MODULE (SQUIB) (DRIVER'S SIDE)	C-311 (2-B)	REMOTE CONTROLLED RADIO SWITCH (LH)

FLOOR AND ROOF <VEHICLES FOR RUSSIA>

M1801000902185


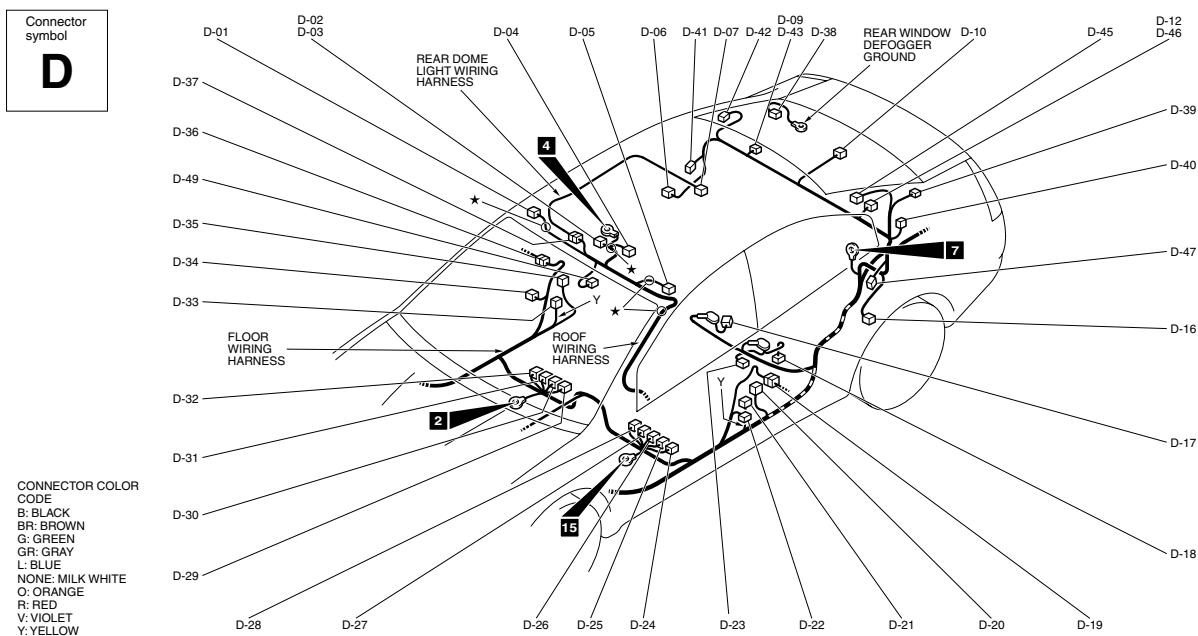


AC600393AB

D-01 (2)	VANITY MIRROR LIGHT (RH)	D-28 (5-B)	SEAT BELT BUCKLE SWITCH (DRIVER'S SIDE)
D-02 (4)	MAP LIGHT ASSEMBLY <WITHOUT SUNROOF>	D-29 (3)	SEAT BELT BUCKLE SWITCH (PASSENGER'S SIDE)
D-03 (7)	OVERHEAD CONSOLE ASSEMBLY <WITH SUNROOF>	D-30 (3-GR)	OCCUPANT CLASSIFICATION-ECU
D-04 (10)	SUNROOF ASSEMBLY	D-31 (3-B)	HEATED SEAT ASSEMBLY (RH)
D-05 (2)	VANITY MIRROR LIGHT (LH)	D-32 (2-R)	SIDE AIR BAG MODULE (SQUIB) (RH)
D-06 (3)	REAR DOOR SWITCH (RH)	D-33 (2-B)	SEAT BELT PRETENSIONER (RH)
D-07 (3)	REAR DOME LIGHT	D-34 (3)	FRONT DOOR SWITCH (RH)
D-09 (2)	REAR SPEAKER (RH) <WITHOUT AUDIO AMPLIFIER>	D-35 (2)	SIDE IMPACT SENSOR (FRONT: RH)
D-10 (2)	TRUNK LIGHT	D-36 (10)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (RH) COMBINATION
D-12 (2)	REAR SPEAKER (LH) <WITHOUT AUDIO AMPLIFIER>	D-37 (3)	ROOF WIRING HARNESS AND REAR DOME LIGHT WIRING HARNESS COMBINATION
D-16 (3)	REAR DOOR SWITCH (LH)	D-38 (1)	REAR WINDOW DEFOGGER (-)
D-17 (2-B)	FUEL LEVEL SENSOR (SUB)	D-39 (1)	REAR WINDOW DEFOGGER (+)
D-18 (5-GR)	FUEL PUMP MODULE	D-40 (1-B)	CAPACITOR
D-19 (10)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (LH) COMBINATION	D-41 (2-Y)	SIDE IMPACT SENSOR (REAR: RH)
D-20 (2)	SIDE IMPACT SENSOR (FRONT: LH)	D-42 (2-B)	CURTAIN AIR BAG MODULE (SQUIB) (RH)
D-21 (2-B)	SEAT BELT PRETENSIONER (LH)	D-43 (4)	REAR SPEAKER (RH) <WITH AUDIO AMPLIFIER>
D-22 (3)	FRONT DOOR SWITCH (LH)	D-45 (2-B)	CURTAIN AIR BAG MODULE (SQUIB) (LH)
D-23 (3-B)	FUEL TANK DIFFERENTIAL PRESSURE SENSOR	D-46 (4)	REAR SPEAKER (RH) <WITH AUDIO AMPLIFIER>
D-24 (2-R)	SIDE AIR BAG MODULE (SQUIB) (LH)	D-47 (2-Y)	SIDE IMPACT SENSOR (REAR: LH)
D-25 (2-B)	POWER SEAT ASSEMBLY	D-49 (7-B)	AUTOMATIC ANTI-DAZZLING MIRROR
D-26 (3-B)	HEATED SEAT ASSEMBLY (LH)		
D-27 (2-GR)	SEAT SLIDE SENSOR		

LUGGAGE COMPARTMENT <VEHICLES FOR RUSSIA>

M1801001500753

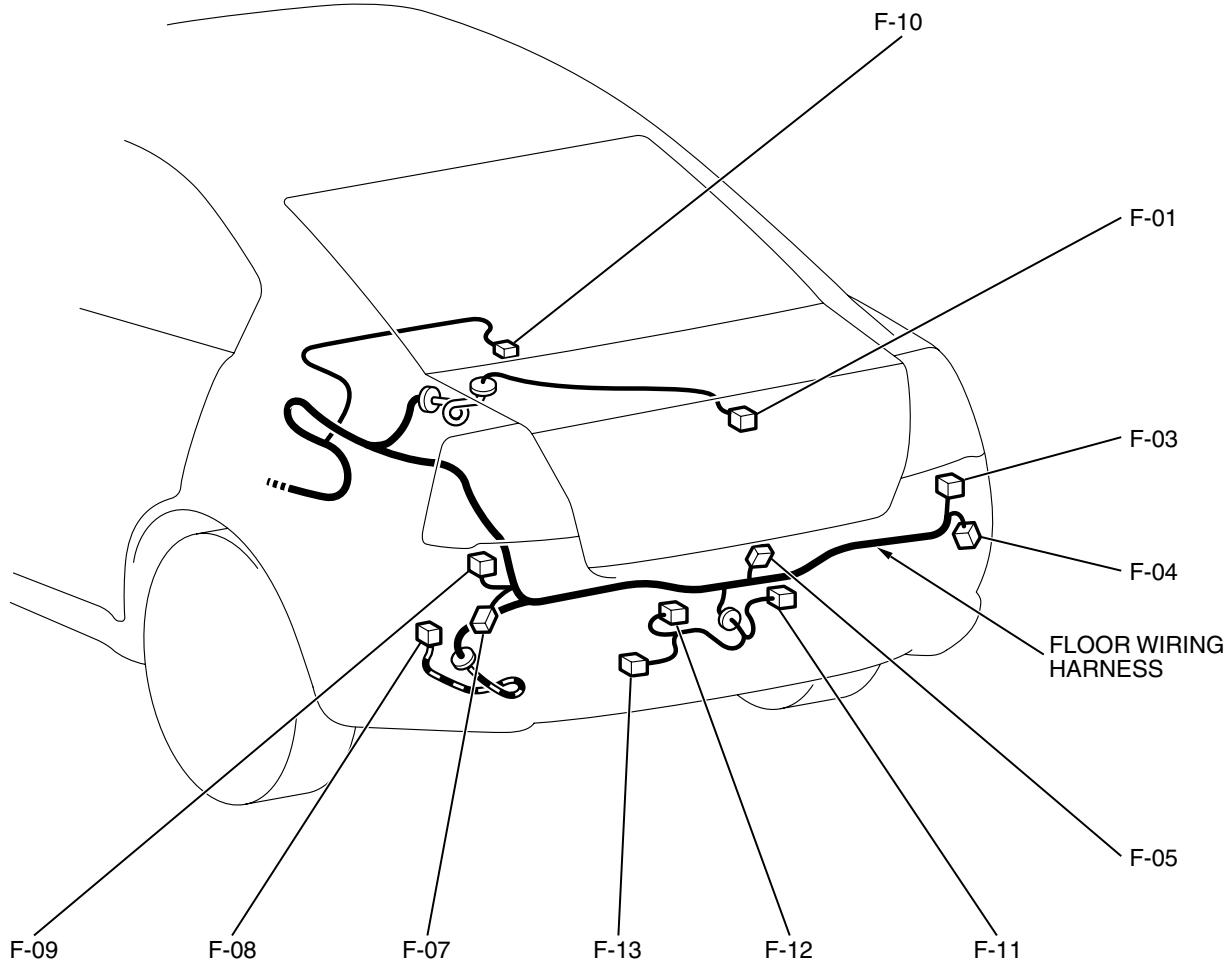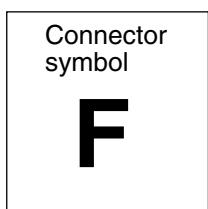

AC600394AB

F-01	(2-GR)	HIGH-MOUNTED STOPLIGHT	F-08	(2-B)	EVAPORATIVE EMISSION VENTILATION SOLENOID
F-03	(6)	REAR COMBINATION LIGHT (RH)	F-09	(6)	REAR COMBINATION LIGHT (LH)
F-04	(2)	WHEEL SPEED SENSOR (REAR: RH)	F-10	(8-B)	NAVIGATION UNIT <WITH MMCS>
F-05	(2)	TRUNK LID LATCH ASSEMBLY	F-11	(2-B)	LICENSE PLATE LIGHT (RH)
F-07	(2)	WHEEL SPEED SENSOR (REAR: LH)	F-12	(2-B)	LICENSE PLATE LIGHT (LH)
			F-13	(2-B)	REAR FOG LIGHT