

## SECTION 42

# BODY

### CONTENTS

General.....	1	Window glass channel, door-opening weather strip <GT, GSR>.....	1
--------------	---	---	---


### General

Servicing guidelines have been amended in conjunction with the changes listed below. Other servicing guidelines remain unchanged. <GT, GSR>

- Addition of front door opening inner lower weather strip
- Addition of front and rear door opening inner weather strip

### Window glass channel, door-opening weather strip <GT, GSR>

#### Removal and fitting

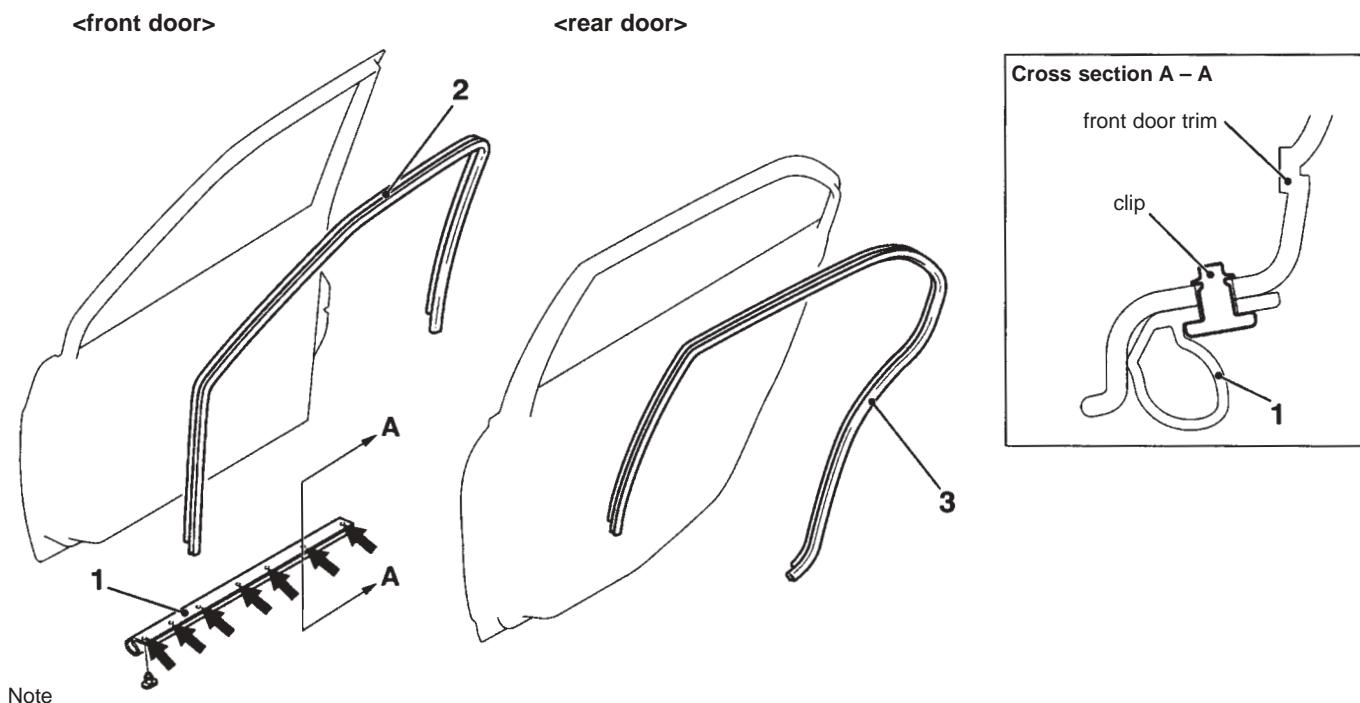

Note

← : position of clips

AC405939AB

#### Removal of the front door opening inner lower weather strip

1. Front door opening inner lower weather strip

#### Procedure for removing the front door opening inner weather strip

- Front scuff plate
- Cowl side trim
- Lower centre pillar trim

#### 2. Front door opening inner weather strip

#### Procedure for removing the rear door opening inner weather strip

- Rear scuff plate
- Lower centre pillar trim

3. Rear door opening inner weather strip

---

<Notes>