

---

SECTION 4

INDEX

CONTENTS

|                                                 |     |                                          |      |
|-------------------------------------------------|-----|------------------------------------------|------|
| Index listed in connector<br>number order ..... | 4-2 | Index listed in<br>part name order ..... | 4-10 |
|-------------------------------------------------|-----|------------------------------------------|------|

CONNECTOR NO. LIST

| Connector No. | Part Name                                                                                                 | Circuit Diagram page                                       | Layout Diagram page |
|---------------|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------|---------------------|
| A-01          | Side turn signal light (RH)                                                                               | 3-61, 83, 165                                              | 1-4                 |
| A-02          | Brake fluid level switch                                                                                  | 3-71                                                       | 1-4                 |
| A-04          | Side turn signal light (LH)                                                                               | 3-60, 82, 164                                              | 1-5                 |
| A-05          | Front ABS sensor (LH)                                                                                     | 3-127, 135, 143                                            | 1-5                 |
| A-06X         | Fog lamp relay or spare connector for fog lamp relay                                                      | 3-54, 167                                                  | 1-5                 |
| A-07X         | Horn relay                                                                                                | 3-66, 166                                                  | 1-5                 |
| A-08X         | Condenser fan relay (LO)                                                                                  | 3-37, 93, 99                                               | 1-5                 |
| A-09X         | Condenser fan relay (HI)                                                                                  | 3-37, 93, 99                                               | 1-5                 |
| A-11X         | Radiator fan control relay                                                                                | 3-36, 92, 98                                               | 1-5                 |
| A-12X         | Front ECU                                                                                                 | 3-19, 38, 39, 42, 43, 46, 47, 54, 55, 58, 59, 62, 105, 167 | 1-5                 |
| A-13X         | Front ECU                                                                                                 | 3-39, 43, 47, 55, 59, 62, 104, 105                         | 1-5                 |
| A-14          | Front harness (LH) / Control harness junction                                                             | 3-122                                                      | 1-5                 |
| A-16          | Headlight (HI : LH)                                                                                       | 3-38, 42                                                   | 1-5                 |
| A-19          | Radiator fan controller                                                                                   | 3-36, 92, 98                                               | 1-5                 |
| A-20          | Horn (HI)                                                                                                 | 3-66, 166                                                  | 1-5                 |
| A-21          | External air temperature sensor (vehicle with Full auto A/C)                                              | 3-97, 117                                                  | 1-5                 |
| A-22          | Horn (LO)                                                                                                 | 3-66, 166                                                  | 1-5                 |
| A-23          | Headlight (HI : RH)                                                                                       | 3-38, 42                                                   | 1-4                 |
| A-28          | Spare connector for fog lamps                                                                             | 3-167                                                      | 1-4                 |
| A-29          | Dummy connector                                                                                           | -                                                          | 1-4                 |
| A-31          | Front ABS sensor (RH)                                                                                     | 3-127, 135, 143                                            | 1-4                 |
| A-32          | Dummy connector                                                                                           | 3-38                                                       | 1-5                 |
| A-33          | Headlight ASSY (LH)                                                                                       | 3-38, 42, 46, 58, 60, 82, 164                              | 1-5                 |
| A-34          | Intercooler water spray motor                                                                             | 3-158                                                      | 1-5                 |
| A-35          | Fog lamp (LH)                                                                                             | 3-54                                                       | 1-5                 |
| A-36          | Condenser fan motor                                                                                       | 3-37, 93, 99                                               | 1-4                 |
| A-37          | Condenser fan motor                                                                                       | 3-37, 93, 99                                               | 1-4                 |
| A-38          | Power steering fluid pressure switch                                                                      | 3-32                                                       | 1-4                 |
| A-39          | A/C compressor (vehicle with manual A/C or Full auto A/C) or dummy connector (vehicle with heater)        | 3-88, 94, 102                                              | 1-4                 |
| A-40          | Fog lamp (RH)                                                                                             | 3-52                                                       | 1-4                 |
| A-41          | Headlamp ASSY (RH)                                                                                        | 3-38, 42, 46, 58, 61, 83, 165                              | 1-4                 |
| A-42          | Dual pressure switch (vehicle with manual A/C or Full auto A/C), or dummy connector (vehicle with heater) | 3-88, 94, 102                                              | 1-4                 |
| A-52          | Front impact sensor (vehicle w/out front passenger's airbag) (RH)                                         | 3-150                                                      | 1-4                 |

| Connector No. | Part Name                                                         | Circuit Diagram page                          | Layout Diagram page |
|---------------|-------------------------------------------------------------------|-----------------------------------------------|---------------------|
| A-53          | Front impact sensor (vehicle w/out front passenger's airbag) (LH) | 3-150                                         | 1-5                 |
| B-01          | Engine oil pressure switch                                        | 3-71                                          | 1-7                 |
| B-02          | Alternator                                                        | 3-26                                          | 1-6                 |
| B-03          | Alternator                                                        | 3-26                                          | 1-6                 |
| B-04          | Starter                                                           | 3-23                                          | 1-7                 |
| B-05          | Starter                                                           | 3-23                                          | 1-7                 |
| B-06          | Throttle position sensor                                          | 3-30, 133, 141                                | 1-7                 |
| B-07          | Purge control solenoid valve                                      | 3-33                                          | 1-6                 |
| B-08          | Air flow sensor                                                   | 3-30                                          | 1-7                 |
| B-12          | Windscreen washer / wiper motor                                   | 3-104                                         | 1-7                 |
| B-13X         | Engine speed detection connector                                  | 3-25, 32                                      | 1-7                 |
| B-14X         | Starter relay                                                     | 3-23, 32                                      | 1-7                 |
| B-17X         | Ignition coil relay                                               | 3-24                                          | 1-7                 |
| B-19X         | Engine control relay                                              | 3-28, 160                                     | 1-7                 |
| B-20X         | A/C compressor relay                                              | 3-88, 94, 102                                 | 1-7                 |
| B-21          | Control harness / Battery harness junction                        | 3-23, 26, 33, 71                              | 1-7                 |
| B-25          | O2 sensor                                                         | 3-31                                          | 1-6                 |
| B-26          | Injector 4                                                        | 3-31                                          | 1-7                 |
| B-27          | Injector 3                                                        | 3-31                                          | 1-7                 |
| B-28          | Injector 2                                                        | 3-31                                          | 1-6                 |
| B-29          | Injector 1                                                        | 3-31                                          | 1-6                 |
| B-30          | Waste gate solenoid valve 1                                       | 3-32                                          | 1-7                 |
| B-31          | Control harness / Transmission harness junction                   | 3-34, 53, 64, 68, 106, 108, 116, 168          | 1-7                 |
| B-32          | Waste gate solenoid valve 2                                       | 3-33                                          | 1-7                 |
| B-33          | Intake cam position sensor                                        | 3-33                                          | 1-7                 |
| B-34          | Air temperature sensor                                            | 3-33                                          | 1-7                 |
| B-106         | Knock sensor                                                      | 3-31                                          | 1-8                 |
| B-108         | Coolant temperature sensor                                        | 3-30                                          | 1-9                 |
| B-109         | ABS-ECU                                                           | 3-122, 124, 125, 126, 127, 128, 139, 142, 143 | 1-9                 |
| B-114         | Water temperature gauge unit                                      | 3-68                                          | 1-9                 |
| B-115         | Exhaust cam position sensor                                       | 3-30                                          | 1-9                 |
| B-119         | Ignition coil 2                                                   | 3-25                                          | 1-8                 |
| B-122         | Crank angle sensor                                                | 3-31                                          | 1-8                 |
| B-123         | Ignition coil 1                                                   | 3-25                                          | 1-9                 |
| B-124         | Fuel pressure solenoid valve                                      | 3-32                                          | 1-8                 |
| B-126         | Idle speed control servo                                          | 3-32                                          | 1-9                 |
| B-127         | Electric pump relay                                               | 3-134, 144                                    | 1-9                 |
| B-128         | Fuel pump relay 3                                                 | 3-35                                          | 1-9                 |
| B-129         | Register (for injector)                                           | 3-31                                          | 1-9                 |
| B-130         | Fuel pump register                                                | 3-35                                          | 1-9                 |
| B-131         | Vehicle speed sensor                                              | 3-34, 53, 68, 106, 116, 168                   | 1-9                 |

| Connector No. | Part Name                                                                                                  | Circuit Diagram page                                                                                                                    | Layout Diagram page |
|---------------|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| B-132         | Reversing light switch                                                                                     | 3-64, 108                                                                                                                               | 1-9                 |
| B-133         | Secondary air control solenoid valve                                                                       | 3-33                                                                                                                                    | 1-8                 |
| B-134         | Oil feeder control valve                                                                                   | 3-31                                                                                                                                    | 1-8                 |
| B-135         | Manifold absolute pressure sensor                                                                          | 3-31                                                                                                                                    | 1-8                 |
| C-01          | Register (vehicle with heater and manual A/C)                                                              | 3-86, 90                                                                                                                                | 1-10                |
| C-02          | Front passenger's airbag module (squib)                                                                    | 3-153                                                                                                                                   | 1-10                |
| C-03          | Internal / External air switching damper motor                                                             | 3-87, 91, 100                                                                                                                           | 1-10                |
| C-04          | Instrument panel harness and A/C harness junction                                                          | 3-87, 91, 96, 100, 101                                                                                                                  | 1-10                |
| C-05          | Air thermo sensor (vehicle with full auto A/C)                                                             | 3-100                                                                                                                                   | 1-10                |
| C-06          | J/C (5)                                                                                                    | 3-10, 41, 45, 49, 53, 56, 63, 66, 72, 78, 80, 101, 107, 109, 117, 128, 137, 147, 156, 157, 162, 166                                     | 1-10                |
| C-07          | J/C (1)                                                                                                    | 3-6, 35, 39, 43, 47, 48, 54, 56, 59, 62, 63, 69, 70, 87, 91, 97, 97, 105, 108, 110,112,118, 119, 120, 121, 130, 132, 138, 140, 159, 168 | 1-11                |
| C-08          | Motor & potentiometer for air mixing door (vehicle with full auto A/C)                                     | 3-100                                                                                                                                   | 1-11                |
| C-09          | Heater water temperature sensor (vehicle with full auto A/C)                                               | 3-100                                                                                                                                   | 1-11                |
| C-10          | Motor & potentiometer for blower outlet switching damper (vehicle with full auto A/C)                      | 3-101                                                                                                                                   | 1-11                |
| C-13          | Clock                                                                                                      | 3-120                                                                                                                                   | 1-11                |
| C-14          | Hazard switch                                                                                              | 3-62                                                                                                                                    | 1-11                |
| C-15          | Blower switch (vehicle with heater, manual A/C)                                                            | 3-86, 90                                                                                                                                | 1-11                |
| C-16          | Heater control unit (vehicle with heater) or A/C-ECU (vehicle with manual A/C)                             | 3-87, 91, 110                                                                                                                           | 1-11                |
| C-17          | A/C-ECU (vehicle with full auto A/C)                                                                       | 3-96, 97, 100, 101, 112                                                                                                                 | 1-11                |
| C-18          | A/C-ECU (vehicle with full auto A/C)                                                                       | 3-96, 97, 100, 101, 112                                                                                                                 | 1-11                |
| C-20          | Instrument panel harness / Control harness junction                                                        | 3-69, 87, 88, 91, 94, 97, 102, 122, 124, 125, 127, 128, 131, 134, 135, 137, 139, 142, 143, 144, 145, 147                                | 1-11                |
| C-21          | Instrument panel harness / Control harness junction                                                        | 3-23, 24, 29, 32, 35, 64, 104, 108, 130, 138                                                                                            | 1-11                |
| C-22          | Instrument panel harness / Control harness junction                                                        | 3-23, 26, 29, 34, 53, 64, 68, 71, 106, 108, 116, 122, 128, 130, 137, 138, 147, 158, 159, 160, 161, 168                                  | 1-11                |
| C-23          | J/C (6)                                                                                                    | 3-10, 25, 28, 32, 36, 69, 92, 98, 122, 128, 130, 137, 138, 133, 141, 147. 160                                                           | 1-11                |
| C-28          | Blower motor (vehicle with heater or manual A/C) , or blower pulse controller (vehicle with full auto A/C) | 3-86, 90, 96                                                                                                                            | 1-10                |

| Connector No. | Part Name                                               | Circuit Diagram page                                                                                                                                                                                             | Layout Diagram page |
|---------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| C-29          | Instrument panel harness / Floor harness (LH) junction  | 3-46, 52, 60, 64, 65, 73, 75, 79, 81, 82, 85, 119, 149, 153, 163, 164                                                                                                                                            | 1-10                |
| C-30          | Instrument panel harness / Floor harness (LH) junction  | 3-134, 144, 145                                                                                                                                                                                                  | 1-10                |
| C-31          | Instrument panel harness / Front harness (LH) junction  | 3-29, 37, 38, 39, 42, 43, 46, 47, 48, 54, 55, 58, 59, 60, 61, 62, 63, 65, 66, 69, 82, 83, 87, 91, 93, 97, 99, 104, 105, 110, 112, 118, 120, 121, 122, 130, 132, 138, 140, 150, 158, 159, 164, 165, 166, 167, 168 | 1-10                |
| C-32          | Instrument panel harness / Front harness (LH) junction  | 3-18, 22, 34, 40, 44, 48, 51, 56, 59, 63, 69, 70, 72, 73, 78, 80, 86, 90, 96, 101, 106, 109, 110, 112, 114, 119, 120, 128, 130, 137, 138, 147, 150, 152, 154, 156, 157, 161, 162, 168                            | 1-10                |
| C-33          | Instrument panel harness / Front harness (LH) junction  | 3-73, 79, 81, 113, 114, 118                                                                                                                                                                                      | 1-10                |
| C-34          | Control harness / Front harness (LH) junction           | 3-24, 26, 28, 32, 36, 37, 88, 92, 93, 94, 98, 99, 102, 104, 127, 135, 143, 160                                                                                                                                   | 1-10                |
| C-37          | 4WD-ECU                                                 | 3-125, 130, 131, 132, 133, 134, 136, 137, 138, 140, 141, 142, 144, 146, 147                                                                                                                                      | 1-11                |
| C-38          | 4WD-ECU                                                 | 3-125, 130, 131, 134, 135, 137, 138, 139, 142, 144, 145, 147                                                                                                                                                     | 1-11                |
| C-43          | Control harness / Floor harness (LH) junction           | 3-134, 144                                                                                                                                                                                                       | 1-10                |
| C-44          | Instrument panel harness / Tweeter sub-harness junction | 3-118                                                                                                                                                                                                            | 1-10                |
| C-45          | Tweeter (LH)                                            | 3-118                                                                                                                                                                                                            | 1-10                |
| C-49          | Engine ECU                                              | 3-25, 26, 29, 30, 31, 32, 33, 35, 36, 37, 88, 93, 94, 99, 102                                                                                                                                                    | 1-10                |
| C-50          | Engine ECU                                              | 3-25, 26, 28, 30, 31, 32, 33, 35, 69, 88, 94, 102, 133, 141, 159, 160                                                                                                                                            | 1-10                |
| C-51          | Engine ECU                                              | 3-29, 30, 31, 33, 34, 88, 94, 102, 133, 141, 158, 160, 161                                                                                                                                                       | 1-10                |
| C-55          | Dummy connector                                         | 3-38                                                                                                                                                                                                             | 1-10                |
| C-101         | Roof antenna                                            | 3-118                                                                                                                                                                                                            | 1-12                |
| C-103         | Spare audio connector                                   | 3-118, 119                                                                                                                                                                                                       | 1-12                |
| C-104         | Sunlight sensor (vehicle with full auto A/C)            | 3-101                                                                                                                                                                                                            | 1-12                |
| C-106         | Combination meter                                       | 3-26, 29, 38, 42, 50, 54, 61, 68, 69, 70, 71, 83, 122, 132, 140, 148, 152, 158, 165, 167                                                                                                                         | 1-13                |
| C-107         | J/C (3)                                                 | 3-8, 23, 41, 45, 49, 51, 52, 54, 55, 59, 62, 69, 71, 73, 78, 80, 86, 87, 90, 91, 96, 97, 107, 109, 110, 112, 115, 117, 120, 121, 126, 132, 136, 140, 146, 156, 157, 159, 162                                     | 1-13                |
| C-108         | Combination meter                                       | 3-26, 47, 50, 54, 61, 68, 69, 70, 71, 83, 122, 148, 152, 158, 165, 167                                                                                                                                           | 1-13                |
| C-110         | J/C (4)                                                 | 3-9, 34, 50, 56, 68, 70, 115, 119, 120, 128, 137, 147, 150, 152, 161, 167, 168                                                                                                                                   | 1-13                |
| C-111         | Spare connector for fog lamp switch                     | 3-167                                                                                                                                                                                                            | 1-13                |
| C-112         | Remote control mirror switch                            | 3-115                                                                                                                                                                                                            | 1-13                |

| Connector No. | Part Name                                                     | Circuit Diagram page                                                                                                                                                                          | Layout Diagram page |
|---------------|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| C-113         | Instrument panel harness / Roof harness junction              | 3-118, 154                                                                                                                                                                                    | 1-13                |
| C-114         | Instrument panel harness / Front door harness (RH) junction   | 3-74, 75, 18, 80, 113, 115, 118                                                                                                                                                               | 1-13                |
| C-115         | Instrument panel harness / Front harness (RH) junction        | 3-61, 71, 83, 88, 94, 102, 127, 135, 143, 150, 165                                                                                                                                            | 1-13                |
| C-116         | Instrument panel harness / Floor harness (RH) junction        | 3-64, 65, 73, 76, 104, 108, 119, 149, 153                                                                                                                                                     | 1-13                |
| C-118         | Stop light switch                                             | 3-65, 122, 130, 138                                                                                                                                                                           | 1-13                |
| C-119         | J/C (2)                                                       | 3-7, 37, 39, 43, 47, 53, 55, 59, 62, 64, 68, 72, 87, 91, 96, 105, 107, 108, 117, 126, 136, 146, 156, 157, 168                                                                                 | 1-13                |
| C-120         | Cabin temperature sensor (vehicle with full auto A/C)         | 3-97                                                                                                                                                                                          | 1-13                |
| C-121         | Diagnosis connector                                           | 3-34, 161                                                                                                                                                                                     | 1-12                |
| C-122         | Diagnosis connector                                           | 3-34, 41, 45, 49, 53, 56, 63, 72, 78, 80, 101, 107, 109, 117, 128, 137, 147, 150, 152, 156, 157, 161, 162                                                                                     | 1-12                |
| C-124         | SRS-ECU                                                       | 3-149, 153                                                                                                                                                                                    | 1-12                |
| C-125         | SRS-ECU                                                       | 3-148, 149, 150, 152, 153                                                                                                                                                                     | 1-12                |
| C-126         | Instrument panel harness / Clutch switch sub-harness junction | 3-23                                                                                                                                                                                          | 1-12                |
| C-127         | Clutch switch                                                 | 3-23                                                                                                                                                                                          | 1-13                |
| C-128         | Tweeter (RH)                                                  | 3-118                                                                                                                                                                                         | 1-13                |
| C-129         | Fog lamp switch                                               | 3-54                                                                                                                                                                                          | 1-13                |
| C-130         | Headlight levelling switch                                    | 3-59                                                                                                                                                                                          | 1-13                |
| C-131         | Instrument panel harness / Floor harness (RH) junction        | 3-35, 68, 70, 127, 135, 143                                                                                                                                                                   | 1-13                |
| C-132         | Dummy connector                                               | -                                                                                                                                                                                             | 1-13                |
| C-133         | Instrument panel harness / Control harness junction           | 3-126, 103, 132, 134, 136, 138, 140, 144, 145, 146                                                                                                                                            | 1-12                |
| C-134         | ACD mode switch                                               | 3-132, 140                                                                                                                                                                                    | 1-13                |
| C-138         | Generic spare connector                                       | 3-168                                                                                                                                                                                         | 1-12                |
| C-201         | Ignition switch                                               | 3-20                                                                                                                                                                                          | 1-14                |
| C-202         | Key reminder switch                                           | 3-50, 52, 80, 157, 160, 162                                                                                                                                                                   | 1-14                |
| C-203         | Column switch                                                 | 3-39, 43, 47, 55, 63, 105, 108                                                                                                                                                                | 1-14                |
| C-204         | Clock spring                                                  | 3-148, 152                                                                                                                                                                                    | 1-14                |
| C-205         | Clock spring                                                  | 3-66                                                                                                                                                                                          | 1-14                |
| C-206         | Turbo switch                                                  | 3-66                                                                                                                                                                                          | 1-14                |
| C-207         | Driver's airbag module (squib)                                | 3-148, 152                                                                                                                                                                                    | 1-14                |
| C-208         | Instrument panel harness / J/B junction                       | 3-4, 158                                                                                                                                                                                      | 1-15                |
| C-209         | Instrument panel harness / J/B junction                       | 3-4, 29, 35, 37, 39, 40, 43, 44, 47, 48, 55, 56, 59, 60, 61, 62, 63, 64, 69, 70, 82, 83, 86, 90, 96, 104, 105, 106, 108, 119, 120, 122, 126, 130, 132, 136, 138, 140, 146, 158, 164, 165, 168 | 1-15                |

| Connector No. | Part Name                                            | Circuit Diagram page                                                                                                                                                                                                                                                                                                 | Layout Diagram page |
|---------------|------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| C-210         | Instrument panel harness / J/B junction              | 3-4, 20, 21, 22, 24, 26, 29, 37, 39, 43, 47, 50, 51, 55, 59, 62, 63, 64, 68, 70, 72, 73, 78, 80, 86, 90, 96, 104, 105, 108, 109, 110, 112, 114, 119, 120, 121, 122, 124, 126, 130, 131, 132, 136, 138, 139, 140, 146, 148, 152, 154, 156, 157, 158, 162, 168                                                         | 1-15                |
| C-211         | Instrument panel harness / J/B junction              | 3-4, 22, 34, 40, 44, 48, 51, 56, 59, 63, 69, 70, 72, 78, 80, 86, 90, 96, 101, 106, 109, 110, 112, 114, 119, 120, 130, 137, 138, 147, 150, 152, 156, 157, 161, 162, 168                                                                                                                                               | 1-15                |
| C-212         | Instrument panel harness / J/B junction              | 3-4, 22, 24, 26, 29, 34, 39, 40, 41, 43, 44, 45, 47, 48, 49, 51, 52, 53, 55, 56, 61, 62, 63, 68, 69, 70, 72, 78, 79, 80, 81, 83, 85, 86, 90, 96, 101, 105, 107, 108, 109, 110, 112, 114, 116, 117, 121, 122, 124, 128, 130, 131, 132, 137, 138, 139, 140, 147, 148, 150, 152, 156, 157, 158, 161, 162, 163, 165, 168 | 1-15                |
| C-213         | Demister relay                                       | 3-4, 22, 110, 112                                                                                                                                                                                                                                                                                                    | 1-15                |
| C-214         | Blower relay                                         | 3-4, 86, 90, 96                                                                                                                                                                                                                                                                                                      | 1-15                |
| C-215         | Floor harness (RH) / J/B junction                    | 3-4, 40, 44, 47, 48, 51, 52, 60, 72, 79, 81, 82, 85, 109, 110, 112, 156, 157, 163, 164                                                                                                                                                                                                                               | 1-15                |
| C-216         | Roof harness / J/B junction                          | 3-4, 50, 51, 84, 154                                                                                                                                                                                                                                                                                                 | 1-15                |
| C-217         | Dummy connector                                      | 3-4                                                                                                                                                                                                                                                                                                                  | 1-15                |
| C-218         | Dummy connector                                      | 3-4                                                                                                                                                                                                                                                                                                                  | 1-15                |
| C-219         | Fuel pump relay 2                                    | 3-4, 29                                                                                                                                                                                                                                                                                                              | 1-15                |
| C-220         | Intercooler water spray relay                        | 3-4, 158                                                                                                                                                                                                                                                                                                             | 1-15                |
| C-221         | Fuel pump relay 1                                    | 3-4, 29                                                                                                                                                                                                                                                                                                              | 1-15                |
| C-222         | Power window relay                                   | 3-4, 72, 73                                                                                                                                                                                                                                                                                                          | 1-15                |
| C-223         | Instrument panel harness / J/B junction              | 3-4, 22, 154                                                                                                                                                                                                                                                                                                         | 1-15                |
| C-224         | ETACS-ECU                                            | 3-4, 40, 44, 48, 50, 51, 52, 56, 60, 62, 63, 72, 78, 79, 80, 81, 82, 84, 85, 106, 107, 108, 109, 114, 117, 156, 157, 162, 163, 164                                                                                                                                                                                   | 1-15                |
| C-225         | ETACS-ECU                                            | 3-41, 45, 49, 50, 51, 52, 53, 56, 62, 63, 72, 73, 78, 80, 106, 107, 108, 109, 117, 156, 157, 162, 167                                                                                                                                                                                                                | 1-15                |
| C-226         | ETACS-ECU                                            | 3-52, 78, 80, 108, 109, 114, 157, 162, 165                                                                                                                                                                                                                                                                           | 1-15                |
| C-228         | Steer sensor                                         | 3-126, 136, 146                                                                                                                                                                                                                                                                                                      | 1-14                |
| D-01          | Door switch (front : RH)                             | 3-40, 44, 48, 52, 72, 85, 156, 157, 163                                                                                                                                                                                                                                                                              | 1-16                |
| D-02          | Seatbelt pre-tensioner (RH)                          | 3-149, 153                                                                                                                                                                                                                                                                                                           | 1-16                |
| D-03          | Floor harness (RH) / Rear door harness (RH) junction | 3-76, 79, 81                                                                                                                                                                                                                                                                                                         | 1-16                |
| D-04          | Front cabin light                                    | 3-50, 84                                                                                                                                                                                                                                                                                                             | 1-16                |
| D-05          | Rear ABS sensor (RH)                                 | 3-127, 135, 143                                                                                                                                                                                                                                                                                                      | 1-17                |
| D-06          | Rear cabin light (vehicle w/out sunroof)             | 3-51, 84                                                                                                                                                                                                                                                                                                             | 1-16                |
| D-07          | Door switch (rear : RH)                              | 3-52, 85, 163                                                                                                                                                                                                                                                                                                        | 1-17                |
| D-09          | Door switch (rear : LH)                              | 3-52, 85, 163                                                                                                                                                                                                                                                                                                        | 1-17                |

| Connector No. | Part Name                                           | Circuit Diagram page        | Layout Diagram page |
|---------------|-----------------------------------------------------|-----------------------------|---------------------|
| D-10          | Fuel pump & fuel gauge unit (main)                  | 3-35, 68, 70                | 1-17                |
| D-11          | Rear ABS sensor (LH)                                | 3-127, 135, 143             | 1-17                |
| D-12          | Floor harness (RH) / Fuel harness junction          | 3-35, 68, 70, 127, 135, 143 | 1-16                |
| D-13          | Floor harness (LH) / Rear door harness (LH)         | 3-75, 79, 81                | 1-17                |
| D-14          | Seatbelt pre-tensioner (LH)                         | 3-149, 153                  | 1-17                |
| D-15          | Door switch (front : LH)                            | 3-52, 85, 163               | 1-17                |
| D-17          | Console harness / Instrument panel harness junction | 3-121                       | 1-16                |
| D-20          | Cigarette lighter                                   | 3-121                       | 1-16                |
| D-21          | Cigarette lighter                                   | 3-121                       | 1-16                |
| D-22          | Cigarette lighter illumination light                | 3-121                       | 1-16                |
| D-23          | Ashtray illumination light                          | 3-21                        | 1-16                |
| D-24          | Driver's seatbelt switch                            | 3-71                        | 1-16                |
| D-25          | Parking brake switch                                | 3-71, 125, 131, 142         | 1-16                |
| D-26          | Sunroof switch                                      | 3-155                       | 1-17                |
| D-27          | Sunroof motor ASSY                                  | 3-154, 155                  | 1-17                |
| D-28          | Fuel gauge unit (sub)                               | 3-68, 70, 118               | 1-17                |
| D-29          | Front / Rear G sensor                               | 3-124, 131, 139             | 1-16                |
| D-30          | Floor harness (RH) / Fuel harness junction          | 3-35                        | 1-16                |
| D-31          | Lateral G sensor                                    | 3-124, 131, 139             | 1-16                |
| D-32          | Intercooler water spray switch                      | 3-159                       | 1-16                |
| E-01          | Remote control door mirror (RH)                     | 3-113, 115                  | 1-18                |
| E-02          | Power window main switch                            | 3-74, 75                    | 1-18                |
| E-03          | Door lock actuator (front : RH)                     | 3-78, 80                    | 1-18                |
| E-04          | Power window motor (front : RH)                     | 3-74                        | 1-18                |
| E-05          | Front door speaker (RH)                             | 3-118                       | 1-18                |
| E-06          | Power window sub-switch (front : LH)                | 3-73                        | 1-18                |
| E-07          | Remote control door mirror (LH)                     | 3-113, 114                  | 1-18                |
| E-08          | Front door speaker (LH)                             | 3-118                       | 1-18                |
| E-09          | Power window motor (front : LH)                     | 3-73                        | 1-18                |
| E-10          | Door lock actuator (front : LH)                     | 3-79, 81                    | 1-18                |
| E-101         | Power window motor (rear : RH)                      | 3-76                        | 1-19                |
| E-102         | Power window sub-switch (rear : RH)                 | 3-76                        | 1-19                |
| E-103         | Door lock actuator (rear : RH)                      | 3-79, 81                    | 1-19                |
| E-104         | Power window motor (rear : LH)                      | 3-75                        | 1-19                |

| Connector No. | Part Name                                                    | Circuit Diagram page      | Layout Diagram page |
|---------------|--------------------------------------------------------------|---------------------------|---------------------|
| E-105         | Power window sub-switch (rear : LH)                          | 3-75                      | 1-19                |
| E-106         | Door lock actuator (rear : LH)                               | 3-79, 81                  | 1-19                |
| F-01          | Boot compartment light                                       | 3-51                      | 1-20                |
| F-02          | High-mount stop light                                        | 3-65                      | 1-20                |
| F-05          | Rear wiper motor                                             | 3-109                     | 1-20                |
| F-06          | Rear speaker (RH)                                            | 3-119                     | 1-20                |
| F-07          | Demister (+)                                                 | 3-110, 112                | 1-20                |
| F-10          | Rear combination light (RH)                                  | 3-47, 60, 64, 65, 82, 164 | 1-20                |
| F-11          | Boot compartment light switch                                | 3-51                      | 1-20                |
| F-12          | Licence plate light (RH)                                     | 3-46                      | 1-20                |
| F-13          | Licence plate light (LH)                                     | 3-46                      | 1-20                |
| F-14          | Floor harness (LH) / Bumper harness junction                 | 3-46                      | 1-20                |
| F-15          | Rear combination light (LH)                                  | 3-46, 60, 64, 65, 82, 164 | 1-20                |
| F-16          | Rear speaker (LH)                                            | 3-119                     | 1-20                |
| F-18          | Demister (-)                                                 | 3-110, 112                | 1-20                |
| F-19          | Windscreen washer / wiper motor                              | 3-104                     | 1-20                |
| F-20          | Rear washer / wiper                                          | 3-108                     | 1-20                |
| F-21          | Electric pump                                                | 3-134, 144                | 1-20                |
| F-22          | Floor harness (LH) / 4WD harness junction (vehicle with AYC) | 3-134, 144, 145           | 1-20                |
| F-23          | Directional valve (left) (vehicle with AYC)                  | 3-145                     | 1-20                |
| F-24          | Directional valve (right) (vehicle with AYC)                 | 3-145                     | 1-20                |
| F-25          | Proportional valve (for ACD)                                 | 3-134, 145                | 1-20                |
| F-26          | Proportional valve (for AYC) (vehicle with AYC)              | 3-145                     | 1-20                |
| F-27          | Pressure sensor                                              | 3-134, 144                | 1-20                |
| F-28          | Dummy connector                                              | 3-65                      | 1-20                |



| PART NAME LIST                                                                                      |               |                                                                                                                                                                              |                     |
|-----------------------------------------------------------------------------------------------------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| Part Name                                                                                           | Connector No. | Circuit Diagram page                                                                                                                                                         | Layout Diagram page |
| Secondary air control solenoid valve                                                                | B-133         | 3-33                                                                                                                                                                         | 1-8                 |
| 4WD-ECU                                                                                             | C-37          | 3-125, 130, 131, 132, 133, 134, 136, 137, 138, 140, 141, 142, 144, 146, 147                                                                                                  | 1-11                |
| 4WD-ECU                                                                                             | C-38          | 3-125, 130, 131, 134, 135, 137, 138, 139, 142, 144, 145, 147                                                                                                                 | 1-11                |
| A/C-ECU (vehicle with full auto A/C)                                                                | C-17          | 3-96, 97, 100, 101, 112                                                                                                                                                      | 1-11                |
| A/C-ECU (vehicle with full auto A/C)                                                                | C-18          | 3-96, 97, 100, 101, 112                                                                                                                                                      | 1-11                |
| A/C compressor (vehicle with manual A/C or full auto A/C), or dummy connector (vehicle with heater) | A-39          | 3-88, 94, 102                                                                                                                                                                | 1-4                 |
| A/C compressor relay                                                                                | B-20X         | 3-88, 94, 102                                                                                                                                                                | 1-7                 |
| ABS-ECU                                                                                             | B-109         | 3-122, 124, 125, 126, 127, 128, 139, 142, 143                                                                                                                                | 1-9                 |
| ACD mode switch                                                                                     | C-134         | 3-132, 140                                                                                                                                                                   | 1-13                |
| ETACS-ECU                                                                                           | C-224         | 3-4, 40, 44, 48, 50, 51, 52, 56, 60, 62, 63, 72, 78, 79, 80, 81, 82, 84, 85, 106, 107, 108, 109, 114, 117, 156, 157, 162, 163, 164                                           | 1-15                |
| ETACS-ECU                                                                                           | C-225         | 3-41, 45, 49, 50, 51, 52, 53, 56, 62, 63, 72, 73, 78, 80, 106, 107, 108, 109, 117, 156, 157, 162, 167                                                                        | 1-15                |
| ETACS-ECU                                                                                           | C-226         | 3-52, 78, 80, 108, 109, 114, 157, 162, 165                                                                                                                                   | 1-15                |
| J/C (1)                                                                                             | C-07          | 3-6, 35, 39, 43, 47, 48, 54, 56, 59, 62, 63, 69, 70, 87, 91, 97, 97, 105, 108, 110, 112, 118, 119, 120, 121, 130, 132, 138, 140, 159, 168                                    | 1-11                |
| J/C (2)                                                                                             | C-119         | 3-7, 37, 39, 43, 47, 53, 55, 59, 62, 64, 68, 72, 87, 91, 96, 105, 107, 108, 117, 126, 136, 146, 156, 157, 168                                                                | 1-13                |
| J/C (3)                                                                                             | C-107         | 3-8, 23, 41, 45, 49, 51, 52, 54, 55, 59, 62, 69, 71, 73, 78, 80, 86, 87, 90, 91, 96, 97, 107, 109, 110, 112, 115, 117, 120, 121, 126, 132, 136, 140, 146, 156, 157, 159, 162 | 1-13                |
| J/C (4)                                                                                             | C-110         | 3-9, 34, 50, 56, 68, 70, 115, 119, 120, 128, 137, 147, 150, 152, 161, 167, 168                                                                                               | 1-13                |
| J/C (5)                                                                                             | C-06          | 3-10, 41, 45, 49, 53, 56, 63, 66, 72, 78, 80, 101. 107. 109, 117, 128, 137, 147, 156, 157, 162, 166                                                                          | 1-10                |
| J/C (6)                                                                                             | C-23          | 3-10, 25, 28, 32. 36, 69, 92, 98, 122, 128, 130, 137, 138, 133, 141, 147, 160                                                                                                | 1-11                |
| O2 sensor                                                                                           | B-25          | 3-31                                                                                                                                                                         | 1-6                 |
| SRS-ECU                                                                                             | C-124         | 3-149, 153                                                                                                                                                                   | 1-12                |
| SRS-ECU                                                                                             | C-125         | 3-148, 149, 150, 152, 153                                                                                                                                                    | 1-12                |
| Idle speed control servo                                                                            | B-126         | 3-32                                                                                                                                                                         | 1-9                 |
| Dummy connector                                                                                     | A-29          | -                                                                                                                                                                            | 1-4                 |
| Dummy connector                                                                                     | A-32          | 3-38                                                                                                                                                                         | 1-5                 |
| Dummy connector                                                                                     | C-55          | 3-38                                                                                                                                                                         | 1-10                |

| Part Name                                                     | Connector No. | Circuit Diagram page                                                                                                                                                                                                                                                                                                 | Layout Diagram page |
|---------------------------------------------------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| Dummy connector                                               | C-132         | -                                                                                                                                                                                                                                                                                                                    | 1-13                |
| Dummy connector                                               | C-217         | 3-4                                                                                                                                                                                                                                                                                                                  | 1-15                |
| Dummy connector                                               | C-218         | 3-4                                                                                                                                                                                                                                                                                                                  | 1-15                |
| Dummy connector                                               | F-28          | 3-65                                                                                                                                                                                                                                                                                                                 | 1-20                |
| Ashtray illumination light                                    | D-23          | 3-121                                                                                                                                                                                                                                                                                                                | 1-16                |
| Pressure sensor                                               | F-27          | 3-134, 144                                                                                                                                                                                                                                                                                                           | 1-20                |
| Ignition coil 1                                               | B-123         | 3-25                                                                                                                                                                                                                                                                                                                 | 1-9                 |
| Ignition coil 2                                               | B-119         | 3-25                                                                                                                                                                                                                                                                                                                 | 1-8                 |
| Ignition coil relay                                           | B-17X         | 3-24                                                                                                                                                                                                                                                                                                                 | 1-7                 |
| Ignition switch                                               | C-201         | 3-20                                                                                                                                                                                                                                                                                                                 | 1-14                |
| Injector 1                                                    | B-29          | 3-31                                                                                                                                                                                                                                                                                                                 | 1-6                 |
| Injector 2                                                    | B-28          | 3-31                                                                                                                                                                                                                                                                                                                 | 1-6                 |
| Injector 3                                                    | B-27          | 3-31                                                                                                                                                                                                                                                                                                                 | 1-7                 |
| Injector 4                                                    | B-26          | 3-31                                                                                                                                                                                                                                                                                                                 | 1-7                 |
| Instrument panel harness and A/C harness junction             | C-04          | 3-87, 91, 96, 100, 101                                                                                                                                                                                                                                                                                               | 1-10                |
| Instrument panel harness / J/B junction                       | C-208         | 3-4, 158                                                                                                                                                                                                                                                                                                             | 1-15                |
| Instrument panel harness / J/B junction                       | C-209         | 3-4, 29, 35, 37, 39, 40, 43, 44, 47, 48, 55, 56, 59, 60, 61, 62, 63, 64, 69, 70, 82, 83, 86, 90, 96, 104, 105, 106, 108, 119, 120, 122, 126, 130, 132, 136, 138, 140, 146, 158, 164, 165, 168                                                                                                                        | 1-15                |
| Instrument panel harness / J/B junction                       | C-210         | 3-4, 20, 21, 22, 24, 26, 29, 37, 39, 43, 47, 50, 51, 55, 59, 62, 63, 64, 68, 70, 72, 73, 78, 80, 86, 90, 96, 104, 105, 108, 109, 110, 112, 114, 119, 120, 121, 122, 124, 126, 130, 131, 132, 136, 138, 139, 140, 146, 148, 152, 154, 156, 157, 158, 162, 168                                                         | 1-15                |
| Instrument panel harness / J/B junction                       | C-211         | 3-4, 22, 34, 40, 44, 48, 51, 56, 59, 63, 69, 70, 72, 78, 80, 86, 90, 96, 101, 106, 109, 110, 112, 114, 119, 120, 130, 137, 138, 147, 150, 152, 156, 157, 161, 162, 168                                                                                                                                               | 1-15                |
| Instrument panel harness / J/B junction                       | C-212         | 3-4, 22, 24, 26, 29, 34, 39, 40, 41, 43, 44, 45, 47, 48, 49, 51, 52, 53, 55, 56, 61, 62, 63, 68, 69, 70, 72, 78, 79, 80, 81, 83, 85, 86, 90, 96, 101, 105, 107, 108, 109, 110, 112, 114, 116, 117, 121, 122, 124, 128, 130, 131, 132, 137, 138, 139, 140, 147, 148, 150, 152, 156, 157, 158, 161, 162, 163, 165, 168 | 1-15                |
| Instrument panel harness / J/B junction                       | C-223         | 3-4, 22, 154                                                                                                                                                                                                                                                                                                         | 1-15                |
| Instrument panel harness / Clutch switch sub-harness junction | C-126         | 3-23                                                                                                                                                                                                                                                                                                                 | 1-12                |
| Instrument panel harness / Control harness junction           | C-20          | 3-69, 87, 88, 91, 94, 97, 102, 122, 124, 125, 127, 128, 131, 134, 135, 137, 139, 142, 143, 144, 145, 147                                                                                                                                                                                                             | 1-11                |
| Instrument panel harness / Control harness junction           | C-21          | 3-23, 24, 29, 32, 35, 64, 104, 108, 130, 138                                                                                                                                                                                                                                                                         | 1-11                |

| Part Name                                                   | Connector No. | Circuit Diagram page                                                                                                                                                                                             | Layout Diagram page |
|-------------------------------------------------------------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| Instrument panel harness / Control harness junction         | C-22          | 3-23, 26, 29, 34, 53, 64, 68, 71, 106, 108, 116, 122, 128, 130, 137, 138, 147, 158, 159, 160, 161, 168                                                                                                           | 1-11                |
| Instrument panel harness / Control harness junction         | C-133         | 3-126, 103, 132, 134, 136, 138, 140, 144, 145, 146                                                                                                                                                               | 1-12                |
| Instrument panel harness / Tweeter sub-harness junction     | C-44          | 3-118                                                                                                                                                                                                            | 1-10                |
| Instrument panel harness / Floor harness (LH) junction      | C-29          | 3-46, 52, 60, 64, 65, 73, 75, 79, 81, 82, 85, 119, 149, 153, 163, 164                                                                                                                                            | 1-10                |
| Instrument panel harness / Floor harness (LH) junction      | C-30          | 3-134, 144, 145                                                                                                                                                                                                  | 1-10                |
| Instrument panel harness / Floor harness (RH) junction      | C-116         | 3-64, 65, 73, 76, 104, 108, 119, 149, 153                                                                                                                                                                        | 1-13                |
| Instrument panel harness / Floor harness (RH) junction      | C-131         | 3-35, 68, 70, 127, 135, 143                                                                                                                                                                                      | 1-13                |
| Instrument panel harness / Front harness (LH) junction      | C-33          | 3-73, 79, 81, 113, 114, 118                                                                                                                                                                                      | 1-10                |
| Instrument panel harness / Front door harness (RH) junction | C-114         | 3-74, 75, 78, 80, 113, 115, 118                                                                                                                                                                                  | 1-13                |
| Instrument panel harness / Front harness (LH) junction      | C-31          | 3-29, 37, 38, 39, 42, 43, 46, 47, 48, 54, 55, 58, 59, 60, 61, 62, 63, 65, 66, 69, 82, 83, 87, 91, 93, 97, 99, 104, 105, 110, 112, 118, 120, 121, 122, 130, 132, 138, 140, 150, 158, 159, 164, 165, 166, 167, 168 | 1-10                |
| Instrument panel harness / Front harness (LH) junction      | C-32          | 3-18, 22, 34, 40, 44, 48, 51, 56, 59, 63, 69, 70, 72, 73, 78, 80, 86, 90, 96, 101, 106, 109, 110, 112, 114, 119, 120, 128, 130, 137, 138, 147, 150, 152, 154, 156, 157, 161, 162, 168                            | 1-10                |
| Instrument panel harness / Front harness (RH) junction      | C-115         | 3-61, 71, 83, 88, 94, 102, 127, 135, 143, 150, 165                                                                                                                                                               | 1-13                |
| Instrument panel harness / Roof harness junction            | C-113         | 3-118, 154                                                                                                                                                                                                       | 1-13                |
| Intercooler water spray switch                              | D-32          | 3-159                                                                                                                                                                                                            | 1-16                |
| Intercooler water spray motor                               | A-34          | 3-158                                                                                                                                                                                                            | 1-5                 |
| Intercooler water spray relay                               | C-220         | 3-4, 158                                                                                                                                                                                                         | 1-15                |
| Intake cam position sensor                                  | B-33          | 3-33                                                                                                                                                                                                             | 1-7                 |
| Windscreen washer / wiper motor                             | F-19          | 3-104                                                                                                                                                                                                            | 1-20                |
| Windscreen washer / wiper motor                             | B-12          | 3-104                                                                                                                                                                                                            | 1-7                 |
| Waste gate solenoid valve 1                                 | B-30          | 3-32                                                                                                                                                                                                             | 1-7                 |
| Waste gate solenoid valve 2                                 | B-32          | 3-33                                                                                                                                                                                                             | 1-7                 |
| Water temperature gauge unit                                | B-114         | 3-68                                                                                                                                                                                                             | 1-9                 |
| Driver's airbag module (squib)                              | C-207         | 3-148, 152                                                                                                                                                                                                       | 1-14                |
| Driver's seatbelt switch                                    | D-24          | 3-71                                                                                                                                                                                                             | 1-16                |
| Air thermo sensor (vehicle with full auto A/C)              | C-05          | 3-100                                                                                                                                                                                                            | 1-10                |
| Air temperature sensor                                      | B-34          | 3-33                                                                                                                                                                                                             | 1-7                 |
| Air flow sensor                                             | B-08          | 3-30                                                                                                                                                                                                             | 1-7                 |

| Part Name                                                              | Connector No. | Circuit Diagram page                                                                     | Layout Diagram page |
|------------------------------------------------------------------------|---------------|------------------------------------------------------------------------------------------|---------------------|
| Motor & potentiometer for air mixing door (vehicle with full auto A/C) | C-08          | 3-100                                                                                    | 1-11                |
| Exhaust cam position sensor                                            | B-115         | 3-30                                                                                     | 1-9                 |
| Engine ECU                                                             | C-49          | 3-25, 26, 29, 30, 31, 32, 33, 35, 36, 37, 88, 93, 94, 99, 102                            | 1-10                |
| Engine ECU                                                             | C-50          | 3-25, 26, 28, 30, 31, 32, 33, 35, 69, 88, 94, 102, 133, 141, 159, 160                    | 1-10                |
| Engine ECU                                                             | C-51          | 3-29, 30, 31, 33, 34, 88, 94, 102, 133, 141, 158, 160, 161                               | 1-10                |
| Engine oil pressure switch                                             | B-01          | 3-71                                                                                     | 1-7                 |
| Engine speed detection connector                                       | B-13X         | 3-25, 32                                                                                 | 1-7                 |
| Engine control relay                                                   | B-19X         | 3-28, 160                                                                                | 1-7                 |
| Oil feeder control valve                                               | B-134         | 3-31                                                                                     | 1-8                 |
| Spare audio connector                                                  | C-103         | 3-118, 119                                                                               | 1-12                |
| Alternator                                                             | B-02          | 3-26                                                                                     | 1-6                 |
| Alternator                                                             | B-03          | 3-26                                                                                     | 1-6                 |
| External air temperature sensor (vehicle with Full auto A/C)           | A-21          | 3-97, 117                                                                                | 1-5                 |
| Key reminder switch                                                    | C-202         | 3-50, 52, 80, 157, 160, 162                                                              | 1-14                |
| Clutch switch                                                          | C-127         | 3-23                                                                                     | 1-13                |
| Crank angle sensor                                                     | B-122         | 3-31                                                                                     | 1-8                 |
| Clock                                                                  | C-13          | 3-120                                                                                    | 1-11                |
| Clock spring                                                           | C-204         | 3-148, 152                                                                               | 1-14                |
| Clock spring                                                           | C-205         | 3-66                                                                                     | 1-14                |
| Column switch                                                          | C-203         | 3-39, 43, 47, 55, 63, 105, 108                                                           | 1-14                |
| Console harness / Instrument panel harness junction                    | D-17          | 3-121                                                                                    | 1-16                |
| Condenser fan motor                                                    | A-36          | 3-37, 93, 99                                                                             | 1-4                 |
| Condenser fan motor                                                    | A-37          | 3-37, 93, 99                                                                             | 1-4                 |
| Condenser fan relay (HI)                                               | A-09X         | 3-37, 93, 99                                                                             | 1-5                 |
| Condenser fan relay (LO)                                               | A-08X         | 3-37, 93, 99                                                                             | 1-5                 |
| Control harness / Transmission harness junction                        | B-31          | 3-34, 53, 64, 68, 106, 108, 116, 168                                                     | 1-7                 |
| Control harness / Battery harness junction                             | B-21          | 3-23, 26, 33, 71                                                                         | 1-7                 |
| Control harness / Floor harness (LH) junction                          | C-43          | 3-134, 144                                                                               | 1-10                |
| Control harness / Front harness (LH) junction                          | C-34          | 3-24, 26, 28, 32, 36, 37, 88, 92, 93, 94, 98, 99, 102, 104, 127, 135, 143, 160           | 1-10                |
| Combination meter                                                      | C-106         | 3-26, 29, 38, 42, 50, 54, 61, 68, 69, 70, 71, 83, 122, 132, 140, 148, 152, 158, 165, 167 | 1-13                |
| Combination meter                                                      | C-108         | 3-26, 47, 50, 54, 61, 68, 69, 70, 71, 83, 122, 148, 152, 158, 165, 167                   | 1-13                |
| Side turn signal light (LH)                                            | A-04          | 3-60, 82, 164                                                                            | 1-5                 |
| Side turn signal light (RH)                                            | A-01          | 3-61, 83, 165                                                                            | 1-4                 |
| Sunroof switch                                                         | D-26          | 3-155                                                                                    | 1-17                |
| Sunroof motor ASSY                                                     | D-27          | 3-154, 155                                                                               | 1-17                |

| Part Name                                                                                                 | Connector No. | Circuit Diagram page                                                                                      | Layout Diagram page |
|-----------------------------------------------------------------------------------------------------------|---------------|-----------------------------------------------------------------------------------------------------------|---------------------|
| Seatbelt pre-tensioner (LH)                                                                               | D-14          | 3-149, 153                                                                                                | 1-17                |
| Seatbelt pre-tensioner (RH)                                                                               | D-02          | 3-149, 153                                                                                                | 1-16                |
| Cigarette lighter                                                                                         | D-20          | 3-121                                                                                                     | 1-16                |
| Cigarette lighter                                                                                         | D-21          | 3-121                                                                                                     | 1-16                |
| Cigarette lighter illumination light                                                                      | D-22          | 3-121                                                                                                     | 1-16                |
| Cabin temperature sensor (vehicle with full auto A/C)                                                     | C-120         | 3-97                                                                                                      | 1-13                |
| Vehicle speed sensor                                                                                      | B-131         | 3-34, 53, 68, 106, 116, 168                                                                               | 1-9                 |
| Front passenger's airbag module (squib)                                                                   | C-02          | 3-153                                                                                                     | 1-10                |
| Coolant temperature sensor                                                                                | B-108         | 3-30                                                                                                      | 1-9                 |
| Starter                                                                                                   | B-04          | 3-23                                                                                                      | 1-7                 |
| Starter                                                                                                   | B-05          | 3-23                                                                                                      | 1-7                 |
| Starter relay                                                                                             | B-14X         | 3-23, 32                                                                                                  | 1-7                 |
| Steer sensor                                                                                              | C-228         | 3-126, 136, 146                                                                                           | 1-14                |
| Stop light switch                                                                                         | C-118         | 3-65, 122, 130, 138                                                                                       | 1-13                |
| Throttle position sensor                                                                                  | B-06          | 3-30, 133, 141                                                                                            | 1-7                 |
| Front / Rear G sensor                                                                                     | D-29          | 3-124, 131, 139                                                                                           | 1-16                |
| Diagnosis connector                                                                                       | C-121         | 3-34, 161                                                                                                 | 1-12                |
| Diagnosis connector                                                                                       | C-122         | 3-34, 41, 45, 49, 53, 56, 63, 72, 78, 80, 101, 107, 109, 117, 128, 137, 147, 150, 152, 156, 157, 161, 162 | 1-12                |
| Tweeter (LH)                                                                                              | C-45          | 3-118                                                                                                     | 1-10                |
| Tweeter (RH)                                                                                              | C-128         | 3-118                                                                                                     | 1-13                |
| Demister (-)                                                                                              | F-18          | 3-110, 112                                                                                                | 1-20                |
| Demister (+)                                                                                              | F-07          | 3-110, 112                                                                                                | 1-20                |
| Demister relay                                                                                            | C-213         | 3-4, 22, 110, 112                                                                                         | 1-15                |
| Dual pressure switch (vehicle with manual A/C or Full auto A/C), or dummy connector (vehicle with heater) | A-42          | 3-88, 94, 102                                                                                             | 1-4                 |
| Electric pump                                                                                             | F-21          | 3-134, 144                                                                                                | 1-20                |
| Electric pump relay                                                                                       | B-127         | 3-134, 144                                                                                                | 1-9                 |
| Door switch (front : LH)                                                                                  | D-15          | 3-52, 85, 163                                                                                             | 1-17                |
| Door switch (front : RH)                                                                                  | D-01          | 3-40, 44, 48, 52, 72, 85, 156, 157, 163                                                                   | 1-16                |
| Door switch (rear : LH)                                                                                   | D-09          | 3-52, 85, 163                                                                                             | 1-17                |
| Door switch (rear : RH)                                                                                   | D-07          | 3-52, 85, 163                                                                                             | 1-17                |
| Door lock actuator (front : LH)                                                                           | E-10          | 3-79, 81                                                                                                  | 1-18                |
| Door lock actuator (front : RH)                                                                           | E-03          | 3-78, 80                                                                                                  | 1-18                |
| Door lock act+B227+B167uator (rear : LH)                                                                  | E-106         | 3-79, 81                                                                                                  | 1-19                |
| Door lock actuator (rear : RH)                                                                            | E-103         | 3-79, 81                                                                                                  | 1-19                |
| Boot compartment light                                                                                    | F-01          | 3-51                                                                                                      | 1-20                |
| Boot compartment light switch                                                                             | F-11          | 3-51                                                                                                      | 1-20                |
| Internal / External air switching damper motor                                                            | C-03          | 3-87, 91, 100                                                                                             | 1-10                |
| Sunlight sensor (vehicle with full auto A/C)                                                              | C-104         | 3-101                                                                                                     | 1-12                |
| Knock sensor                                                                                              | B-106         | 3-31                                                                                                      | 1-8                 |

| Part Name                                                                             | Connector No. | Circuit Diagram page | Layout Diagram page |
|---------------------------------------------------------------------------------------|---------------|----------------------|---------------------|
| High-mount stop light                                                                 | F-02          | 3-65                 | 1-20                |
| Hazard switch                                                                         | C-14          | 3-62                 | 1-11                |
| Reversing light switch                                                                | B-132         | 3-64, 108            | 1-9                 |
| Parking brake switch                                                                  | D-25          | 3-71, 125, 131, 142  | 1-16                |
| Purge control solenoid valve                                                          | B-07          | 3-33                 | 1-6                 |
| Power window sub-switch (front : LH)                                                  | E-06          | 3-73                 | 1-18                |
| Power window sub-switch (rear : LH)                                                   | E-105         | 3-75                 | 1-19                |
| Power window sub-switch (rear : RH)                                                   | E-102         | 3-76                 | 1-19                |
| Power window main switch                                                              | E-02          | 3-74, 75             | 1-18                |
| Power window motor (front : LH)                                                       | E-09          | 3-73                 | 1-18                |
| Power window motor (front : RH)                                                       | E-04          | 3-74                 | 1-18                |
| Power window motor (rear : LH)                                                        | E-104         | 3-75                 | 1-19                |
| Power window motor (rear : RH)                                                        | E-101         | 3-76                 | 1-19                |
| Power window relay                                                                    | C-222         | 3-4, 72, 73          | 1-15                |
| Power steering fluid pressure switch                                                  | A-38          | 3-32                 | 1-4                 |
| Generic spare connector                                                               | C-138         | 3-168                | 1-12                |
| Heater water temperature sensor (vehicle with full auto A/C)                          | C-09          | 3-100                | 1-11                |
| Heater control unit (vehicle with heater) or A/C-ECU (vehicle with manual A/C)        | C-16          | 3-87, 91, 110        | 1 -11               |
| Proportional valve (for ACD)                                                          | F-25          | 3-134, 145           | 1-20                |
| Proportional valve (for AYC) (vehicle with AYC)                                       | F-26          | 3-145                | 1-20                |
| Fog lamp (LH)                                                                         | A-35          | 3-54                 | 1-5                 |
| Fog lamp (RH)                                                                         | A-40          | 3-54                 | 1-4                 |
| Fog lamp switch                                                                       | C-129         | 3-54                 | 1-13                |
| Spare connector for fog lamp switch                                                   | C-111         | 3-167                | 1-13                |
| Fog lamp relay or spare connector for fog lamp relay                                  | A-06X         | 3-54, 167            | 1-5                 |
| Spare connector for fog lamps                                                         | A-28          | 3-167                | 1-4                 |
| Motor & potentiometer for blower outlet switching damper (vehicle with full auto A/C) | C-10          | 3-101                | 1-11                |
| Fuel gauge unit (sub)                                                                 | D-28          | 3-68, 70, 118        | 1 -17               |
| Fuel pressure solenoid valve                                                          | B-124         | 3-32                 | 1-8                 |
| Fuel pump & fuel gauge unit (main)                                                    | D-10          | 3-35, 68, 70         | 1-17                |
| Fuel pump relay 1                                                                     | C-221         | 3-4, 29              | 1-15                |
| Fuel pump relay 2                                                                     | C-219         | 3-4, 29              | 1-15                |
| Fuel pump relay 3                                                                     | B-128         | 3-35                 | 1-9                 |
| Fuel pump register                                                                    | B-130         | 3-35                 | 1-9                 |



| Part Name                                                                                                  | Connector No. | Circuit Diagram page                                                                   | Layout Diagram page |
|------------------------------------------------------------------------------------------------------------|---------------|----------------------------------------------------------------------------------------|---------------------|
| Floor harness (LH) / 4WD harness junction (vehicle with AYC)                                               | F-22          | 3-134, 144, 145                                                                        | 1-20                |
| Floor harness (LH) / Bumper harness junction                                                               | F-14          | 3-46                                                                                   | 1-20                |
| Floor harness (LH) / Rear door harness (LH)                                                                | D-13          | 3-75, 79, 81                                                                           | 1-17                |
| Floor harness (RH) / J/B junction                                                                          | C-215         | 3-4, 40, 44, 47, 48, 51, 52, 60, 72, 79, 81, 82, 85, 109, 110, 112, 156, 157, 163, 164 | 1-15                |
| Floor harness (RH) / Fuel harness junction                                                                 | D-12          | 3-35, 68, 70, 127, 135, 143                                                            | 1-16                |
| Floor harness (RH) / Fuel harness junction                                                                 | D-30          | 3-35                                                                                   | 1-16                |
| Floor harness (RH) / Rear door harness (RH) junction                                                       | D-03          | 3-76, 79, 81                                                                           | 1-16                |
| Front ABS sensor (LH)                                                                                      | A-05          | 3-127, 135, 143                                                                        | 1-5                 |
| Front ABS sensor (RH)                                                                                      | A-31          | 3-127, 135, 143                                                                        | 1-4                 |
| Front ECU                                                                                                  | A-12X         | 3-19, 38, 39, 42, 43, 46, 47, 54, 55, 58, 59, 62, 105, 167                             | 1-5                 |
| Front ECU                                                                                                  | A-13X         | 3-39, 43, 47, 55, 59, 62, 104, 105                                                     | 1-5                 |
| Front impact sensor (vehicle w/out front passenger's airbag) (LH)                                          | A-53          | 3-150                                                                                  | 1-5                 |
| Front impact sensor (vehicle w/out front passenger's airbag) (RH)                                          | A-52          | 3-150                                                                                  | 1-4                 |
| Front door speaker (LH)                                                                                    | E-08          | 3-118                                                                                  | 1-18                |
| Front door speaker (RH)                                                                                    | E-05          | 3-118                                                                                  | 1-18                |
| Front harness (LH) / Control harness junction                                                              | A-14          | 3-122                                                                                  | 1-5                 |
| Front cabin light                                                                                          | D-04          | 3-50, 84                                                                               | 1-16                |
| Brake fluid level switch                                                                                   | A-02          | 3-71                                                                                   | 1-4                 |
| Blower switch (vehicle with heater, manual A/C)                                                            | C-15          | 3-86, 90                                                                               | 1-11                |
| Blower motor (vehicle with heater or manual A/C) , or blower pulse controller (vehicle with full auto A/C) | C-28          | 3-86, 90, 96                                                                           | 1-10                |
| Blower relay                                                                                               | C-214         | 3-4, 86, 90, 96                                                                        | 1-15                |
| Headlight (HI : LH)                                                                                        | A-16          | 3-38, 42                                                                               | 1-5                 |
| Headlight (HI : RH)                                                                                        | A-23          | 3-38, 42                                                                               | 1-4                 |
| Headlight ASSY (LH)                                                                                        | A-33          | 3-38, 42, 46, 58, 60, 82, 164                                                          | 1-5                 |
| Headlamp ASSY (RH)                                                                                         | A-41          | 3-38, 42, 46, 58, 61, 83, 165                                                          | 1-4                 |
| Headlight levelling switch                                                                                 | C-130         | 3-59                                                                                   | 1-13                |
| Horn (HI)                                                                                                  | A-20          | 3-66, 166                                                                              | 1-5                 |
| Horn (LO)                                                                                                  | A-22          | 3-66, 166                                                                              | 1-5                 |
| Turbo switch                                                                                               | C-206         | 3-66                                                                                   | 1-14                |
| Horn relay                                                                                                 | A-07X         | 3-66, 166                                                                              | 1-5                 |
| Directional valve (right) (vehicle with AYC)                                                               | F-24          | 3-145                                                                                  | 1-20                |
| Directional valve (left) (vehicle with AYC)                                                                | F-23          | 3-145                                                                                  | 1-20                |

| Part Name                                     | Connector No. | Circuit Diagram page      | Layout Diagram page |
|-----------------------------------------------|---------------|---------------------------|---------------------|
| Manifold absolute pressure sensor             | B-135         | 3-31                      | 1-8                 |
| Lateral G sensor                              | D-31          | 3-124, 131, 139           | 1-16                |
| Licence plate light (LH)                      | F-13          | 3-46                      | 1-20                |
| Licence plate light (RH)                      | F-12          | 3-46                      | 1-20                |
| Radiator fan controller                       | A-19          | 3-36, 92, 98              | 1-5                 |
| Radiator fan control relay                    | A-11X         | 3-36, 92, 98              | 1-5                 |
| Remote control door mirror (LH)               | E-07          | 3-113, 114                | 1-18                |
| Remote control door mirror (RH)               | E-01          | 3-113, 115                | 1-18                |
| Remote control mirror switch                  | C-112         | 3-115                     | 1-13                |
| Rear ABS sensor (LH)                          | D-11          | 3-127, 135, 143           | 1-17                |
| Rear ABS sensor (RH)                          | D-05          | 3-127, 135, 143           | 1-17                |
| Rear washer / wiper                           | F-20          | 3-108                     | 1-20                |
| Rear combination light (LH)                   | F-15          | 3-46, 60, 64, 65, 82, 164 | 1-20                |
| Rear combination light (RH)                   | F-10          | 3-47, 60, 64, 65, 82, 164 | 1-20                |
| Rear speaker (LH)                             | F-16          | 3-119                     | 1-20                |
| Rear speaker (RH)                             | F-06          | 3-119                     | 1-20                |
| Rear cabin light (vehicle w/out sunroof)      | D-06          | 3-51, 84                  | 1-16                |
| Rear wiper motor                              | F-05          | 3-109                     | 1-20                |
| Roof antenna                                  | C-101         | 3-118                     | 1-12                |
| Roof harness / J/B junction                   | C-216         | 3-4, 50, 51, 84, 154      | 1-15                |
| Register (for injector)                       | B-129         | 3-31                      | 1-9                 |
| Register (vehicle with heater and manual A/C) | C-01          | 3-86, 90                  | 1-10                |