

Pre-Delivery Inspection and Periodic Maintenance

GROUP INDEX

General 0

Pre-delivery Inspection 1

Periodic Inspection and Maintenance .. 2

FOREWORD

This Inspection and Maintenance Manual explains the main points necessary for inspection and maintenance of Mitsubishi vehicles, combining Pre-Delivery Inspection and Periodic Inspection in one volume. It is intended to contain enough information to allow the user to conduct work quickly and with precision.

For checking procedures, specifications, tightening torques, etc., there may be instances in which reference to the Workshop Manual is necessary. If so, refer to the Workshop Manual applicable to that model.

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains the GROUP INDEX which lists the group title and group number.

GROUP CONTENTS

The first page in each main group has an index to the subjects included in that group and it lists the contents of that group.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the main group. The digits following the dash represent the consecutive page number within the main group. The page numbers can be found on the top left or right of each page.

TEXT

Information is provided regarding the pre-delivery inspection and periodic inspection and maintenance applicable to all models.

Make the inspection after selecting the items corresponding to the model to be inspected.

MAINTENANCE INTERVAL

All inspection and maintenance must be conducted according to the table of "PERIODIC INSPECTION AND MAINTENANCE SCHEDULE" shown in GROUP 2.

Group title →

PERIODIC INSPECTION AND MAINTENANCE OPERATIONS INSIDE THE ENGINE COMPARTMENT

Section title ←

2-15

Page number

OPERATIONS INSIDE THE ENGINE COMPARTMENT

→ A1. CHECK V-BELT FOR CRACKS, FRAYING, WEAR, AND ADJUST ITS TENSION

M6020200100022

V-BELT CONDITION

Check the whole rounds of the V-belt for cracks, fraying and wear.

1. Check the ignition cable and rubber cap for damage or weakness, and check the installation condition.
2. Check the ignition cable and spark plug, distributor, and ignition coil connections for contamination, dirt, etc.
3. If dirty, clean it; if damaged, replace it.

Indicates the inspection to be made. The number preceding the indication of the inspection to be made is the same number as that used preceding in the periodic inspection and maintenance schedule.

Subject models

This manual is for the following models.

Vehicle model	Model code	Engine model	Total displacement ml	Transmission model	Transmission type	Wheel-drive system
OUTLANDER	CU2W	4G63	1997	F5M42	5M/T	2WD
	CU2W	4G63	1997	W5M42	5M/T	4WD
	CU2W	4G63-T/C	1997	W5M51	5M/T	4WD
	CU5W	4G69	2378	W5M42	5M/T	4WD
	CU5W	4G69	2378	W4A4B	4A/T	4WD