

GROUP 80

CONFIGURATION DIAGRAMS

CONTENTS


OVERALL CONFIGURATION DIAGRAM.....	80-2	DASH PANEL.....	80-22
OVERALL CONFIGURATION DIAGRAM <LHD>.....	80-2	DASH PANEL <LHD>	80-22
OVERALL CONFIGURATION DIAGRAM <RHD>	80-3	DASH PANEL <RHD>.....	80-30
ENGINE COMPARTMENT.....	80-4	FLOOR AND ROOF	80-38
ENGINE AND TRANSMISSION.....	80-6	FLOOR AND ROOF <LHD>	80-38
ENGINE AND TRANSMISSION <4G63-NON-TURBO>	80-6	FLOOR AND ROOF <RHD>	80-40
ENGINE AND TRANSMISSION <4G63-TURBO>	80-10	DOOR	80-42
ENGINE AND TRANSMISSION <4G69 (LHD)>.....	80-14	DOOR <LHD>	80-42
ENGINE AND TRANSMISSION <4G69 (RHD)>	80-18	DOOR <RHD>.....	80-44
		TAILGATE.....	80-46

OVERALL CONFIGURATION DIAGRAM

OVERALL CONFIGURATION DIAGRAM

<LHD>

M1801000101067

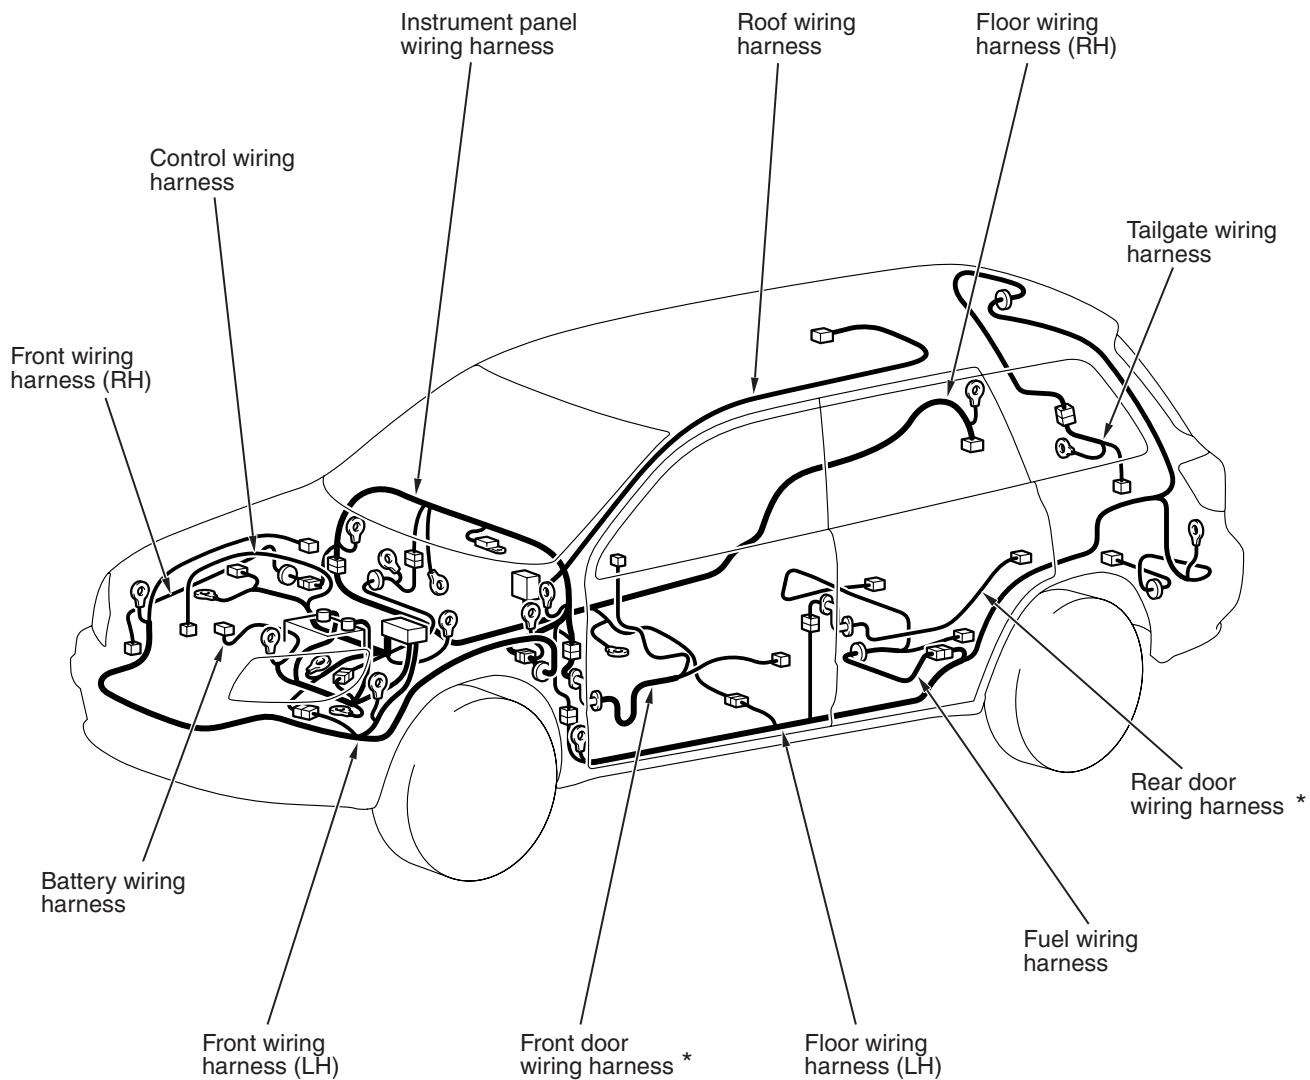

AC211751 AB


NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

OVERALL CONFIGURATION DIAGRAM

<RHD>

M1801000101078

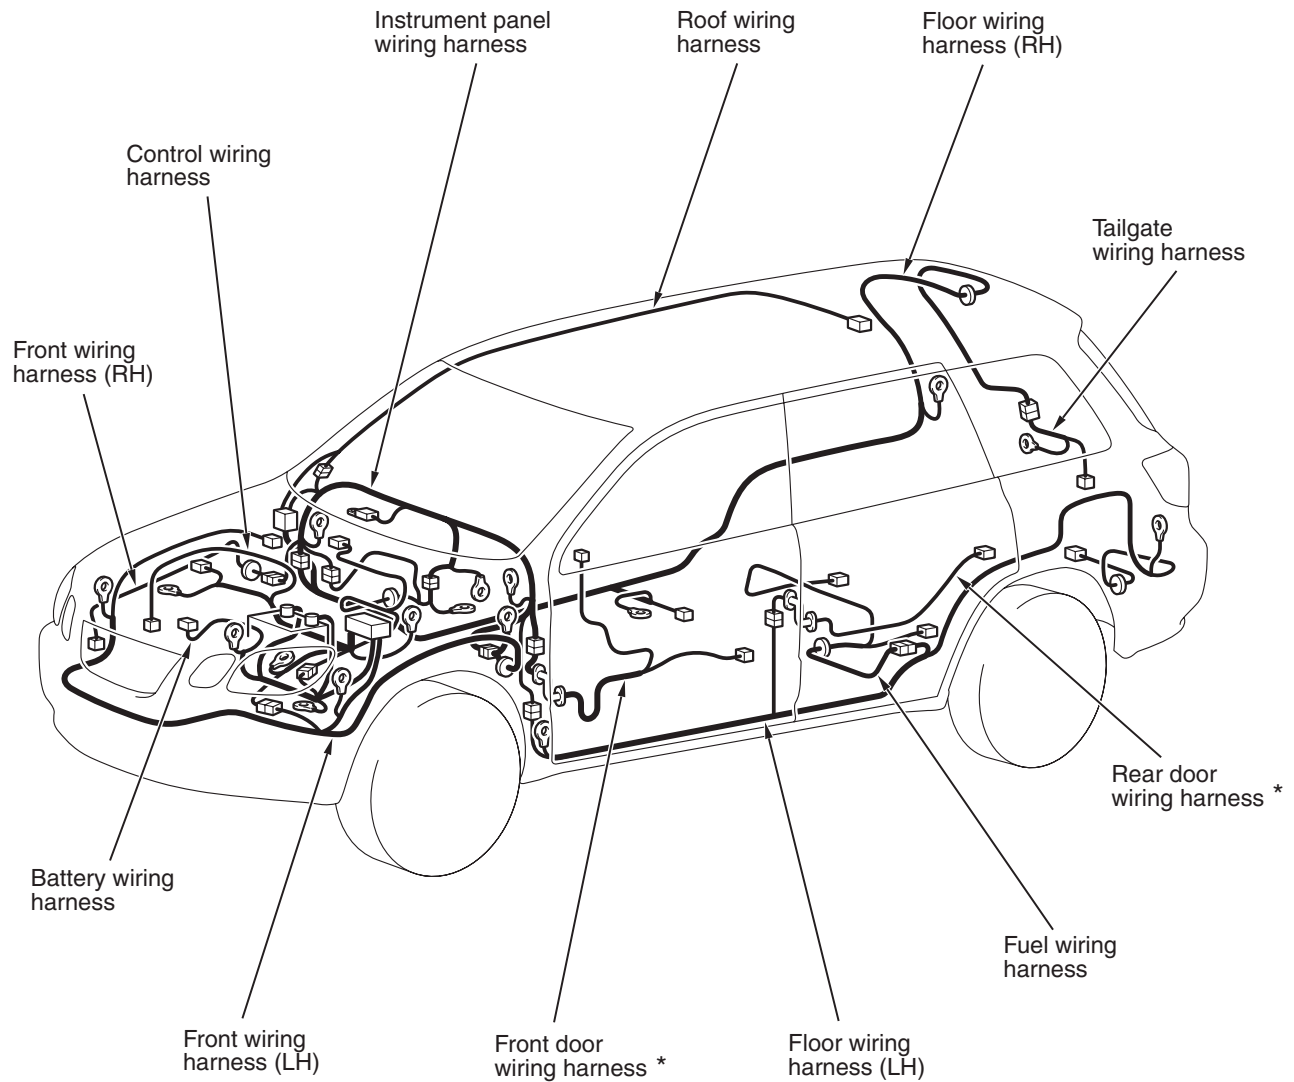

AC207934 AB

NOTE:


1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

ENGINE COMPARTMENT

M1801000302417

Connector
symbol**A**Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

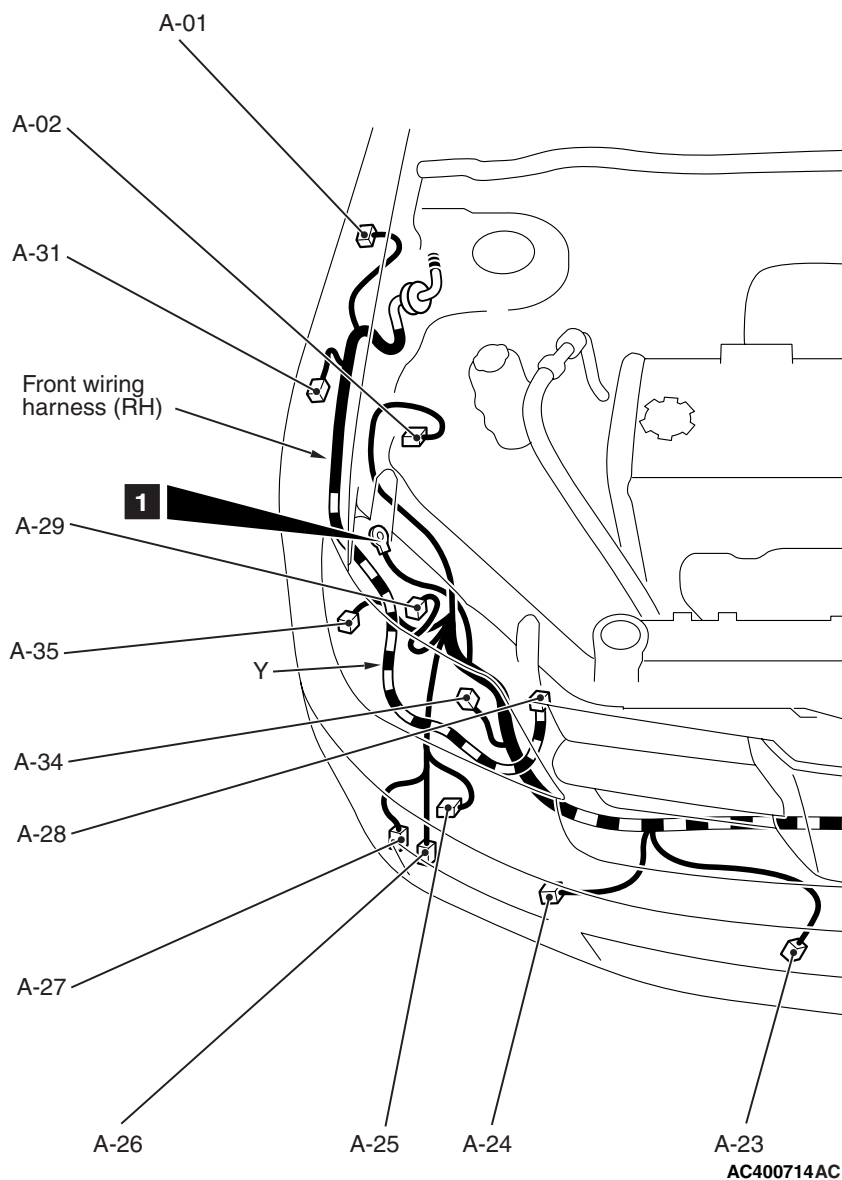

A-01	(2-GR)	Side turn-signal lamp (RH)
A-02	(3-B)	A/C pressure sensor
A-04	(2-GR)	Side turn-signal lamp (LH)
A-05X	(4)	Front fog lamp relay or spare connector (for front fog lamp relay)
A-06X	(4)	Horn relay
A-07X	(4)	Accessory socket relay
A-08X	(4)	Wiper deicer relay

A-10X	(4)	Fan control relay
A-11X	(11)	Front-ECU
A-12X	(11)	Front-ECU
A-13	(2-B)	Wheel speed sensor (Front: LH) <ABS>
A-14	(17-GR)	Front wiring harness (LH) and control wiring harness combination
A-16	(6-B)	Headlamp assembly (LH)

AC400714AC

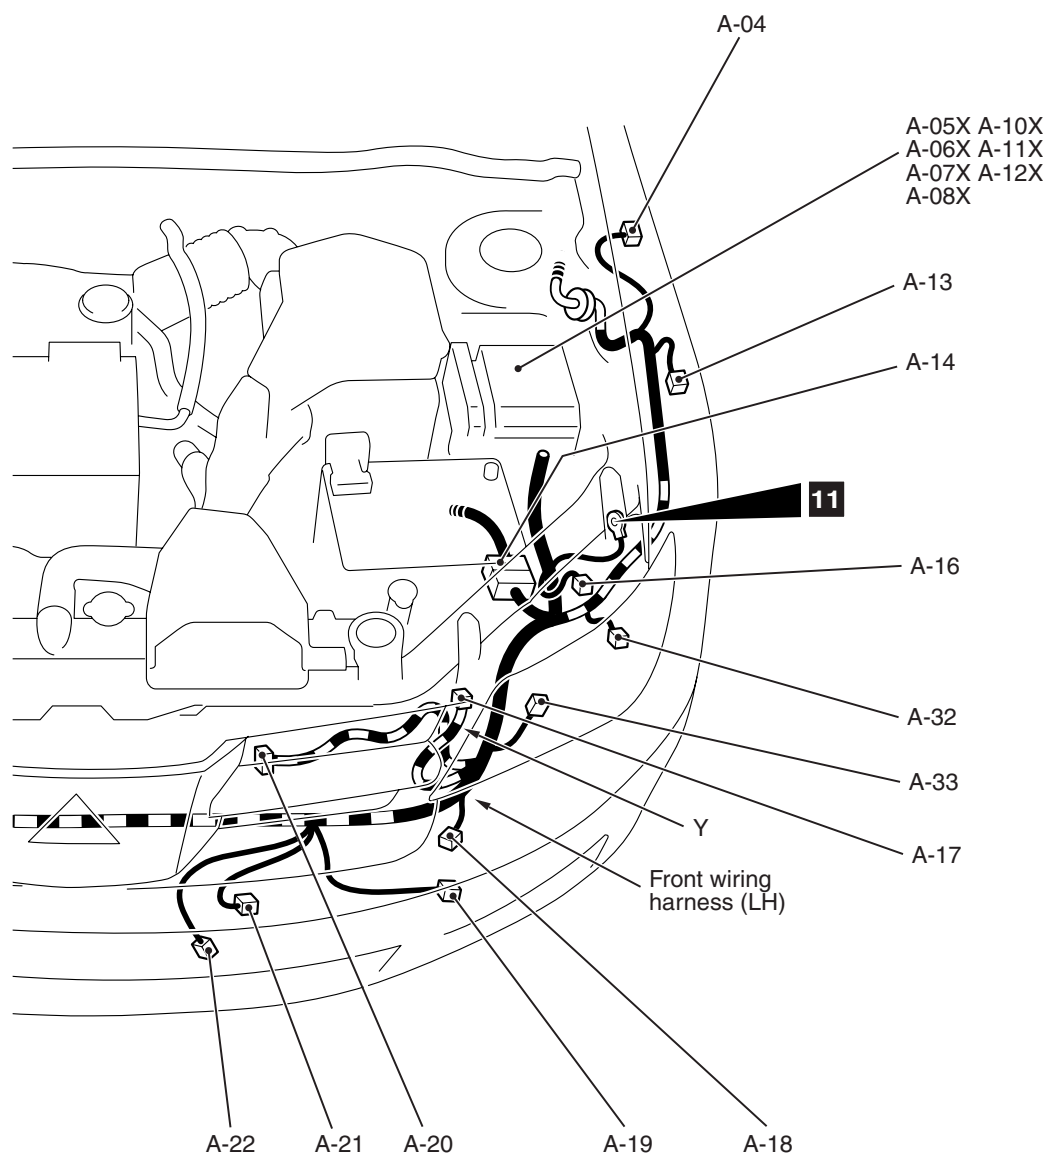

AC400715AB

A-17	(2-Y)	Front impact sensor (LH)	A-25	(2-B)	Headlamp washer motor
A-18	(2-BR)	Outside thermo sensor (for automatic A/C)	A-26	(2)	Windshield washer motor
A-19	(2-B)	Front fog lamp (LH) or spare connector (for front fog lamp)	A-27	(2-G)	Rear washer motor
A-20	(3-GR)	Fan controller	A-28	(2-Y)	Front impact sensor (RH)
A-21	(2-BR)	Outside thermo sensor (for combination meter)	A-29	(6-B)	Headlamp assembly (RH)
A-22	(1-B)	Horn (HI)	A-31	(2-B)	Wheel speed sensor (Front: RH) <ABS>
A-23	(1-B)	Horn (LO)	A-32	(3-B)	Headlamp (LO: LH)
A-24	(2-B)	Front fog lamp (RH) or spare connector (for front fog lamp)	A-33	(2-B)	Headlamp (HI: LH)
			A-34	(2-B)	Headlamp (HI: RH)
			A-35	(3-B)	Headlamp (LO: RH)


ENGINE AND TRANSMISSION

ENGINE AND TRANSMISSION <4G63-NON-TURBO>

M1801000401886

Connector
symbol**B** -01
thru
-40Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

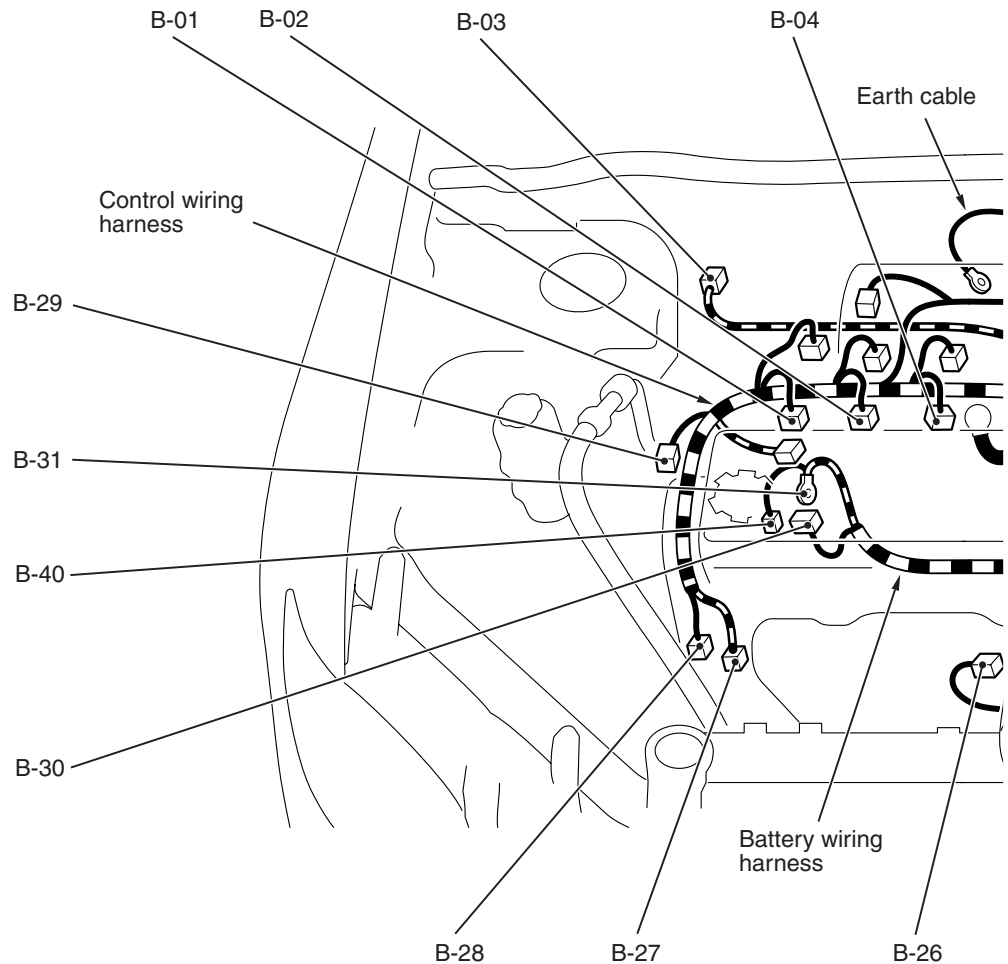

AC400716AD

B-01 (2-GR) Injector 1
 B-02 (2-GR) Injector 2
 B-03 (28-GR) ABS-ECU
 B-04 (2-GR) Injector 3
 B-05 (2-GR) Injector 4
 B-06 (4-B) Throttle position sensor
 B-07 (5-GR) Windshield wiper motor


B-08 (7-B) Air flow sensor
 B-09 (2-GR) Brake fluid level switch
 B-11X (1) Engine speed detection connector
 B-17X (4) Engine control relay
 B-18X (4) A/C compressor relay
 B-19 (6-B) Control wiring harness and battery wiring harness combination

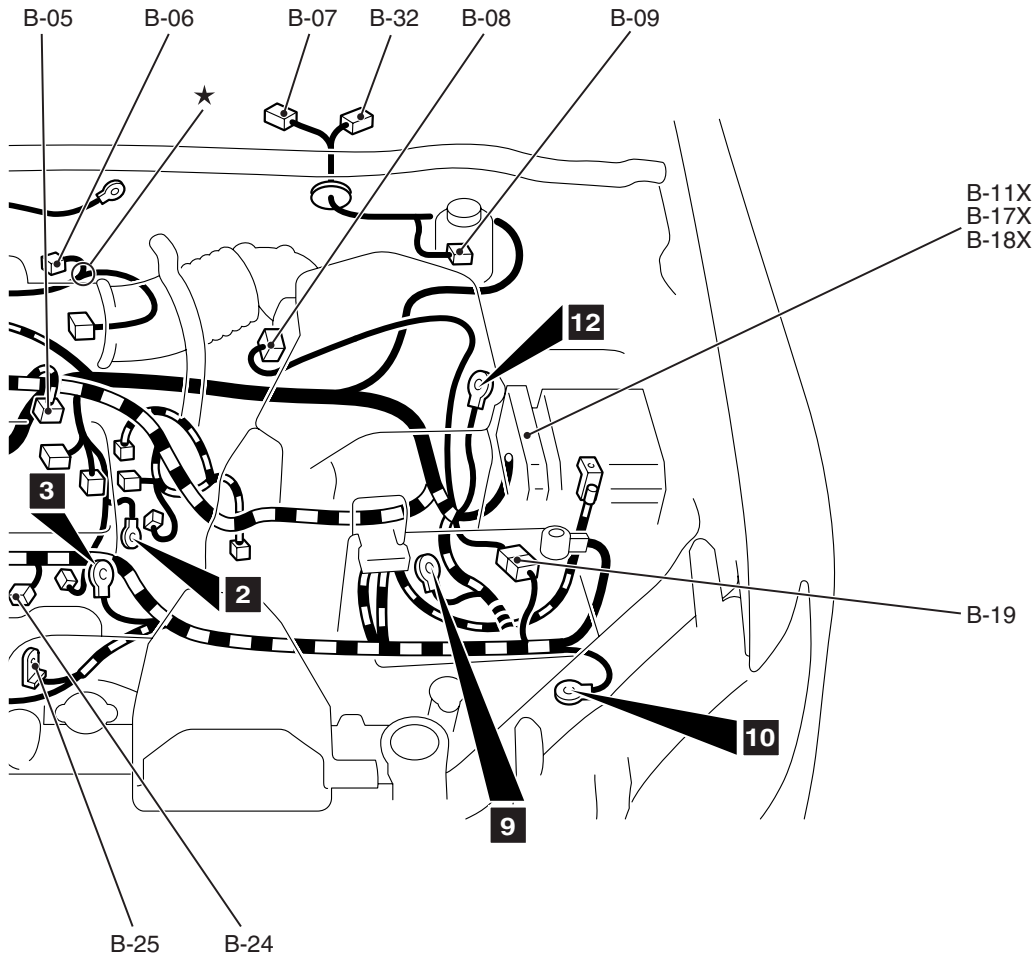

AC400717AB

B-24	(1-B)	Oil pressure switch	B-29	(3-B)	Crank angle sensor
B-25	(1)	Starter	B-30	(4-GR)	Alternator
B-26	(1-B)	Starter	B-31	(1)	Alternator
B-27	(1-B)	A/C compressor assembly	B-32	(2-B)	Wiper deicer
B-28	(1-B)	Power steering fluid pressure switch	B-40	(1)	Capacitor


ENGINE AND TRANSMISSION <4G63-Non-Turbo> (CONTINUED)

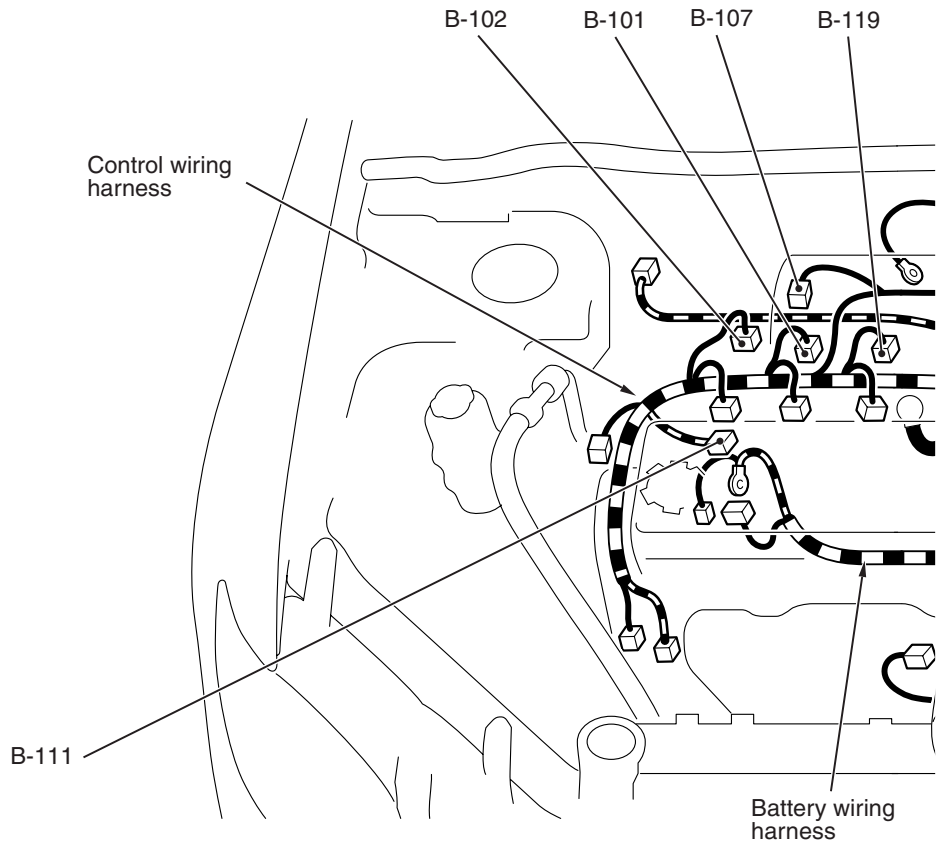Connector
symbol**B** -101
thru
-121Connector colour
codeB : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC400716AE

B-101 (2-B) Purge control solenoid valve
 B-102 (2-GR) Detonation sensor
 B-106 (3-B) Camshaft position sensor
 B-107 (1-B) Capacitor

B-108 (2-B) Engine coolant temperature sensor
 B-109 (1-B) Engine coolant temperature gauge unit

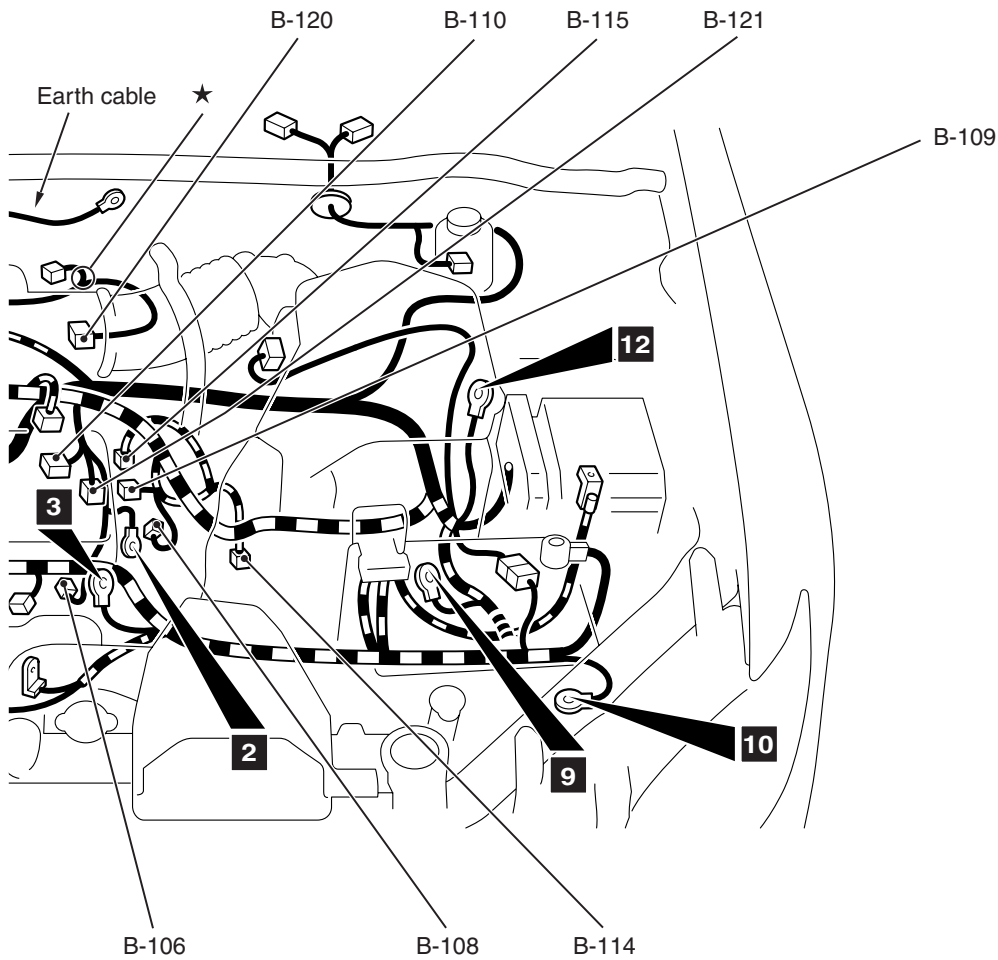


AC400717 AC

B-110 (3-GR) Ignition coil 1
B-111 (3-GR) Ignition coil 2
B-114 (2-B) Back-up lamp switch
B-115 (3-B) Vehicle speed sensor

B-119 (2-BR) EGR control solenoid valve
B-120 (6-B) Idle speed control servo
B-121 (4-B) Oxygen sensor (Front)

ENGINE AND TRANSMISSION <4G63-TURBO>

M1801000401897

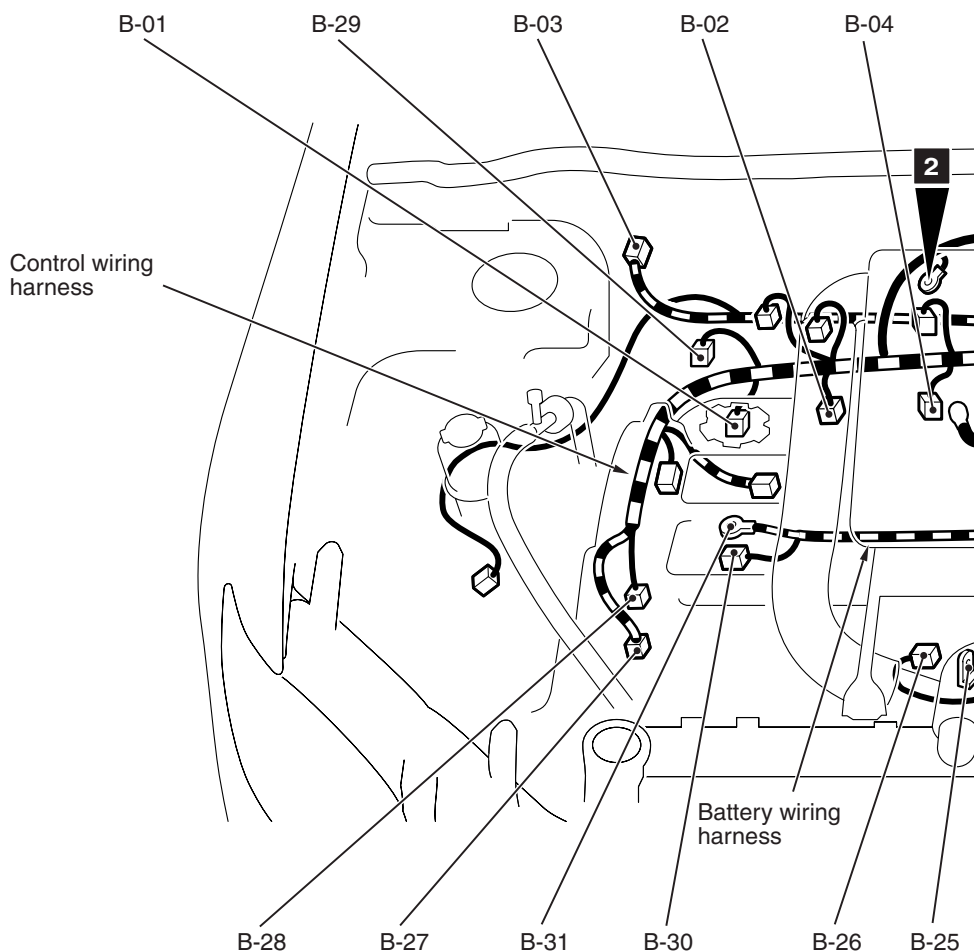Connector
symbol**B** -01
thru
-32

Connector colour

code

B : Black

BR : Brown

G : Green

GR : Grey

L : Blue

None : Milk white

O : Orange

R : Red


V : Violet

Y : Yellow

AC400566AD

B-01	(2-GR)	Injector 1
B-02	(2-GR)	Injector 2
B-03	(28-GR)	ABS-ECU
B-04	(2-GR)	Injector 3
B-05	(2-GR)	Injector 4
B-06	(6-B)	Electronic-controlled throttle valve
B-07	(5-GR)	Windshield wiper motor
B-08	(7-B)	Air flow sensor

B-09	(2-GR)	Brake fluid level switch
B-11X	(1)	Engine speed detection connector
B-14X	(4)	Throttle valve control servo relay
B-17X	(4)	Engine control relay
B-18X	(4)	A/C compressor relay
B-19	(10-B)	Control wiring harness and battery wiring harness combination

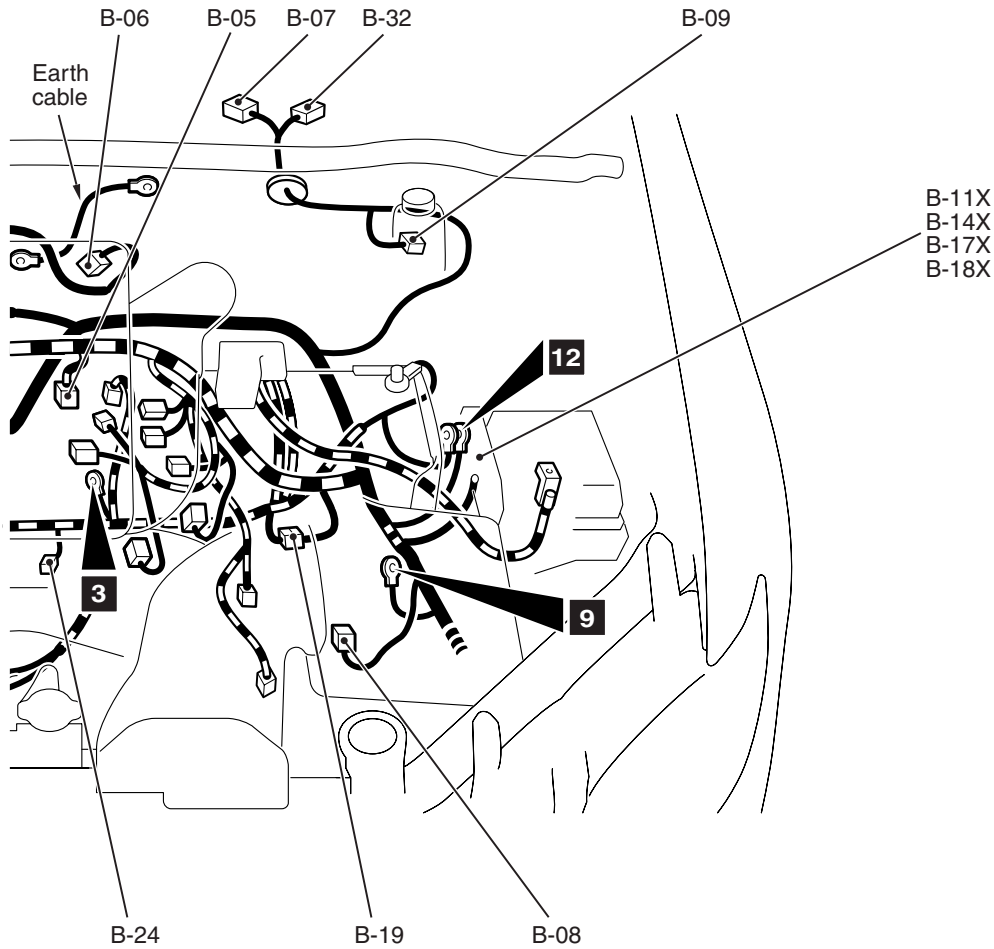

AC400567AB

B-24	(1-B)	Oil pressure switch
B-25	(1)	Starter
B-26	(1-B)	Starter
B-27	(1-B)	A/C compressor assembly
B-28	(1-B)	Power steering fluid pressure switch

B-29	(3-B)	Crank angle sensor
B-30	(4-GR)	Alternator
B-31	(1)	Alternator
B-32	(2-B)	Wiper deicer

ENGINE AND TRANSMISSION <4G63-Turbo> (CONTINUED)

Connector
symbol**B** -101
thru
-124

Connector colour

code

B : Black

BR : Brown

G : Green

GR : Grey

L : Blue


None : Milk white

O : Orange

R : Red

V : Violet


Y : Yellow

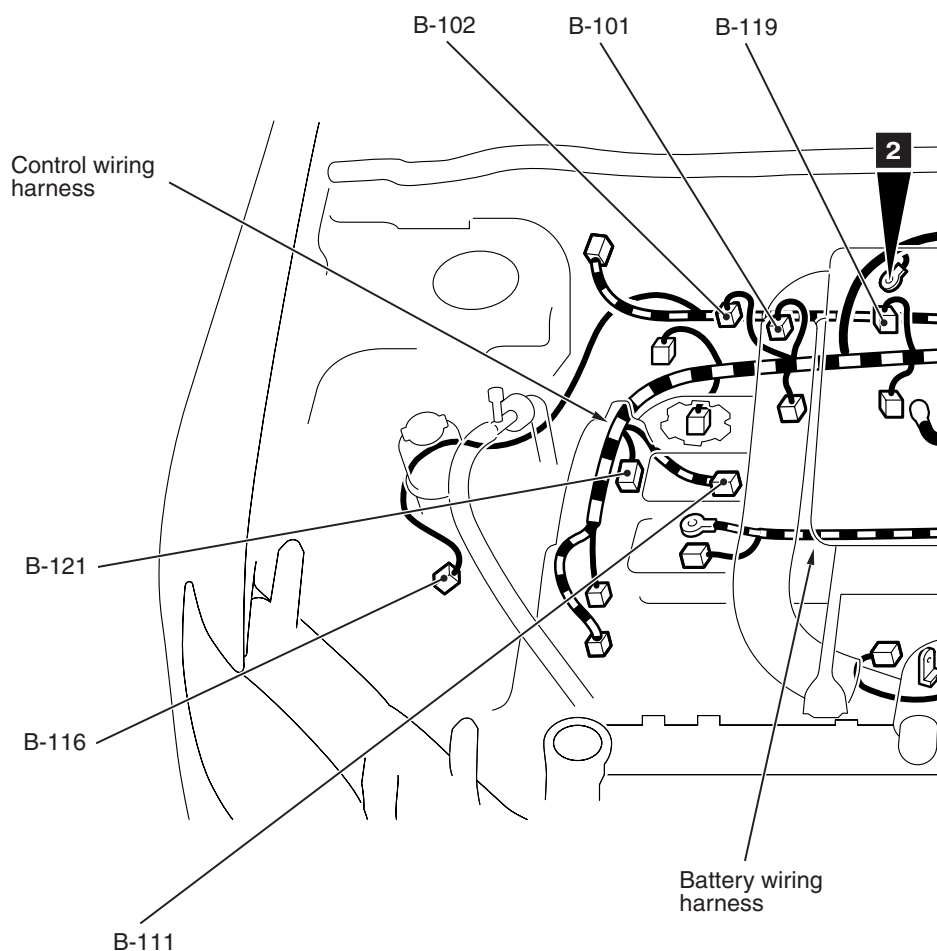

AC400566AE

B-101 (2-B) Purge control solenoid valve
 B-102 (2-GR) Detonation sensor
 B-106 (3-B) Camshaft position sensor
 B-107 (1-B) Capacitor

B-108 (2-B) Engine coolant temperature sensor
 B-109 (1-B) Engine coolant temperature gauge unit

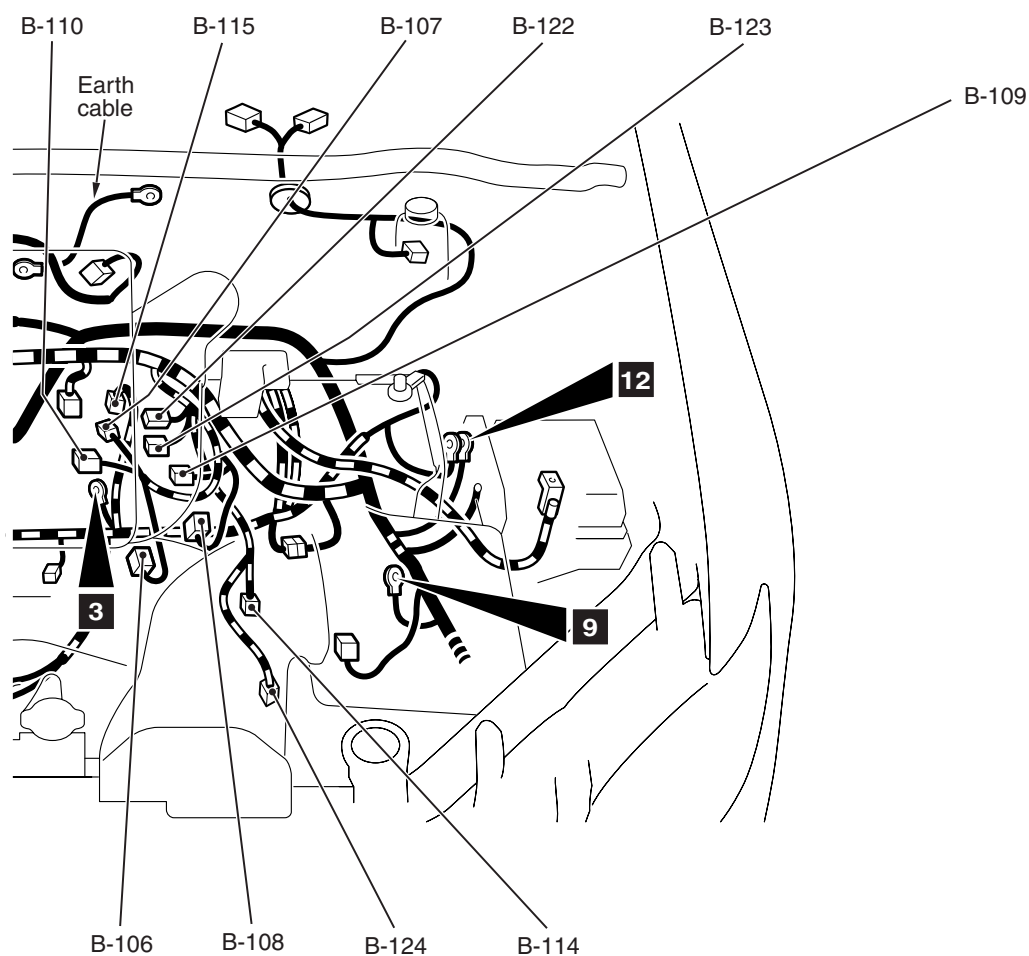

AC400567AC

B-110 (3-GR) Ignition coil 1
 B-111 (3-GR) Ignition coil 2
 B-114 (2-B) Back-up lamp switch
 B-115 (3-B) Vehicle speed sensor
 B-116 (8-GR) Accelerator pedal position sensor

B-119 (2-BR) EGR control solenoid valve
 B-121 (4-B) Oxygen sensor (Front)
 B-122 (2-B) Fuel pressure control solenoid valve
 B-123 (2-GR) Waste gate solenoid valve
 B-124 (3-B) Clutch oil pressure sensor

ENGINE AND TRANSMISSION <4G69 (LHD)>

M1801000401905

Connector
symbol**B** -01
thru
-39

Connector colour

code

B : Black

BR : Brown

G : Green

GR : Grey

L : Blue


None : Milk white

O : Orange

R : Red

V : Violet


Y : Yellow

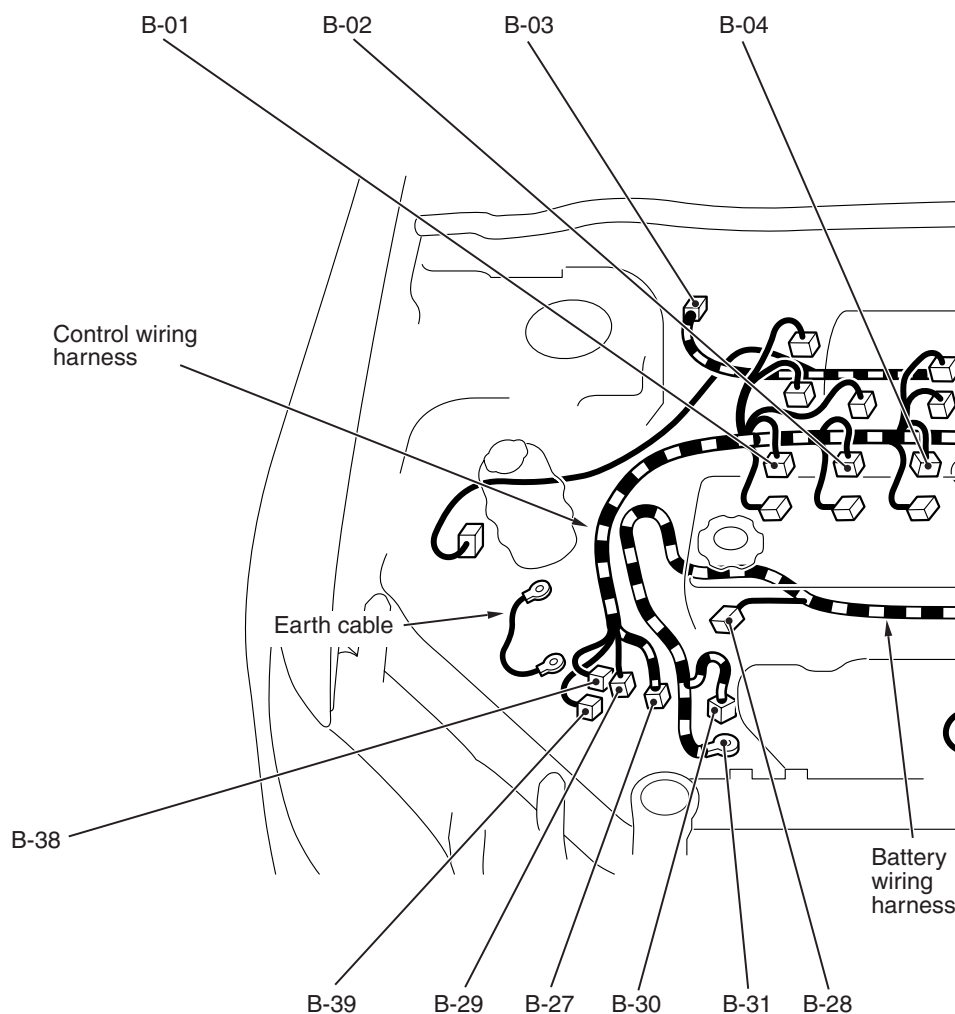

AC400718AD

B-01	(2-GR)	Injector 1
B-02	(2-GR)	Injector 2
B-03	(28-GR)	ABS-ECU
B-04	(2-GR)	Injector 3
B-05	(2-GR)	Injector 4
B-06	(6-B)	Electronic-controlled throttle valve
B-07	(5-GR)	Windshield wiper motor
B-08	(4-GR)	Air flow sensor

B-09	(2-GR)	Brake fluid level switch
B-11X	(1)	Engine speed detection connector
B-14X	(4)	Throttle valve control servo relay
B-16X	(4)	A/T control relay
B-17X	(4)	Engine control relay
B-18X	(4)	A/C compressor relay
B-19	(8-B)	Control wiring harness and battery wiring harness combination

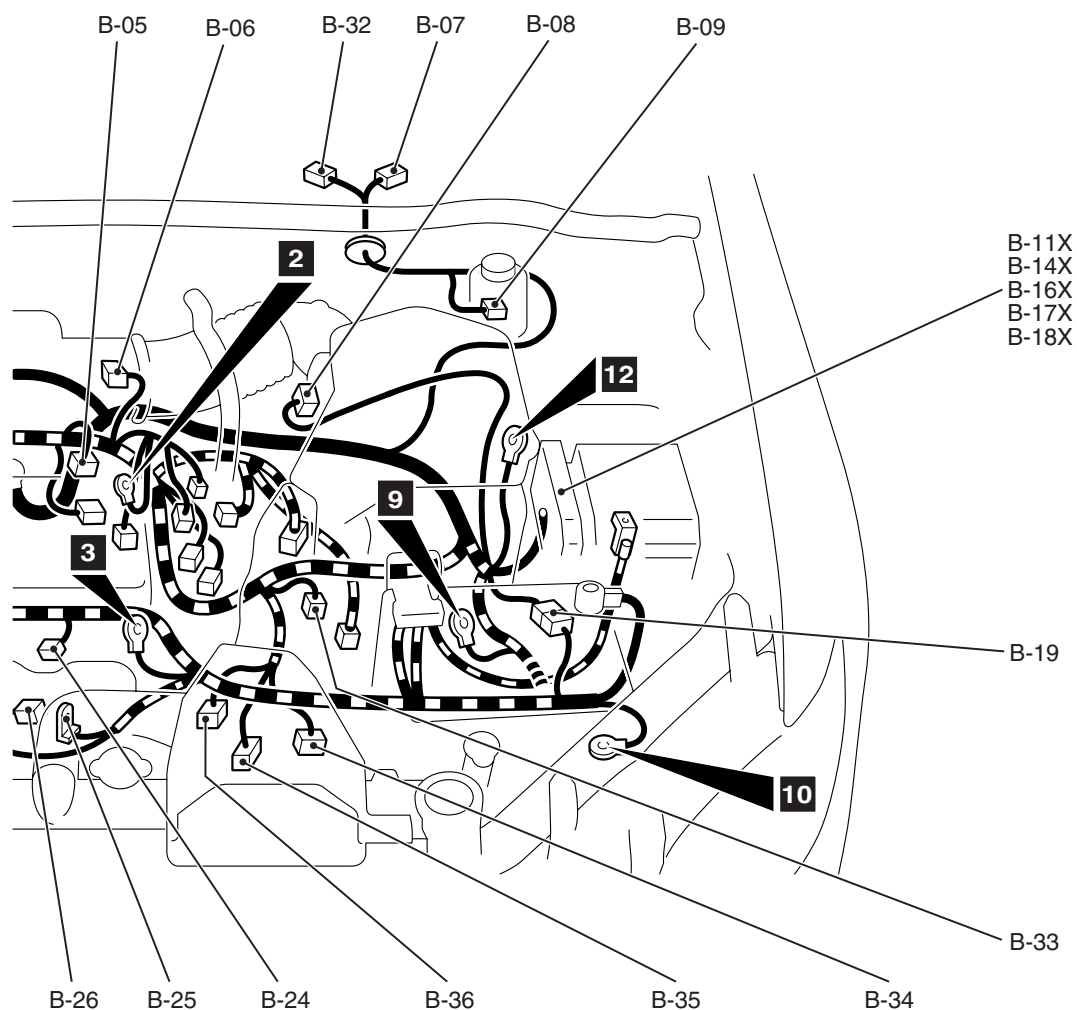


AC400719AB

B-24	(1-B)	Oil pressure switch	B-32	(2-B)	Wiper deicer
B-25	(1)	Starter	B-33	(3-GR)	Output shaft speed sensor <A/T>
B-26	(1-B)	Starter	B-34	(10-GR)	A/T control solenoid valve assembly <A/T>
B-27	(1-B)	A/C compressor assembly	B-35	(10-B)	Inhibitor switch <A/T>
B-28	(1-B)	Power steering fluid pressure switch	B-36	(3-B)	Input shaft speed sensor <A/T>
B-29	(3-GR)	Crank angle sensor	B-38	(4-B)	No.1, 4 cylinder oxygen sensor (Rear)
B-30	(4-GR)	Alternator	B-39	(4-GR)	No.1, 4 cylinder oxygen sensor (Front)
B-31	(1)	Alternator			

ENGINE AND TRANSMISSION <4G69 (LHD)> (CONTINUED)

Connector
symbol**B** -101
thru
-118Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

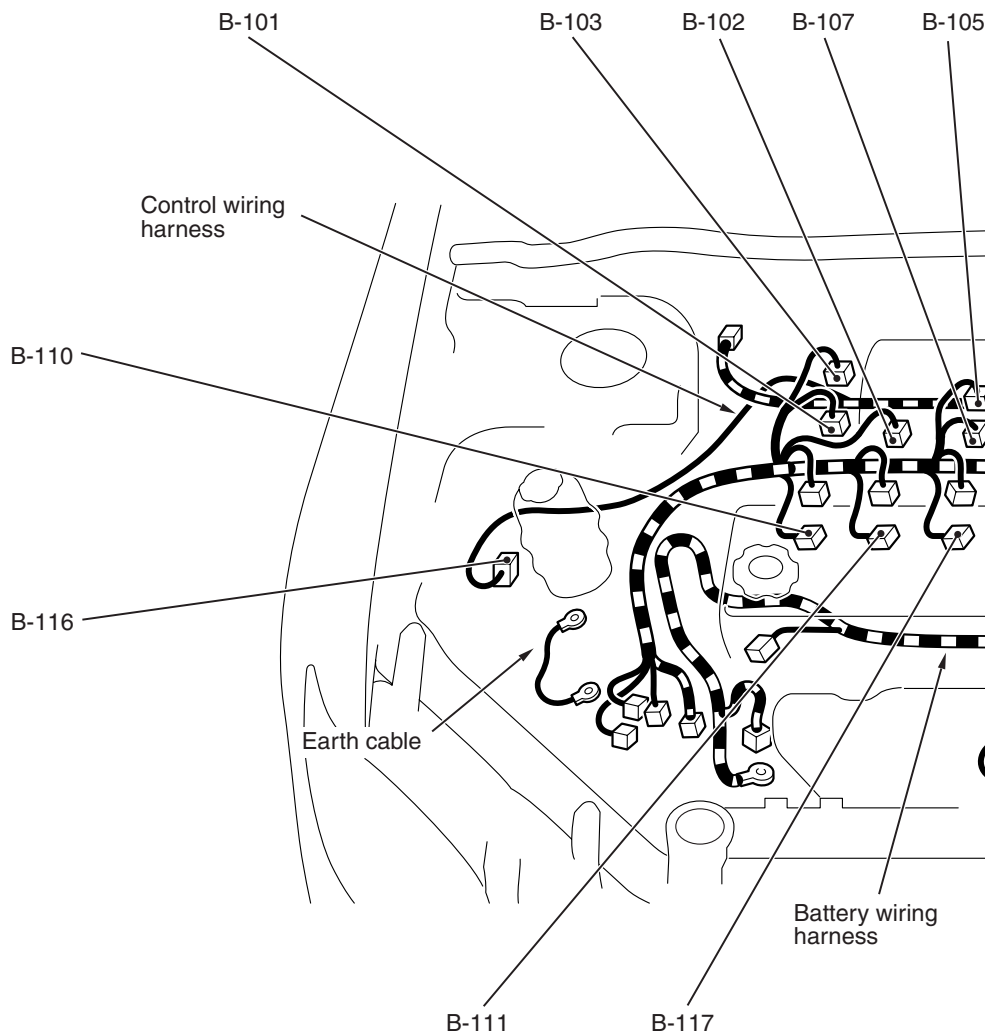

AC400718AE

B-101	(2-B)	Purge control solenoid valve
B-102	(2-GR)	Detonation sensor
B-103	(3-B)	Manifold absolute pressure sensor
B-104	(2-B)	Oil control valve
B-105	(6-GR)	EGR valve

B-106	(3-B)	Camshaft position sensor
B-107	(1-B)	Capacitor
B-108	(2-B)	Engine coolant temperature sensor
B-109	(1-B)	Engine coolant temperature gauge unit

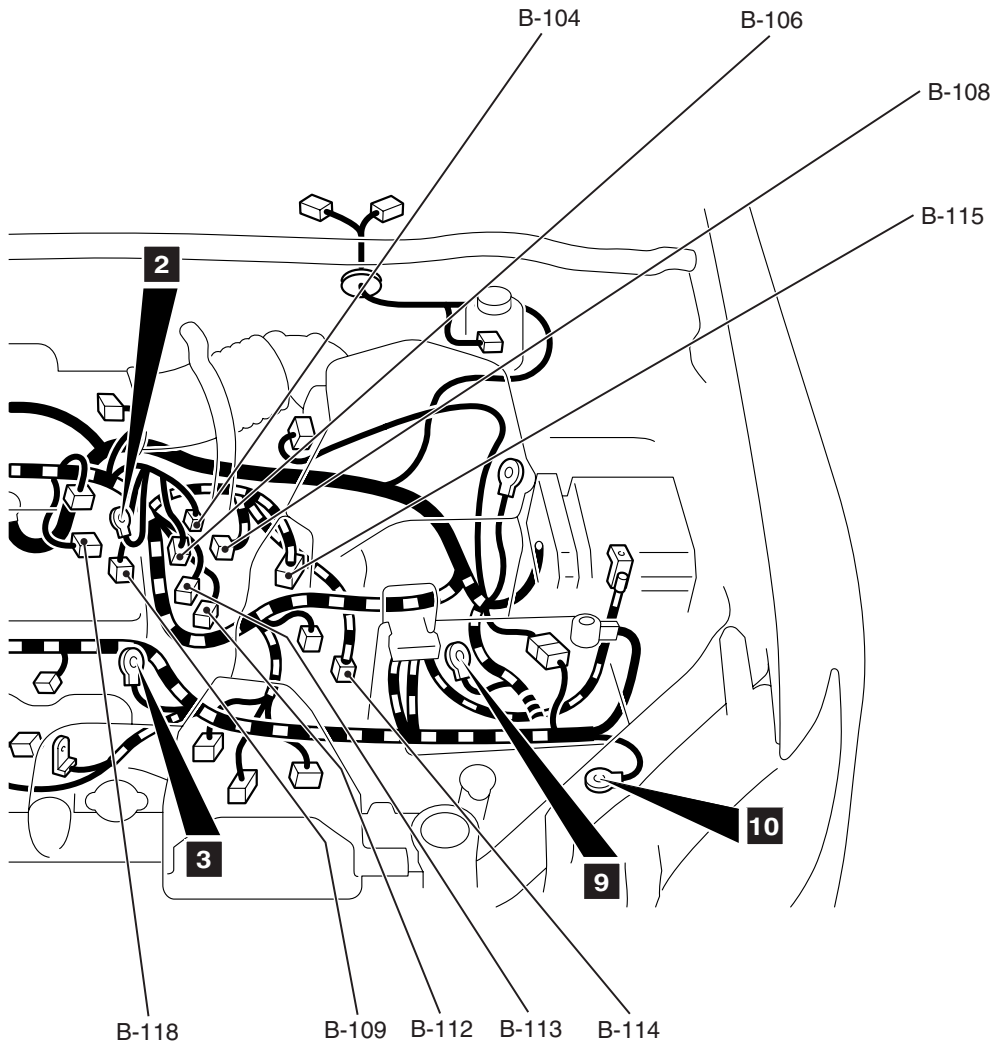


AC400719AC

B-110 (3-GR) Ignition coil 1
 B-111 (3-GR) Ignition coil 2
 B-112 (4-GR) No.2, 3 cylinder oxygen sensor (Front)
 B-113 (4-B) No.2, 3 cylinder oxygen sensor (Rear)
 B-114 (2-B) Back-up lamp switch <M/T>

B-115 (3-B) Vehicle speed sensor <M/T>
 B-116 (8-GR) Accelerator pedal position sensor
 B-117 (3-GR) Ignition coil 3
 B-118 (3-GR) Ignition coil 4


ENGINE AND TRANSMISSION <4G69 (RHD)>

M1801000401916

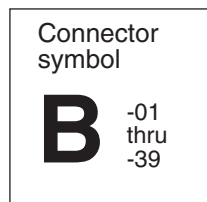

Connector colour code


B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

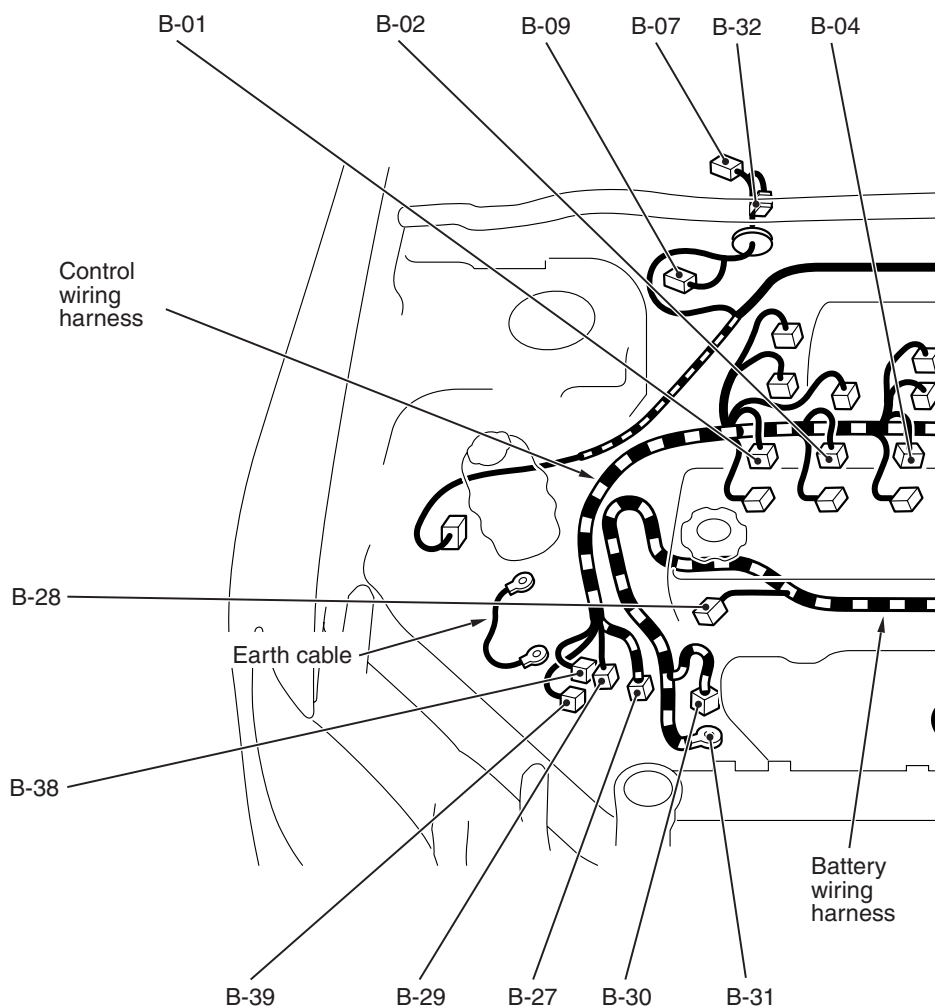

AC400720AD

B-01	(2-GR)	Injector 1
B-02	(2-GR)	Injector 2
B-03	(28-GR)	ABS-ECU
B-04	(2-GR)	Injector 3
B-05	(2-GR)	Injector 4
B-06	(6-B)	Electronic-controlled throttle valve
B-07	(5-GR)	Windshield wiper motor

B-08	(4-GR)	Air flow sensor
B-09	(2-GR)	Brake fluid level switch
B-11X	(1)	Engine speed detection connector
B-14X	(4)	Throttle valve control servo relay
B-16X	(4)	A/T control relay
B-17X	(4)	Engine control relay
B-18X	(4)	A/C compressor relay

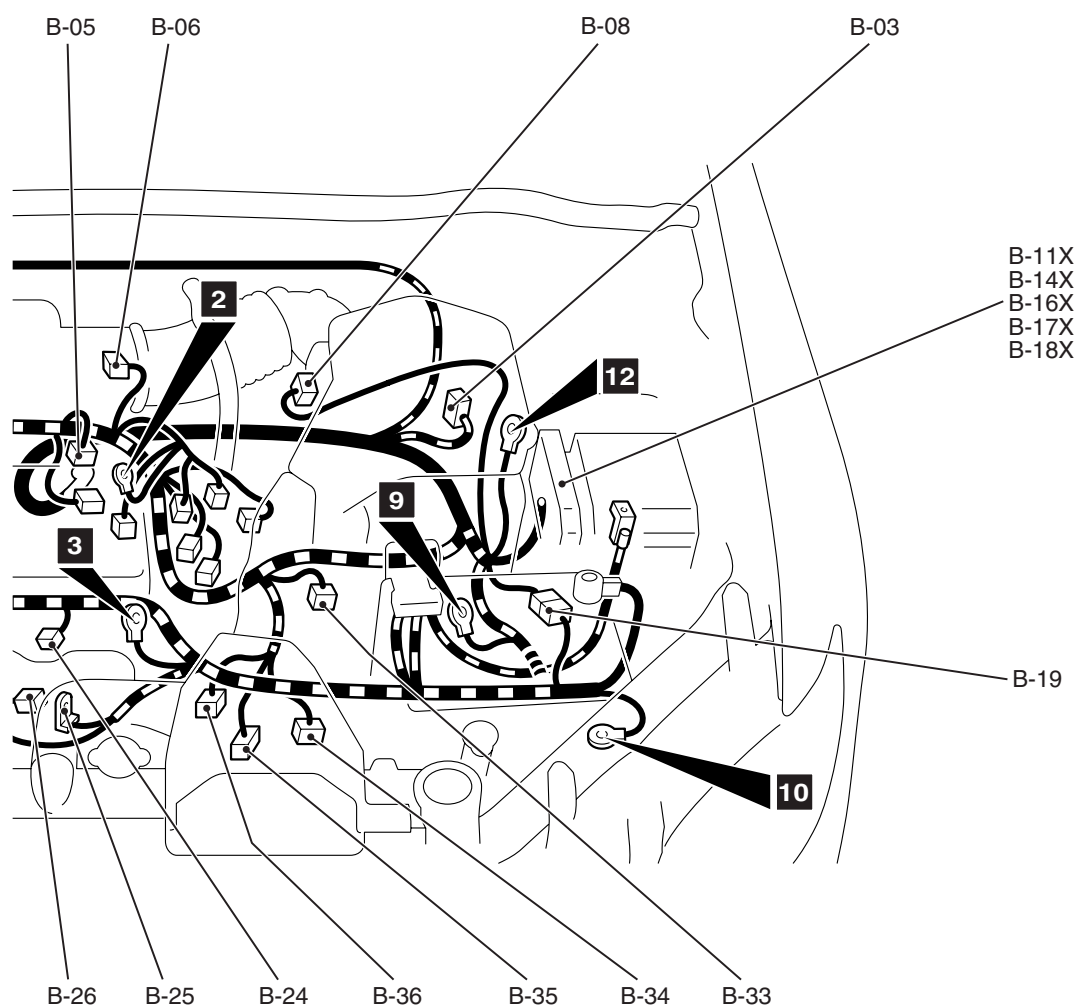


AC400721AB

B-19	(8-B)	Control wiring harness and battery wiring harness combination	B-31	(1)	Alternator
B-24	(1-B)	Oil pressure switch	B-32	(2-B)	No connection
B-25	(1)	Starter	B-33	(3-GR)	Output shaft speed sensor
B-26	(1-B)	Starter	B-34	(10-GR)	A/T control solenoid valve assembly
B-27	(1-B)	A/C compressor assembly	B-35	(10-B)	Inhibitor switch
B-28	(1-B)	Power steering fluid pressure switch	B-36	(3-B)	Input shaft speed sensor
B-29	(3-GR)	Crank angle sensor	B-38	(4-B)	No.1, 4 cylinder oxygen sensor (Rear)
B-30	(4-GR)	Alternator	B-39	(4-GR)	No.1, 4 cylinder oxygen sensor (Front)

ENGINE AND TRANSMISSION <4G69 (RHD)> (CONTINUED)

Connector
symbol**B** -101
thru
-118Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Grey
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

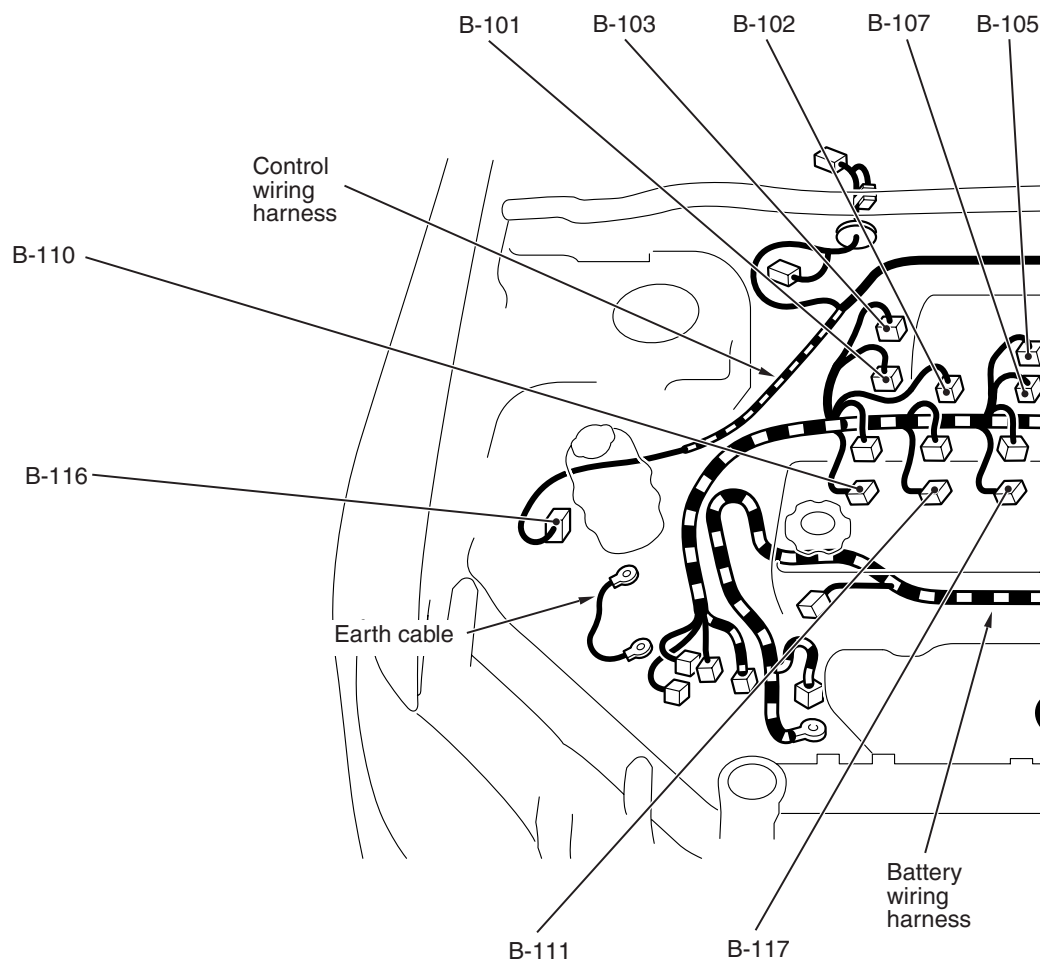

AC400720AE

B-101 (2-B) Purge control solenoid valve
 B-102 (2-GR) Detonation sensor
 B-103 (3-B) Manifold absolute pressure sensor
 B-104 (2-B) Oil control valve

B-105 (6-GR) EGR valve
 B-106 (3-B) Camshaft position sensor
 B-107 (1-B) Capacitor
 B-108 (2-B) Engine coolant temperature sensor

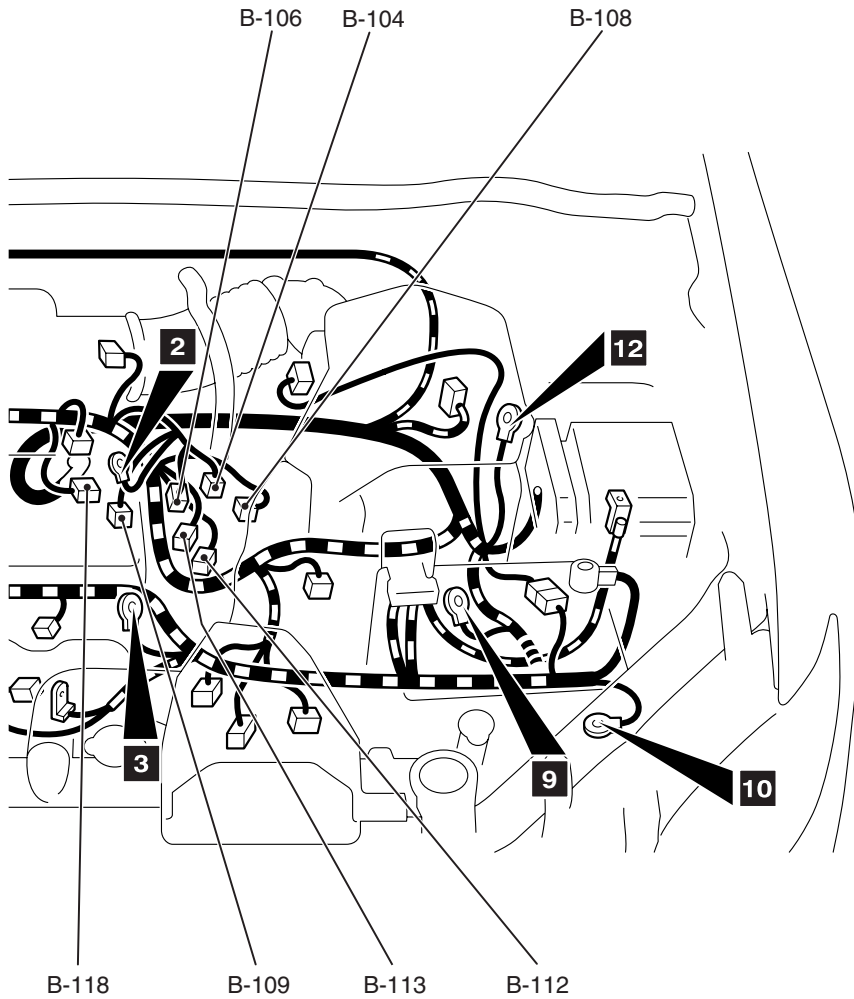

AC400721AC

B-109 (1-B)	Engine coolant temperature gauge unit	B-113 (4-B)	No.2, 3 cylinder oxygen sensor (Rear)
B-110 (3-GR)	Ignition coil 1	B-116 (8-GR)	Accelerator pedal position sensor
B-111 (3-GR)	Ignition coil 2	B-117 (3-GR)	Ignition coil 3
B-112 (4-GR)	No.2, 3 cylinder oxygen sensor (Front)	B-118 (3-GR)	Ignition coil 4

DASH PANEL

DASH PANEL <LHD>


M1801000601749

Connector
symbol

C -01
thru
-40

Connector colour
code


B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
NONE : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

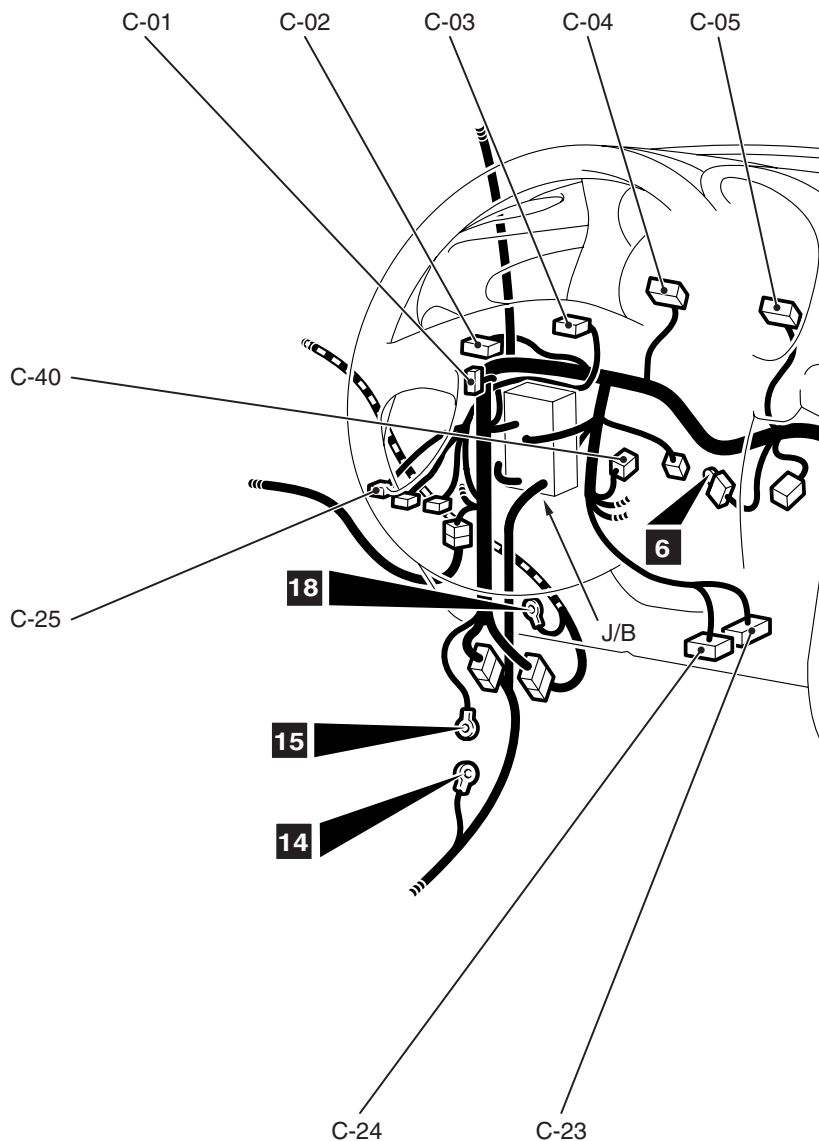

AC400722AD

C-01	(33)	J/C (4)
C-02	(33)	J/C (3)
C-03	(6)	Fog lamp switch
C-04	(22)	Combination meter
C-05	(22-L)	Combination meter
C-06	(16-B)	A/C-ECU <Manual A/C>
C-07	(4)	Clock
C-08	(6)	Blower switch <Manual A/C>
C-09	(2-R)	Air bag module (squib) (passenger's side)
C-10	(7)	Instrument panel wiring harness and A/C wiring harness combination <Manual A/C>

C-11	(4)	Resistor <Manual A/C>
C-12	(2)	Blower motor <Manual A/C>
C-13	(15-L)	Instrument panel wiring harness and floor wiring harness (RH) combination
C-14	(10)	Instrument panel wiring harness and front wiring harness (RH) combination
C-15	(19-GR)	Instrument panel wiring harness and front door wiring harness (RH) combination


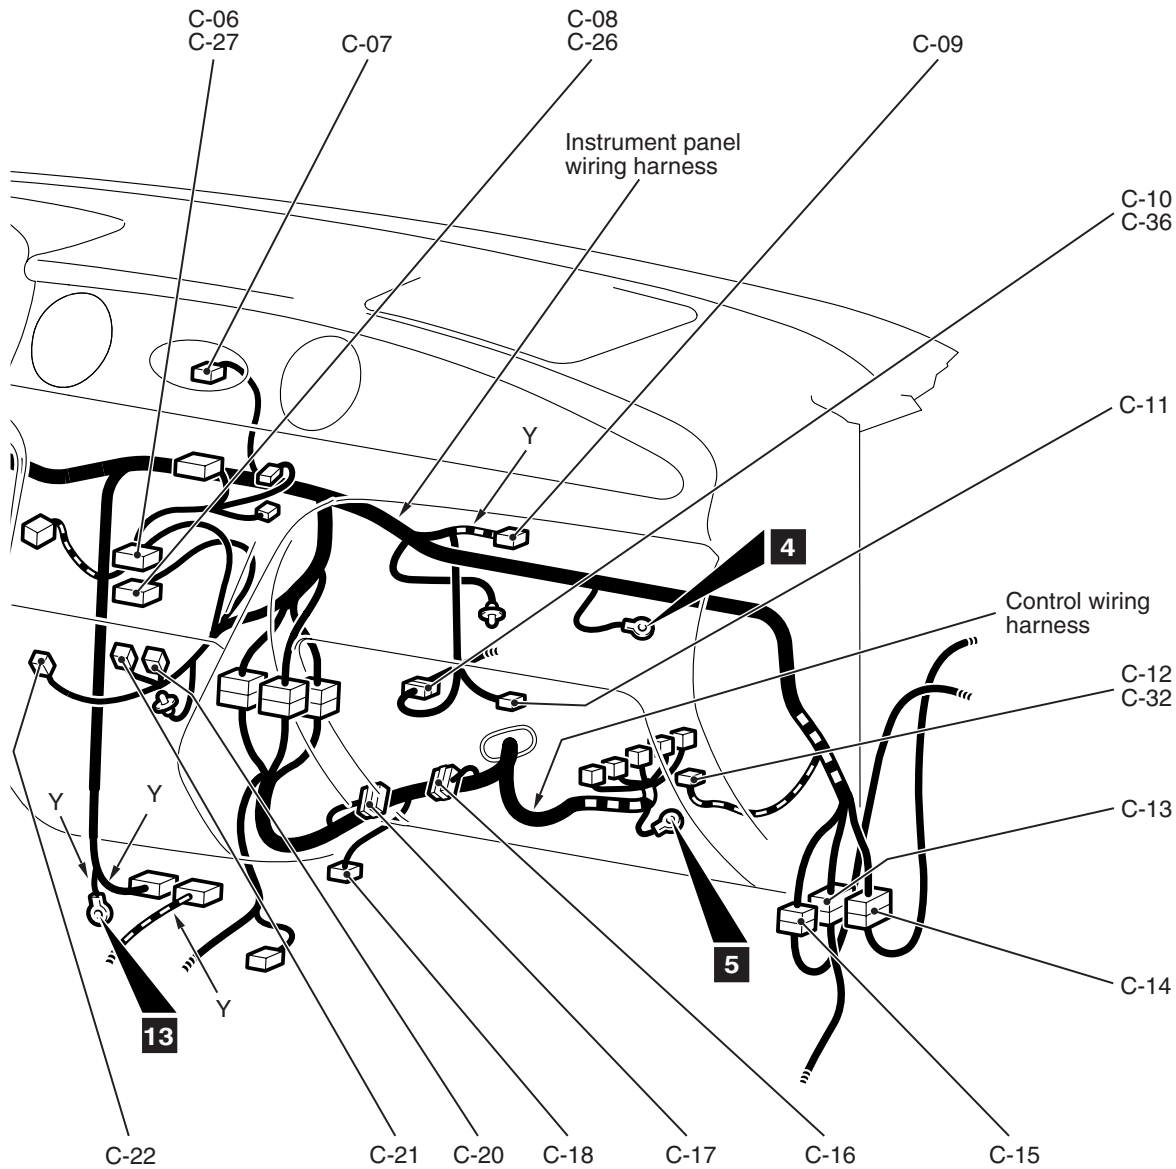


AC400723AB

C-16	(22-L)	J/C (1)
C-17	(13-GR)	J/C (2)
C-18	(4)	Oxygen sensor (Rear) <4G63>
C-20	(1)	Cigarette lighter
C-21	(1-B)	Cigarette lighter
C-22	(4)	Hazard warning switch
C-23	(13)	Diagnosis connector
C-24	(16-B)	Diagnosis connector
C-25	(11)	Remote controlled mirror switch

C-26	(16-B)	A/C-ECU <Automatic A/C>
C-27	(20-B)	A/C-ECU <Automatic A/C>
C-32	(6)	Blower linear controller <Automatic A/C>
C-36	(13)	Instrument panel wiring harness and A/C wiring harness combination <Automatic A/C>
C-40	(12)	J/C (5)


DASH PANEL <LHD> (CONTINUED)

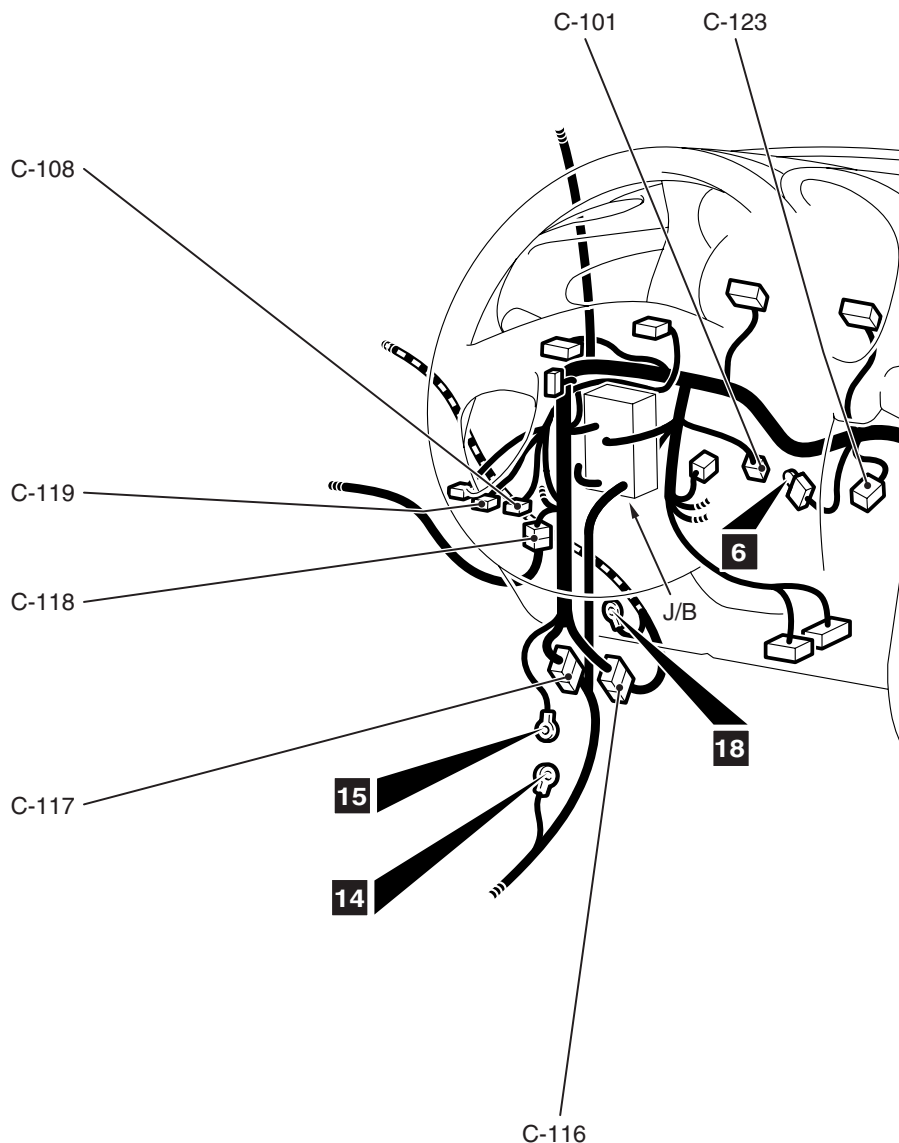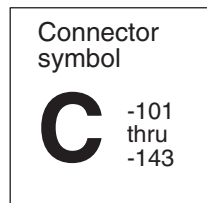

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
NONE : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC400722AE

C-101 (4)	Stop lamp switch	C-116 (43)	Instrument panel wiring harness and front wiring harness (LH) combination
C-102 (14)	Spare connector (for audio)	C-117 (38)	Instrument panel wiring harness and floor wiring harness (LH) combination
C-103 (2-B)	Cigarette lighter illumination lamp	C-118 (32)	Instrument panel wiring harness and front door wiring harness (LH) combination
C-104 (16-B)	Instrument panel wiring harness and control wiring harness combination	C-119 (6-L)	Rheostat
C-105 (22)	Instrument panel wiring harness and control wiring harness combination	C-121 (1)	Antenna amplifier
C-106 (19-GR)	Instrument panel wiring harness and control wiring harness combination	C-123 (2)	Photo sensor <Automatic A/C>
C-107 (2-B)	Glove box lamp	C-127 (2)	Interior temperature sensor <Automatic A/C>
C-108 (6-GR)	Headlamp levelling switch		
C-114 (22-Y)	SRS-ECU		
C-115 (20-Y)	SRS-ECU		

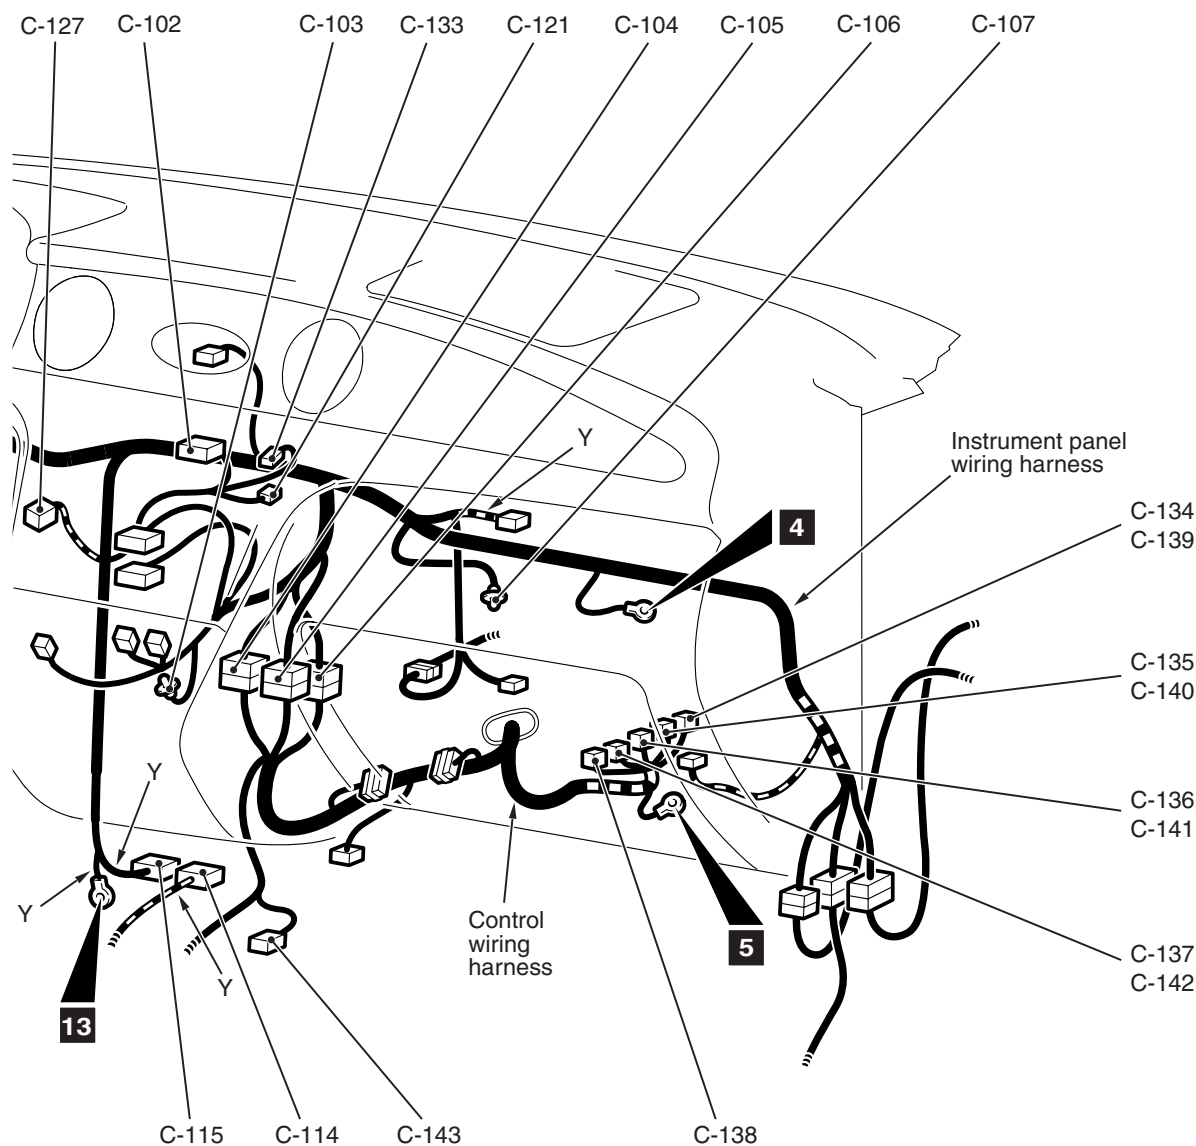


AC400723AC



C-133 (1-B) Spare connector (for audio)
 C-134 (26) Engine-ECU <4G63-None-Turbo>
 C-135 (16) Engine-ECU <4G63-None-Turbo>
 C-136 (12) Engine-ECU <4G63-None-Turbo>
 C-137 (22) Engine-ECU <4G63-None-Turbo>
 C-138 (26-GR) Engine-ECU <4G63-Turbo and
 4G69-M/T> or Engine-A/T-ECU
 <4G69-A/T>
 C-139 (27-GR) Engine-ECU <4G63-Turbo and
 4G69-M/T> or Engine-A/T-ECU
 <4G69-A/T>

C-140 (28-GR) Engine-ECU <4G63-Turbo and
 4G69-M/T> or Engine-A/T-ECU
 <4G69-A/T>
 C-141 (29-GR) Engine-ECU <4G63-Turbo and
 4G69-M/T> or Engine-A/T-ECU
 <4G69-A/T>
 C-142 (30-GR) Engine-ECU <4G63-Turbo and
 4G69-M/T> or Engine-A/T-ECU
 <4G69-A/T>
 C-143 (6) Shift switch assembly <A/T>

DASH PANEL <LHD> (CONTINUED)

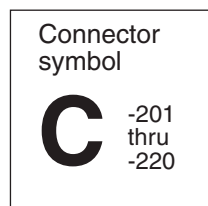

J/B (FRONT VIEW)

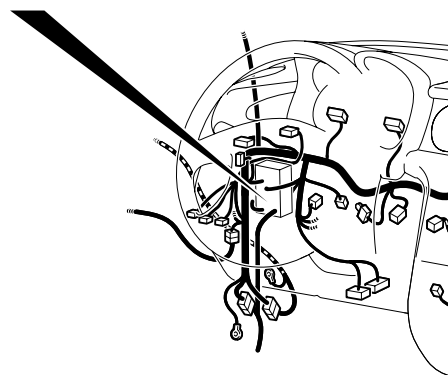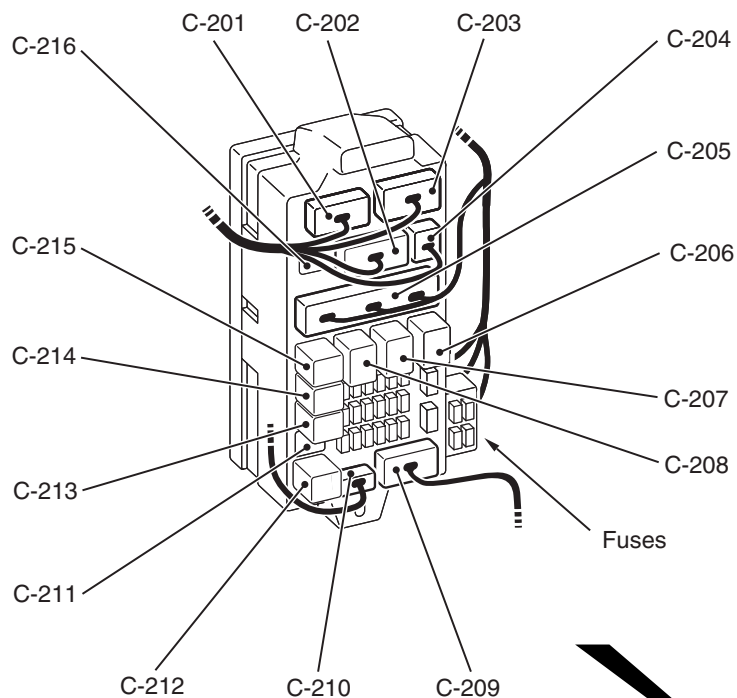


AC403917AB


C-201 (13)	Instrument panel wiring harness and J/B combination
C-202 (14)	Instrument panel wiring harness and J/B combination
C-203 (6)	Instrument panel wiring harness and J/B combination
C-204 (1-B)	Instrument panel wiring harness and J/B combination

C-205 (28)	Instrument panel wiring harness and J/B combination
C-206 (5)	Rear window defogger relay
C-207 (5)	Blower relay
C-208 (5)	Power window relay

J/B (REAR VIEW)

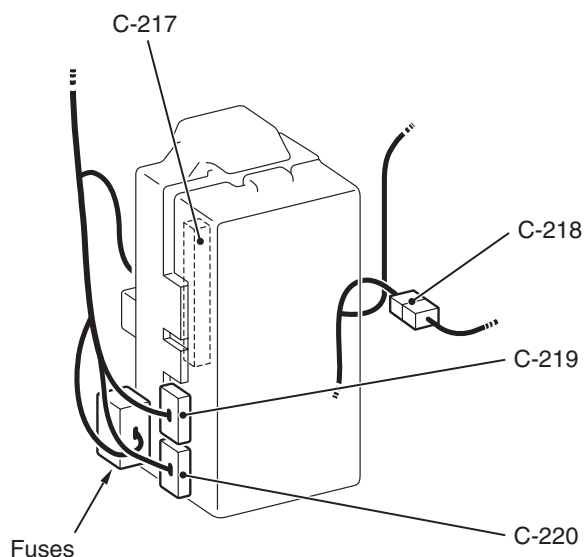

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

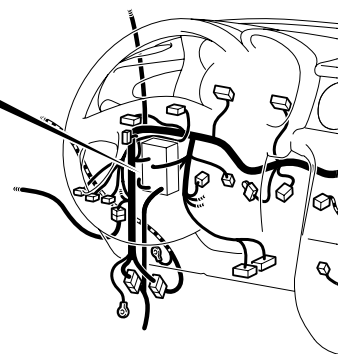

AC403918AC


C-209 (15)	Floor wiring harness (LH) and J/B combination
C-210 (3)	Roof wiring harness and J/B combination
C-211 (4)	No connection
C-212 (4)	Rear fog lamp relay
C-213 (4)	Fuel pump relay (2)
C-214 (4)	Heated seat relay

C-215 (4)	Fuel pump relay (1)
C-216 (2)	No connection
C-217 (20)	ETACS-ECU
C-218 (5)	Instrument panel wiring harness and roof wiring harness combination
C-219 (24-GR)	ETACS-ECU
C-220 (24)	ETACS-ECU

DASH PANEL <LHD> (CONTINUED)

Connector
symbol**C** -301
thru
-316

STEERING COLUMN

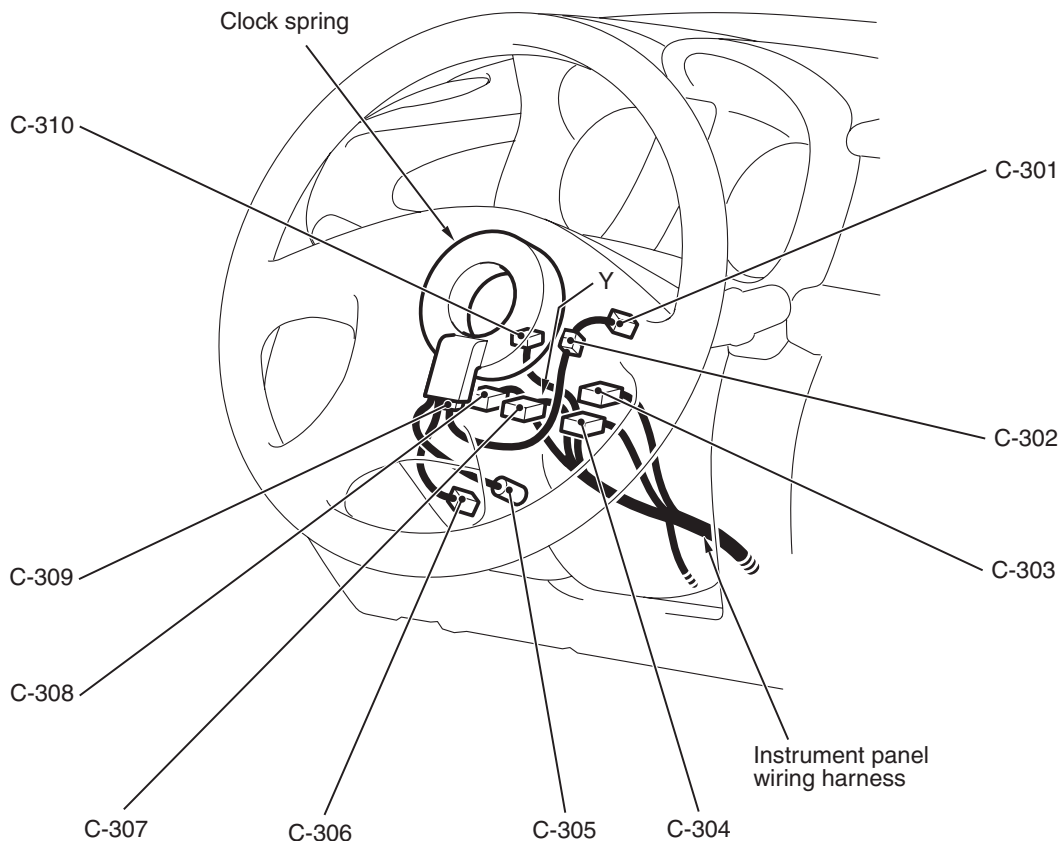


AC400456AB

C-301 (3-Y)	Auto-cruise control switch	C-305 (1)	Horn switch
C-302 (3-B)	Clock spring wiring harness and auto-cruise control switch wiring harness combination	C-306 (2)	Air bag module (squib) (driver's side)
C-303 (6)	Ignition switch	C-307 (4-Y)	Clock spring
C-304 (7)	Key reminder switch	C-308 (6)	Clock spring
		C-309 (5)	Clock spring and clock spring wiring harness combination

HEATER UNIT ASSEMBLY

<Manual A/C>

<Automatic A/C>

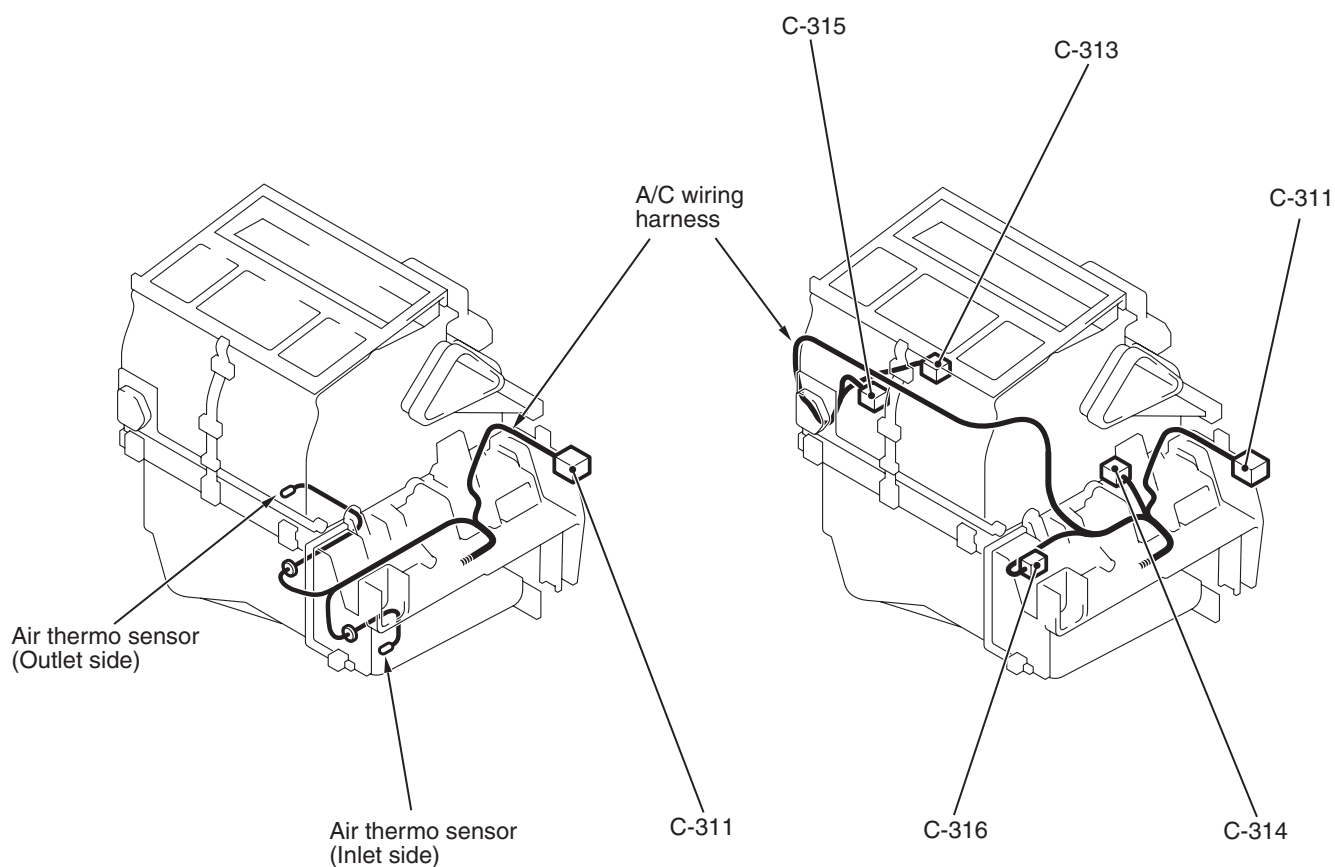


AC403795AB

C-310 (10)	Column switch
C-311 (7)	Outside/inside air selection damper control motor
C-313 (6)	Air mixing damper control motor and potentiometer <Automatic A/C>

C-314 (2)	Heater water temperature sensor <Automatic A/C>
C-315 (6)	Mode selection damper control motor and potentiometer <Automatic A/C>
C-316 (2)	Air thermo sensor <Automatic A/C>

DASH PANEL <RHD>


M1801000601750

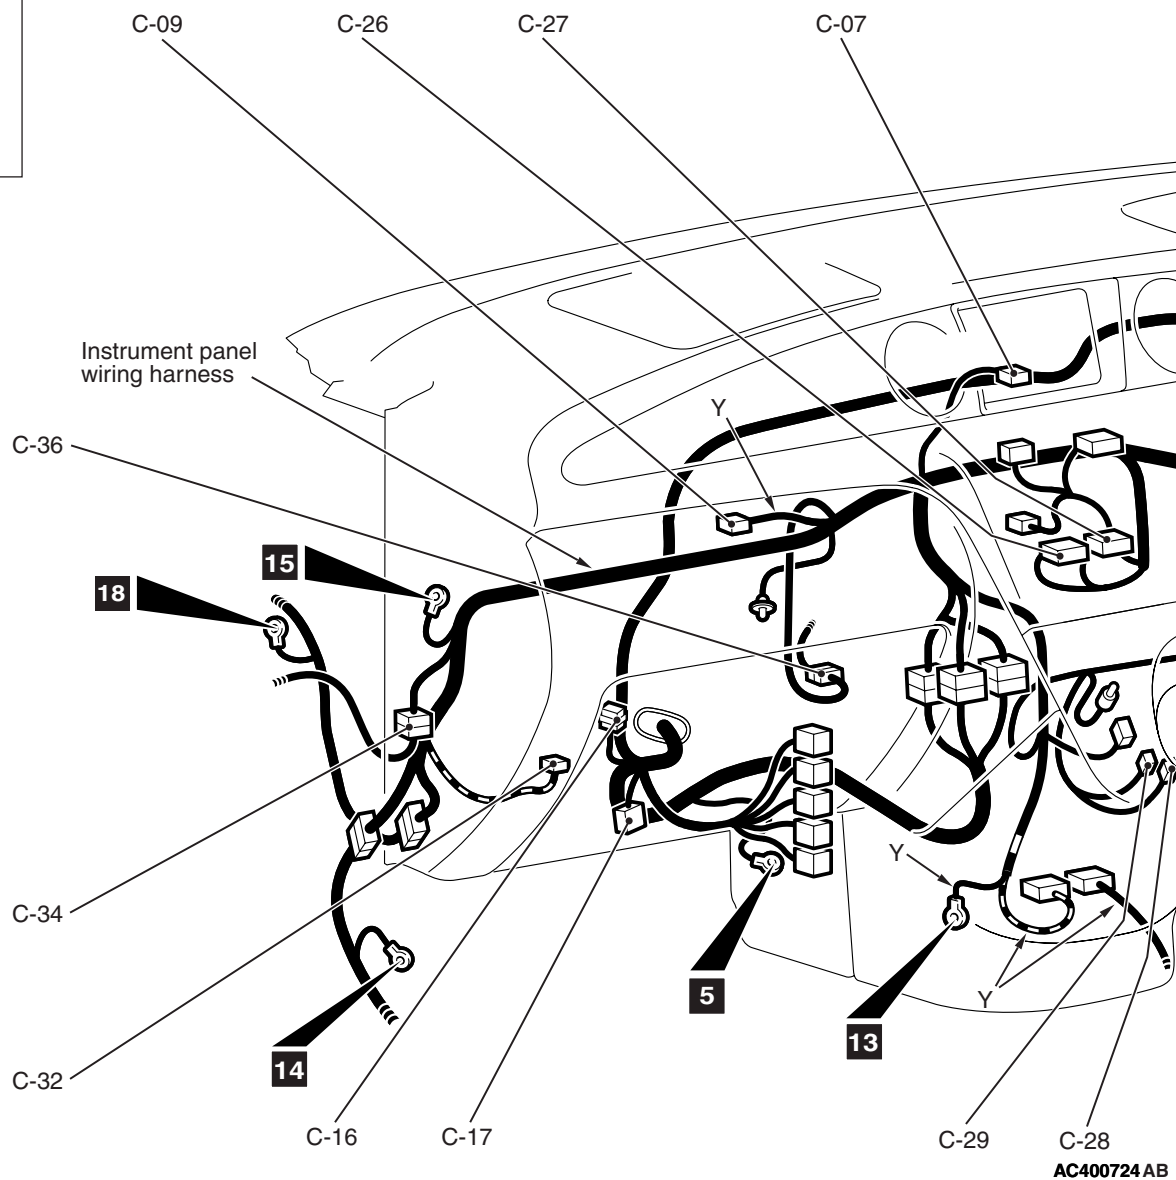Connector
symbol**C** -02
thru
-36

C-02	(33)	J/C (3)
C-03	(6)	Fog lamp switch
C-04	(22)	Combination meter
C-05	(22-L)	Combination meter
C-07	(4)	Clock
C-09	(2-R)	Air bag module (squib) (passenger's side)

C-13	(15-L)	Instrument panel wiring harness and floor wiring harness (RH) combination
C-14	(10)	Instrument panel wiring harness and front wiring harness (RH) combination
C-15	(16)	Instrument panel wiring harness and front door wiring harness (RH) combination

AC400724 AB

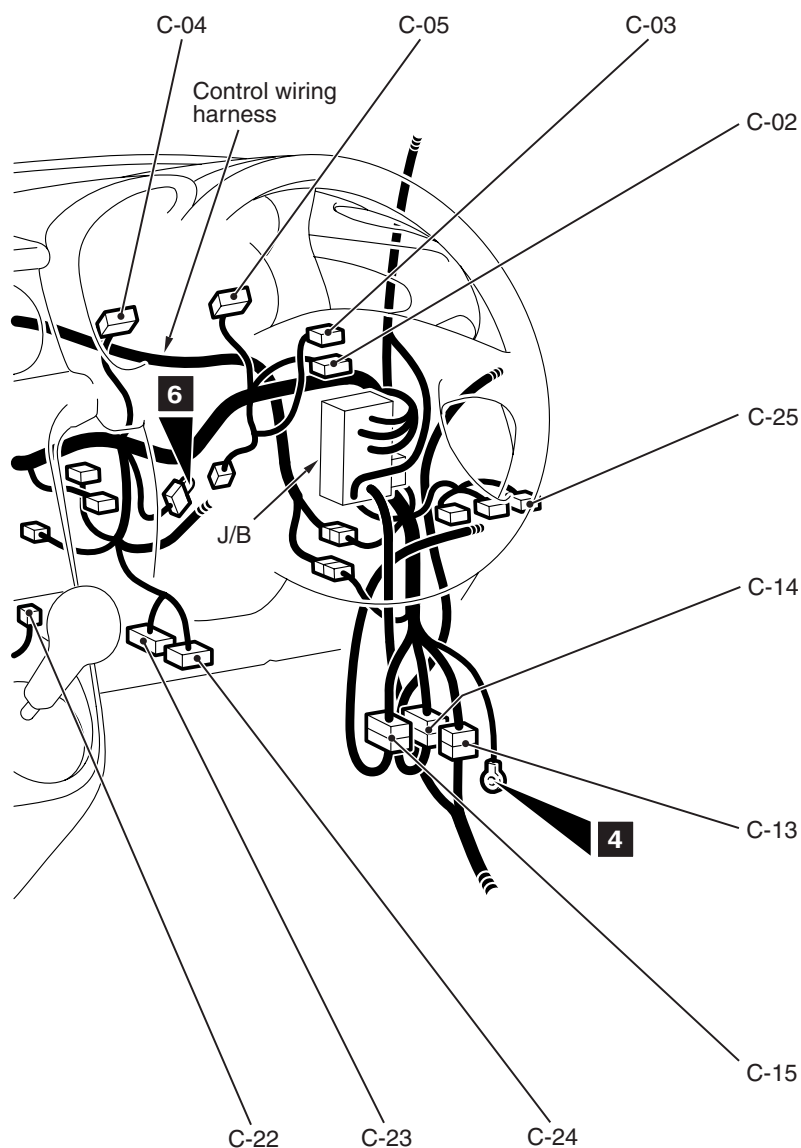


Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC400725AD

C-16	(22-L)	J/C (1)
C-17	(13-GR)	J/C (2)
C-22	(4)	Hazard warning switch
C-23	(13)	Diagnosis connector
C-24	(16-B)	Diagnosis connector
C-25	(11)	Remote controlled mirror switch
C-26	(16-B)	A/C-ECU
C-27	(20-B)	A/C-ECU


C-28	(1)	Accessory socket (2)
C-29	(1-B)	Accessory socket (2)
C-32	(6)	Blower linear controller
C-34	(19-GR)	Instrument panel wiring harness and front door wiring harness (LH) combination
C-36	(13)	Instrument panel wiring harness and A/C wiring harness combination

DASH PANEL <RHD> (CONTINUED)

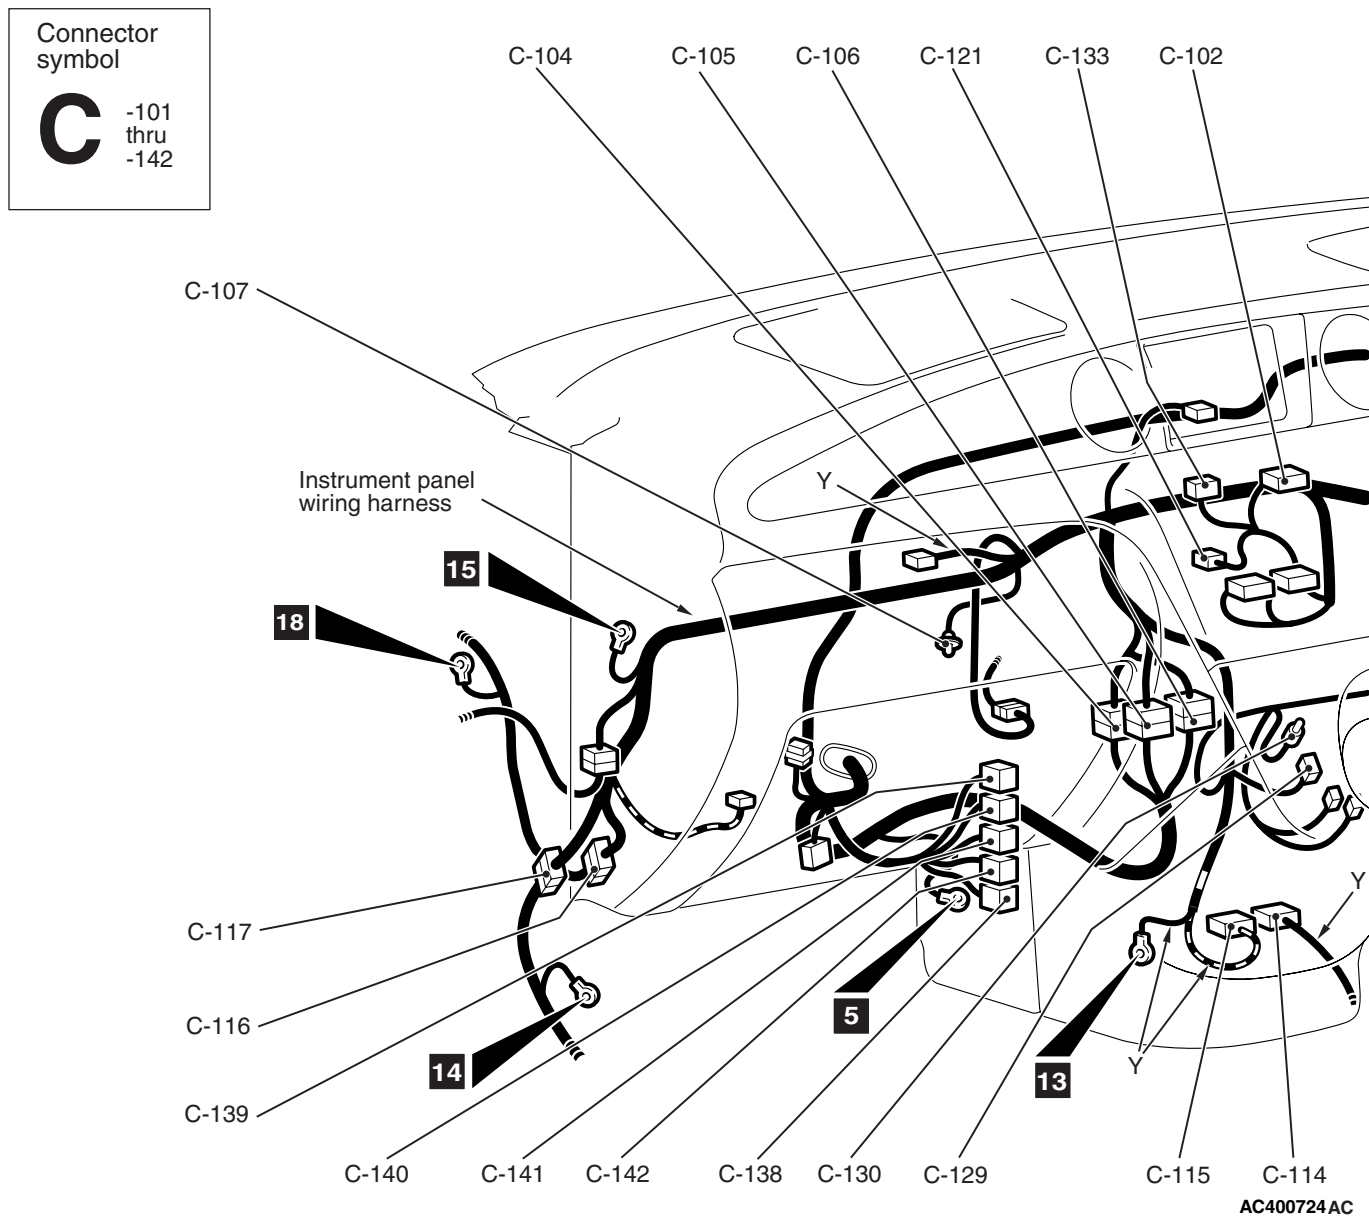

C-101 (4)	Stop lamp switch
C-102 (14)	Spare connector (for audio)
C-104 (16-B)	Instrument panel wiring harness and control wiring harness combination
C-105 (22)	Instrument panel wiring harness and control wiring harness combination
C-106 (19-GR)	Instrument panel wiring harness and control wiring harness combination
C-107 (2-B)	Glove box lamp

C-108 (6-GR)	Headlamp levelling switch
C-114 (22-Y)	SRS-ECU
C-115 (20-Y)	SRS-ECU
C-116 (43)	Instrument panel wiring harness and front wiring harness (LH) combination
C-117 (38)	Instrument panel wiring harness and floor wiring harness (LH) combination
C-119 (6-L)	Rheostat

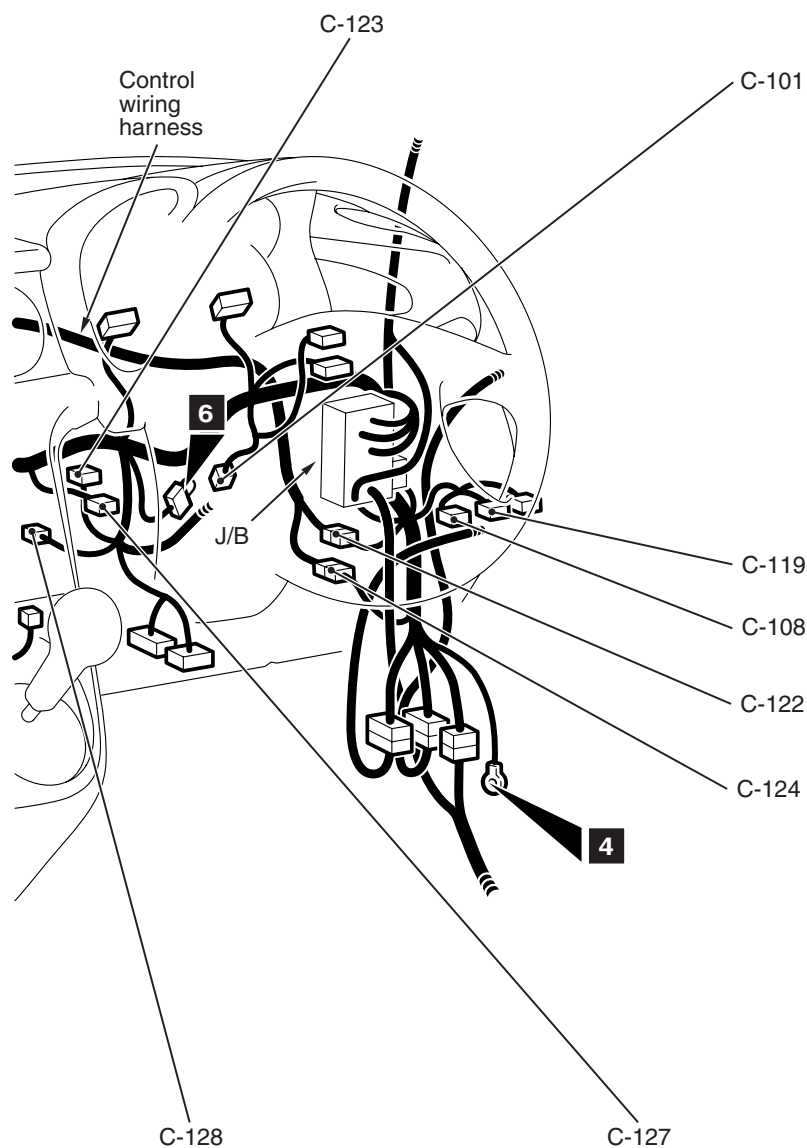

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC400725AE



C-121 (1)	Antenna amplifier
C-122 (2)	Instrument panel wiring harness and control wiring harness combination
C-123 (2)	Photo sensor
C-124 (2)	Instrument panel wiring harness and control wiring harness combination
C-127 (2-GR)	Interior temperature sensor
C-128 (1)	Parking brake switch

C-129 (6)	Shift switch assembly
C-130 (2-B)	Ashtray illumination lamp
C-133 (1)	Spare connector (for audio)
C-138 (26-GR)	Engine-A/T-ECU
C-139 (27-GR)	Engine-A/T-ECU
C-140 (28-GR)	Engine-A/T-ECU
C-141 (29-GR)	Engine-A/T-ECU
C-142 (30-GR)	Engine-A/T-ECU

DASH PANEL <RHD> (CONTINUED)

Connector
symbol**C** -201
thru
-221


J/B (FRONT VIEW)

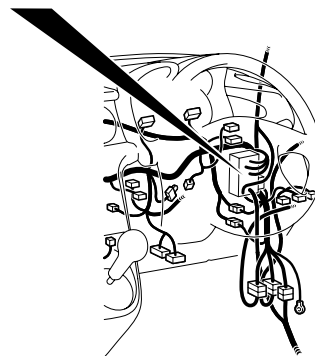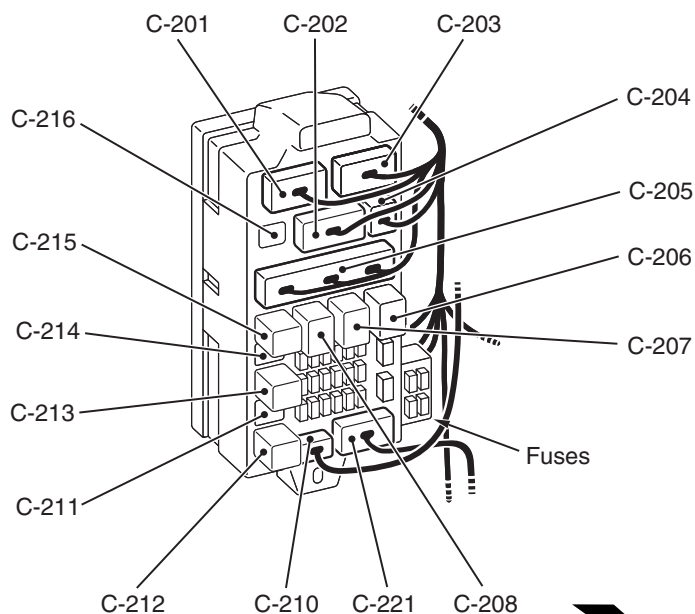


AC403921AB

C-201 (13)	Instrument panel wiring harness and J/B combination	C-205 (28)	Instrument panel wiring harness and J/B combination
C-202 (14)	Instrument panel wiring harness and J/B combination	C-206 (5)	Rear window defogger relay
C-203 (6)	Instrument panel wiring harness and J/B combination	C-207 (5)	Blower relay
C-204 (1-B)	Instrument panel wiring harness and J/B combination	C-208 (5)	Power window relay

J/B (REAR VIEW)

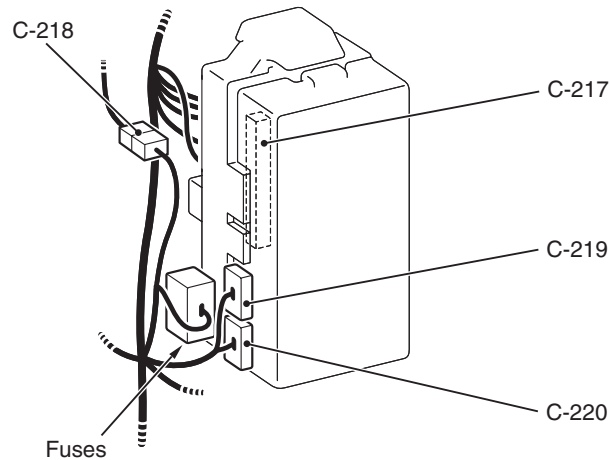


Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

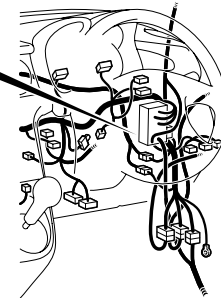


AC403922AC

C-210 (3)	Roof wiring harness and J/B combination	C-217 (20)	ETACS-ECU
C-211 (4)	No connection	C-218 (5)	Instrument panel wiring harness and roof wiring harness combination
C-212 (4)	Rear fog lamp relay	C-219 (24-GR)	ETACS-ECU
C-213 (4)	Fuel pump relay (2)	C-220 (24)	ETACS-ECU
C-214 (4)	No connection	C-221 (15)	Floor wiring harness (RH) and J/B combination
C-215 (4)	Fuel pump relay (1)		
C-216 (2)	No connection		

DASH PANEL <RHD> (CONTINUED)

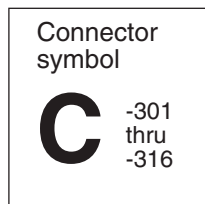


STEERING COLUMN

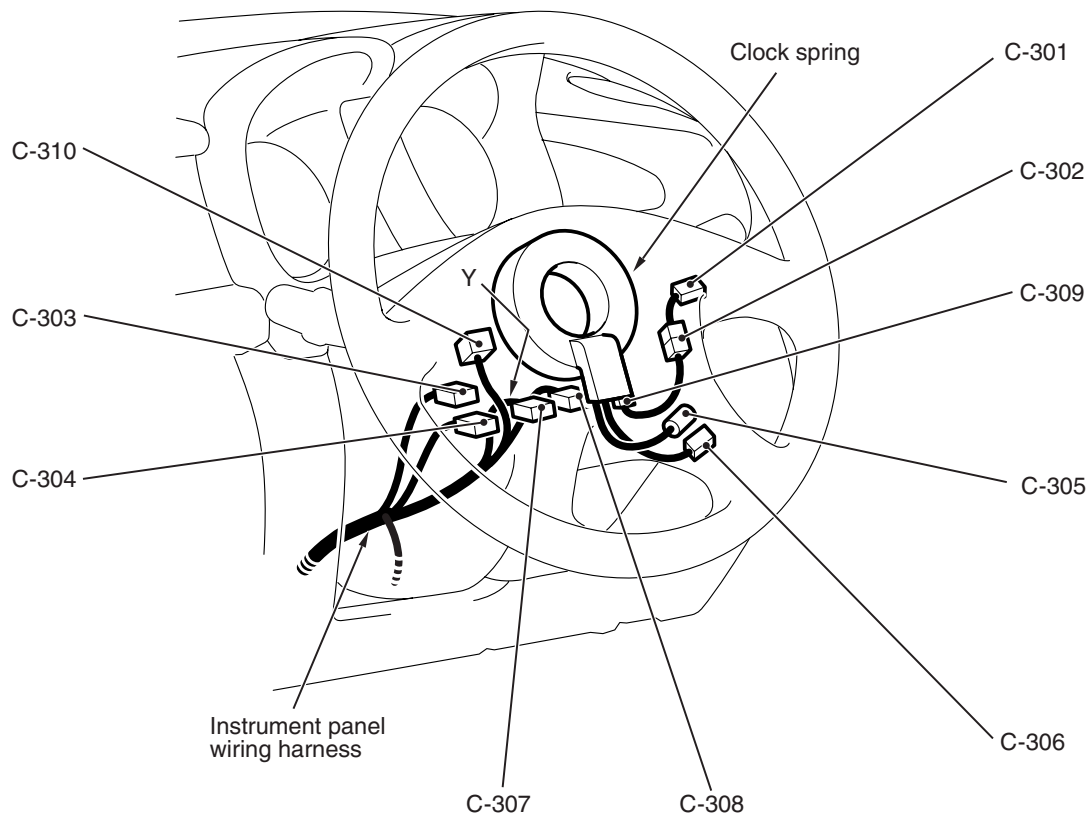

AC400460AB

C-301 (3-Y)	Auto-cruise control switch	C-305 (1)	Horn switch
C-302 (3-B)	Clock spring wiring harness and auto-cruise control switch wiring harness combination	C-306 (2)	Air bag module (squib) (driver's side)
C-303 (6)	Ignition switch	C-307 (4-Y)	Clock spring
C-304 (7)	Key reminder switch	C-308 (6)	Clock spring
		C-309 (5)	Clock spring and clock spring wiring harness combination

HEATER UNIT ASSEMBLY

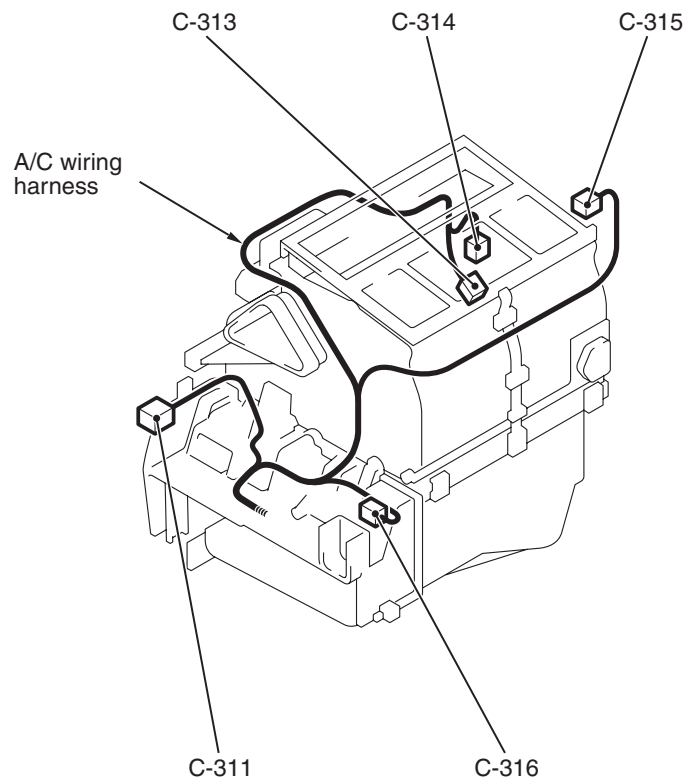

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Grey
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow


AC308211AD

C-310 (10)	Column switch	C-314 (2)	Heater water temperature sensor
C-311 (7)	Outside/inside air selection damper control motor	C-315 (6)	Mode selection damper control motor and potentiometer
C-313 (6)	Air mixing damper control motor and potentiometer	C-316 (2)	Air thermo sensor

FLOOR AND ROOF

FLOOR AND ROOF <LHD>


M1801000901535

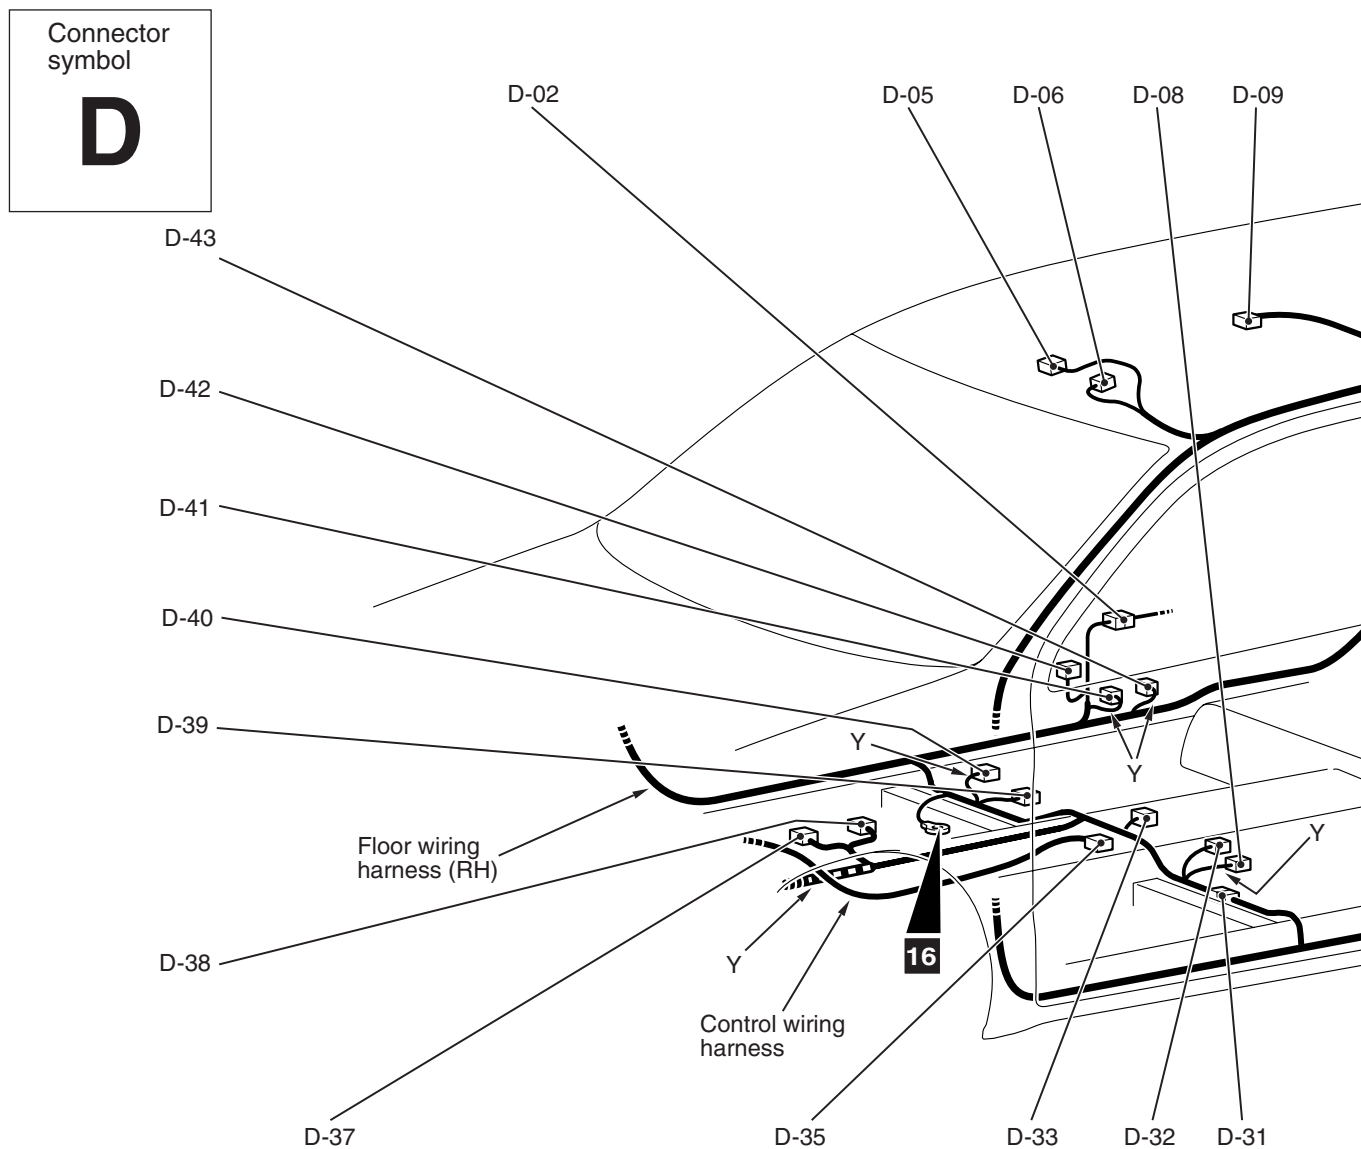

AC400726AB

D-02	(8)	Floor wiring harness (RH) and rear door wiring harness (RH) combination
D-05	(2)	Front room lamp
D-06	(6-B)	Sunroof switch
D-08	(2-R)	Side air bag module (squib) (LH)
D-09	(10)	Sunroof motor assembly
D-10	(3)	Rear door switch (RH)
D-11	(2-GR)	Rear room lamp
D-12	(2)	Fuel gauge unit (sub) <4WD>
D-13	(2-B)	Wheel speed sensor (Rear: RH)

D-14	(6)	Rear combination lamp (RH)
D-15	(3-B)	Fuel gauge unit <2WD>
D-16	(5-GR)	Fuel pump <2WD> or fuel pump and gauge unit (main) <4WD>
D-17	(1)	Accessory socket (1)
D-18	(1-B)	Accessory socket (1)
D-19	(6)	Rear combination lamp (LH)
D-20	(3)	Rear door switch (LH)
D-22	(2-B)	Wheel speed sensor (Rear: LH)

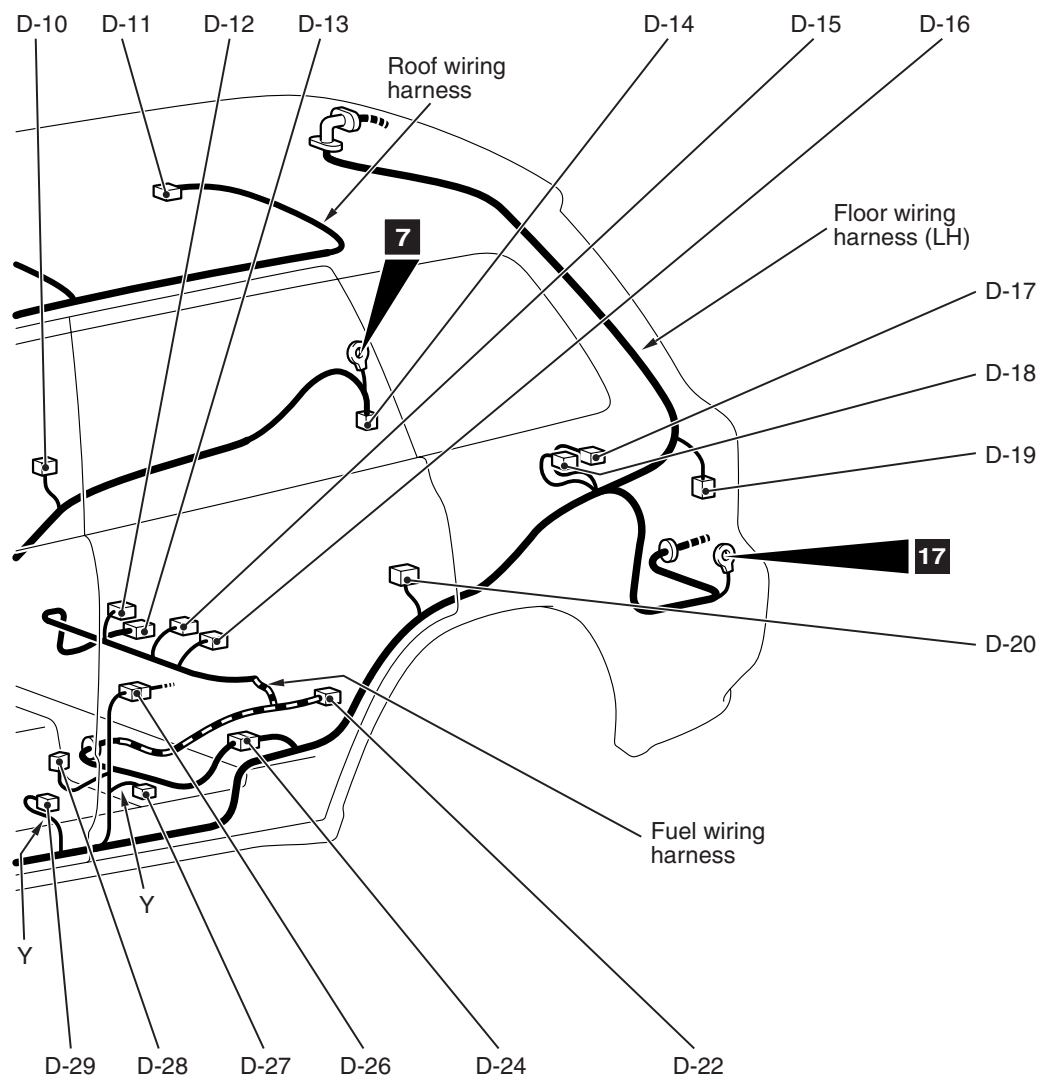


AC400727AC

D-24	(8)	Floor wiring harness (LH) and fuel wiring harness combination	D-33	(1-B)	Parking brake switch
D-26	(8)	Floor wiring harness (LH) and rear door wiring harness (LH) combination	D-35	(3-B)	G-sensor
D-27	(2)	Side impact sensor (LH)	D-37	(2)	No connection
D-28	(3)	Front door switch (LH)	D-38	(9)	Heated seat switch
D-29	(2-B)	Seat belt pre-tensioner (LH)	D-39	(3-B)	Heated seat assembly (RH)
D-31	(16)	Floor wiring harness (RH) and floor wiring harness (LH) combination	D-40	(2-R)	Side air bag module (squib) (RH)
D-32	(3-B)	Heated seat assembly (LH)	D-41	(2)	Side impact sensor (RH)
			D-42	(3)	Front door switch (RH)
			D-43	(2-B)	Seat belt pre-tensioner (RH)

FLOOR AND ROOF <RHD>


M1801000901546

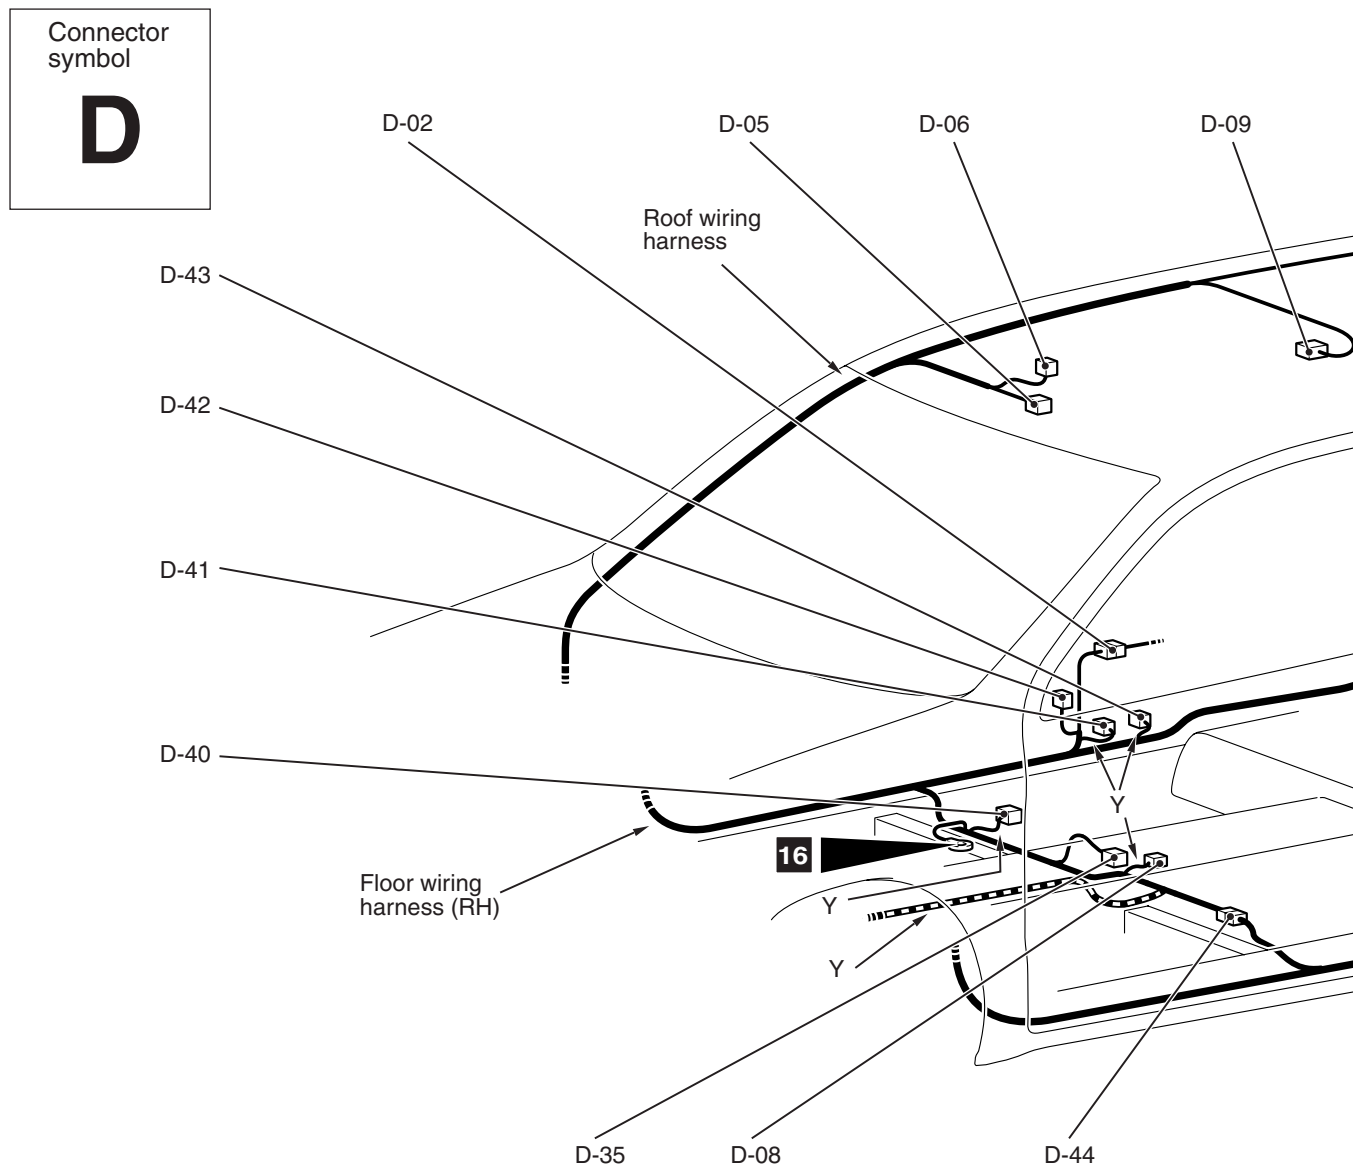

AC307684AB

D-02	(8)	Floor wiring harness (RH) and rear door wiring harness (RH) combination
D-05	(2)	Front room lamp
D-06	(6-B)	Sunroof switch
D-08	(2-R)	Side air bag module (squib) (LH)
D-09	(10)	Sunroof motor assembly
D-10	(3)	Rear door switch (RH)
D-11	(2-GR)	Rear room lamp

D-12	(2)	Fuel gauge unit (sub)
D-13	(2-B)	Wheel speed sensor (Rear: RH)
D-14	(6)	Rear combination lamp (RH)
D-16	(5-GR)	Fuel pump and gauge unit (main)
D-17	(1)	Accessory socket (1)
D-18	(1-B)	Accessory socket (1)
D-19	(6)	Rear combination lamp (LH)

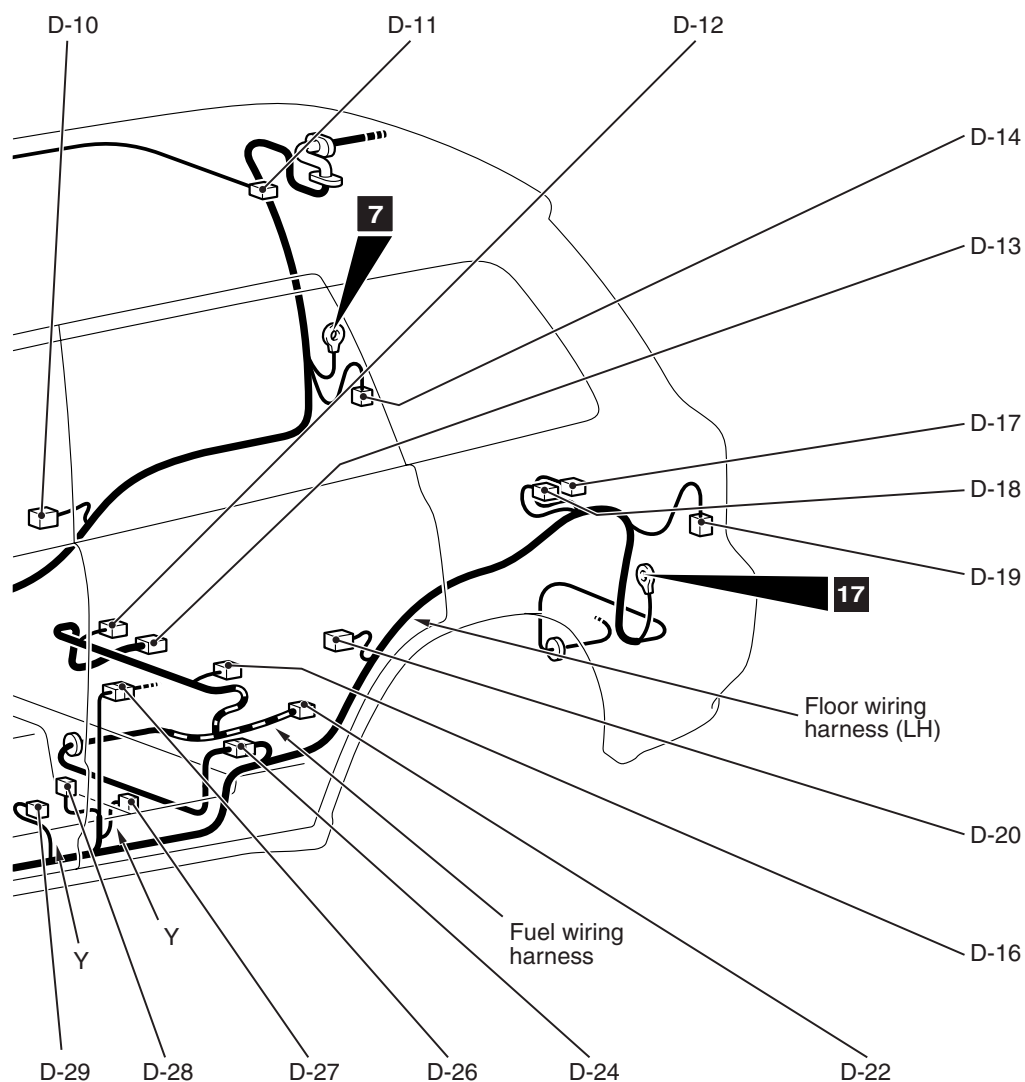


AC503014AB

D-20	(3)	Rear door switch (LH)	D-29	(2-B)	Seat belt pre-tensioner (LH)
D-22	(2-B)	Wheel speed sensor (Rear: LH)	D-35	(3-B)	G-sensor
D-24	(8)	Floor wiring harness (LH) and fuel wiring harness combination	D-40	(2-R)	Side air bag module (squib) (RH)
D-26	(8)	Floor wiring harness (LH) and rear door wiring harness (LH) combination	D-41	(2)	Side impact sensor (RH)
D-27	(2)	Side impact sensor (LH)	D-42	(3)	Front door switch (RH)
D-28	(3)	Front door switch (LH)	D-43	(2-B)	Seat belt pre-tensioner (RH)
			D-44	(4)	Floor wiring harness (RH) and floor wiring harness (LH) combination


DOOR

DOOR <LHD>

M1801001401414

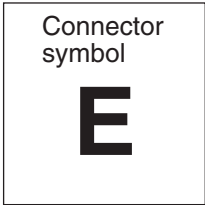


Driver's side

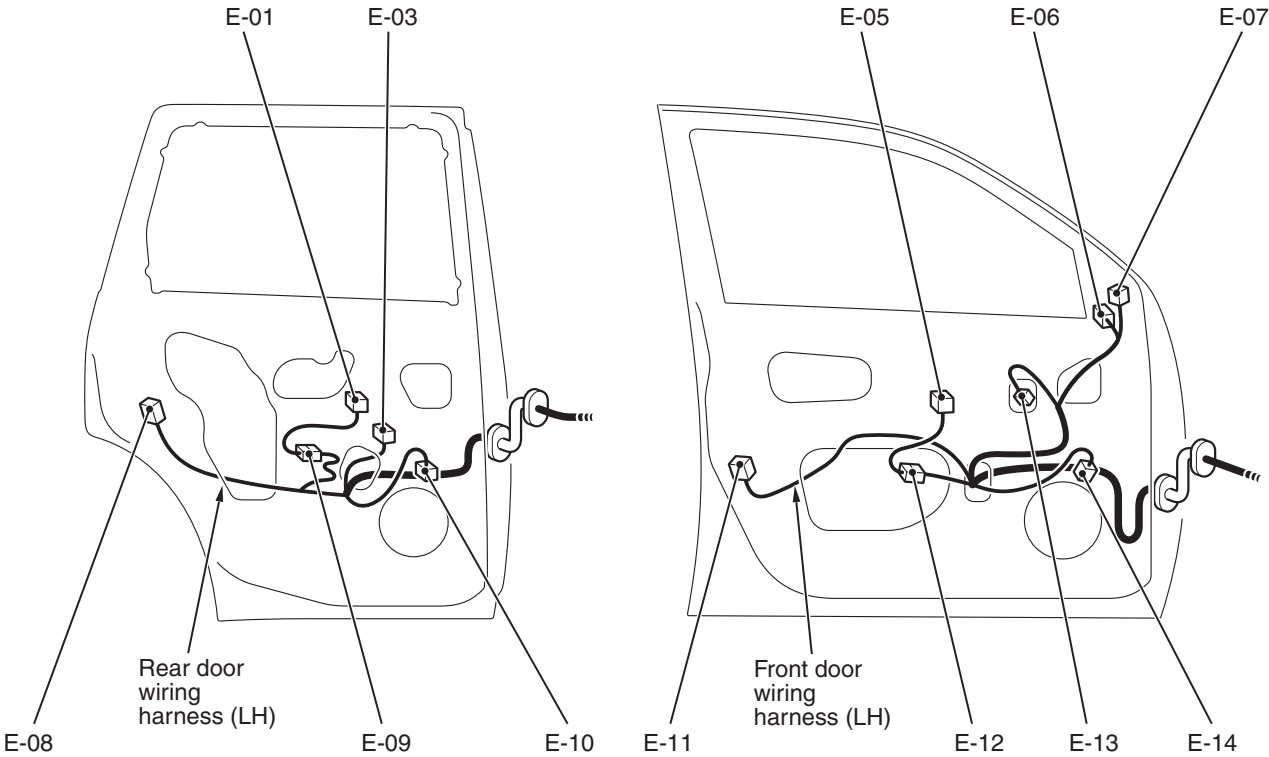

AC207961AD

E-01	(8)	Power window sub switch (Rear: LH)	E-11	(6-B)	Door lock actuator (Front: LH)
E-03	(6-GR)	Power window motor (Rear: LH)	E-12	(16)	Front door wiring harness (LH) and front door sub wiring harness (LH) combination
E-05	(14)	Power window main switch	E-13	(6-GR)	Power window motor (Front: LH)
E-06	(7)	Remote controlled mirror (LH)	E-14	(2)	Front door speaker (LH)
E-07	(2)	Tweeter (LH)	E-15	(2)	Tweeter (RH)
E-08	(6-B)	Door lock actuator (Rear: LH)			
E-09	(8)	Rear door wiring harness (LH) and rear door sub wiring harness (LH) combination			
E-10	(2)	Rear door speaker (LH)			

Passenger's side

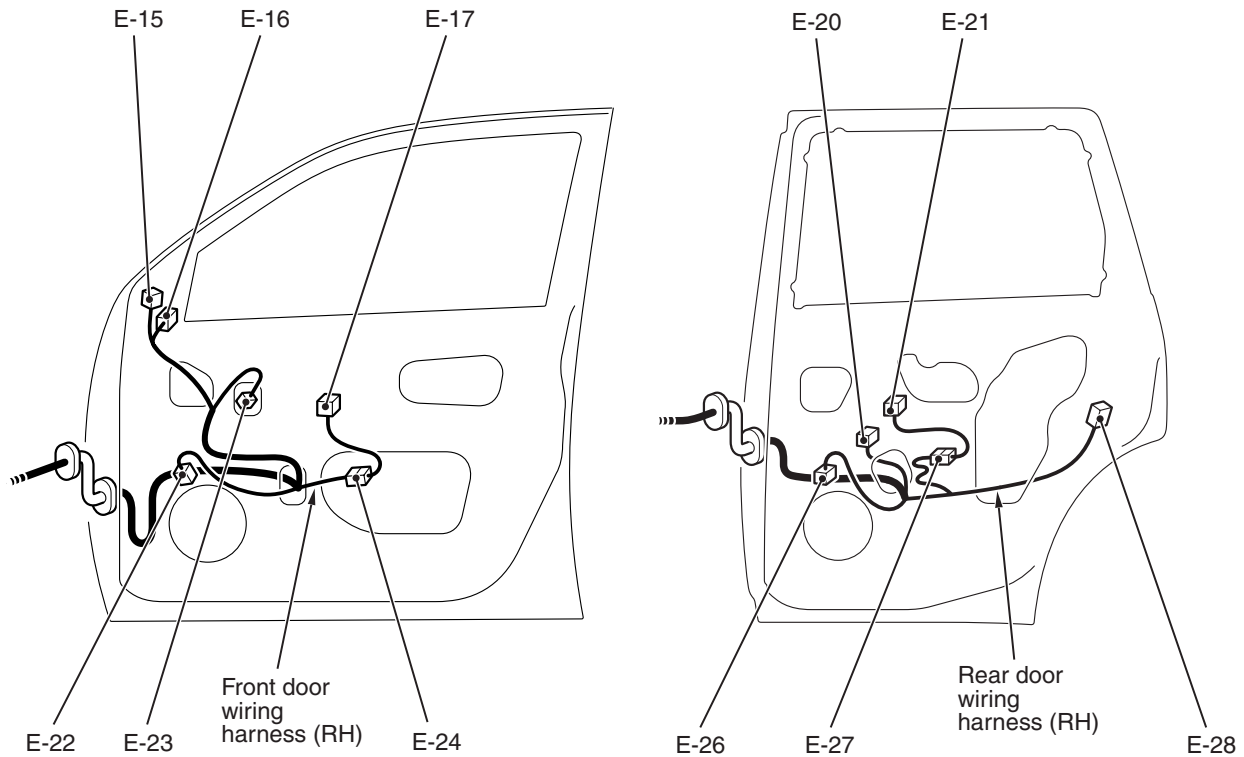

AC502031AB

E-16	(7)	Remote controlled mirror (RH)
E-17	(8)	Power window sub switch (Front: RH)
E-20	(6-GR)	Power window motor (Rear: RH)
E-21	(8)	Power window sub switch (Rear: RH)
E-22	(2)	Front door speaker (RH)
E-23	(6-GR)	Power window motor (Front: RH)
E-24	(8)	Front door wiring harness (RH) and front door sub wiring harness (RH) combination


E-26	(2)	Rear door speaker (RH)
E-27	(8)	Rear door wiring harness (RH) and rear door sub wiring harness (RH) combination
E-28	(6-B)	Door lock actuator (Rear: RH)

DOOR <RHD>

M1801001401425

Connector
symbol**E**

Driver's side

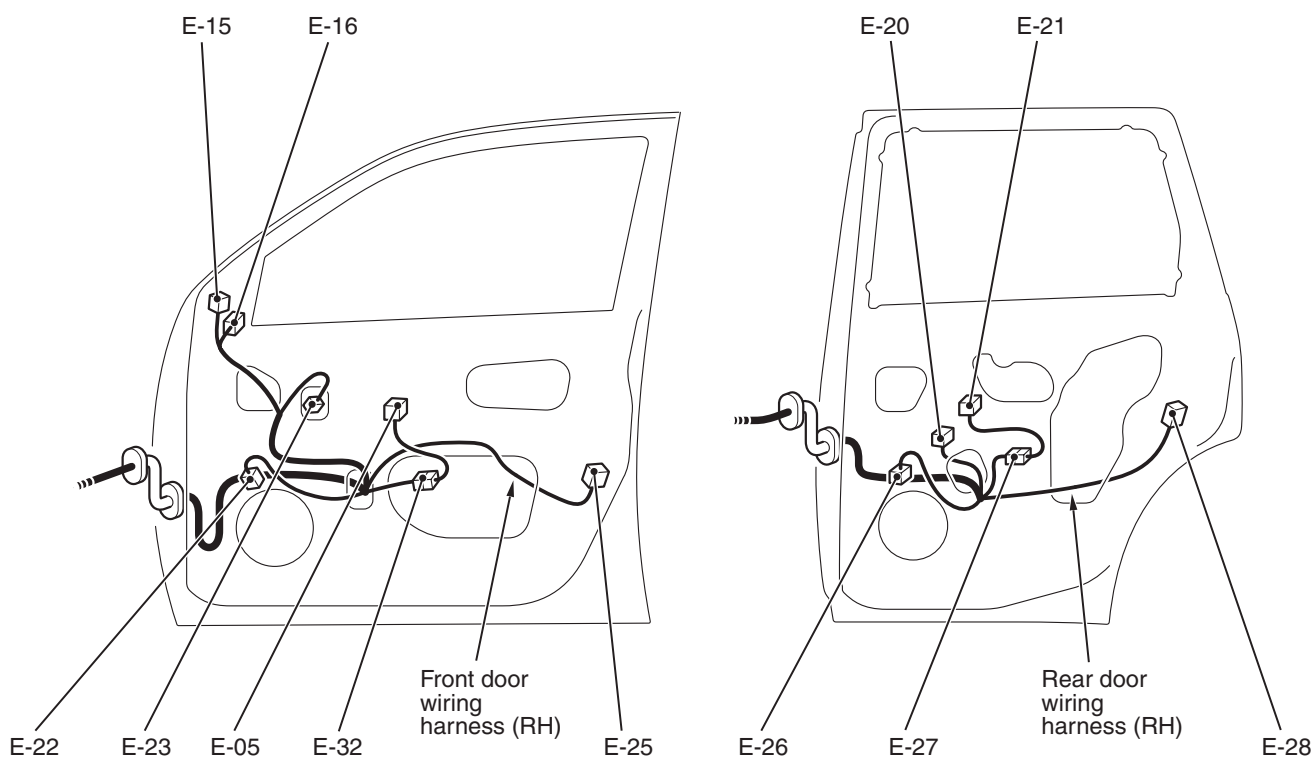


AC207963AC

E-01	(8)	Power window sub switch (Rear: LH)
E-03	(6-GR)	Power window motor (Rear: LH)
E-05	(14)	Power window main switch
E-06	(7)	Remote controlled mirror (LH)
E-07	(2)	Tweeter (LH)
E-08	(6-B)	Door lock actuator (Rear: LH)
E-09	(8)	Rear door wiring harness (LH) and rear door sub wiring harness (LH) combination

E-10	(2)	Rear door speaker (LH)
E-11	(6-B)	Door lock actuator (Front: LH)
E-13	(6-GR)	Power window motor (Front: LH)
E-14	(2)	Front door speaker (LH)
E-15	(2)	Tweeter (RH)
E-16	(7)	Remote controlled mirror (RH)

Passenger's side

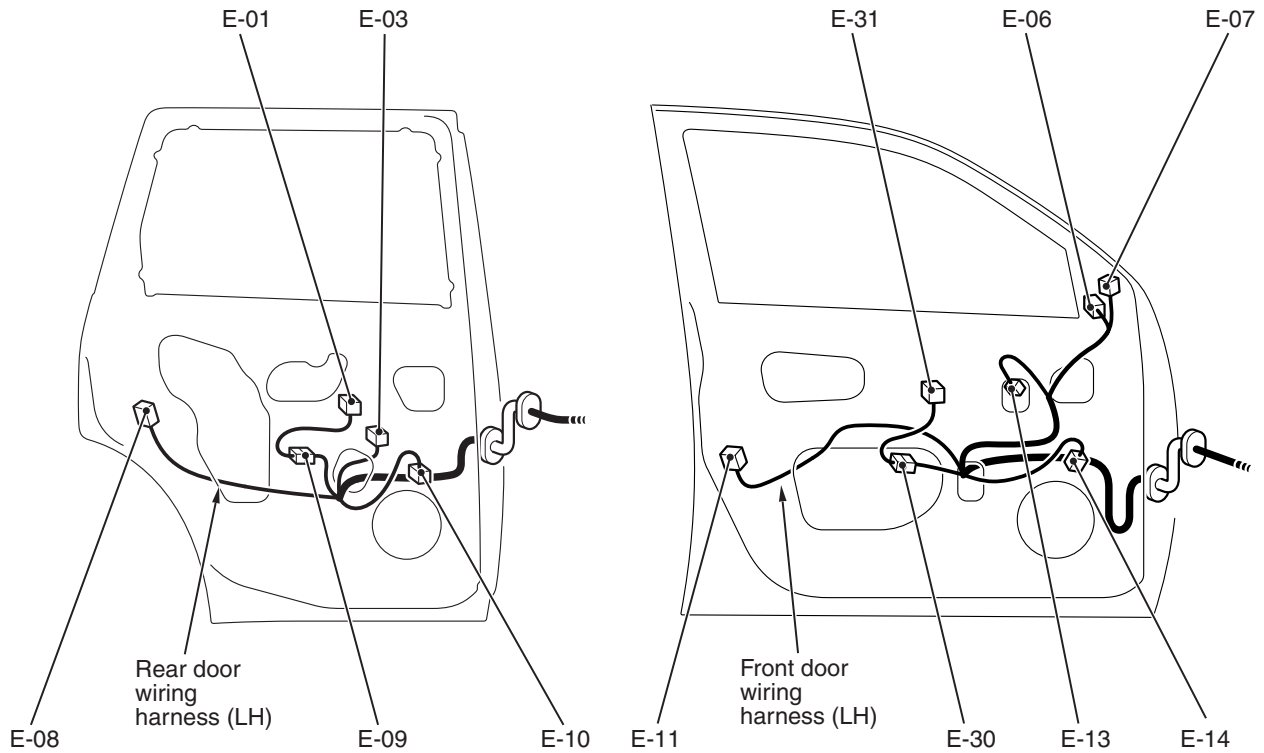


AC502032AB

E-20	(6-GR)	Power window motor (Rear: RH)
E-21	(8)	Power window sub switch (Rear: RH)
E-22	(2)	Front door speaker (RH)
E-23	(6-GR)	Power window motor (Front: RH)
E-25	(6-B)	Door lock actuator (Front: RH)
E-26	(2)	Rear door speaker (RH)
E-27	(8)	Rear door wiring harness (RH) and rear door sub wiring harness (RH) combination
E-28	(6-B)	Door lock actuator (Rear: RH)

E-30	(8)	Front door wiring harness (LH) and front door sub wiring harness (LH) combination
E-31	(8)	Power window sub switch (Front: LH)
E-32	(16)	Front door wiring harness (RH) and front door sub wiring harness (RH) combination

TAILGATE

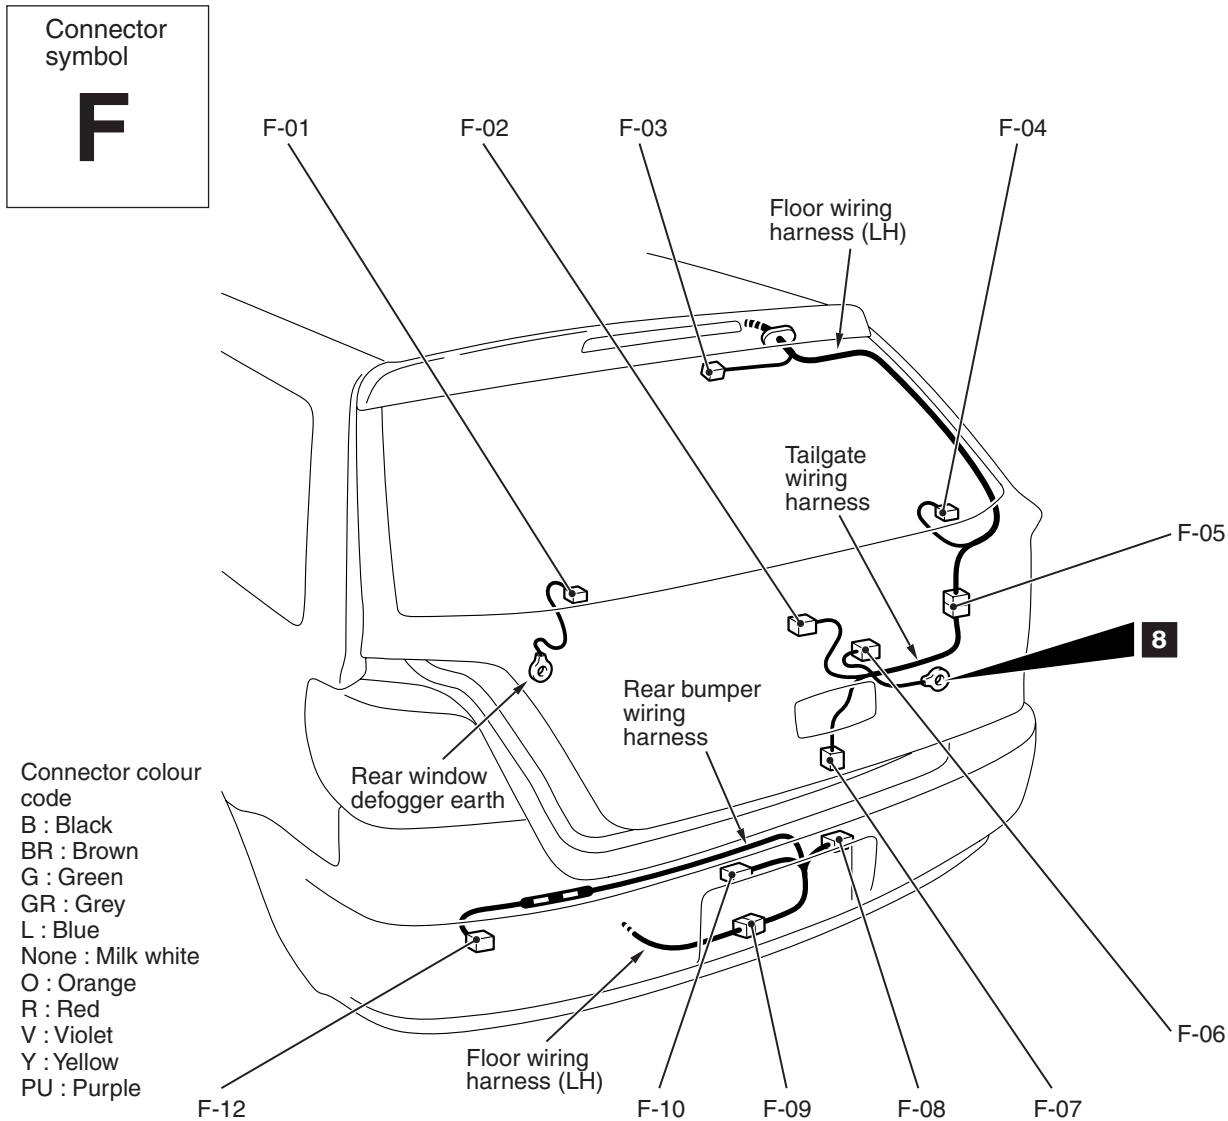

AC211759AD

F-01	(1)	Rear window defogger (–)	F-07	(1-B)	Tailgate switch
F-02	(4)	Rear wiper motor	F-08	(2-GR)	Licence plate lamp (RH)
F-03	(2)	High-mounted stop lamp	F-09	(4-GR)	Floor wiring harness (LH) and rear bumper wiring harness combination
F-04	(1-B)	Rear window defogger (+)	F-10	(2-GR)	Licence plate lamp (LH)
F-05	(10)	Floor wiring harness (LH) and tailgate wiring harness combination	F-12	(2-B)	Rear fog lamp
F-06	(2-B)	Tailgate lock actuator			