

GROUP 70

COMPONENT
LOCATIONS

 
CONTENTS

ECU	70-2	INSPECTION CONNECTOR	70-17
RELAY	70-6	FUSIBLE LINK AND FUSE	70-18
SENSOR.....	70-7	EARTH	70-19
SOLENOID VALVE	70-15	EARTH CABLE.....	70-24

ECU

M1701000500195



Name		Symbol	Name	Symbol
A/C-ECU		G	ETACS-ECU	H
ABS-ECU	LHD	A	Fan controller	D
	RHD	B	Front-ECU	C
Blower linear controller <Automatic A/C>	LHD	J	Immobilizer-ECU	F
	RHD	K	Power window main switch (Incorporating CPU)	M
Column switch (Incorporating column-ECU)		E	Power window sub switch (Incorporating CPU)	L
Engine-A/T-ECU <A/T>	LHD	J	SRS-ECU	I
	RHD	K	Sunroof motor assembly (Incorporating ECU)	N
Engine-ECU <M/T>		J		

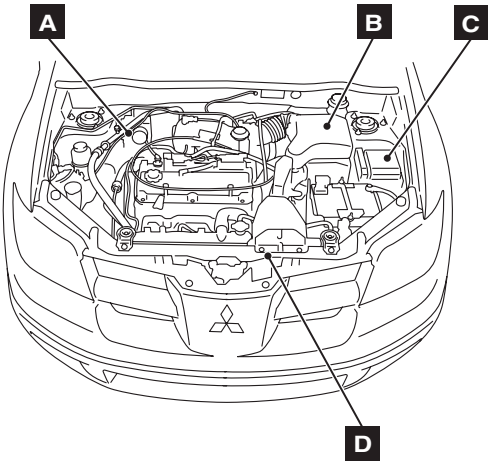



AC400777AB

<LHD>
  
<RHD>

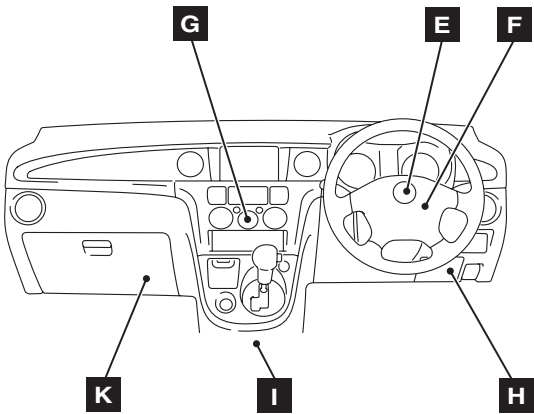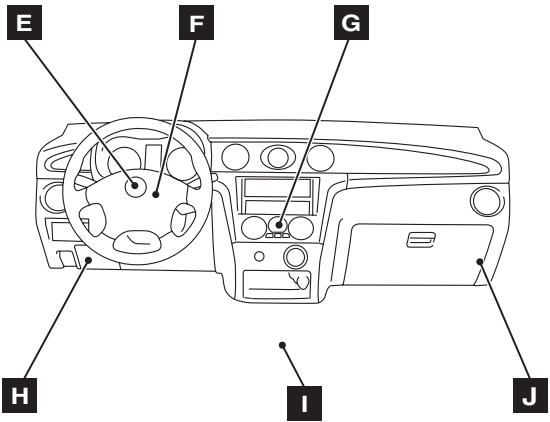







AC400781AB







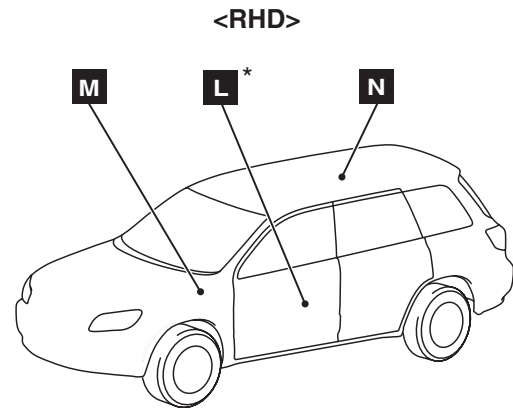 
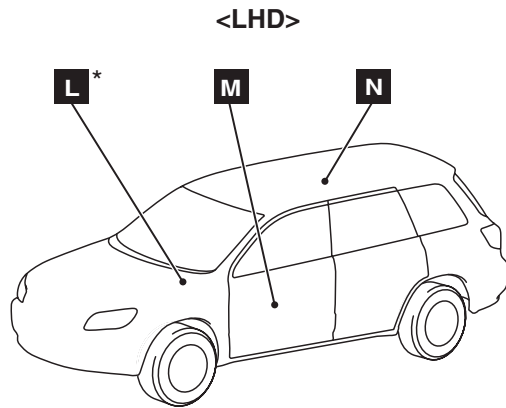 



AC400782 AB

NOTE:

               **:also equipped at the rear door.*

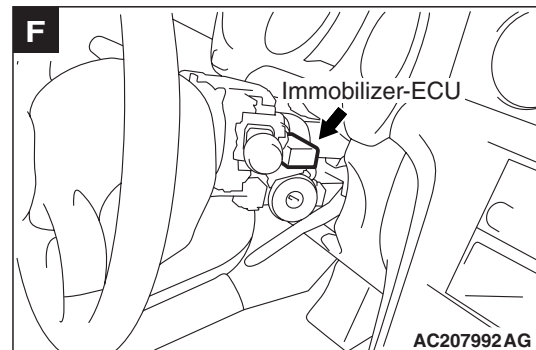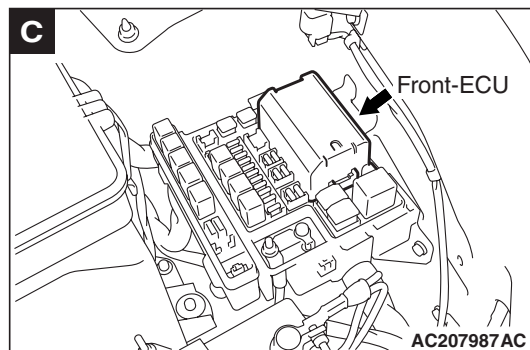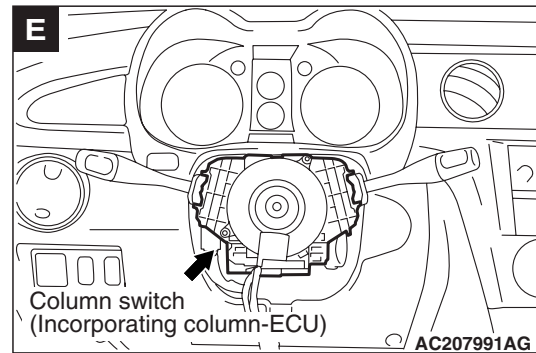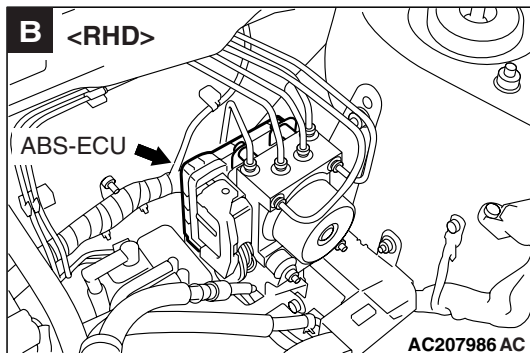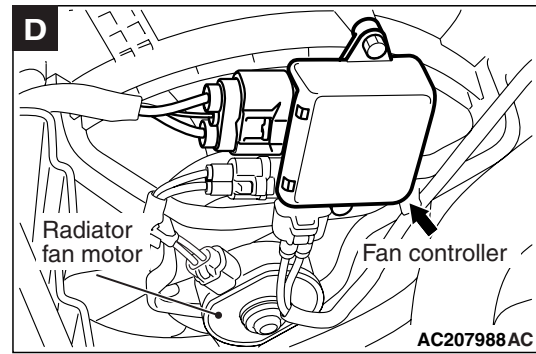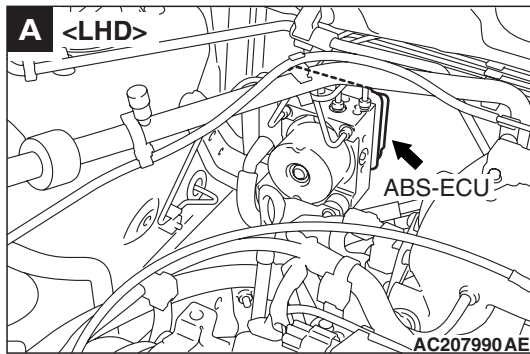


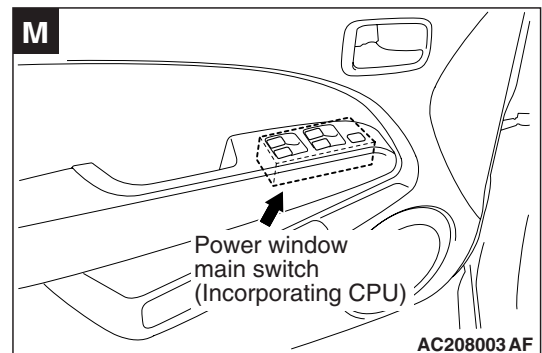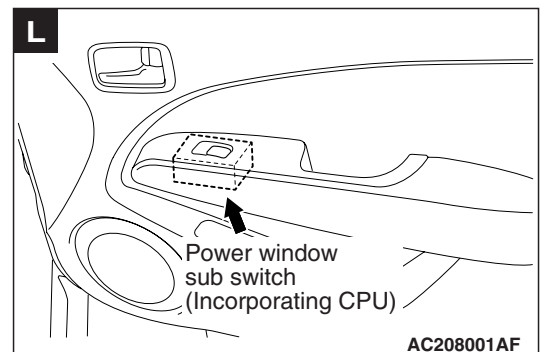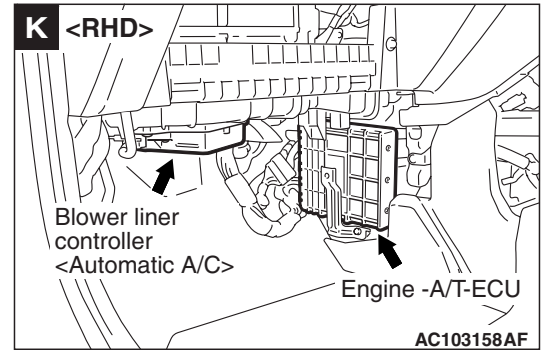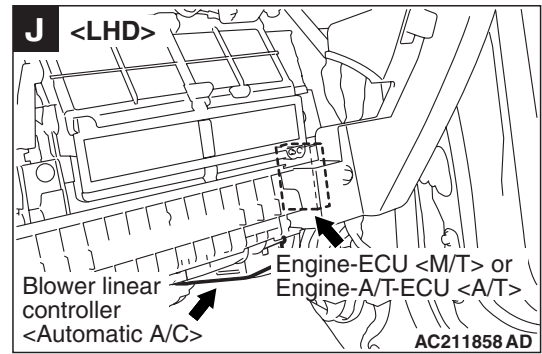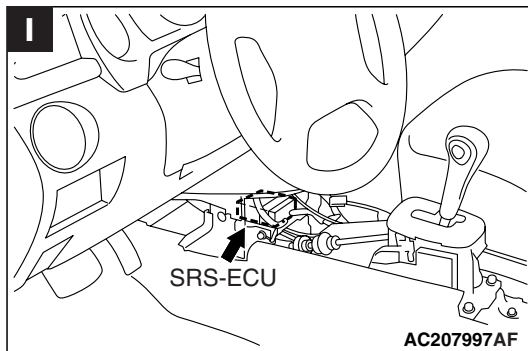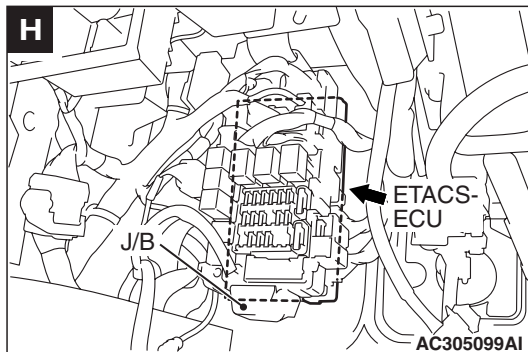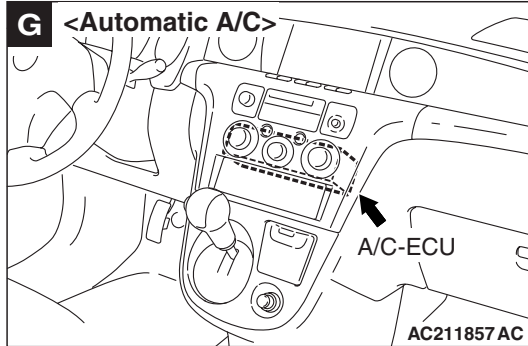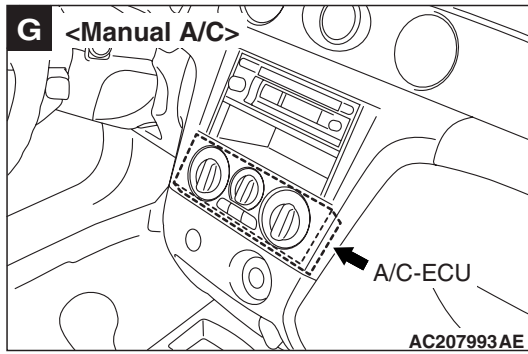


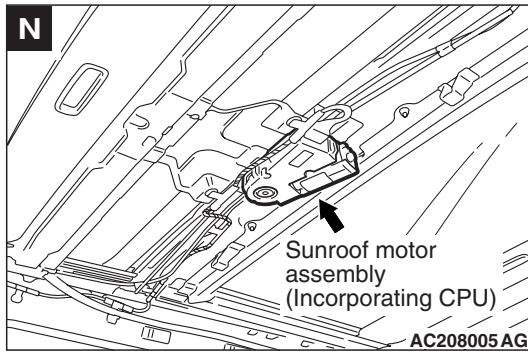


RELAY

Name	Symbol	Name	Symbol
A/C compressor relay	A	Fuel pump relay (1)	B
A/T control relay	A	Fuel pump relay (2)	B
Accessory socket relay	A	Heated seat relay	B
Blower relay	B	Horn relay	A
Rear window defogger relay	B	Power window relay	B
Engine control relay	A	Rear fog lamp relay	B
Fan control relay	A	Throttle valve control servo relay	A
Front fog lamp relay	A	Wiper deicer relay	A

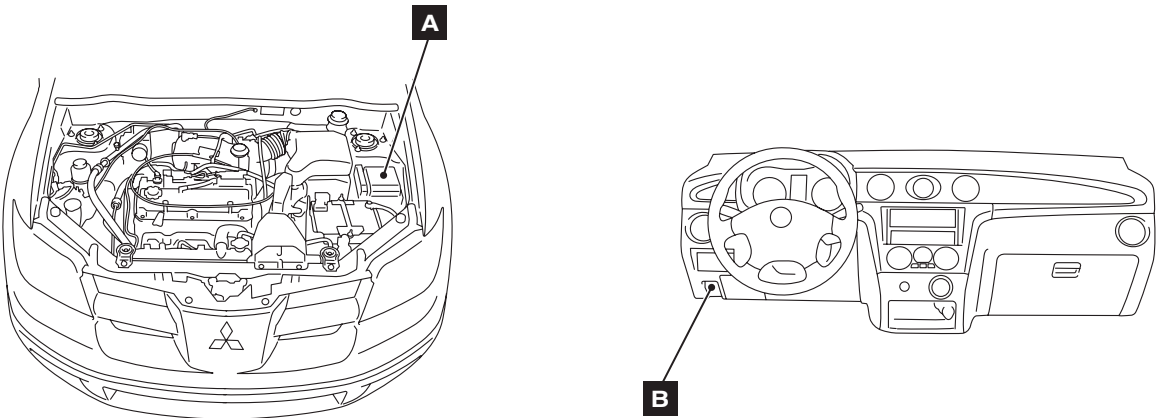 

AC207979 AH

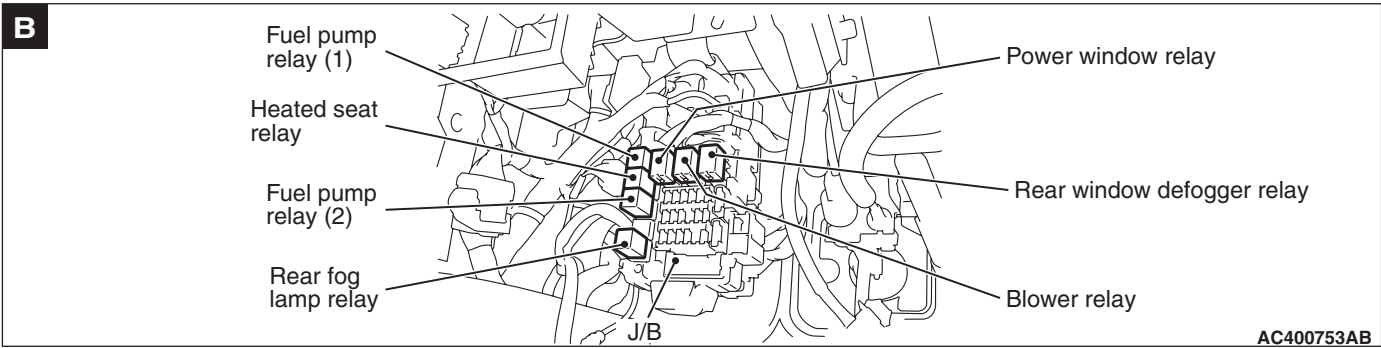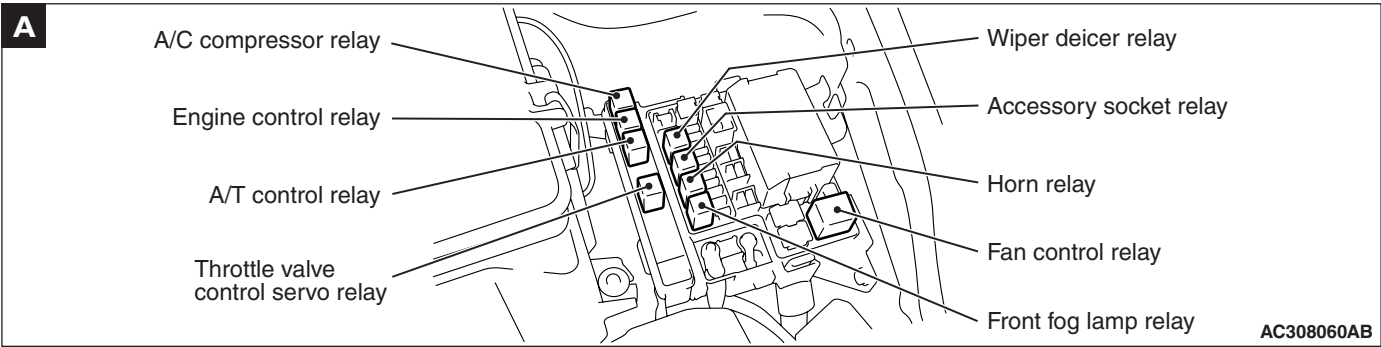  


SENSOR


M1701000600675


Name	Symbol	Name	Symbol
A/C pressure sensor	A	Manifold absolute pressure sensor <4G69>	B
Accelerator pedal position sensor <4G63-Turbo and 4G69>	A	No.1, 4 cylinder oxygen sensor (Front) <4G69>	K
Air flow sensor	G	No.1, 4 cylinder oxygen sensor (Rear) <4G69>	K
Air thermo sensor	R	No.2, 3 cylinder oxygen sensor (Front) <4G69>	K
Camshaft position sensor	L	No.2, 3 cylinder oxygen sensor (Rear) <4G69>	K
Clutch oil pressure sensor <4G63-Turbo>	S	Output shaft speed sensor <A/T>	N
Crank angle sensor	I	Outside thermo sensor	M
Detonation sensor	C	Oxygen sensor (Front) <4G63>	J
Electronic-controlled throttle valve (Incorporating throttle position sensor) <4G63-Turbo and 4G69>	E	Oxygen sensor (Rear) <4G63>	U
Engine coolant temperature sensor	L	Photo sensor <Automatic A/C>	P
Front impact sensor (LH)	O	Side impact sensor	W
Front impact sensor (RH)	H	Throttle position sensor <4G63-Non-Turbo>	D
G-sensor <ABS-4WD>	V	Vehicle speed sensor <M/T>	F
Heater water temperature sensor <Automatic A/C>	R	Wheel speed sensor (Front)	T
Input shaft speed sensor <A/T>	N	Wheel speed sensor (Rear)	X
Interior temperature sensor <Automatic A/C>	Q		
 
<4G63-Non-Turbo>


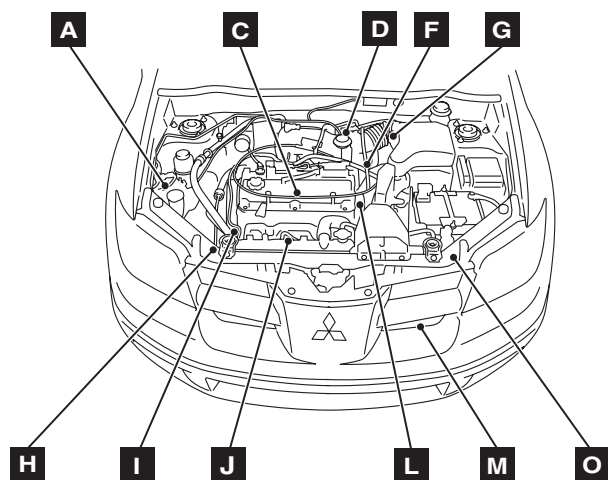


<4G63-Turbo>

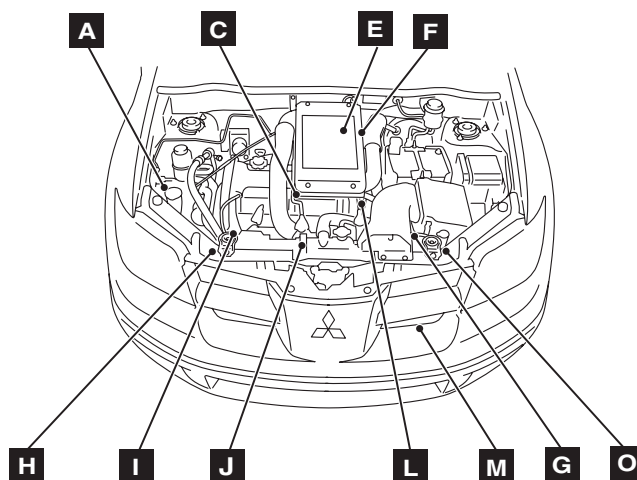 

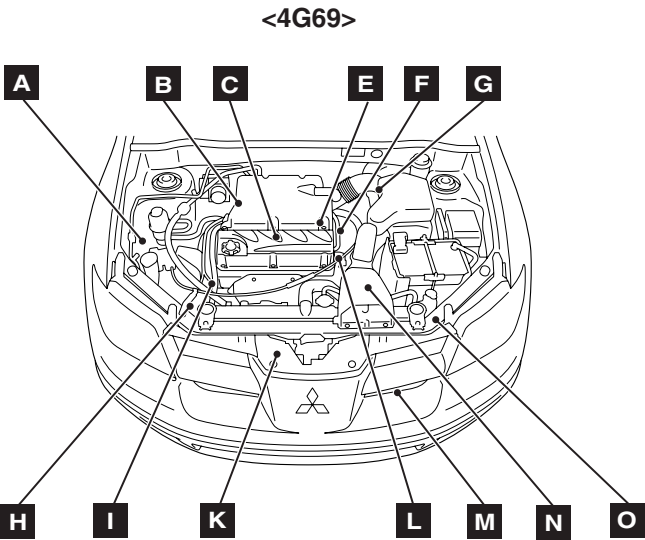 



AC400812AB







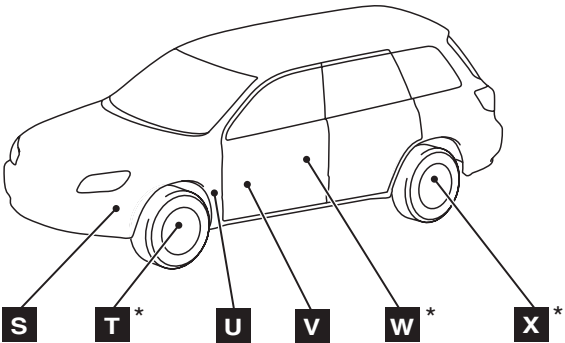 
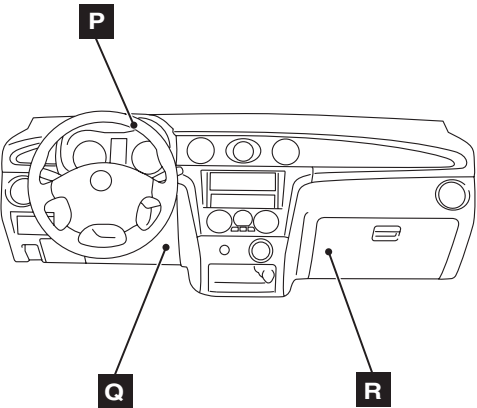 










AC308090AC





NOTE:

                       
 
 
 
 
 
 
 
*:also equipped at the right side.

 
 
 
 
 
 
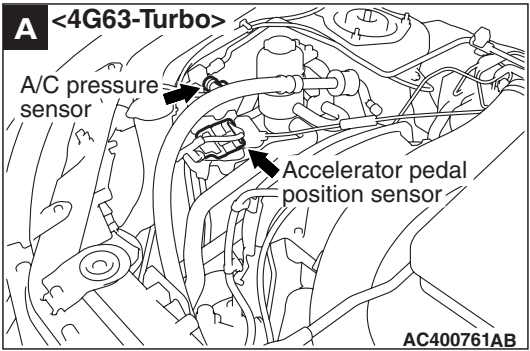 
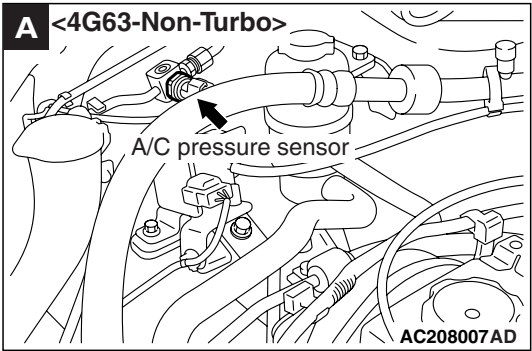 


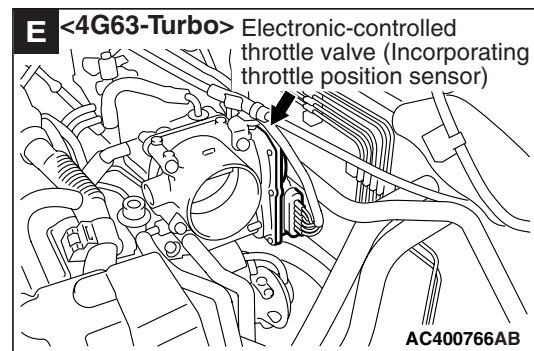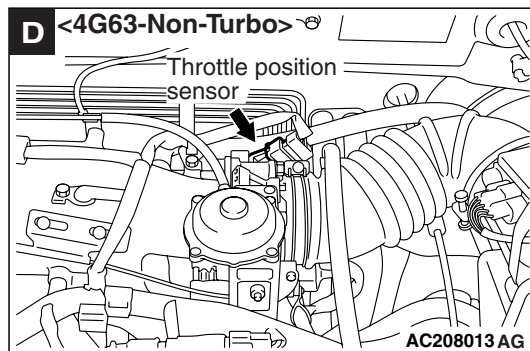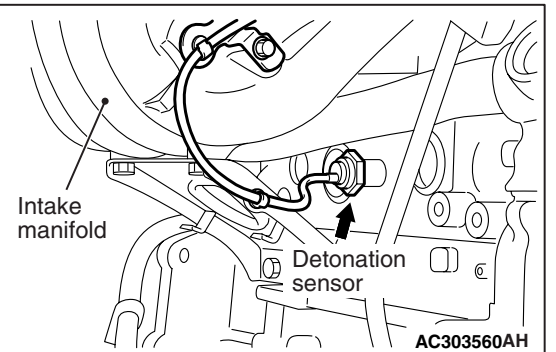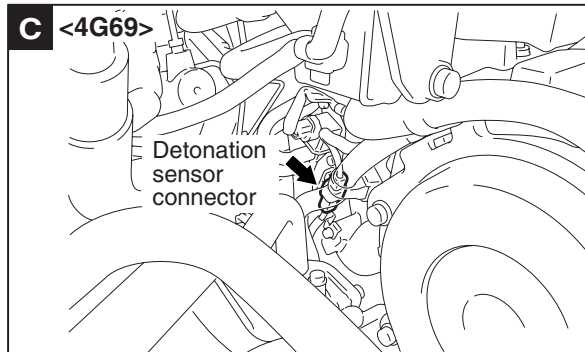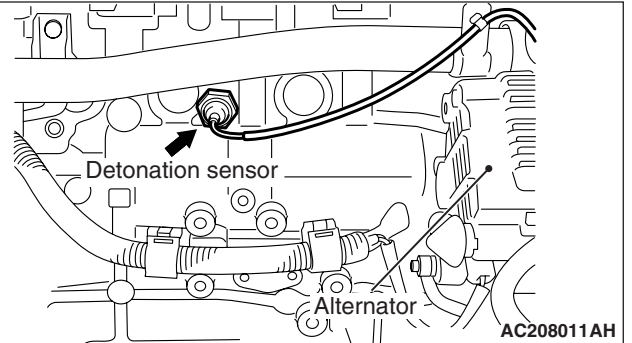 
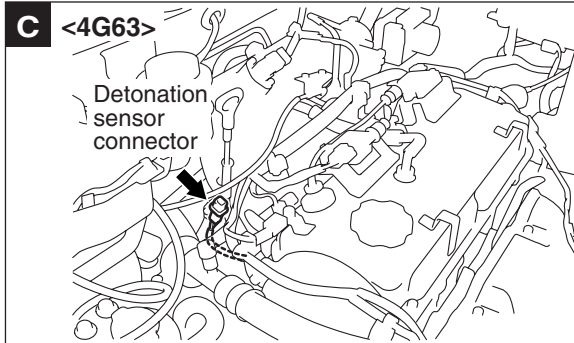 
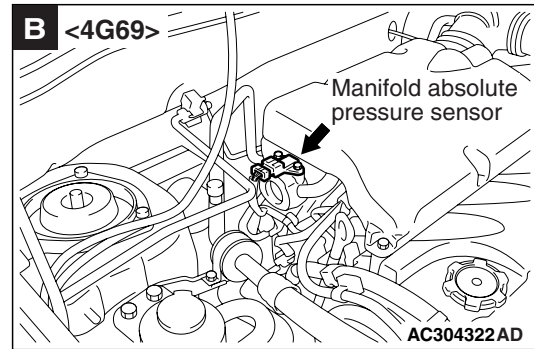 
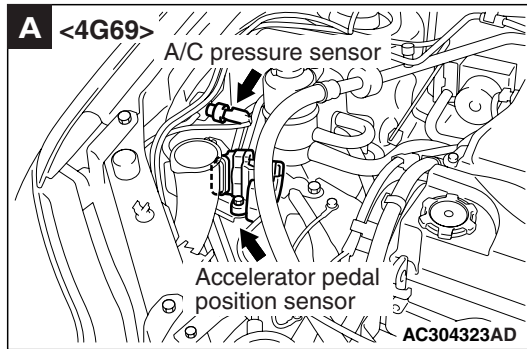 


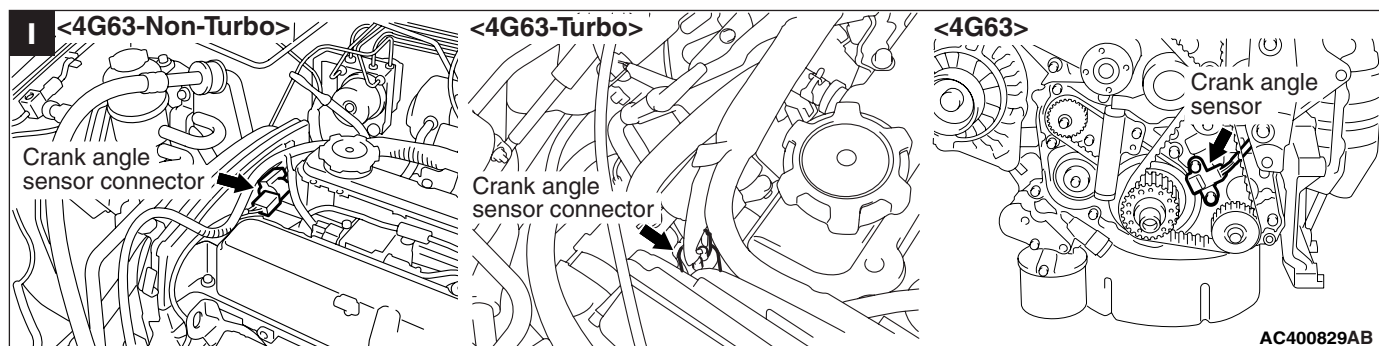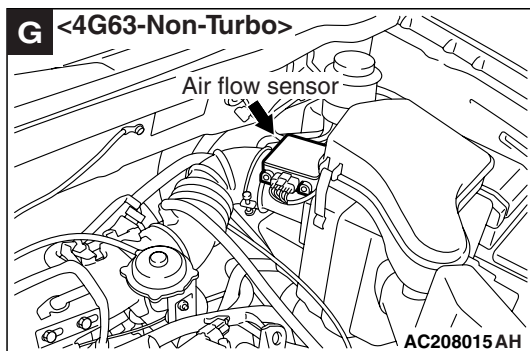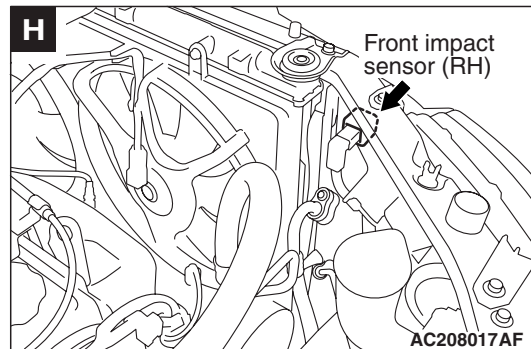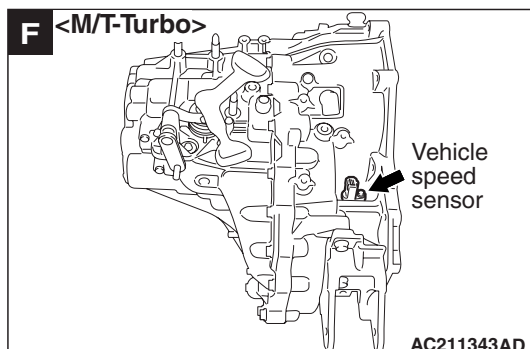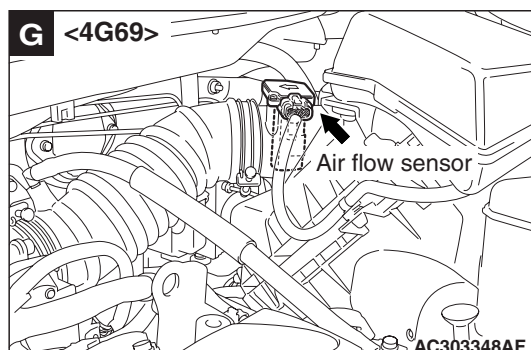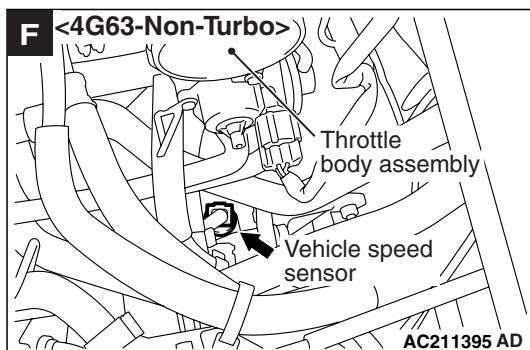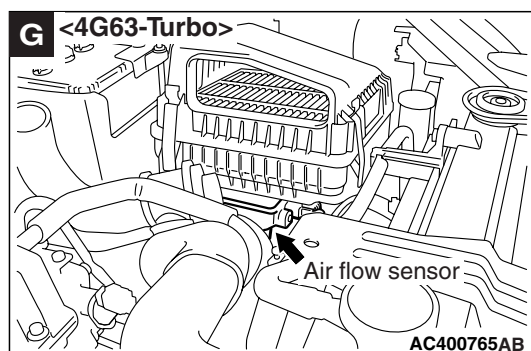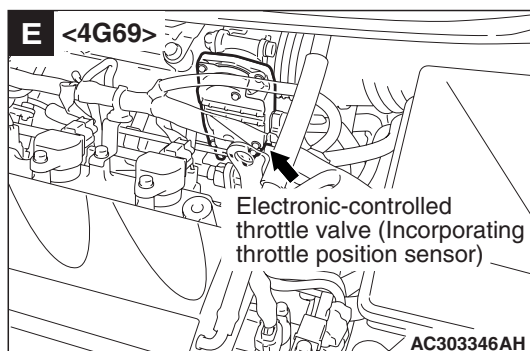

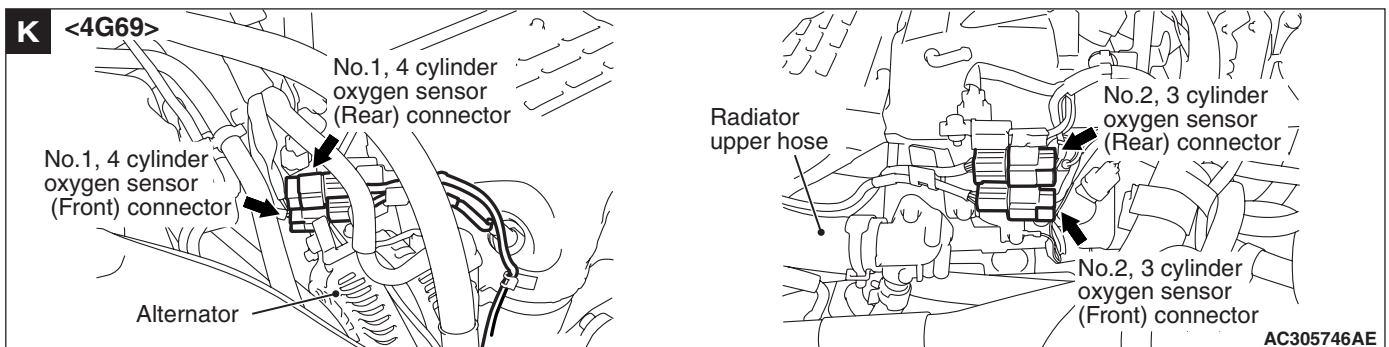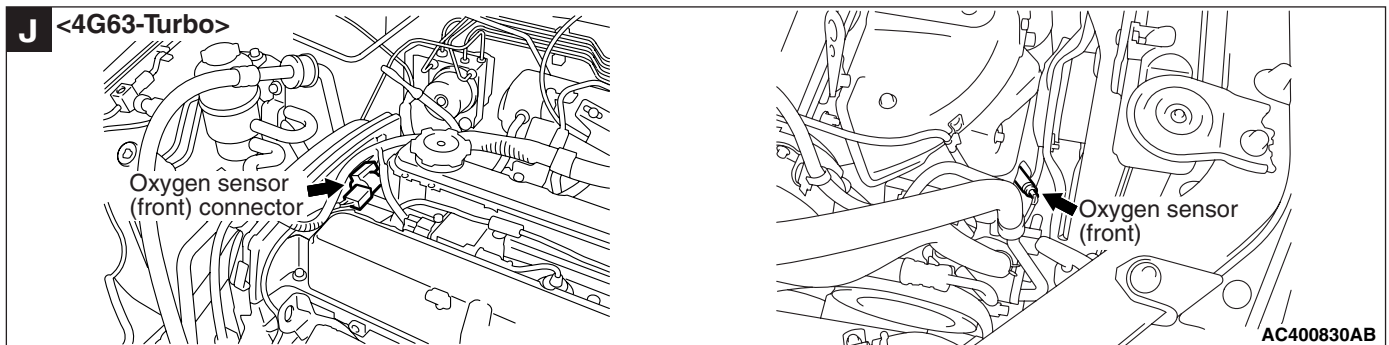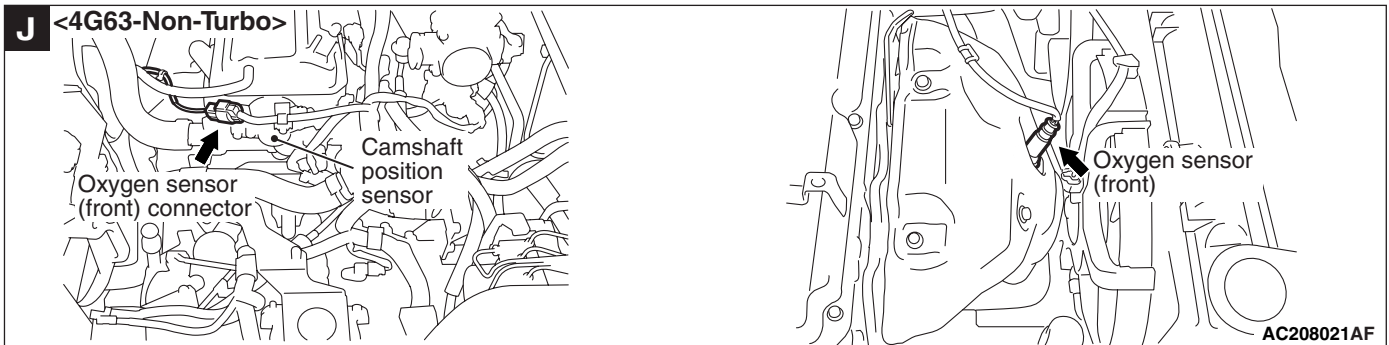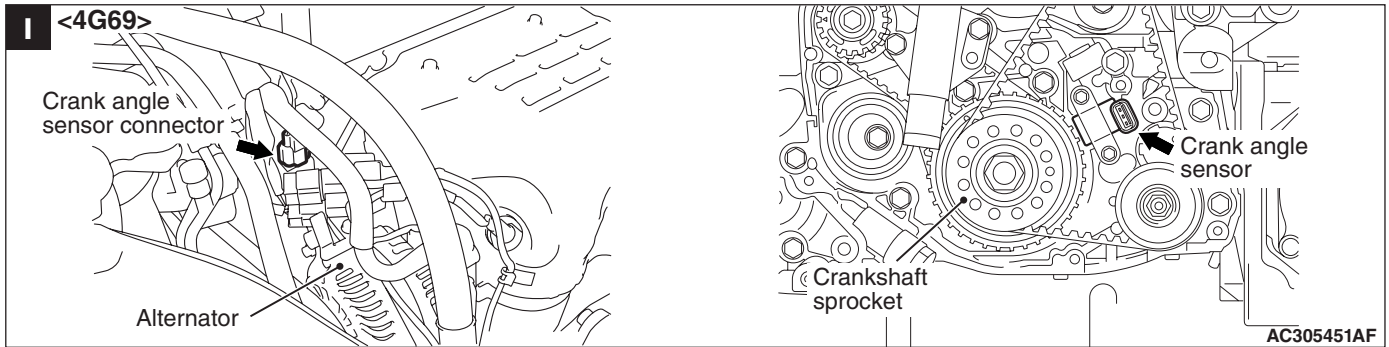

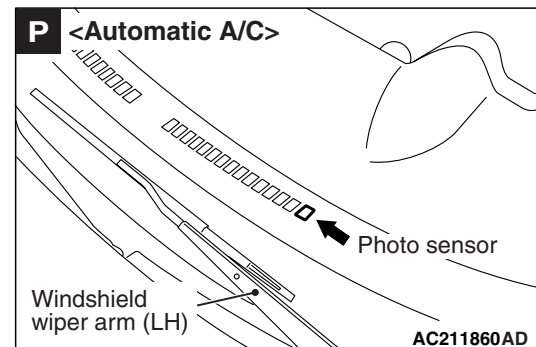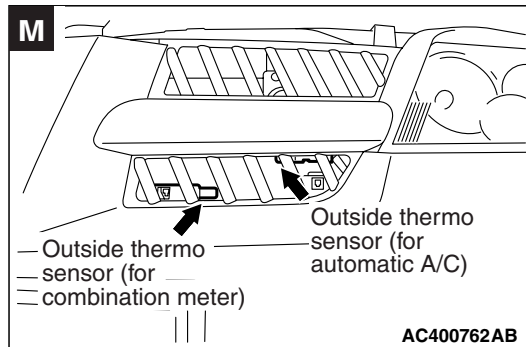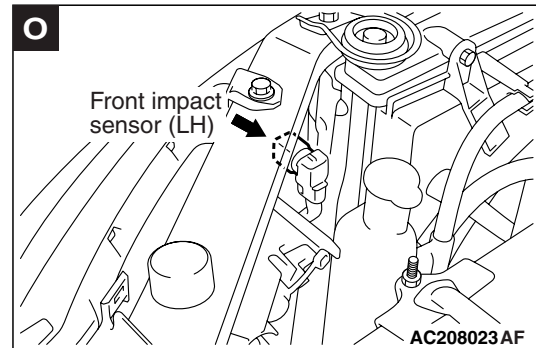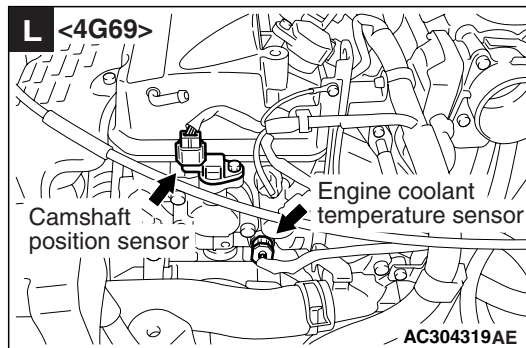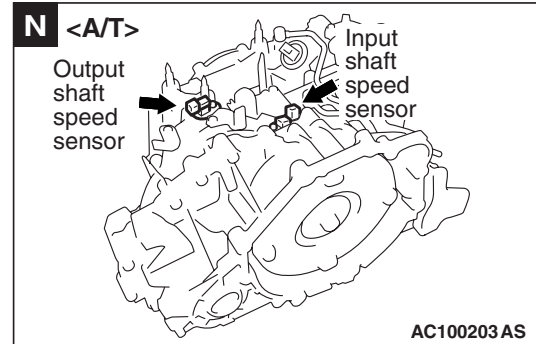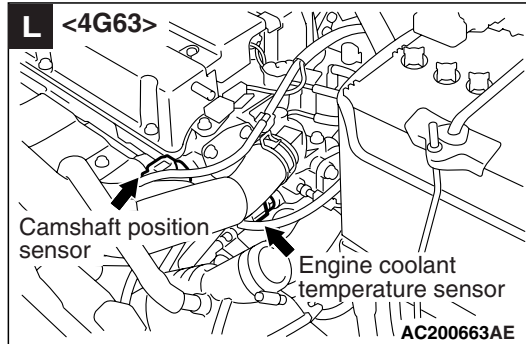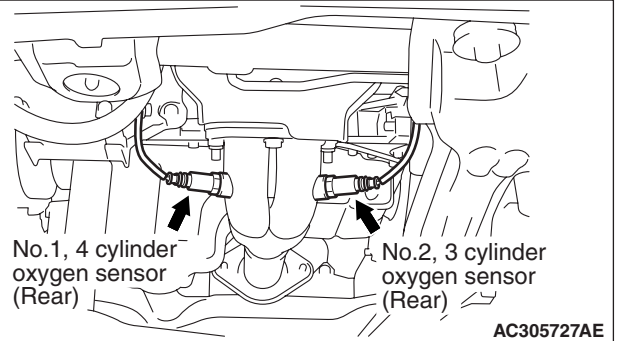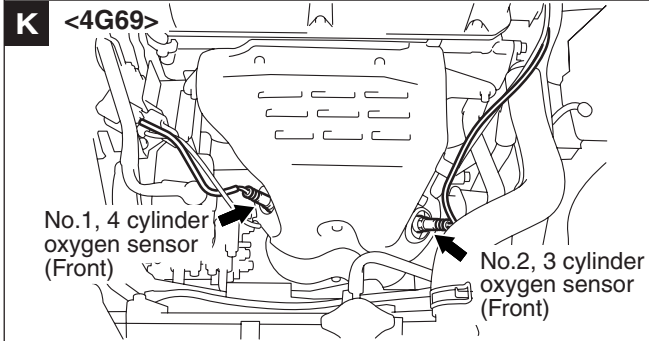

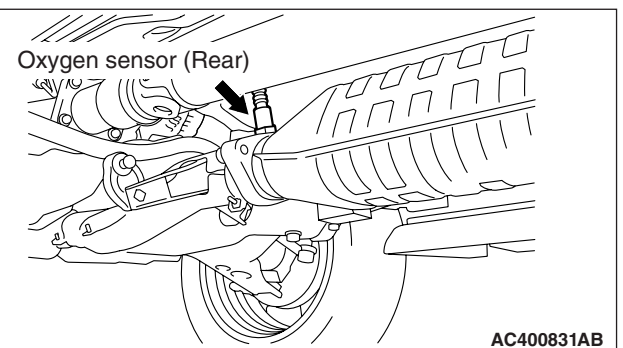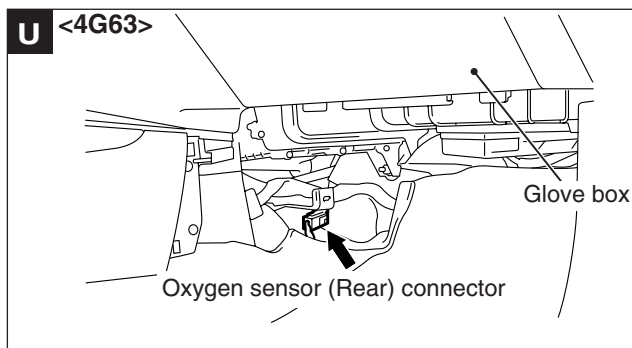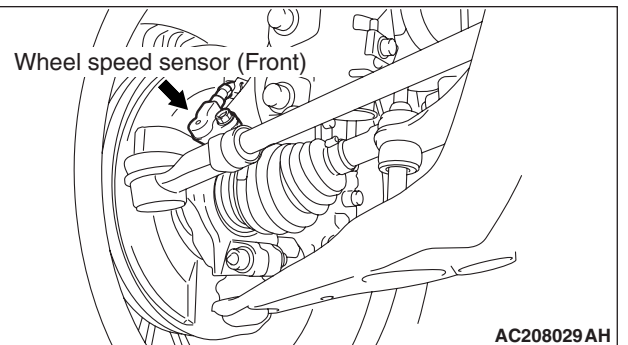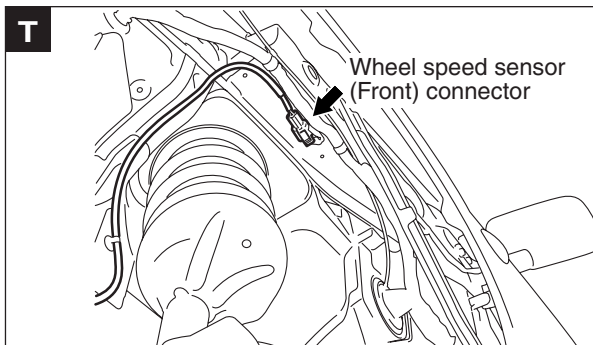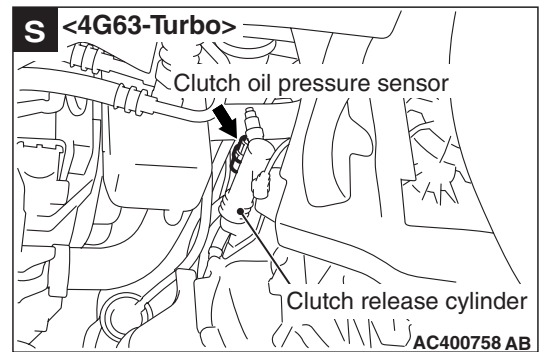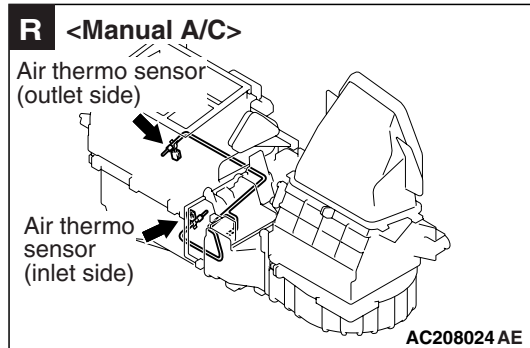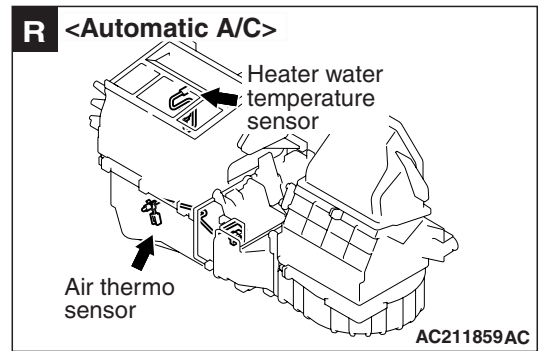
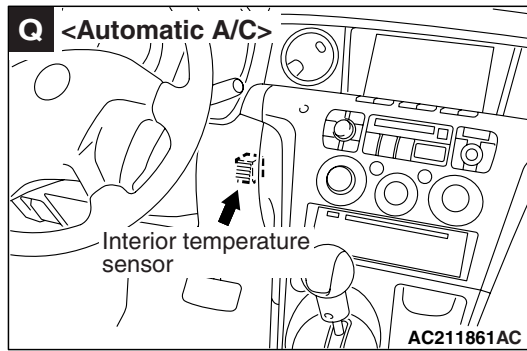


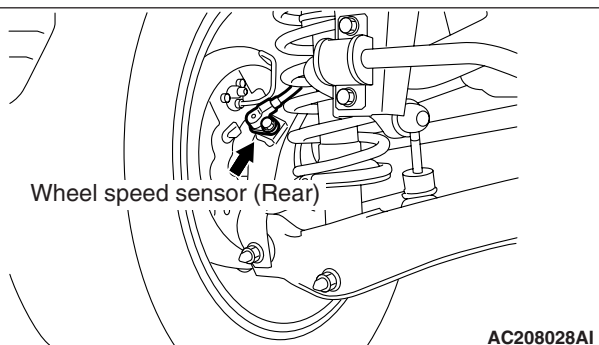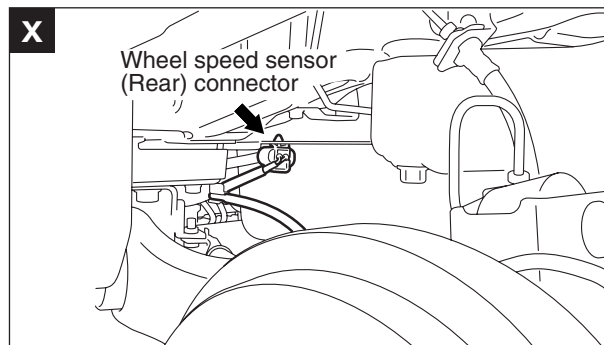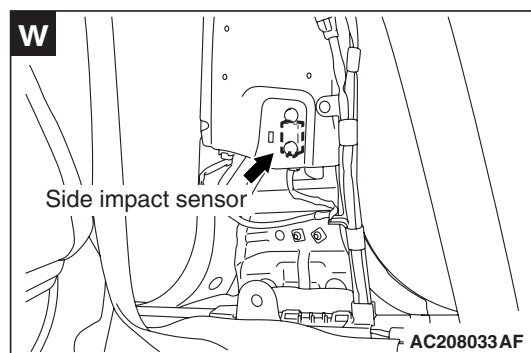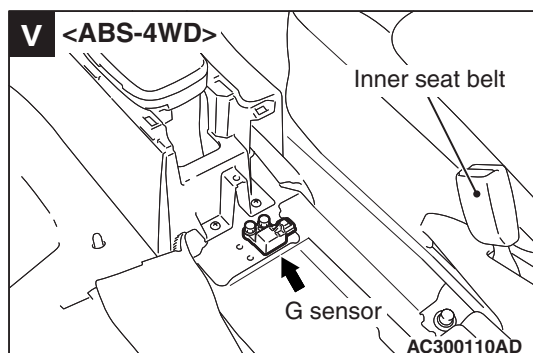





SOLENOID VALVE




M1701000800594

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	G	Hydraulic unit (Incorporating ABS solenoid valve)	LHD A
EGR control solenoid valve <4G63>	C		RHD F
EGR valve <4G69>	D	Purge control solenoid valve	4G63 C
			4G69 B
Fuel pressure control solenoid valve <4G63-Turbo>	E	Waste gate solenoid valve <4G63-Turbo>	E

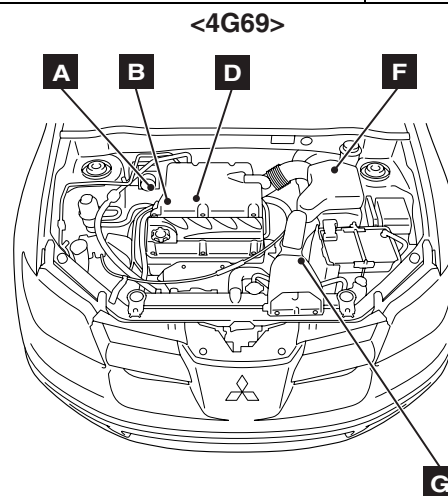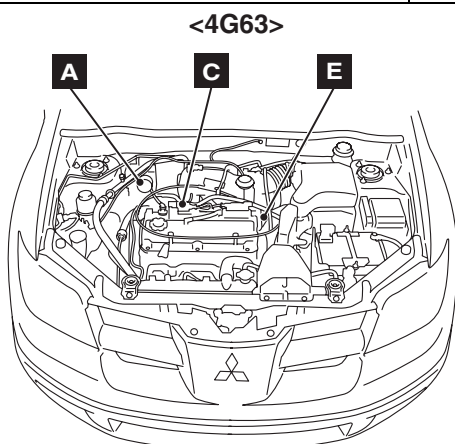  

AC400793AB

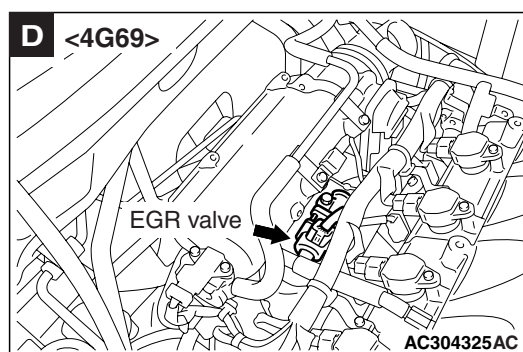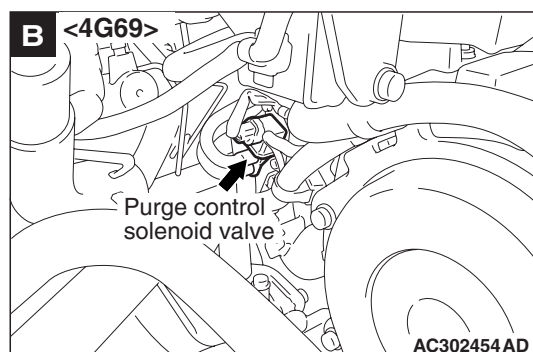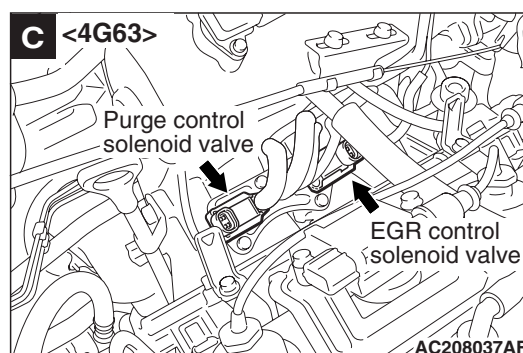   
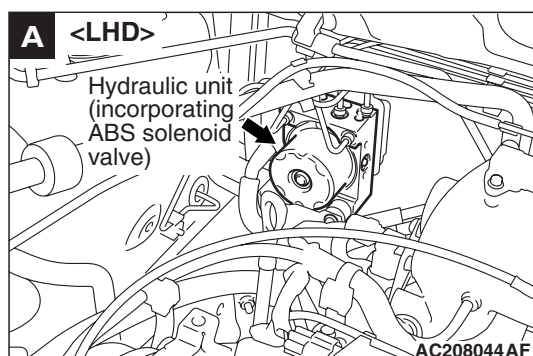 


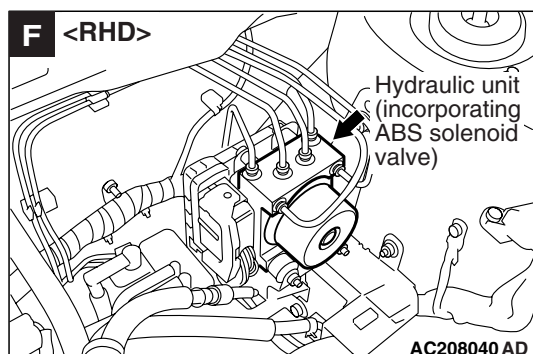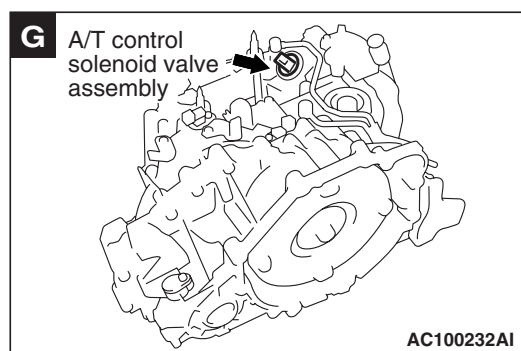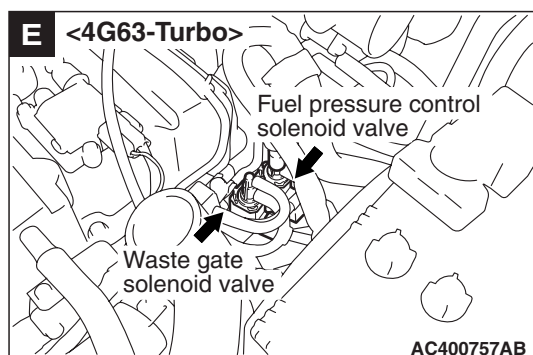   



INSPECTION CONNECTOR

M1701000200525

Name	Symbol	Name	Symbol
Diagnosis connector	B	Engine speed detection connector	A

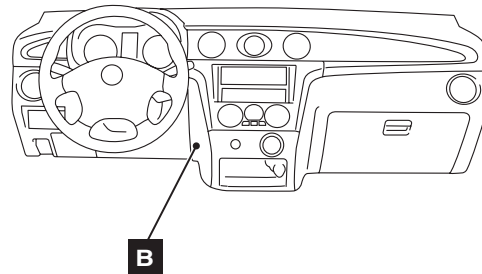 
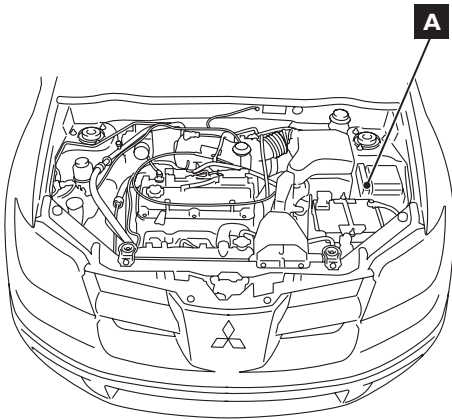 


AC207979 AI



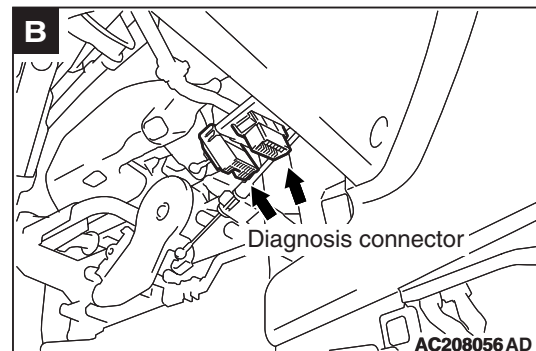 
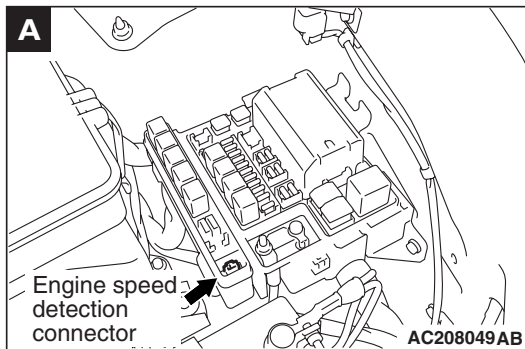 


FUSIBLE LINK AND FUSE

Name	Symbol	Name	Symbol
Fuse Nos.1 to 21 (Passenger compartment)	C	Fusible link Nos. 1 to 5 (Engine compartment)	B
Fuse Nos. 6 to 25 (Engine compartment)	B	Fusible link No. 26 (Engine compartment)	A

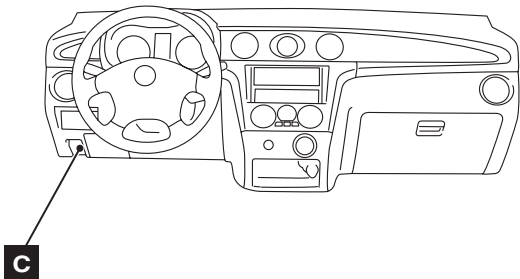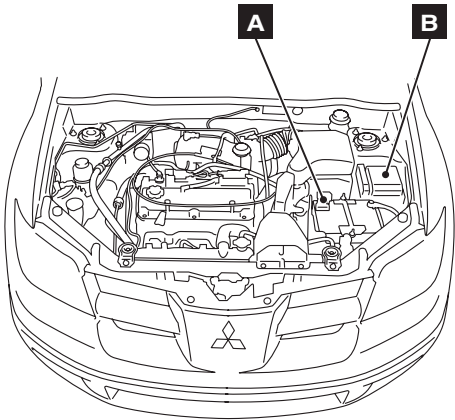  

AC207979 AG

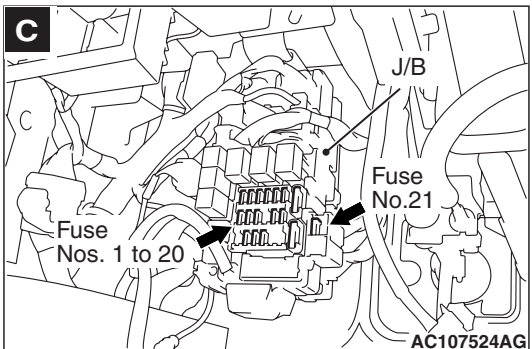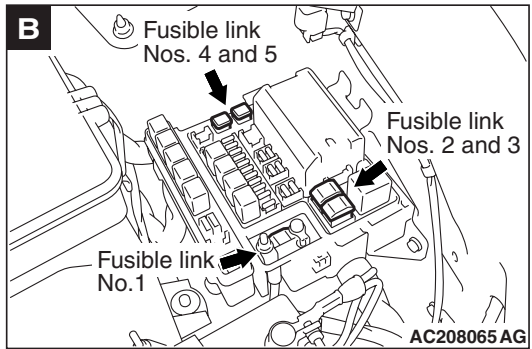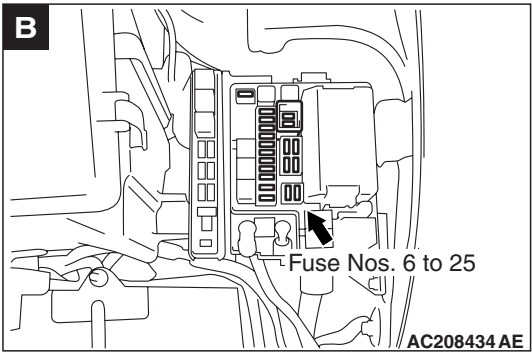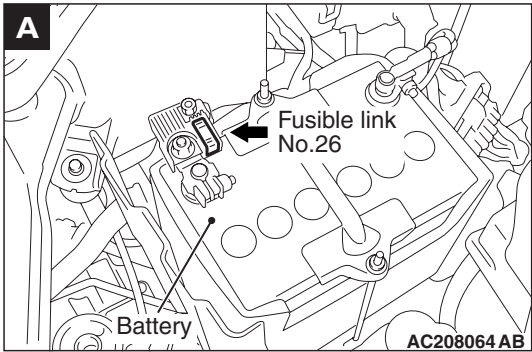    


AC107524AG

EARTH


M1701000300577

 LHD

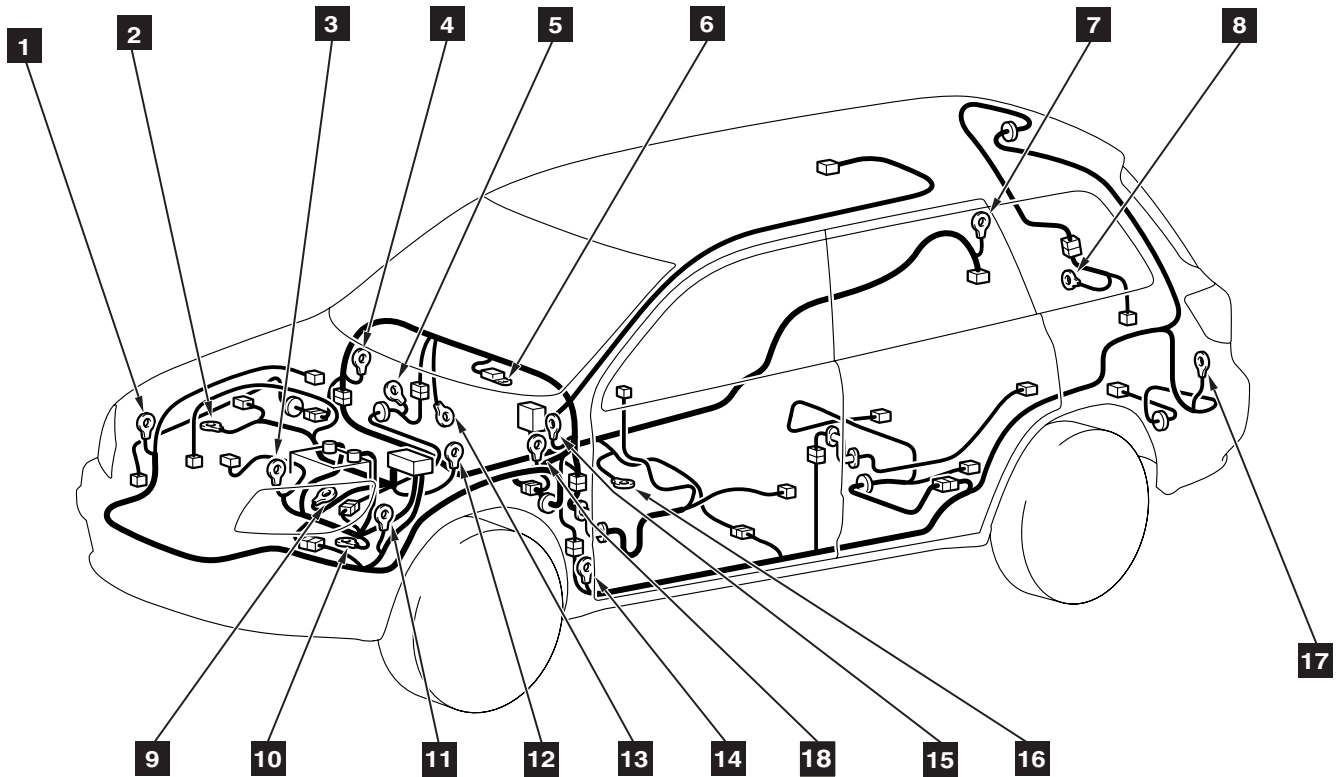









AB400806 AB








 
RHD








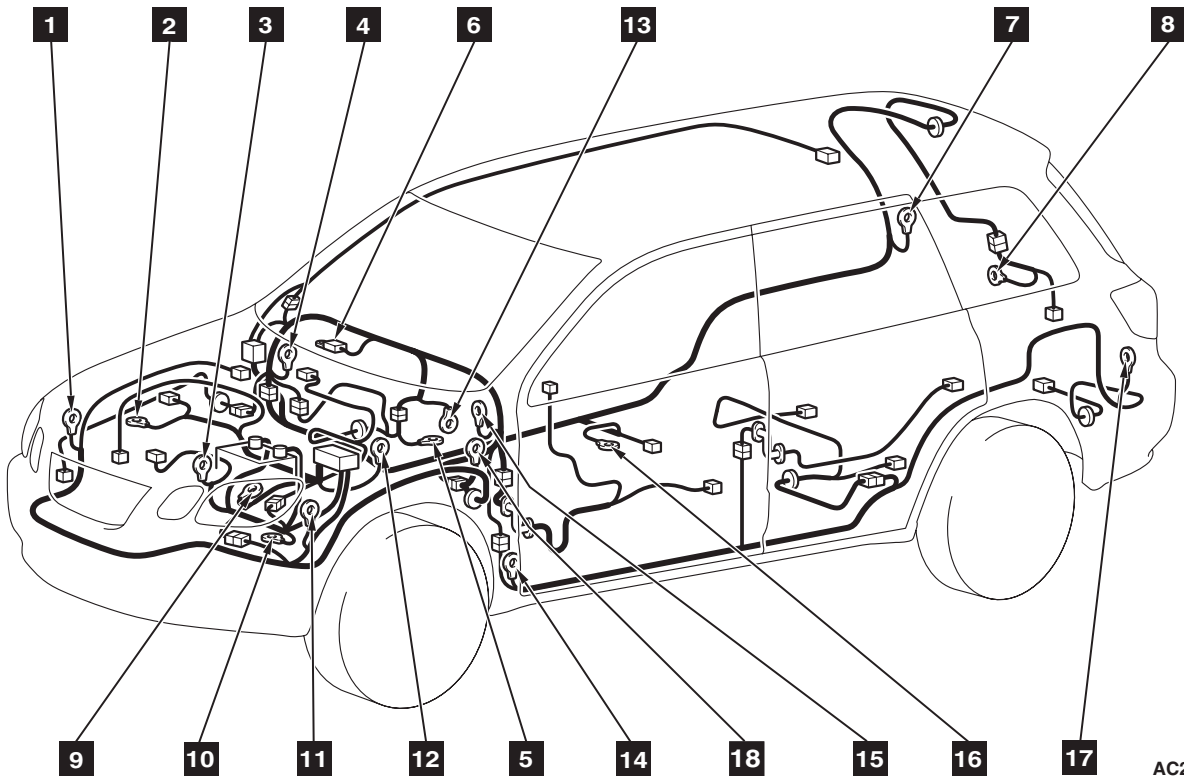



AC208782 AB

                         NOTE: Same earth numbers are used in the circuit diagram.

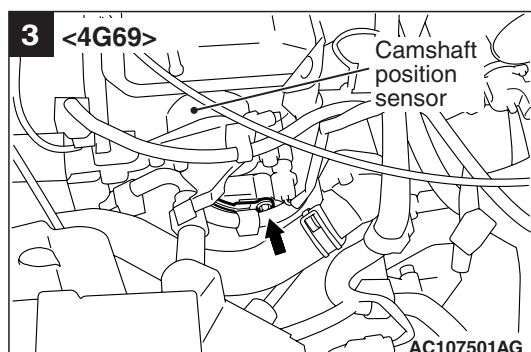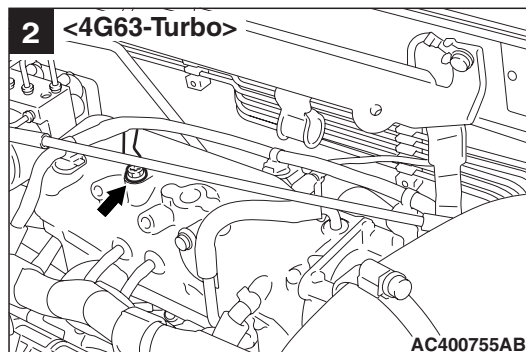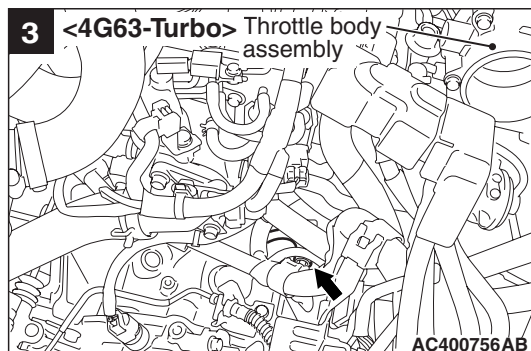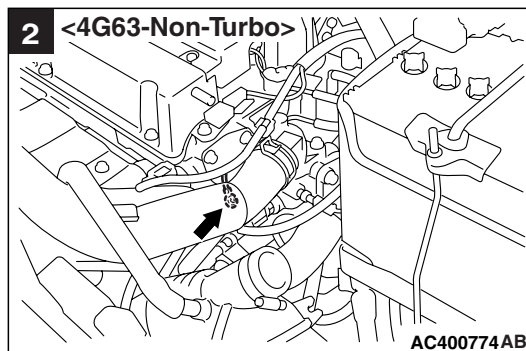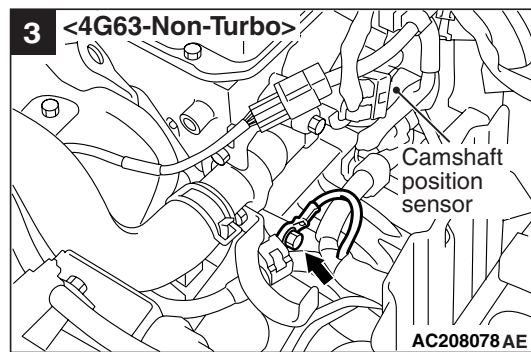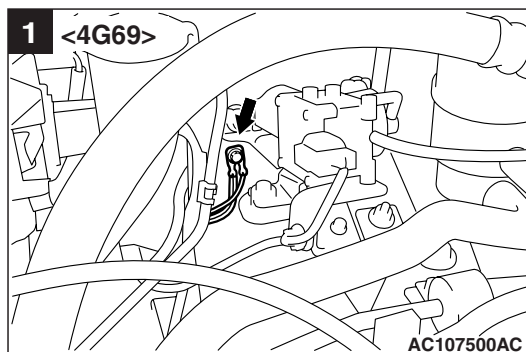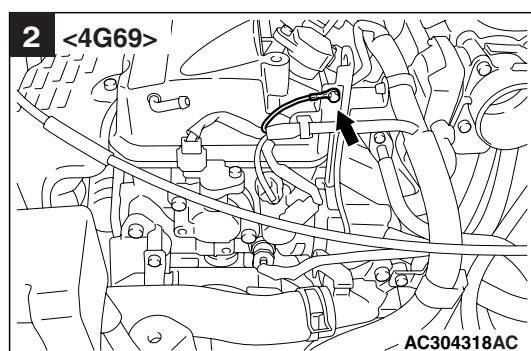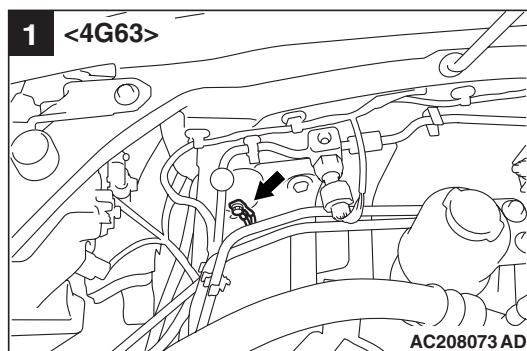

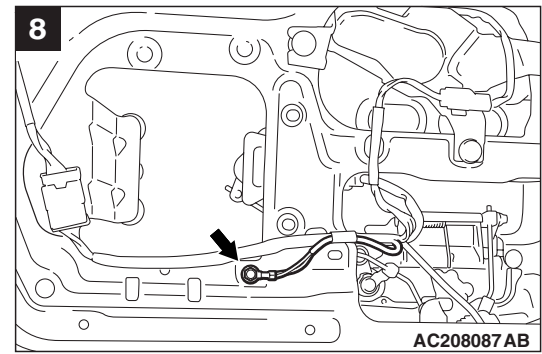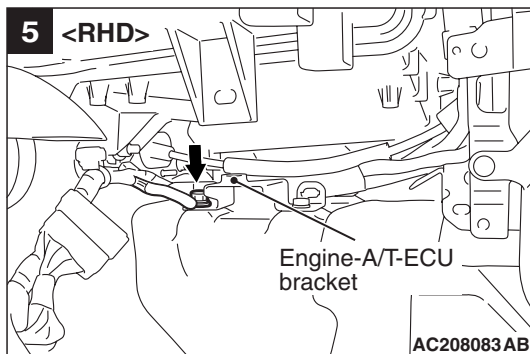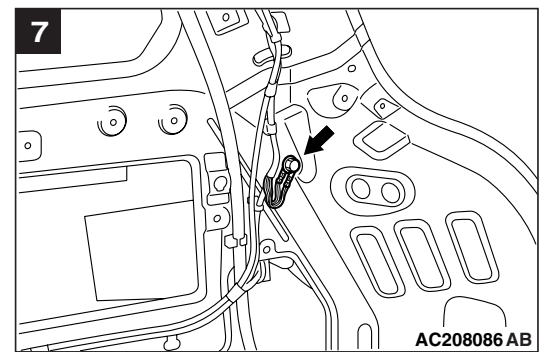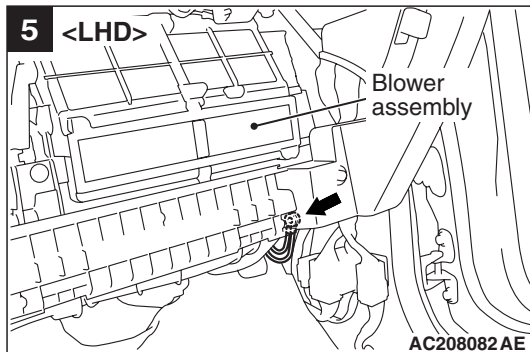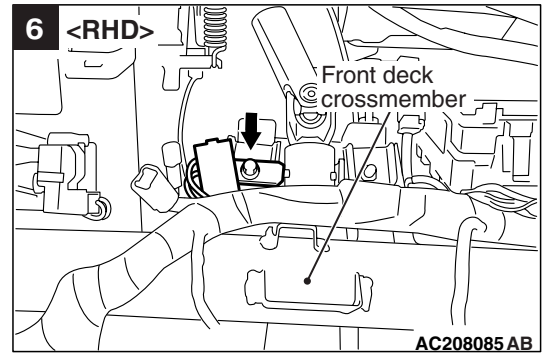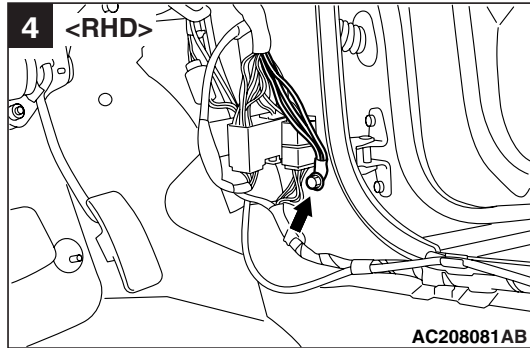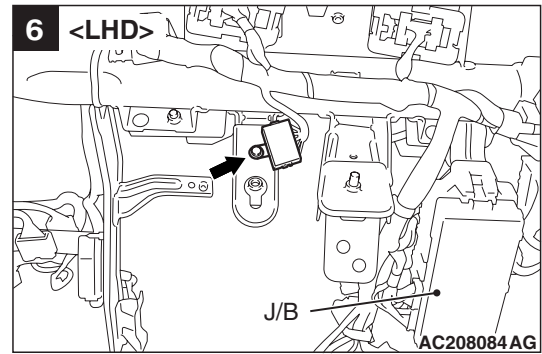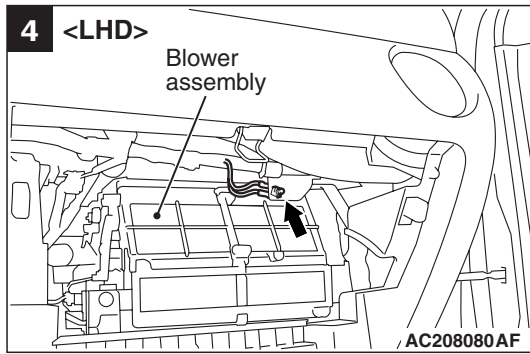

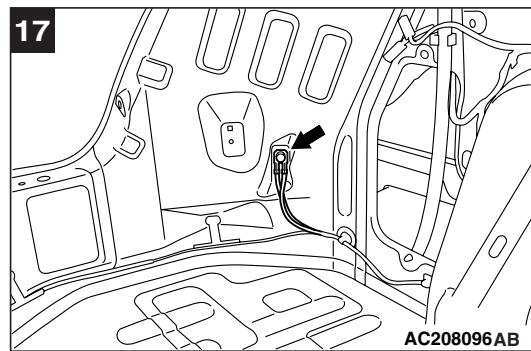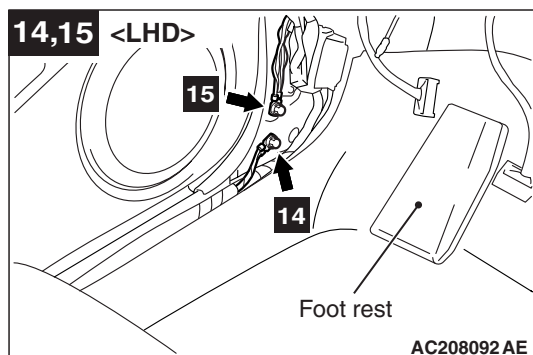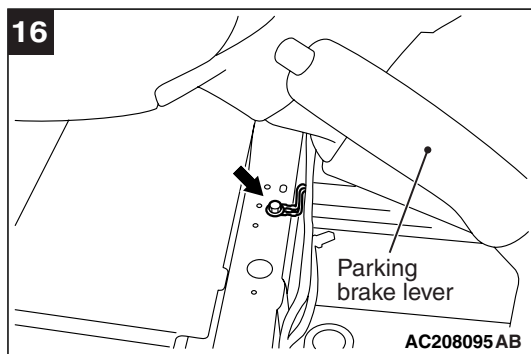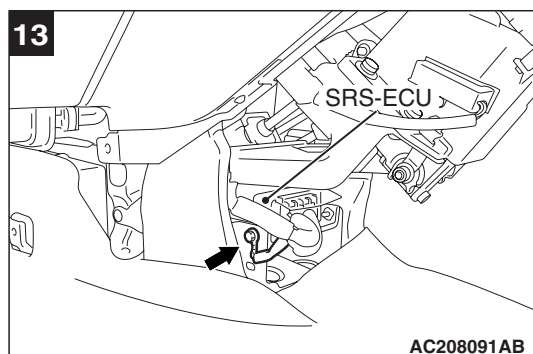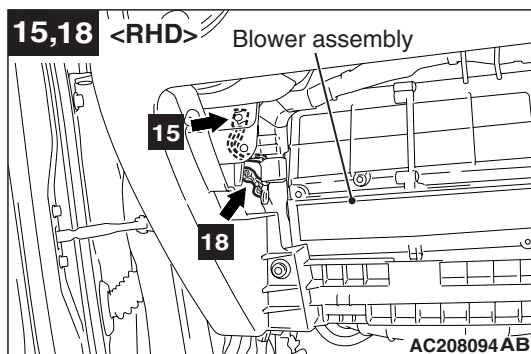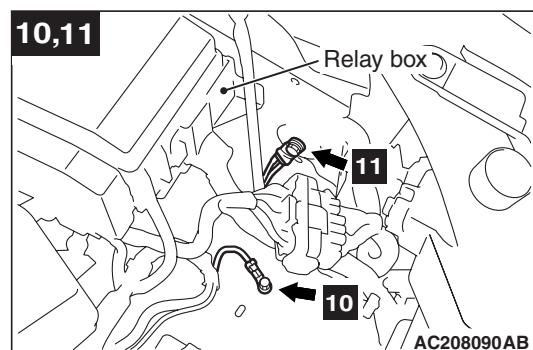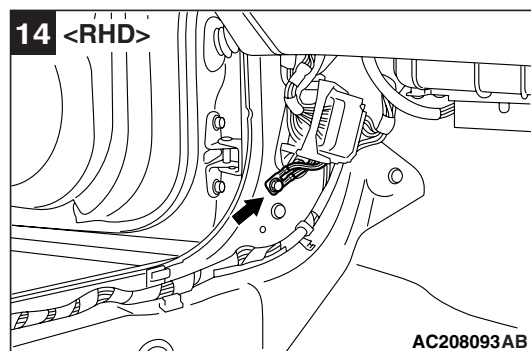
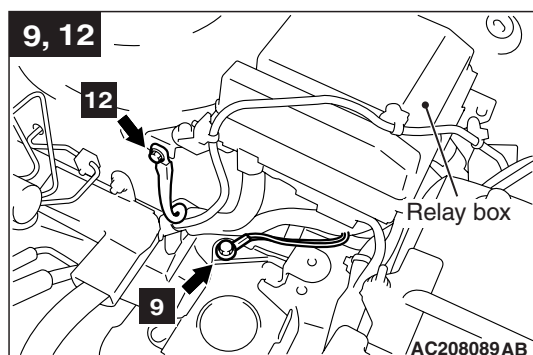


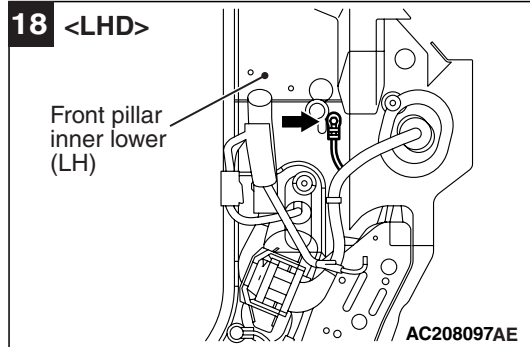

EARTH CABLE



M1701001000472
  
<4G63-Non-Turbo>

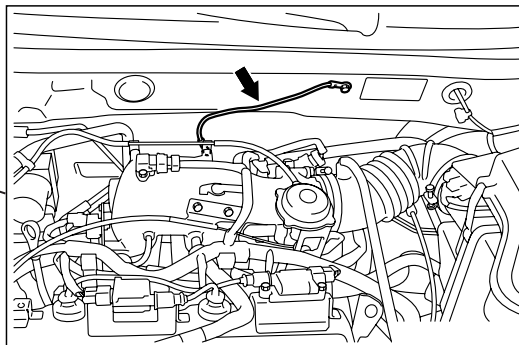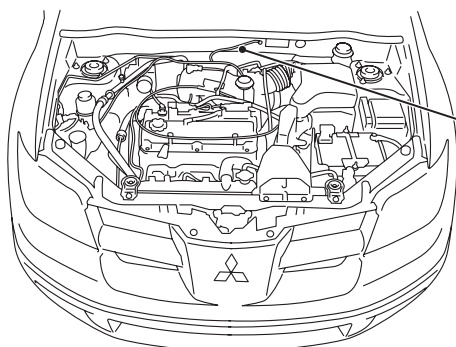



AC400802AB
  
<4G63-Turbo>

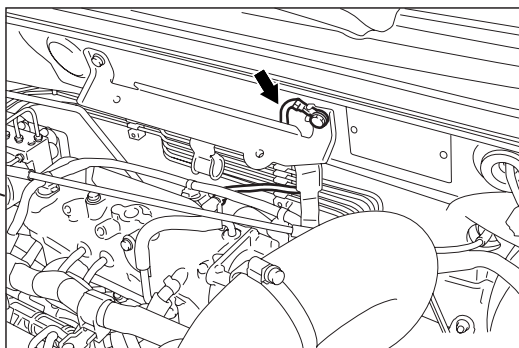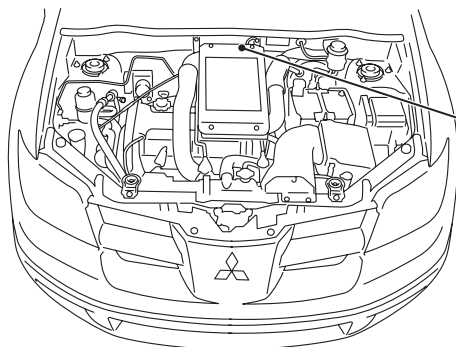

AC400801AB
  
<4G69>

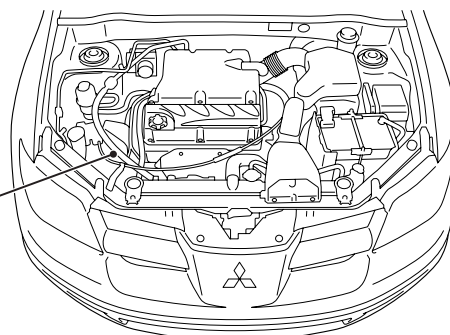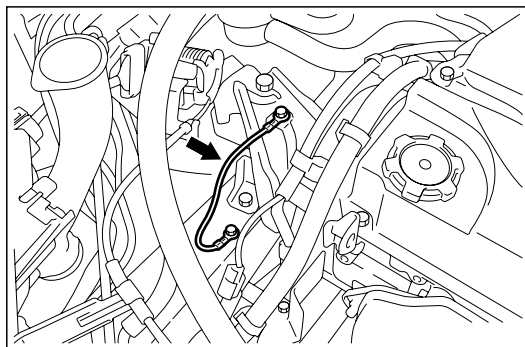

AC400803AB