

# OUTLANDER

## WORKSHOP MANUAL

### FOREWORD

This Workshop manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

### TECHNICAL INFORMATION MANUAL

INZE03E1CD  
INZE04E1CD  
INZE05E1CD  
INZE06E1CD

### WORKSHOP MANUAL

#### CHASSIS AND ELECTRICAL WIRING

CZNU03E1CD  
CZNU04E1CD  
CZNE05E1CD  
CZNE06E1CD

#### BODY REPAIR MANUAL

PBAG9219

### PARTS CATALOGUE

B606R507A\_

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



### GROUP INDEX

General	00
Engine	11
Engine Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control	17
Clutch	21
Manual Transmission	22
Automatic Transmission	23
Propeller Shaft	25
Front Axle	26
Rear Axle	27
Wheel and Tyre	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Power Steering	37
Body	42
Exterior	51
Interior and Supplemental Restraint System (SRS)	52
Chassis Electrical	54
Heater, Air Conditioner and Ventilation	55
Component Locations	70
Configuration Diagrams	80
Circuit Diagrams	90

# WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

- (1) *Improper service or maintenance of any component of the SRS or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).*
- (2) *The SRS components and seat belt with pretensioner should not be subjected to heat, so remove the SRS-ECU, driver's and front passenger's air bag modules, clock spring, side air bag modules, and seat belt -pre-tensioner before drying or baking the vehicle after painting.*
  - SRS-ECU, air bag module and clock spring 93°C or more
  - Seat belt with pre-tensioner: 90°C or more
- (3) *Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.*
- (4) *MITSUBISHI dealer personnel must thoroughly review this Manual, and especially its GROUP 52B - Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.*

## NOTE

Section titles with asterisks (\*) in the table of contents in each group indicate operations requiring warnings.