

# OUTLANDER

## TECHNICAL INFORMATION MANUAL

### FOREWORD

This manual has been prepared as an introduction to the specifications, features, construction, functions, etc. of the newly developed OUTLANDER.

Please read this manual carefully so that it will be of assistance for your service activities. Please note the following service manuals are also available and should be used in conjunction with this manual.

#### TECHNICAL INFORMATION MANUAL

INZE03E1CD  
INZE04E1CD  
INZE05E1CD  
INZE06E1CD

#### WORKSHOP MANUAL

##### CHASSIS GROUP

CNZX03E1CD  
CNZX04E1CD  
CNZE05E1CD  
CNZE06E1CD  
CNZF06E1CD  
CNZG06E1CD  
CZNS06E1CD

#### BODY REPAIR MANUAL

PBRE0301  
PBRE0301-A  
PBRE0301-B  
PBRE0301-C  
PBRE0301-D

#### PARTS CATALOGUE

B606R507A\_

All information, illustrations and product descriptions contained in this manual are current as of the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



### GROUP INDEX

<b>General</b> .....	<b>00</b>
<b>Engine</b> .....	<b>11</b>
<b>Fuel</b> .....	<b>13</b>
<b>Engine Cooling</b> .....	<b>14</b>
<b>Intake and Exhaust</b> .....	<b>15</b>
<b>Engine and Emission Control</b> .....	<b>17</b>
<b>Clutch</b> .....	<b>21</b>
<b>Manual Transmission</b> .....	<b>22</b>
<b>Automatic Transmission</b> .....	<b>23</b>
<b>Propeller shaft</b> .....	<b>25</b>
<b>Front Axle</b> .....	<b>26</b>
<b>Rear Axle</b> .....	<b>27</b>
<b>Wheel and Tyre</b> .....	<b>31</b>
<b>Power Plant Mount</b> .....	<b>32</b>
<b>Front Suspension</b> .....	<b>33</b>
<b>Rear Suspension</b> .....	<b>34</b>
<b>Service Brakes</b> .....	<b>35</b>
<b>Parking Brakes</b> .....	<b>36</b>
<b>Steering</b> .....	<b>37</b>
<b>Body</b> .....	<b>42</b>
<b>Exterior</b> .....	<b>51</b>
<b>Interior and Supplemental Restraint System (SRS)</b> .....	<b>52</b>
<b>Chassis Electrical</b> .....	<b>54</b>
<b>Heater, Air Conditioner and Ventilation</b> .....	<b>55</b>