

GROUP 80A


CONFIGURATION DIAGRAMS

CONTENTS

OVERALL CONFIGURATION DIAGRAM <2.4L ENGINE>	80A-2	ENGINE AND TRANSAXLE <2.4L ENGINE>	80A-10
OVERALL CONFIGURATION DIAGRAM <3.0L ENGINE>	80A-3	ENGINE AND TRANSAXLE <3.0L ENGINE>	80A-14
HOW TO READ CONFIGURATION DIAGRAMS	80A-4	DASH PANEL	80A-18
ENGINE COMPARTMENT <2.4L ENGINE>	80A-6	FLOOR AND ROOF	80A-24
ENGINE COMPARTMENT <3.0L ENGINE>	80A-8	DOOR	80A-28
		LIFTGATE	80A-29

OVERALL CONFIGURATION DIAGRAM <2.4L ENGINE>

M1801000103104

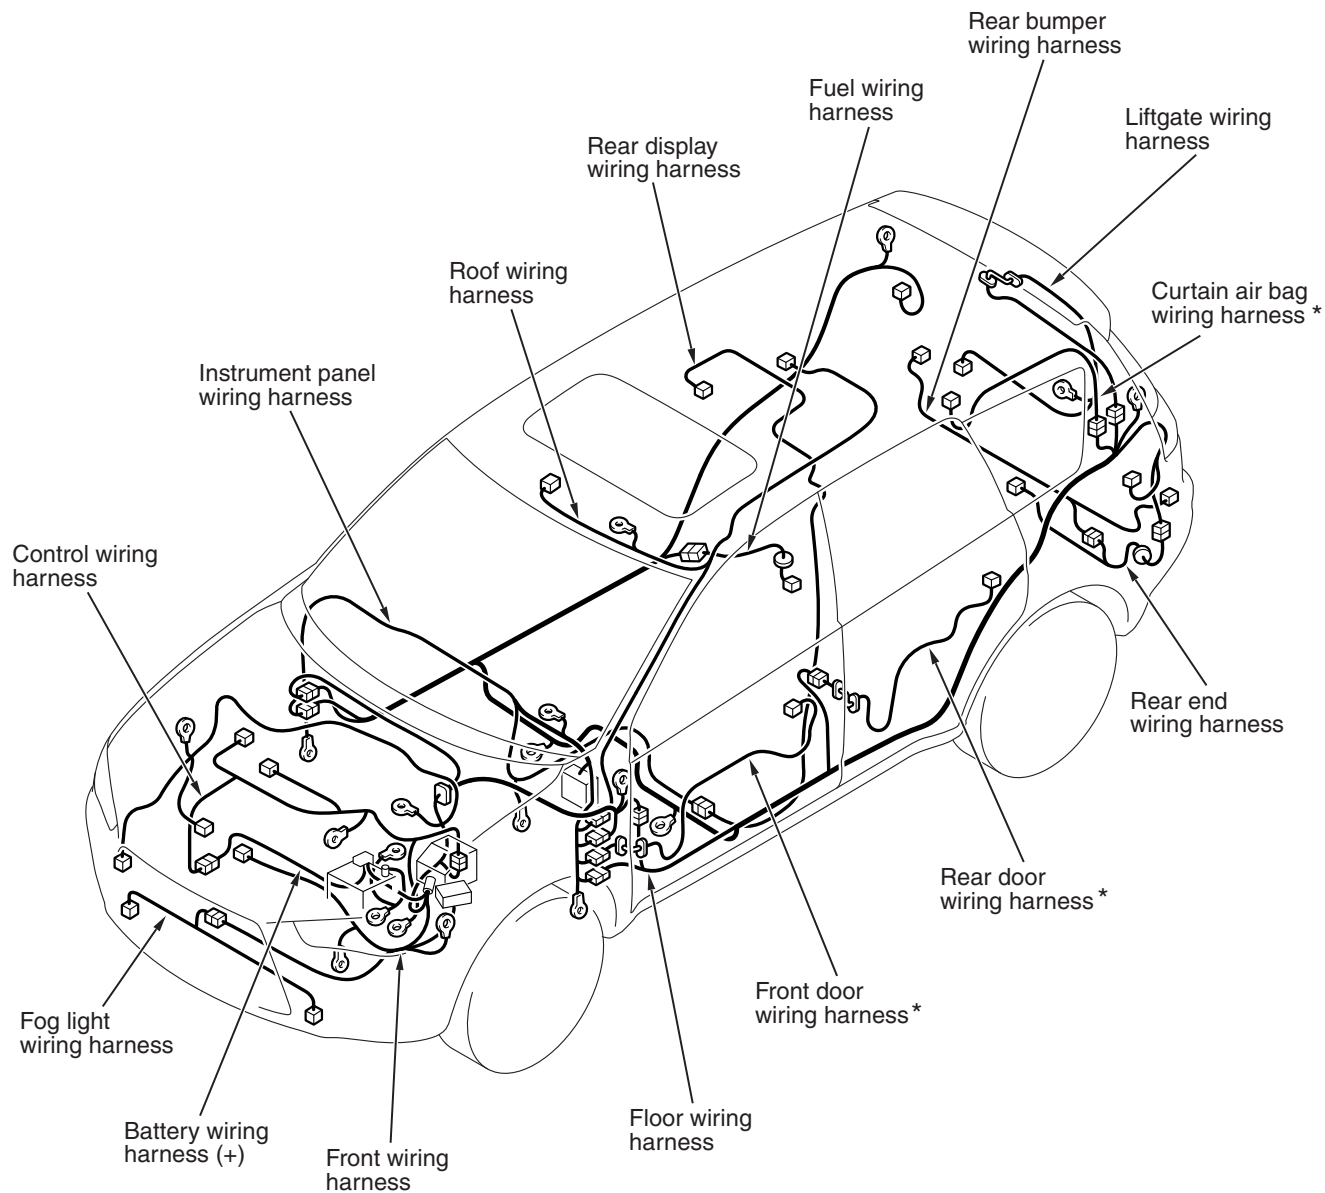


AC900418AB

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

OVERALL CONFIGURATION DIAGRAM <3.0L ENGINE>

M1801000103115

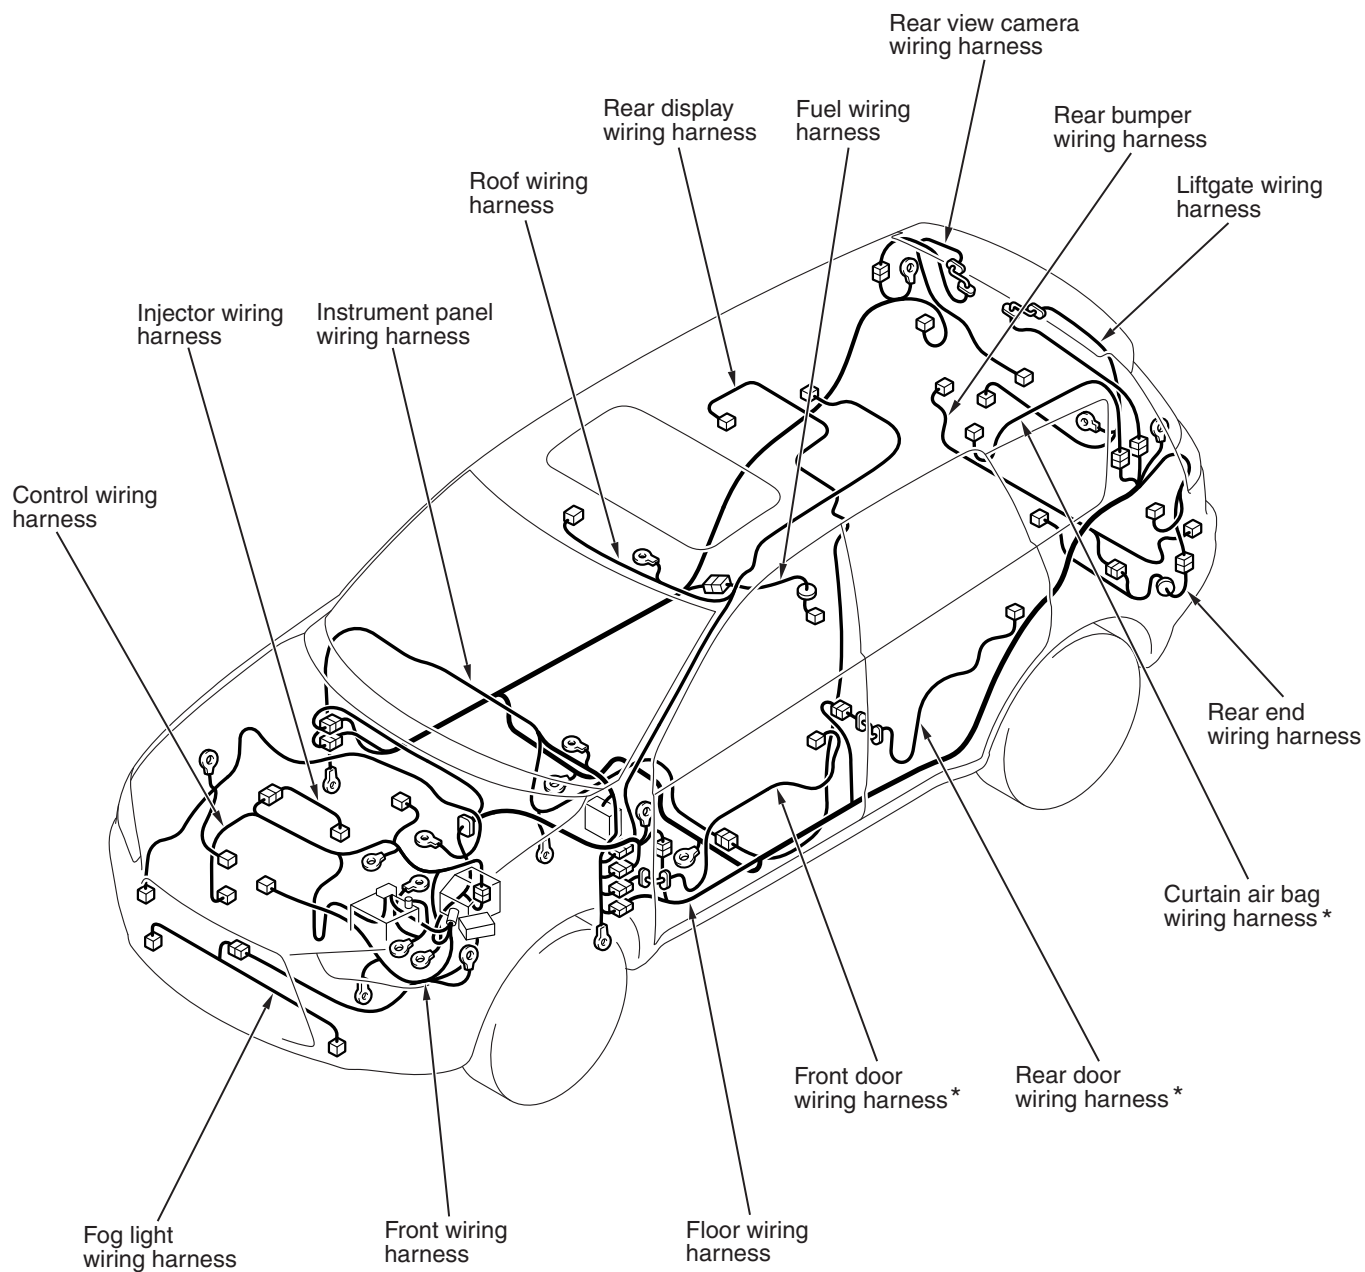

AC900249AD

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

HOW TO READ CONFIGURATION DIAGRAMS

M1801000200674

The wiring harness diagrams clearly show the connector locations and harness configurations on actual vehicles. Some variations are included in one configuration diagram. Accordingly, some diagrams may not be applicable for individual vehicles.

Denotes connector No.

The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.

The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number. Numbers are usually assigned to parts in clockwise order on the diagram.

Example: A-19

Number specific to connector (serial number)

Connector location site symbol
A: ENGINE COMPARTMENT
B: ENGINE AND TRANSAXLE
C: DASH PANEL

D: FLOOR AND ROOF
E: DOOR
F: LIFT GATE

Denotes ground point.

Same ground number is used throughout circuit diagrams to facilitate search of ground point. Refer to GROUP 70 COMPONENT LOCATIONS -GROUND MOUNTING LOCATIONS for details of ground points.

Denotes harness name.

FRONT
WIRING
HARNESS
(RH)

Denotes a section covered by a corrugated tube.

The mark ★ shows the standard mounting position of wiring harness.

Denotes the color of the tube
(If not specified, it is black).

R: Red
Y: Yellow

The number of connector pins and the connector color (except milk white)* are shown for ease of retrieval.

Example: (2-B)

Connector color
(milk white if no color is indicated)

Number of connector pins

*: Typical connector colors

B: Black	BR: Brown
Y: Yellow	V: Violet
L: Blue	O: Orange
G: Green	GR: Gray
R: Red	NONE: Milk white

A-19

A-18

A-17

A-16

A-15

A-15 (2)
A-16 (2-GR)
A-17 (2-B)
A-18 (2-B)
A-19 (2-GR)


FOG LIGHT (RH)
HORN (LOW)
HEADLIGHT (RH)
WINDSHIELD WASHER MOTOR
DUAL PRESSURE SWITCH

Indicates the device to which the connector is connected.

NOTES


ENGINE COMPARTMENT <2.4L ENGINE>

M1801000308084

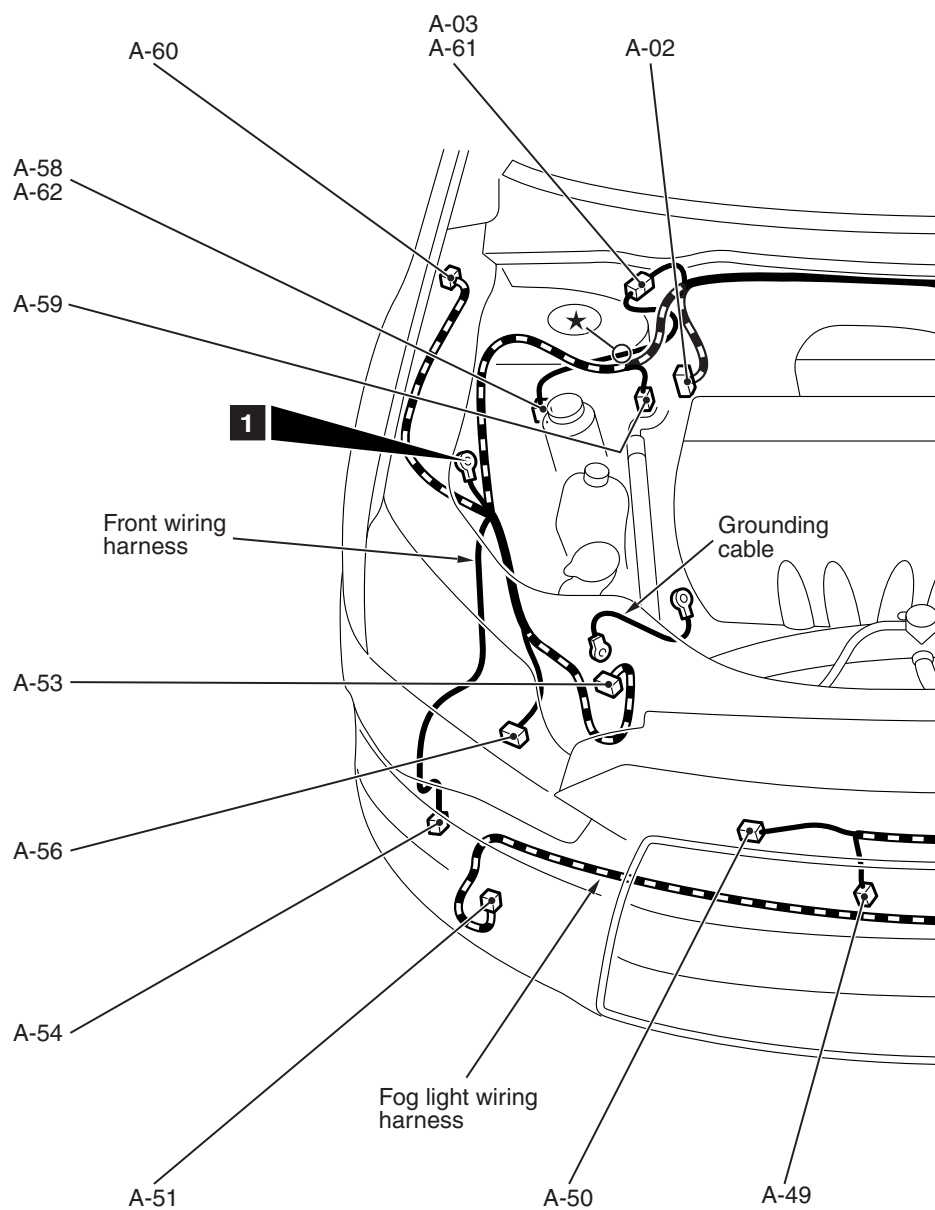Connector
symbol**A**

AC900419AC

A-02	(47-B)	ASC-ECU	A-13	(20)	Front wiring harness and control wiring harness combination
A-03	(4-B)	Front wiring harness and theft-alarm horn sub wiring harness combination <Vehicles without theft-alarm sensor>	A-14X	(4)	Fog light relay
A-05	(2-GR)	Radiator fan motor	A-15X	(4)	Horn relay
A-06	(2-B)	Hood latch switch	A-16X	(4)	A/C compressor relay
A-07	(4-GR)	Mass airflow sensor	A-17X	(4)	Theft-alarm horn relay <Vehicles without theft-alarm sensor>
A-08	(5-GR)	Windshield wiper motor	A-18X	(4)	CVT control relay
A-09	(2-B)	Brake fluid level switch	A-20X	(4)	Headlight relay (High)
A-10	(2-B)	Side turn-signal light (LH) <Fender panel type> or no connection <Door mirror type>	A-21X	(4)	Throttle actuator control motor relay
A-11	(2-B)	Front wheel speed sensor (LH)	A-24X	(4)	Injector relay
A-12	(24)	Front wiring harness and control wiring harness combination	A-26X	(4)	Condenser fan relay
			A-27X	(4)	Starter relay
			A-28X	(4)	Headlight relay (Low)

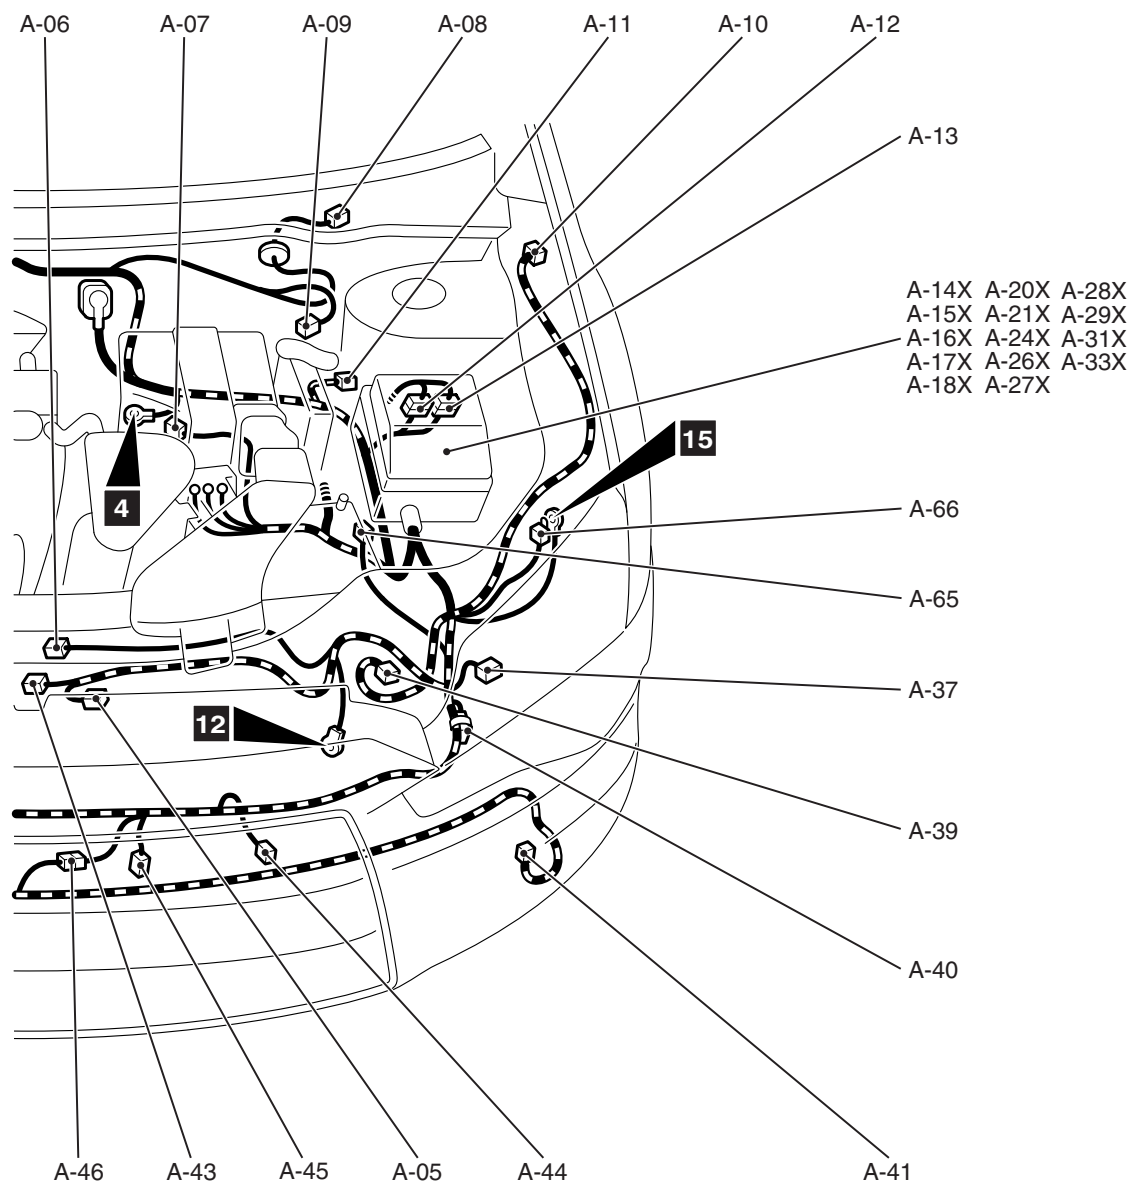


ACA01900AB

A-29X (4)	Radiator fan relay	A-54 (2-B)	Washer motor
A-31X (5)	Fan control relay	A-56 (12-B)	Headlight assembly (RH)
A-33X (4)	MFI relay	A-58 (1-B)	Theft-alarm horn <Vehicles without theft-alarm sensor>
A-37 (12-B)	Headlight assembly (LH)	A-59 (2-B)	Front wheel speed sensor (RH)
A-39 (2-Y)	Front impact sensor (LH)	A-60 (2-B)	Side turn-signal light (RH) <Fender panel type> or no connection <Door mirror type>
A-40 (4-B)	Spare connector (for trailer harness)	A-61 (4-B)	Front wiring harness and theft-alarm siren sub wiring harness combination <Vehicles with theft-alarm sensor>
A-41 (2-B)	Fog light (LH)	A-62 (4-B)	Theft-alarm siren <Vehicles with theft-alarm sensor>
A-43 (2-B)	Condenser fan motor	A-65 (4-GR)	Battery current sensor
A-44 (2-B)	Ambient air temperature sensor	A-66 (6-GR)	Ground (front: LH)
A-45 (1-B)	Horn (Low)		
A-46 (2-B)	Front wiring harness and fog light wiring harness combination		
A-49 (1-B)	Horn (High)		
A-50 (3-B)	A/C pressure sensor		
A-51 (2-B)	Fog light (RH)		
A-53 (2-Y)	Front impact sensor (RH)		

ENGINE COMPARTMENT <3.0L ENGINE>


M1801000308095

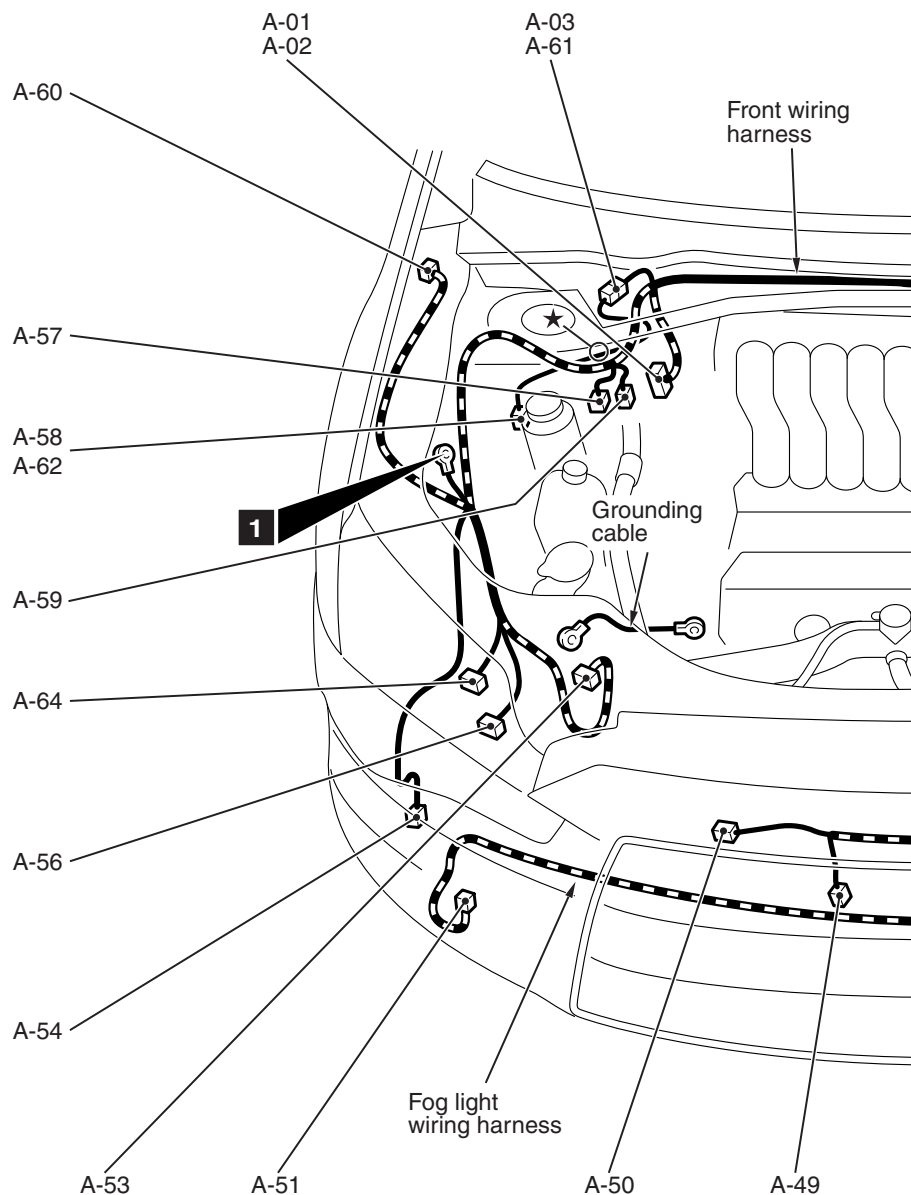Connector
symbol**A**

Connector color
code
B: Black
BR: Brown
G: Green
GR: Gray
L: Blue
NONE: Milk white
O: Orange
R: Red
V: Violet
Y: Yellow

AC900421AD

A-01	(26-B)	ABS-ECU	A-13	(20)	Front wiring harness and control wiring harness combination
A-02	(47-B)	ASC-ECU	A-14X	(4)	Fog light relay
A-03	(4-B)	Front wiring harness and theft-alarm horn sub wiring harness combination <Vehicles without theft-alarm sensor>	A-15X	(4)	Horn relay
A-05	(2-B)	Radiator fan motor	A-16X	(4)	A/C compressor relay
A-06	(2-B)	Hood latch switch	A-17X	(4)	Theft-alarm horn relay <Vehicles without theft-alarm sensor>
A-07	(4-GR)	Mass airflow sensor	A-18X	(4)	A/T control relay
A-08	(5-GR)	Windshield wiper motor	A-20X	(4)	Headlight relay (High)
A-09	(2-B)	Brake fluid level switch	A-21X	(4)	Throttle actuator control motor relay
A-10	(2-B)	Side turn-signal light (LH) <Fender panel type> or no connection <Door mirror type>	A-23X	(4)	Daytime running light relay <Vehicles with discharge type headlight>
A-11	(2-B)	Front wheel speed sensor (LH)	A-24X	(4)	Injector relay
A-12	(24)	Front wiring harness and control wiring harness combination	A-27X	(4)	Starter relay
			A-28X	(4)	Headlight relay (Low)
			A-33X	(4)	MFI relay
			A-34X	(4)	Radiator fan relay


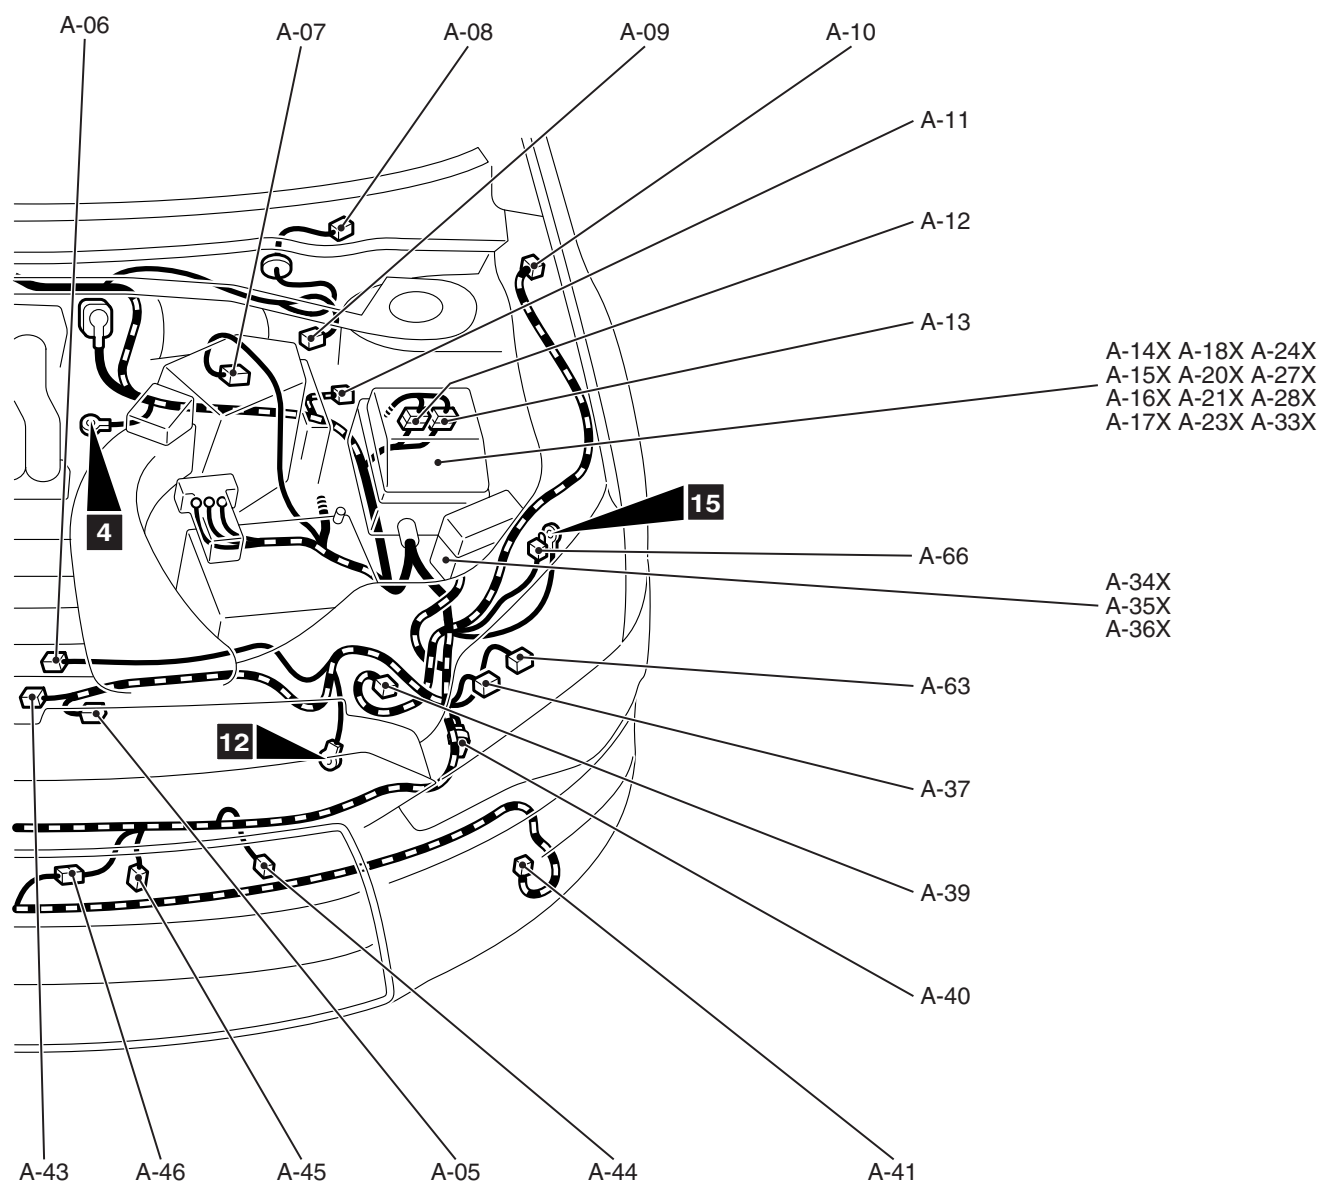


ACA01901AB

A-35X (4)	Condenser fan relay	A-57 (3-GR)	No connection
A-36X (5)	Fan control relay	A-58 (1-B)	Theft-alarm horn <Vehicles without theft-alarm sensor>
A-37 (12-B)	Headlight assembly (LH)	A-59 (2-B)	Front wheel speed sensor (RH)
A-39 (2-Y)	Front impact sensor (LH)	A-60 (2-B)	Side turn-signal light (RH) <Fender panel type> or no connection <Door mirror type>
A-40 (4-B)	Spare connector (for trailer harness)	A-61 (4-B)	Front wiring harness and theft-alarm siren sub wiring harness combination <Vehicles with theft-alarm sensor>
A-41 (2-B)	Fog light (LH)	A-62 (4-B)	Theft-alarm siren <Vehicles with theft-alarm sensor>
A-43 (2-B)	Condenser fan motor	A-63 (6-B)	Headlight assembly (LH) <Vehicles with discharge type headlight>
A-44 (2-B)	Ambient air temperature sensor	A-64 (6-B)	Headlight assembly (RH) <Vehicles with discharge type headlight>
A-45 (1-B)	Horn (Low)	A-66 (6-GR)	Ground (front: LH)
A-46 (2-B)	Front wiring harness and fog light wiring harness combination		
A-49 (1-B)	Horn (High)		
A-50 (3-B)	A/C pressure sensor		
A-51 (2-B)	Fog light (RH)		
A-53 (2-Y)	Front impact sensor (RH)		
A-54 (2-B)	Washer motor		
A-56 (12-B)	Headlight assembly (RH)		

ENGINE AND TRANSAXLE <2.4L ENGINE>

M1801000404517

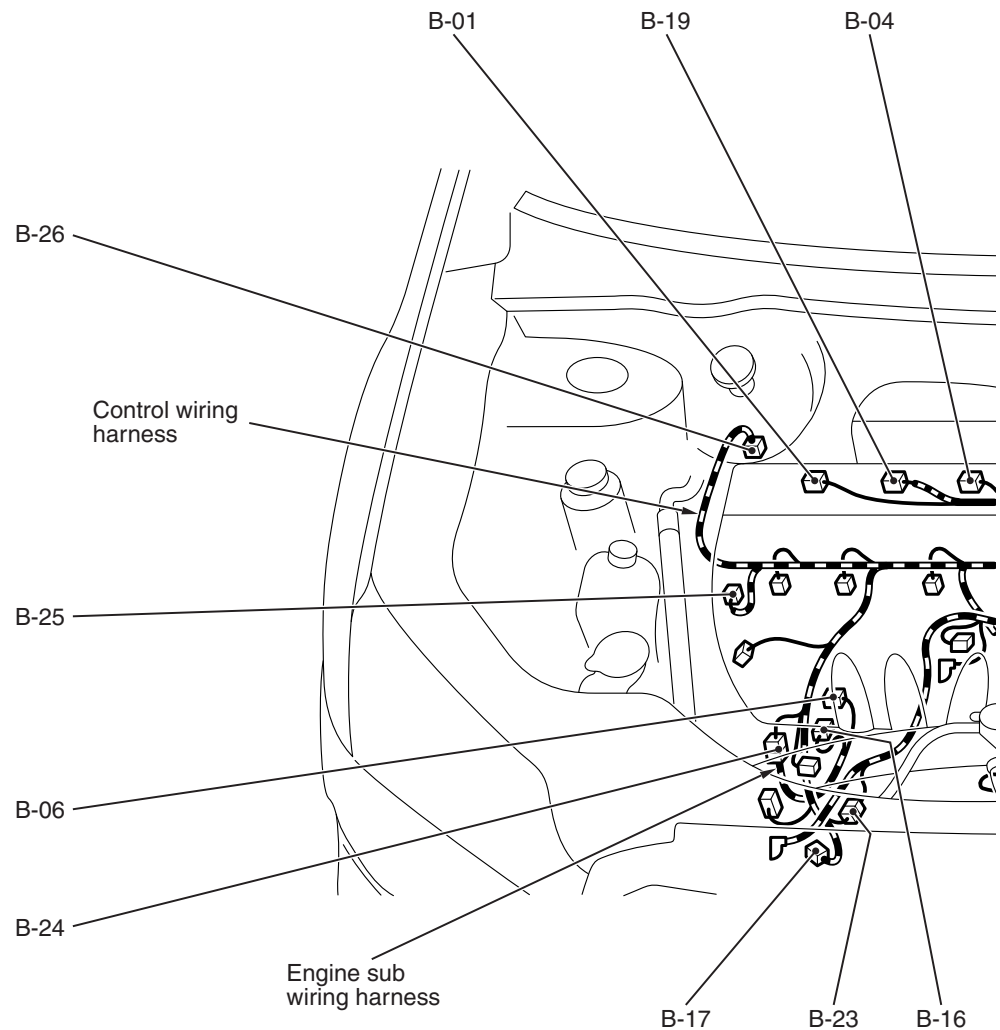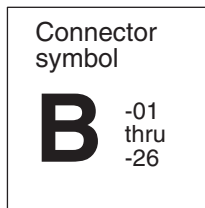


Connector color code

B: Black
BR: Brown
G: Green
GR: Gray
L: Blue
NONE: Milk white
O: Orange
R: Red
V: Violet
Y: Yellow

AC900423AD

B-01	(3-B)	No.1 ignition coil
B-04	(3-B)	No.3 ignition coil
B-06	(2-B)	Knock sensor
B-07	(2-B)	Evaporative emission purge solenoid
B-08	(6-B)	Throttle body assembly
B-09	(2-B)	Engine coolant temperature sensor

B-10	(64-GR)	Engine control module
B-11	(48-GR)	Engine control module
B-12	(6-GR)	Exhaust gas recirculation valve
B-16	(1-L)	Engine oil pressure switch
B-17	(1-B)	A/C compressor assembly

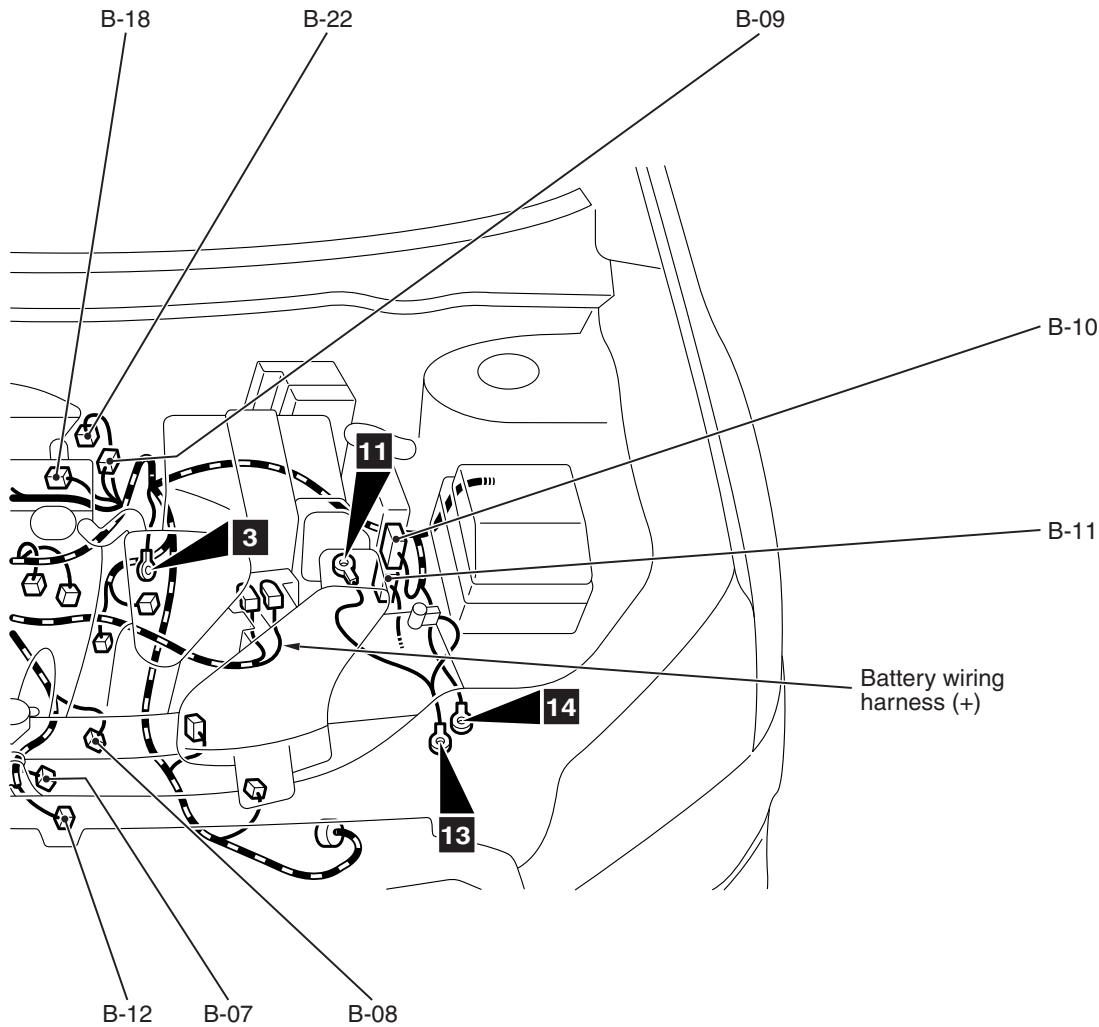


ACA01902AB

B-18 (3-B) No.4 ignition coil
 B-19 (3-B) No.2 ignition coil
 B-22 (3-GR) Exhaust camshaft position sensor
 B-23 (1-B) Control wiring harness and battery wiring harness (+) combination

B-24 (3-B) Control wiring harness and engine sub wiring harness combination
 B-25 (2) Intake engine oil control valve
 B-26 (2) Exhaust engine oil control valve

ENGINE AND TRANSAXLE <2.4L ENGINE> (CONTINUED)

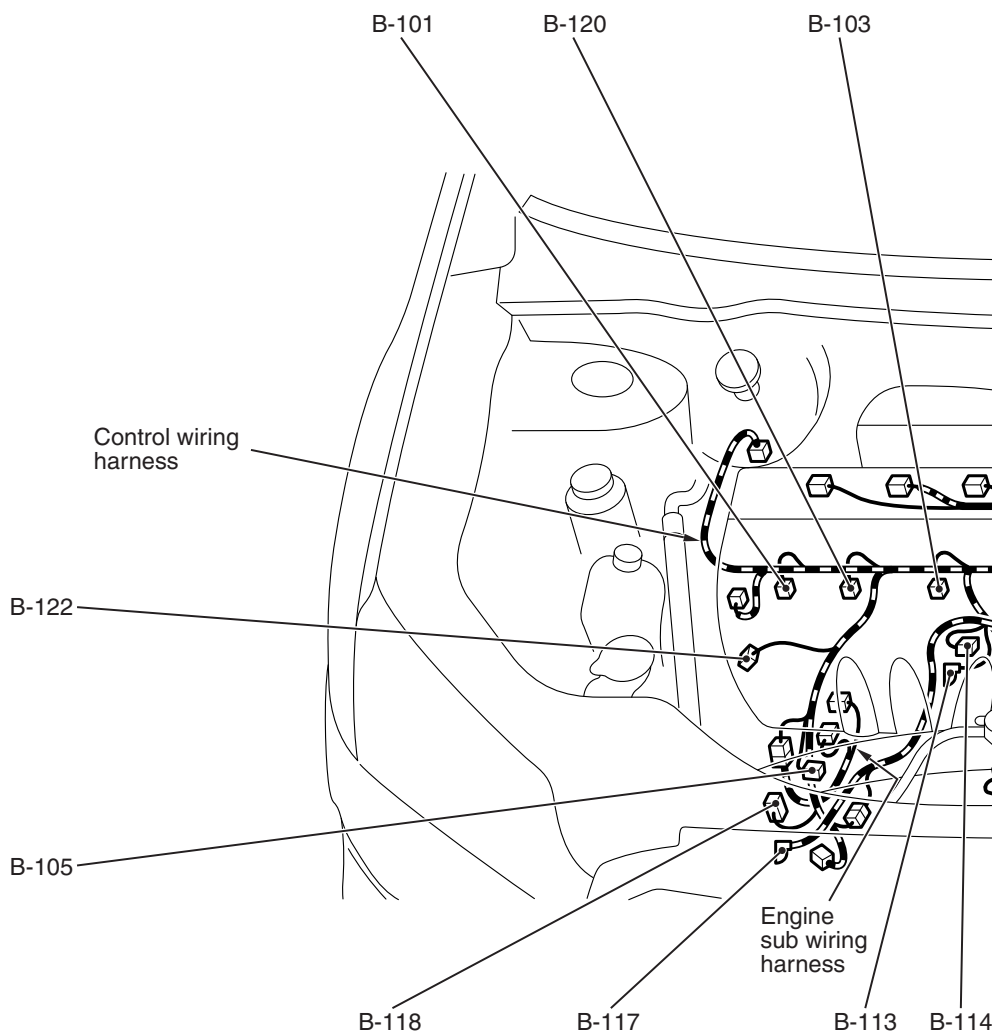
Connector
symbol**B** -101
thru
-126Connector color
code

B: Black
 BR: Brown
 G: Green
 GR: Gray
 L: Blue
 NONE: Milk white
 O: Orange
 R: Red
 V: Violet
 Y: Yellow

AC900423AC

B-101 (2-GR) No.1 injector
 B-103 (2-GR) No.3 injector
 B-105 (3-B) Manifold absolute pressure sensor
 B-110 (10-B) Transmission range switch

B-113 (1) Starter
 B-114 (1-B) Starter
 B-116 (2-GR) No.4 injector
 B-117 (1) Generator

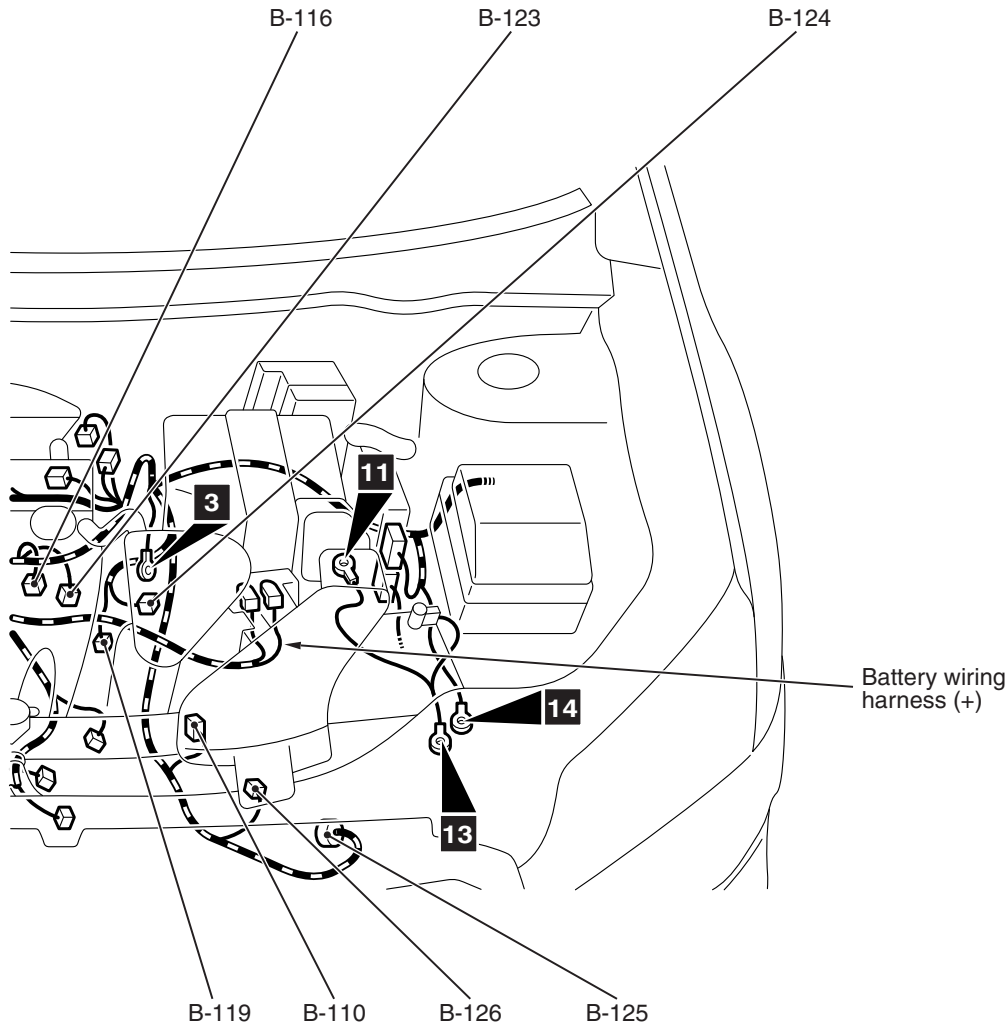


ACA01902AC

B-118 (4-GR) Generator
B-119 (3-GR) Crankshaft position sensor
B-120 (2-GR) No.2 injector
B-122 (1-B) Power steering pressure switch

B-123 (3-GR) Intake camshaft position sensor
B-124 (3-B) Secondary pulley speed sensor
B-125 (22-B) CVT assembly
B-126 (3-B) Primary pulley speed sensor

ENGINE AND TRANSAXLE <3.0L ENGINE>

M1801000404528

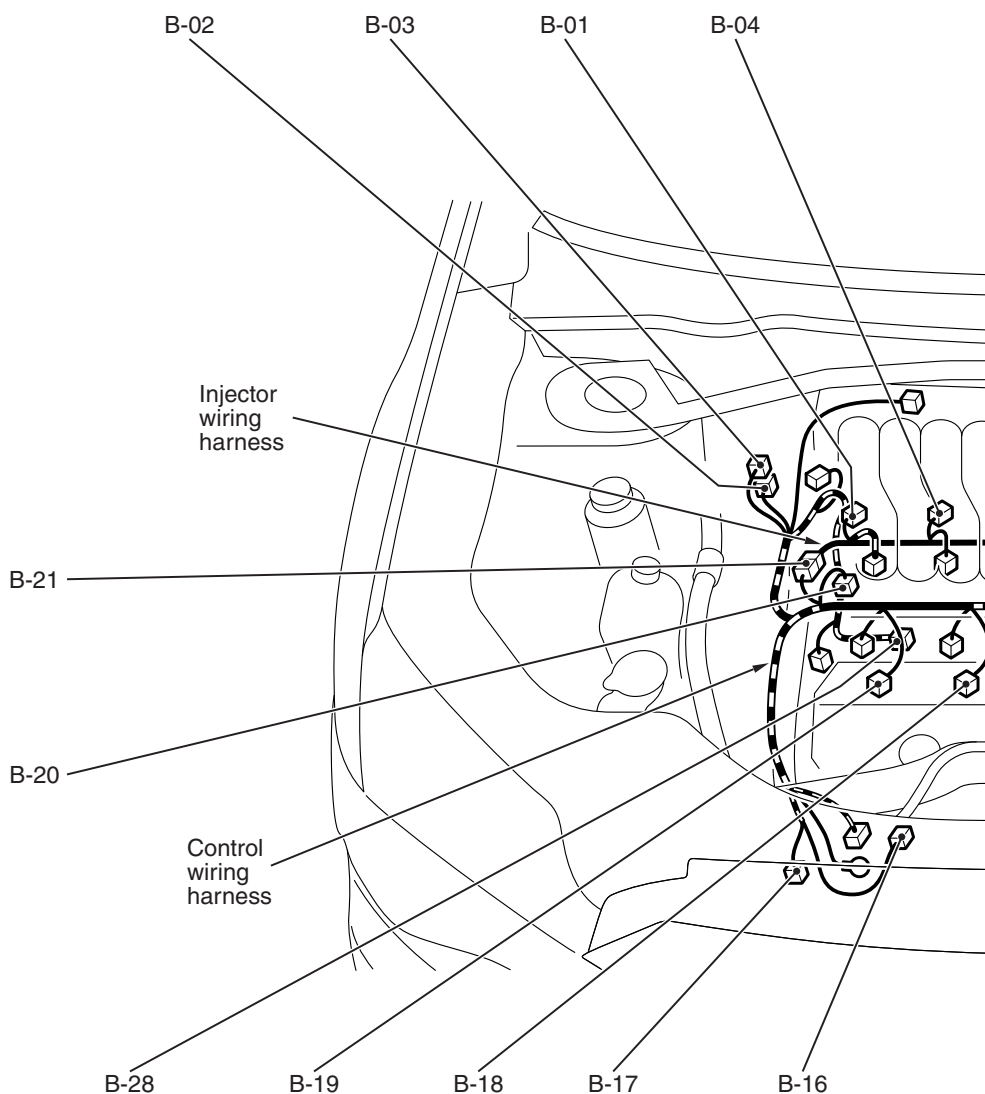
Connector
symbol**B** -01
thru
-28Connector color
code

B: Black
 BR: Brown
 G: Green
 GR: Gray
 L: Blue
 NONE: Milk white
 O: Orange
 R: Red
 V: Violet
 Y: Yellow

AC900425AB

B-01 (3-B) No.1 ignition coil
 B-02 (4-B) Right bank heated oxygen sensor (Rear)
 B-03 (4-GR) Right bank heated oxygen sensor (Front)
 B-04 (3-B) No.3 ignition coil
 B-05 (3-B) No.5 ignition coil

B-06 (2-B) Knock sensor 1
 B-07 (2-B) Evaporative emission purge solenoid
 B-08 (6-B) Throttle body assembly
 B-09 (2-B) Engine coolant temperature sensor
 B-10 (64-GR) Engine control module
 B-11 (48-GR) Engine control module
 B-12 (6-GR) Exhaust gas recirculation valve

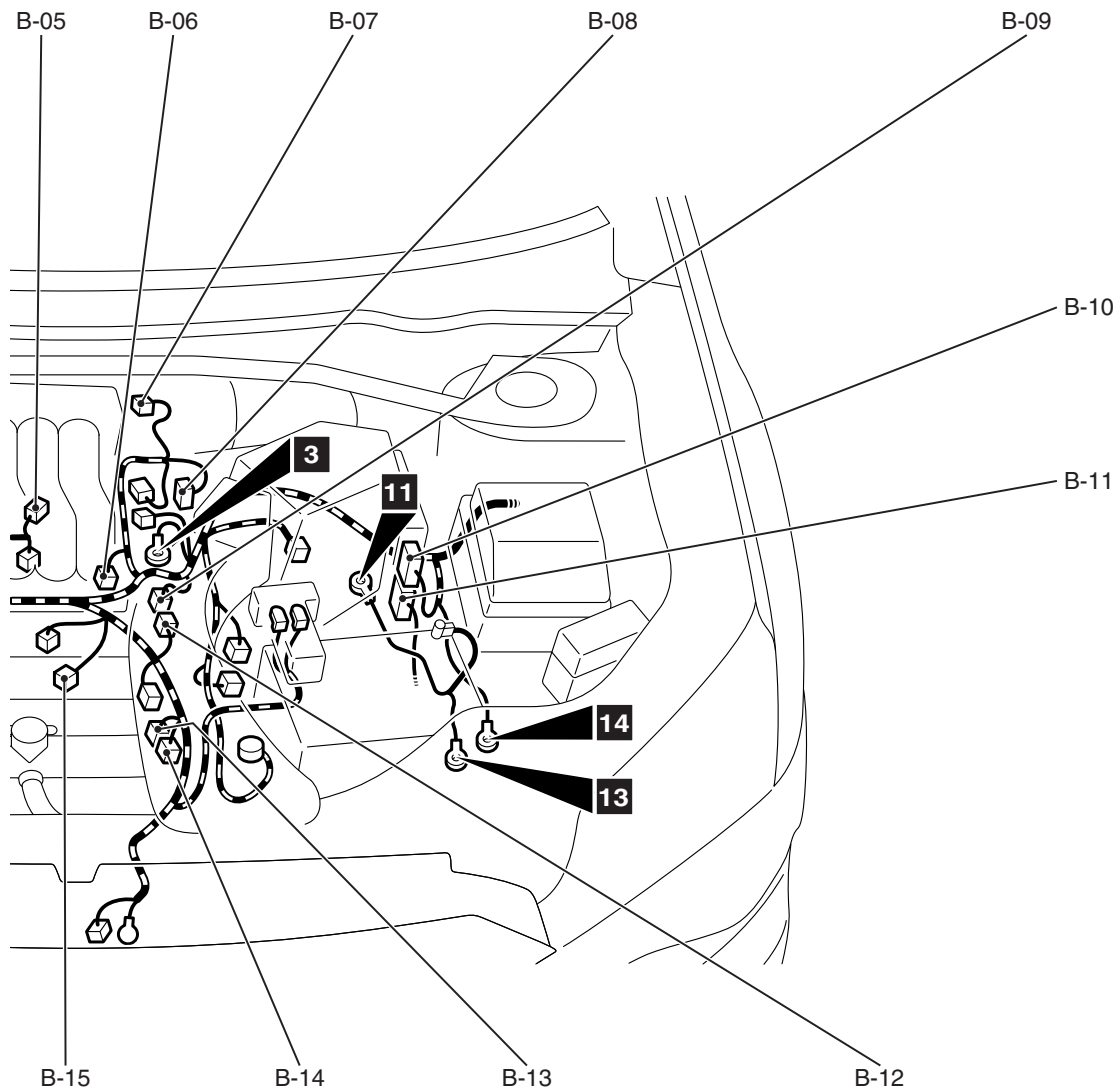


AC900426AB

- B-13 (4-GR) Left bank heated oxygen sensor (Rear)
- B-14 (4-B) Left bank heated oxygen sensor (Front)
- B-15 (3-B) No.6 ignition coil
- B-16 (1) Engine oil pressure switch
- B-17 (1-B) A/C compressor assembly

- B-18 (3-B) No.4 ignition coil
- B-19 (3-B) No.2 ignition coil
- B-20 (2-B) Knock sensor 2
- B-21 (10-B) Control wiring harness and injector wiring harness combination
- B-28 (2-GR) Electronic control coupling solenoid (Front) <S-AWC>


ENGINE AND TRANSAXLE <3.0L ENGINE> (CONTINUED)

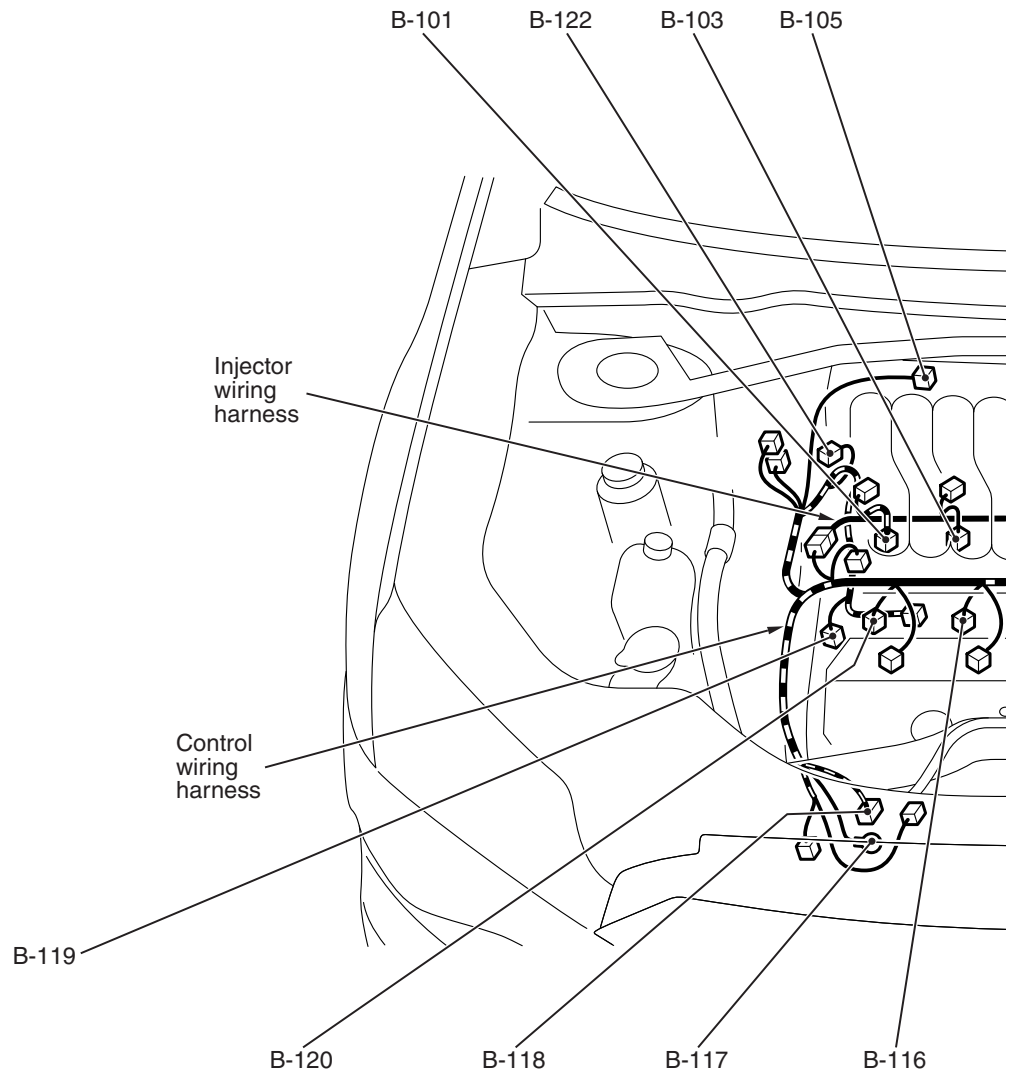Connector
symbol**B**-101
thru
-122Connector color
codeB: Black
BR: Brown
G: Green
GR: Gray
L: Blue
NONE: Milk white
O: Orange
R: Red
V: Violet
Y: Yellow

AC900425AC

B-101 (2-GR) No.1 injector
 B-103 (2-GR) No.3 injector
 B-104 (2-GR) No.5 injector
 B-105 (3-B) Manifold absolute pressure sensor
 B-106 (2-B) Engine oil control valve

B-107 (1-B) Oil pressure switch (MIVEC)
 B-108 (3-B) Output shaft speed sensor
 B-109 (3-B) Input shaft speed sensor
 B-110 (10-B) Transmission range switch
 B-111 (22-B) A/T control solenoid valve assembly

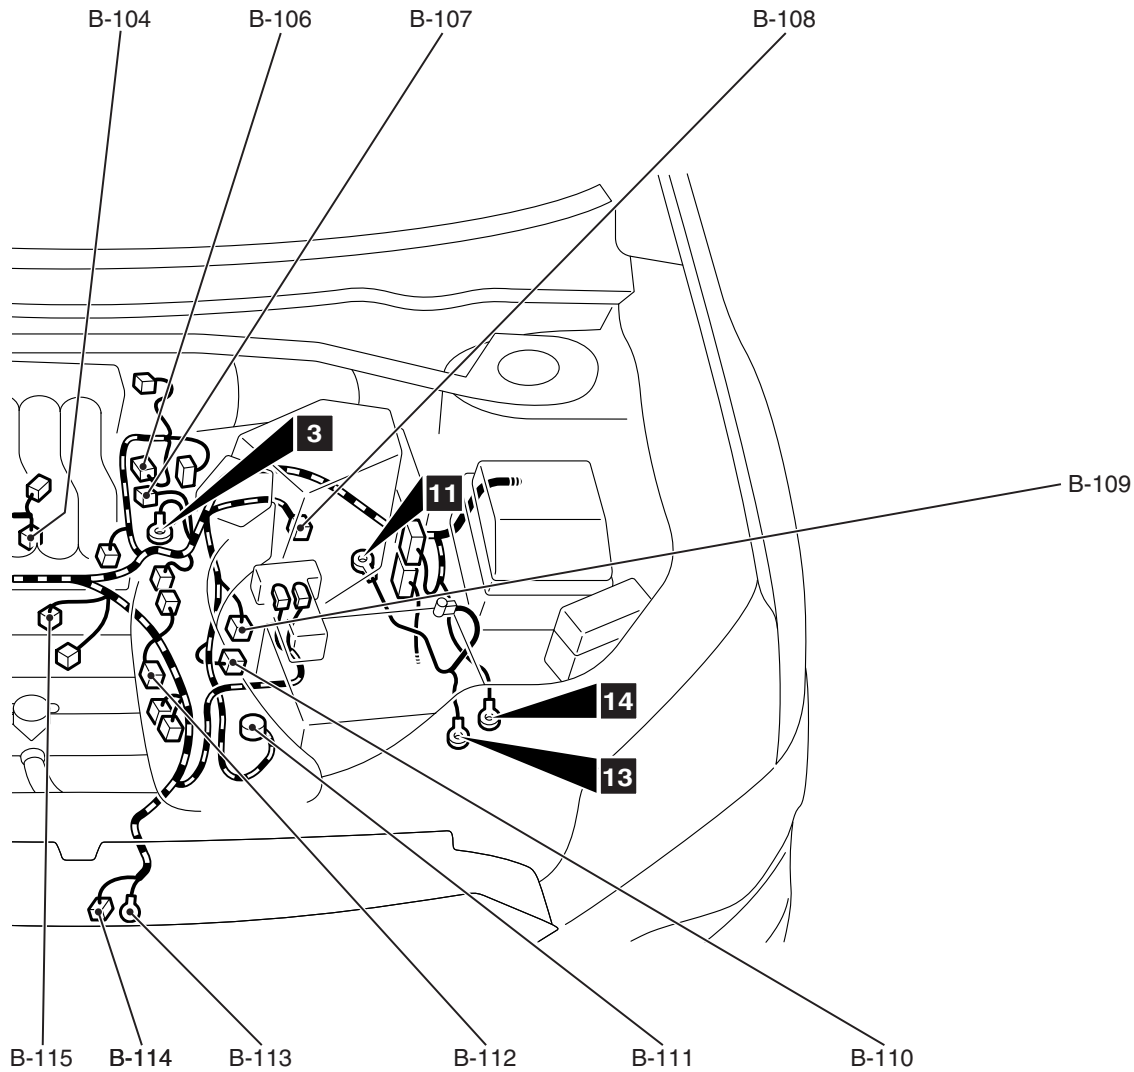

AC900426AC

B-112 (3-GR) Camshaft position sensor
B-113 (1) Starter
B-114 (1-B) Starter
B-115 (2-GR) No.6 injector
B-116 (2-GR) No.4 injector


B-117 (1) Generator
B-118 (4-GR) Generator
B-119 (3-GR) Crankshaft position sensor
B-120 (2-GR) No.2 injector
B-122 (1-B) Power steering pressure switch

DASH PANEL

M1801000604340

Connector
symbol**C**-01
thru
-42


Connector color
code
 B: Black
 BR: Brown
 G: Green
 GR: Gray
 L: Blue
 NONE: Milk white
 O: Orange
 R: Red
 V: Violet
 Y: Yellow

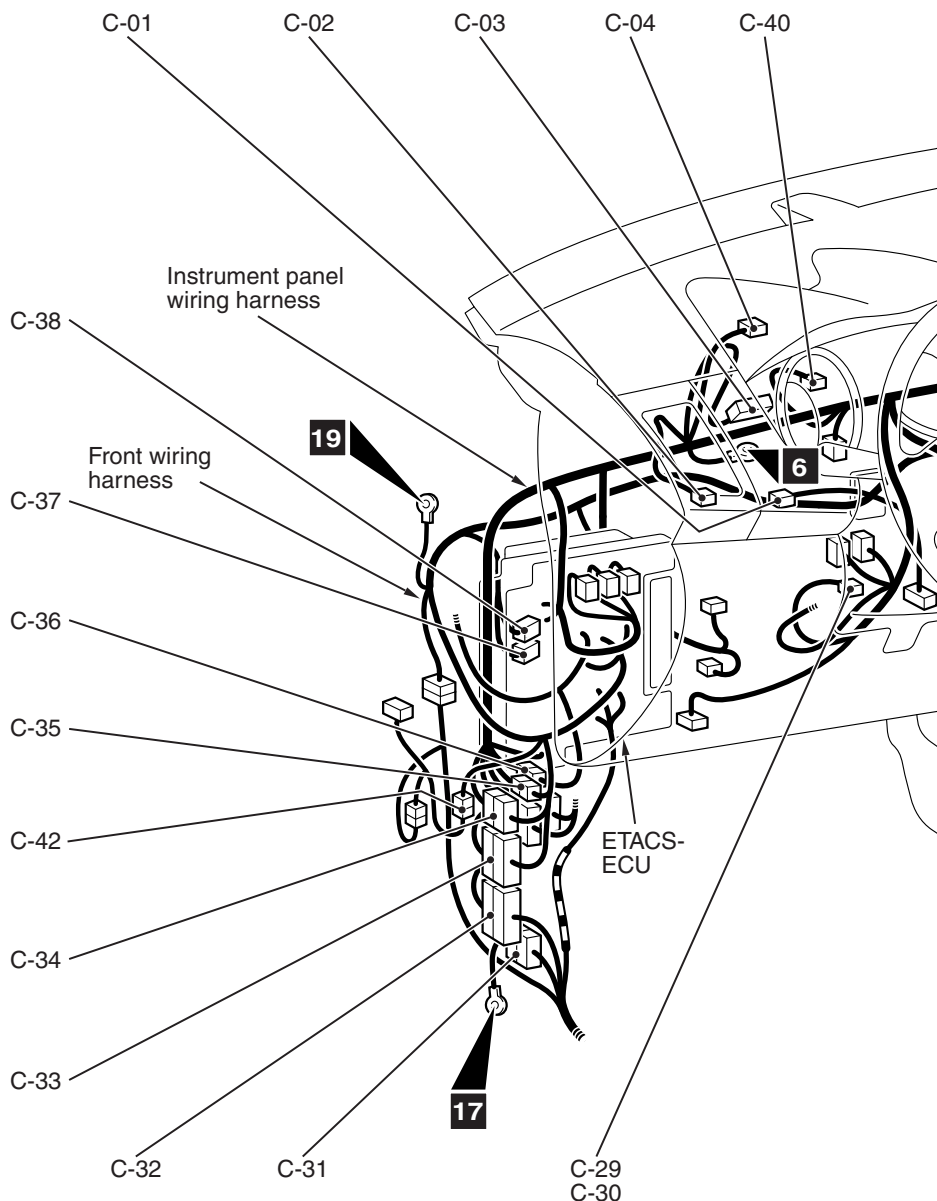

ACA01903AB

C-01	(24)	Joint connector (CAN3)
C-02	(4)	Meter information switch
C-03	(24)	Combination meter
C-04	(24)	Joint connector (CAN2)
C-05	(5)	No connection
C-06	(7-G)	Multivision display
C-07	(32-GR)	Multivision display
C-08	(3-GR)	Multivision display
C-09	(5-GR)	Multivision display
C-10	(17-GR)	Multivision display
C-11	(4-Y)	Passenger's (Front) air bag module (squib)
C-12	(2-B)	Glove box light
C-13	(10-G)	CAN box unit
C-14	(18)	Radio and CD player

C-15	(18)	Instrument panel wiring harness and navigation harness combination
C-16	(20)	Radio and CD player
C-17	(20)	Instrument panel wiring harness and navigation harness combination
C-18	(24)	Spare connector (for navigation unit)
C-19	(24)	Instrument panel wiring harness and navigation harness combination
C-20	(20)	Instrument panel wiring harness and floor wiring harness combination
C-21	(4)	Front wiring harness and floor wiring harness combination
C-22	(24)	Instrument panel wiring harness and floor wiring harness combination
C-23	(5)	Drive mode selector <Electronic controlled AWD>

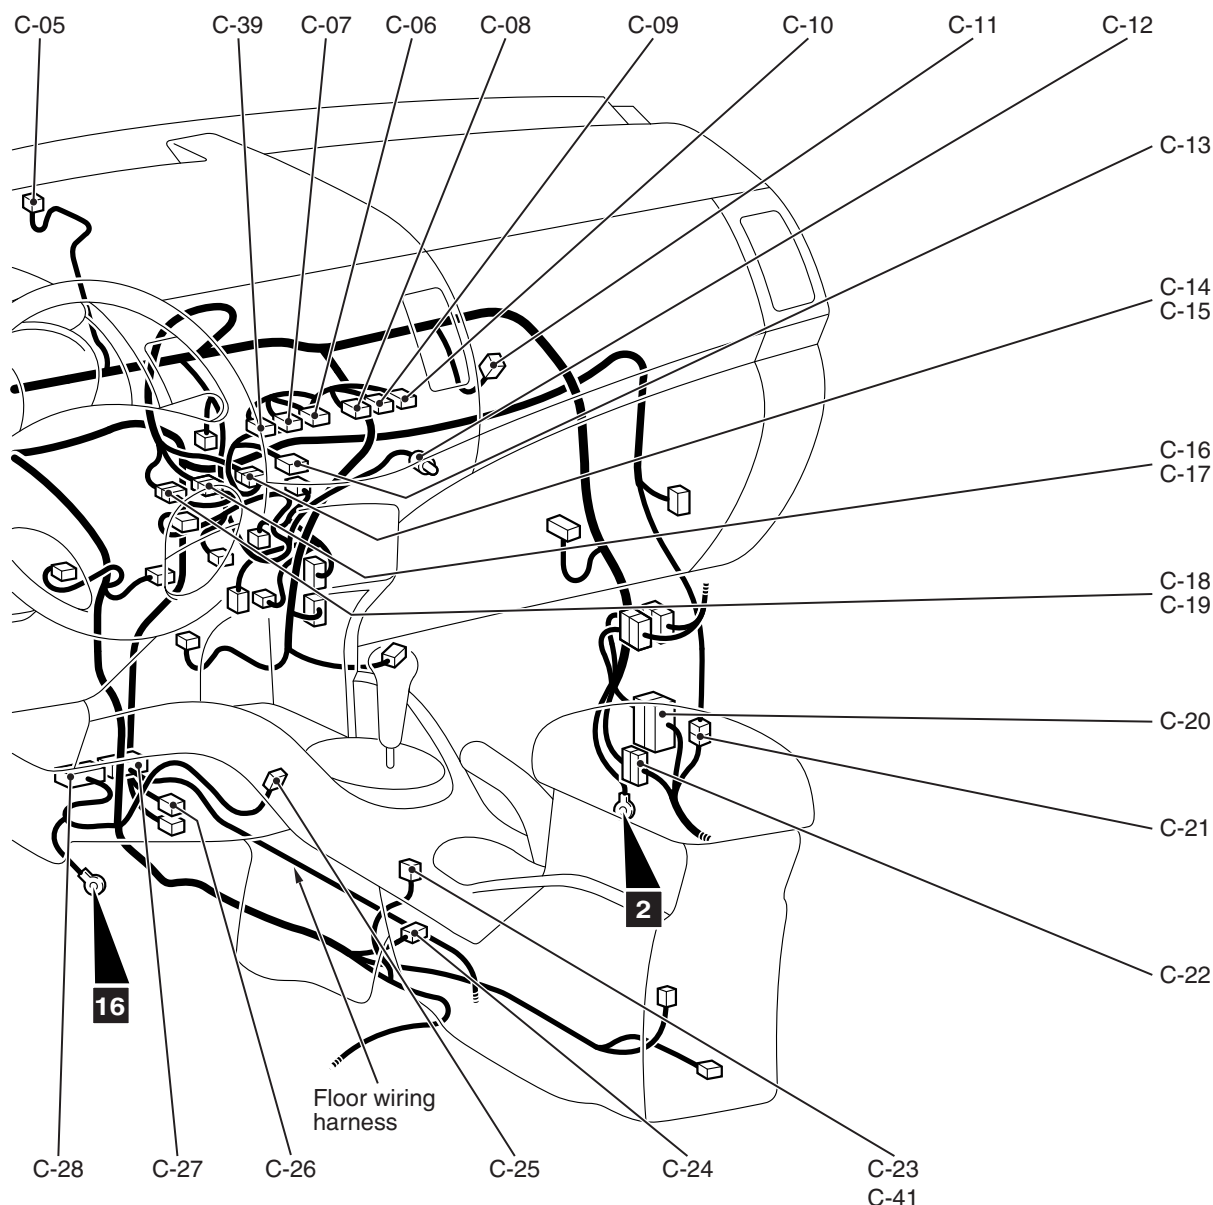


ACA01904AB

C-24	(10)	Selector lever assembly	C-34	(16-BR)	Instrument panel wiring harness and front wiring harness combination
C-25	(2)	Accessory socket (Front floor console)	C-35	(2)	Instrument panel wiring harness and front wiring harness combination
C-26	(4-B)	G and yaw rate sensor <Vehicles with ASC>	C-36	(12)	Instrument panel wiring harness and roof wiring harness combination
C-27	(32-Y)	SRS-ECU	C-37	(22)	Transaxle control module
C-28	(24-Y)	SRS-ECU	C-38	(26)	Transaxle control module
C-29	(12)	Wireless control module <Vehicles without KOS>	C-39	(12-GR)	Multivision display
C-30	(12)	Receiver antenna module <Vehicles with KOS>	C-40	(8)	LIN cut off control unit <Vehicles with theft-alarm sensor>
C-31	(24)	Instrument panel wiring harness and floor wiring harness combination	C-41	(5)	S-AWC control mode selector <S-AWC>
C-32	(20)	Instrument panel wiring harness and floor wiring harness combination	C-42	(12)	Front wiring harness and AWD sub wiring harness combination <S-AWC>
C-33	(22)	Instrument panel wiring harness and front wiring harness combination			

DASH PANEL (CONTINUED)


Connector
symbol**C** -101
thru
-142

Connector color
code
 B: Black
 BR: Brown
 G: Green
 GR: Gray
 L: Blue
 NONE: Milk white
 O: Orange
 R: Red
 V: Violet
 Y: Yellow

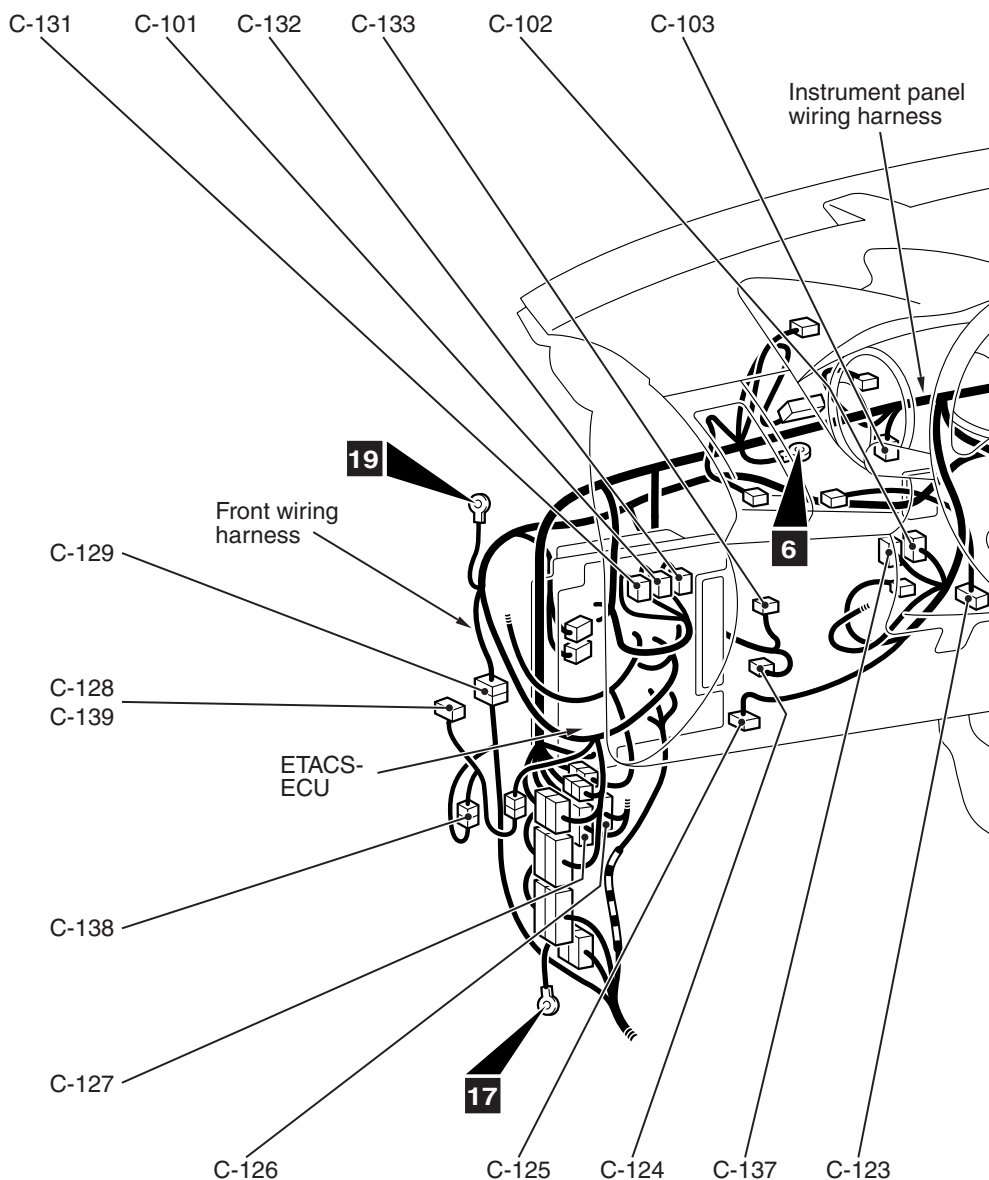

ACA01903AC

C-101 (6)	ASC off switch	C-112 (12)	Instrument panel wiring harness and front door wiring harness (RH) combination
C-102 (40)	KOS-ECU	C-113 (24-BR)	Instrument panel wiring harness and front door wiring harness (RH) combination
C-103 (24)	Joint connector (CAN 1)	C-114 (2)	Blower motor
C-104 (16)	Center panel unit	C-115 (5-G)	Air mixing damper control motor
C-105 (2)	Radio antenna	C-116 (2)	Accessory socket (Rear floor console)
C-106 (5-G)	Outside/inside air selection damper control motor	C-117 (6-B)	Audio or audio/video adapter
C-107 (5-G)	Mode selection damper control motor	C-118 (2)	Air thermo sensor
C-108 (16-B)	A/C-ECU	C-119 (12)	A/C control panel
C-109 (20-B)	A/C-ECU	C-120 (4)	Power transistor
C-110 (26)	No connection <3.0L engine (Vehicles with ASC)>	C-122 (2)	Interior temperature sensor <Vehicles with automatic air conditioning system>
C-111 (14)	Satellite radio tuner or spare connector (for satellite radio)	C-123 (6-B)	Accelerator pedal position sensor

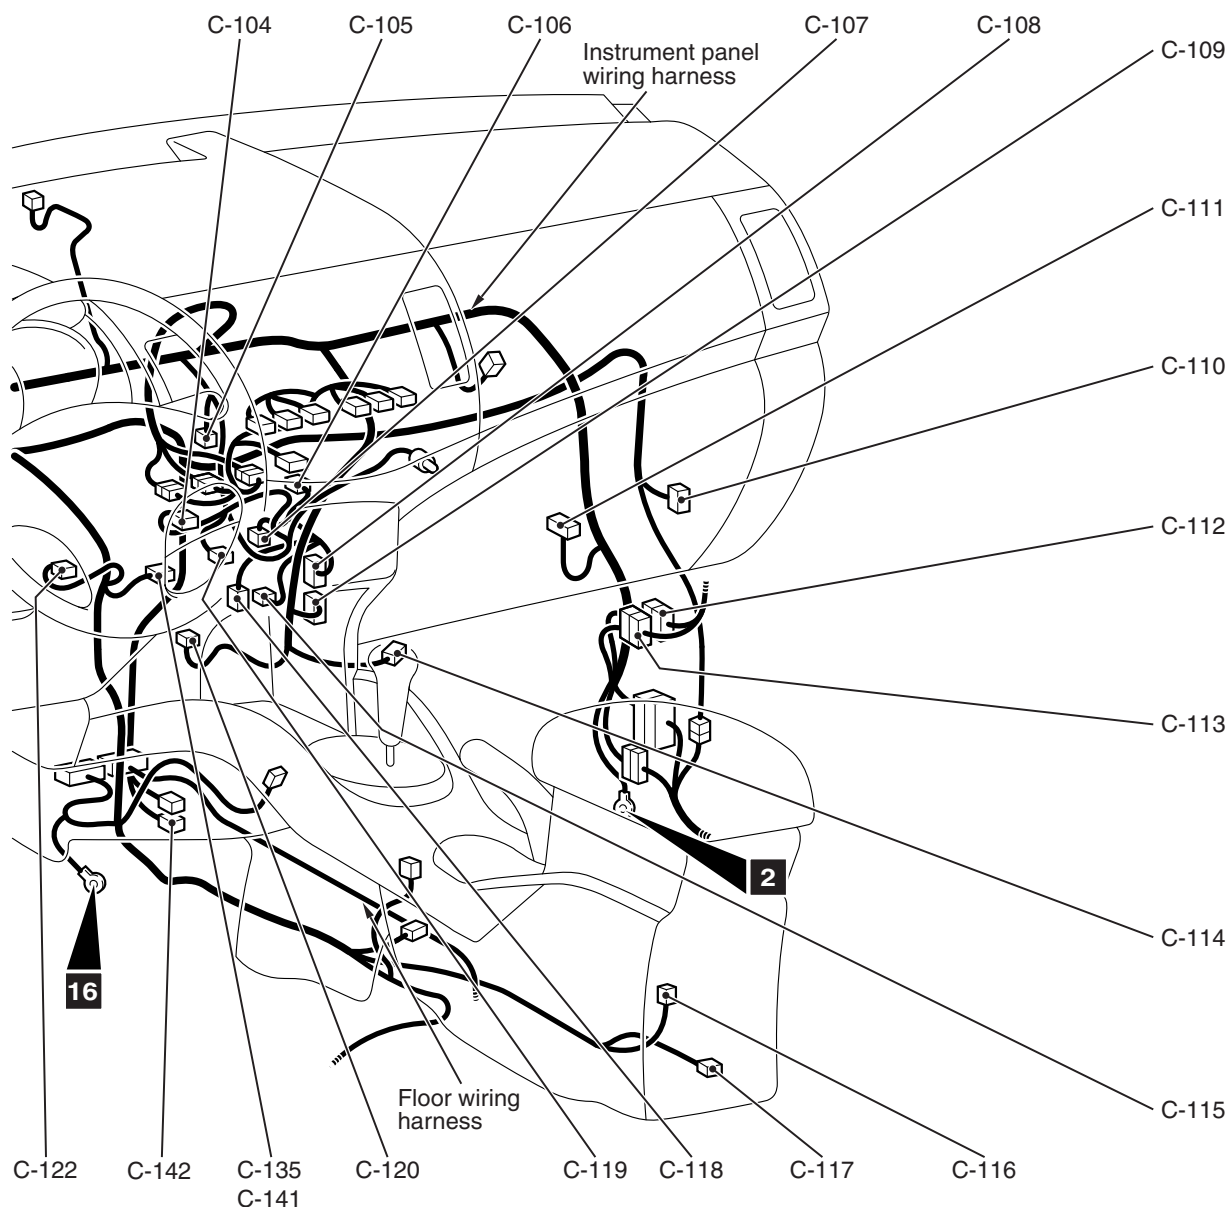


ACA01904AC

C-124 (4)	Stop lamp switch	C-132 (6-L)	No connection
C-125 (16-B)	Data link connector	C-133 (8)	Stoplight relay
C-126 (12)	Instrument panel wiring harness and front door wiring harness (LH) combination	C-135 (28)	USB box
C-127 (24-BR)	Instrument panel wiring harness and front door wiring harness (LH) combination	C-137 (24)	No connection
C-128 (16)	AWD-ECU <Electronic controlled AWD>	C-138 (16-BR)	Floor wiring harness and AWD sub wiring harness combination
C-129 (22)	Front wiring harness and floor wiring harness combination	C-139 (26)	AWC-ECU <S-AWC>
C-131 (6-GR)	Headlight leveling switch <Vehicles with discharge type headlight>	C-141 (28)	Hands-free module
		C-142 (6-B)	Linear air-fuel ratio sensor <2.4L engine>

DASH PANEL (CONTINUED)

Connector
symbol**C** -201
thru
-213



Steering column

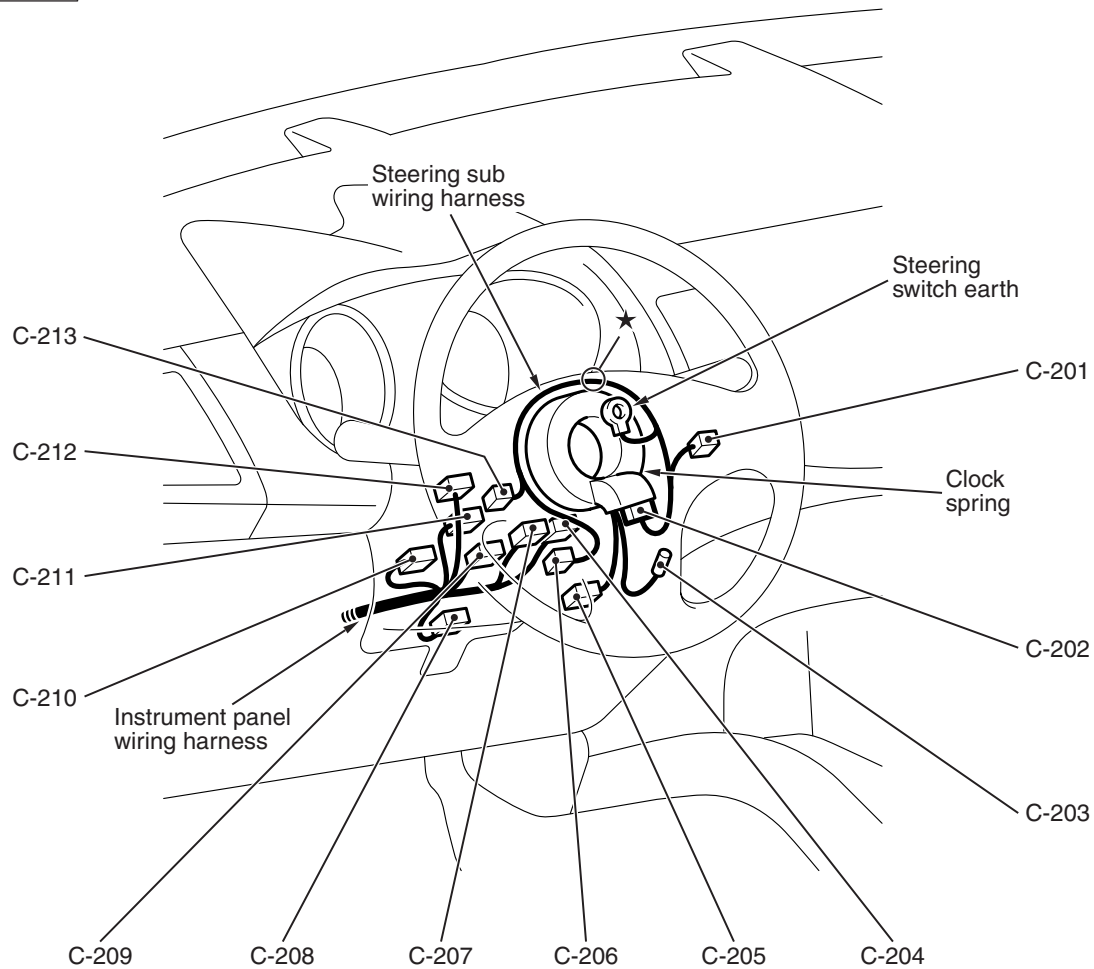

AC900147AF

C-201 (4-L)	Cruise control switch	C-208 (3)	Paddle shift switch
C-202 (5)	Clock spring and steering sub wiring harness combination	C-209 (5)	Steering wheel sensor <Vehicles with ASC>
C-203 (1)	Horn switch	C-210 (6)	Ignition switch
C-204 (6)	Clock spring	C-211 (12)	Key reminder switch
C-205 (4-Y)	Driver's air bag module (squib)	C-212 (10)	Column switch
C-206 (4-Y)	Steering wheel voice control switch	C-213 (5-R)	Steering wheel audio remote control switch
C-207 (4-Y)	Clock spring		

DASH PANEL (CONTINUED)

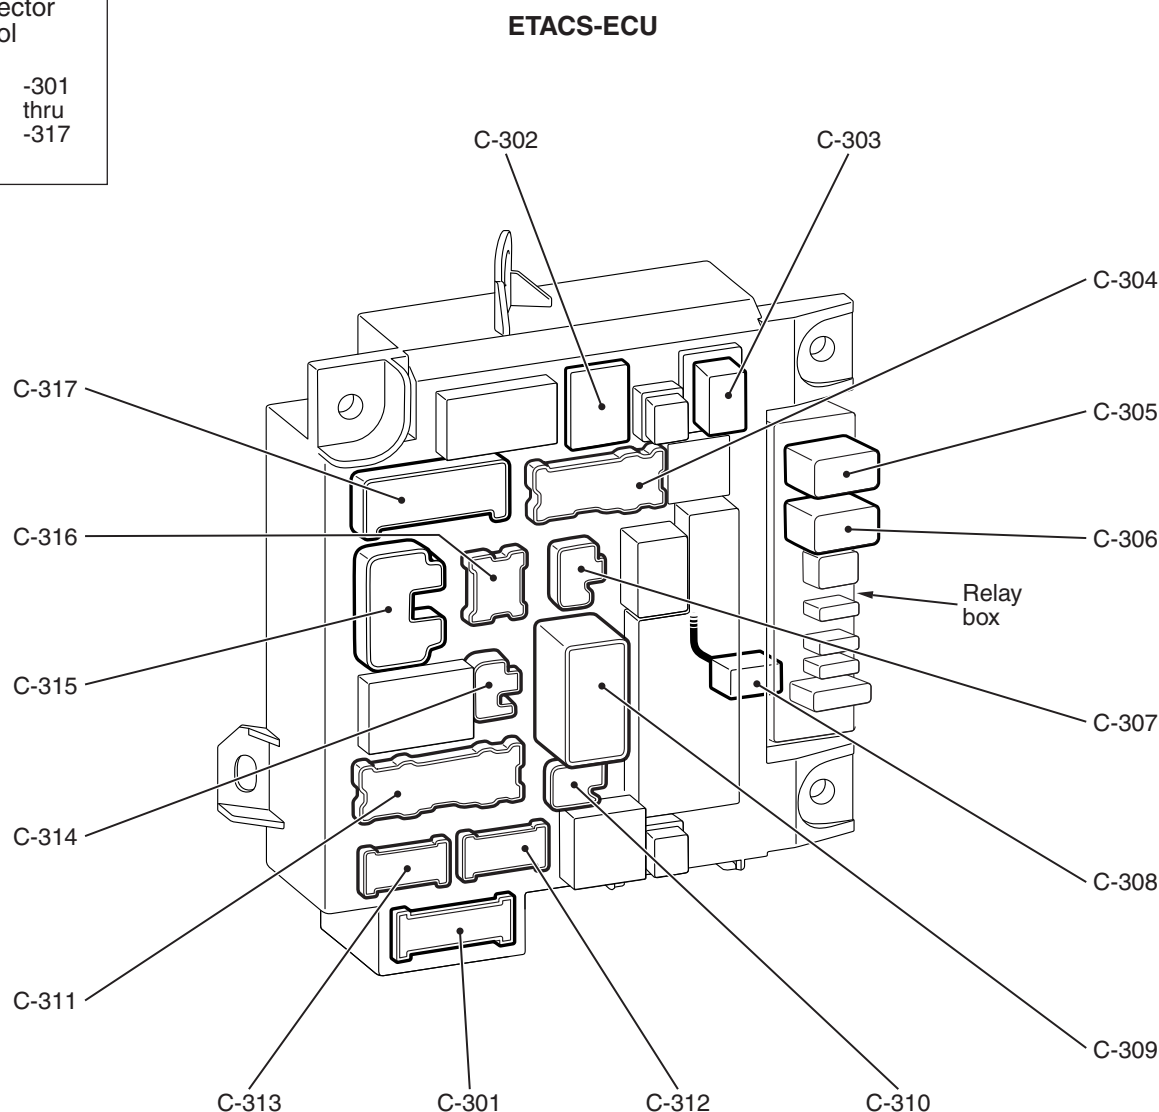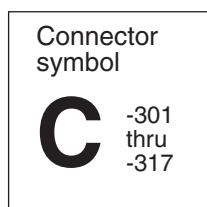


AC905098AC

C-301 (24)	Instrument panel wiring harness and ETACS-ECU combination	C-311 (20)	Floor wiring harness and ETACS-ECU combination
C-302 (4)	No connection	C-312 (16)	Front wiring harness and ETACS-ECU combination
C-303 (4)	Blower relay	C-313 (16-BR)	Floor wiring harness and ETACS-ECU combination
C-304 (16)	Front wiring harness and ETACS-ECU combination	C-314 (2)	Floor wiring harness and ETACS-ECU combination
C-305 (4)	Heated seat relay	C-315 (19)	Instrument panel wiring harness and ETACS-ECU combination
C-306 (4)	Rear window defogger relay	C-316 (6)	Roof wiring harness and ETACS-ECU combination
C-307 (2-B)	Front wiring harness and ETACS-ECU combination	C-317 (15)	Instrument panel wiring harness and ETACS-ECU combination
C-308 (1-GR)	Instrument panel wiring harness and ETACS-ECU combination		
C-309 (2-B)	Front wiring harness and ETACS-ECU combination		
C-310 (4)	No connection		

FLOOR AND ROOF


M1801000905139

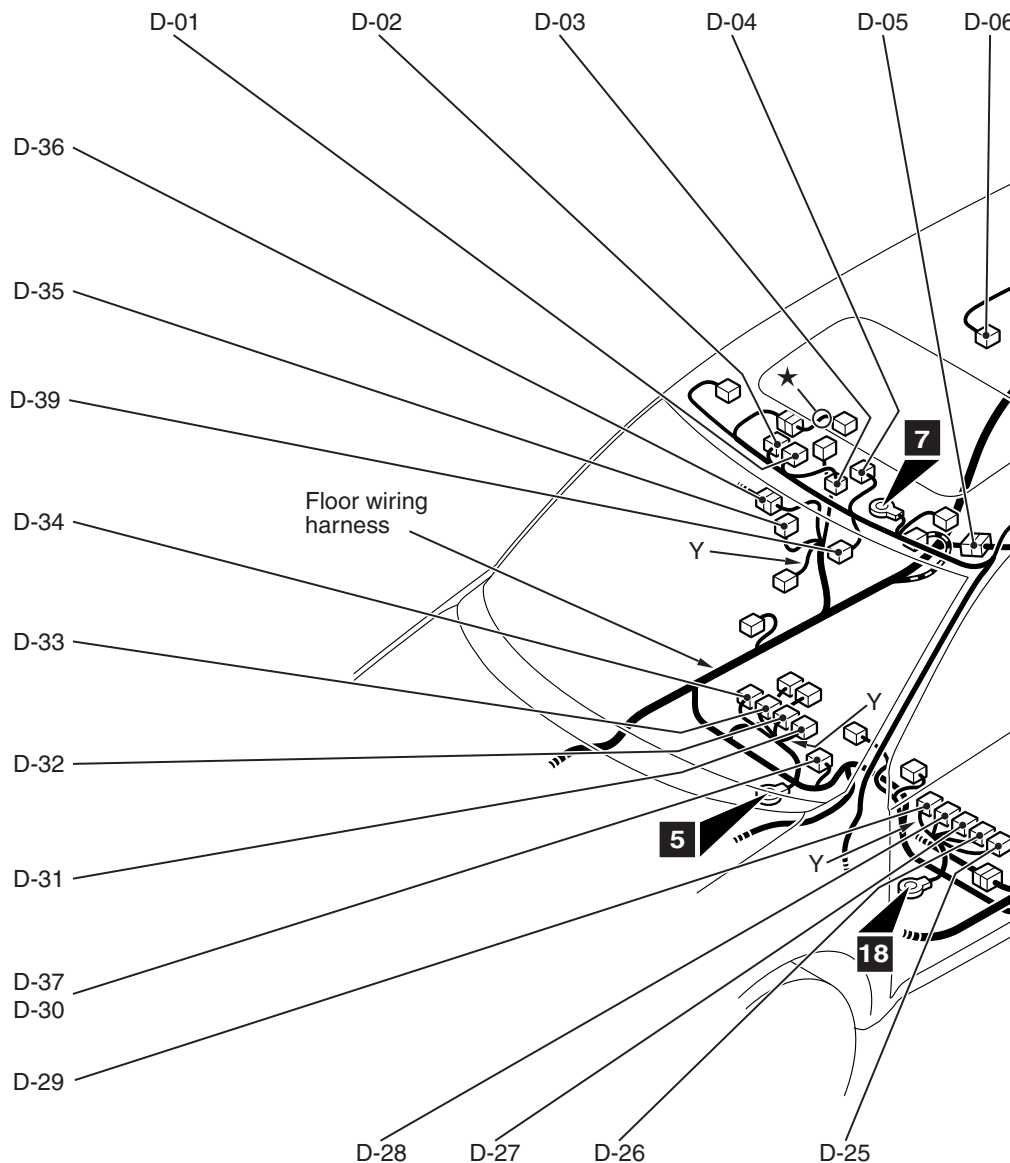Connector
symbol**D** -01
thru
-39Connector color
codeB: Black
BR: Brown
G: Green
GR: Gray
L: Blue
NONE: Milk white
O: Orange
R: Red
V: Violet
Y: Yellow

ACA01905AB

D-01	(3)	Microphone unit
D-02	(3)	Front dome light
D-03	(6-B)	Sunroof switch
D-04	(10-GR)	Sunroof motor assembly
D-05	(2)	Floor wiring harness and fuel wiring harness combination
D-06	(22-L)	Rear display unit
D-07	(3)	Rear door switch (RH)
D-08	(2-Y)	Floor wiring harness and curtain air bag wiring harness (RH) combination
D-09	(4)	Rear combination light (RH)
D-10	(2-GR)	Rear dome light
D-12	(14)	Floor wiring harness and liftgate wiring harness combination


D-13	(2-Y)	Floor wiring harness and curtain air bag wiring harness (LH) combination
D-14	(4)	Rear combination light (LH)
D-15	(4-B)	Sub woofer
D-16	(10)	Rear display unit
D-17	(3)	Rear door switch (LH)
D-18	(4)	Spare connector (for rear display)
D-19	(3-B)	Fuel tank differential pressure sensor
D-20	(5-GR)	Fuel pump module
D-21	(10)	Floor wiring harness and rear door wiring harness (LH) combination

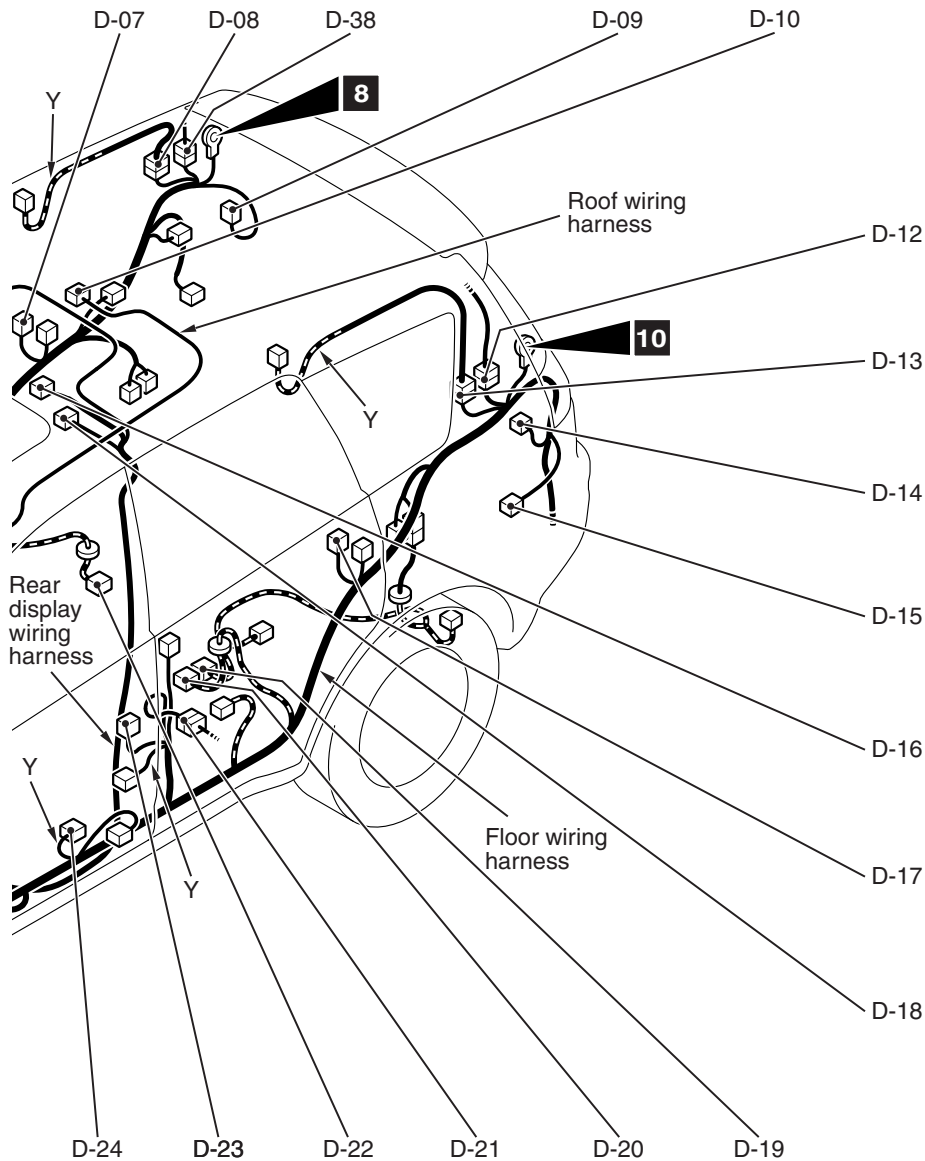

AC900430AD


D-22	(2)	Fuel level sensor (sub) <AWD>	D-33	(4-B)	Heated seat assembly (RH)
D-23	(3)	Front door switch (LH)	D-34	(6)	Front seat assembly (RH)
D-24	(2-B)	Lap pre-tensioner	D-35	(3)	Front door switch (RH)
D-25	(2)	Power seat assembly	D-36	(10)	Floor wiring harness and rear door wiring harness (RH) combination
D-26	(4-B)	Heated seat assembly (LH)	D-37	(4-B)	Heated oxygen sensor <2.4L engine>
D-27	(2-GR)	Seat slide sensor	D-38	(6)	Floor wiring harness and rear view camera wiring harness combination
D-28	(4-B)	Seat belt switch (Driver's side)	D-39	(4)	Lighting control sensor <Vehicles with automatic light>
D-29	(2-Y)	Side-airbag module (squib) (LH)			
D-30	(4-B)	No connection <3.0L engine>			
D-31	(2-Y)	Side-airbag module (squib) (RH)			
D-32	(2-B)	Seat belt switch (Passenger's side)			

FLOOR AND ROOF (CONTINUED)

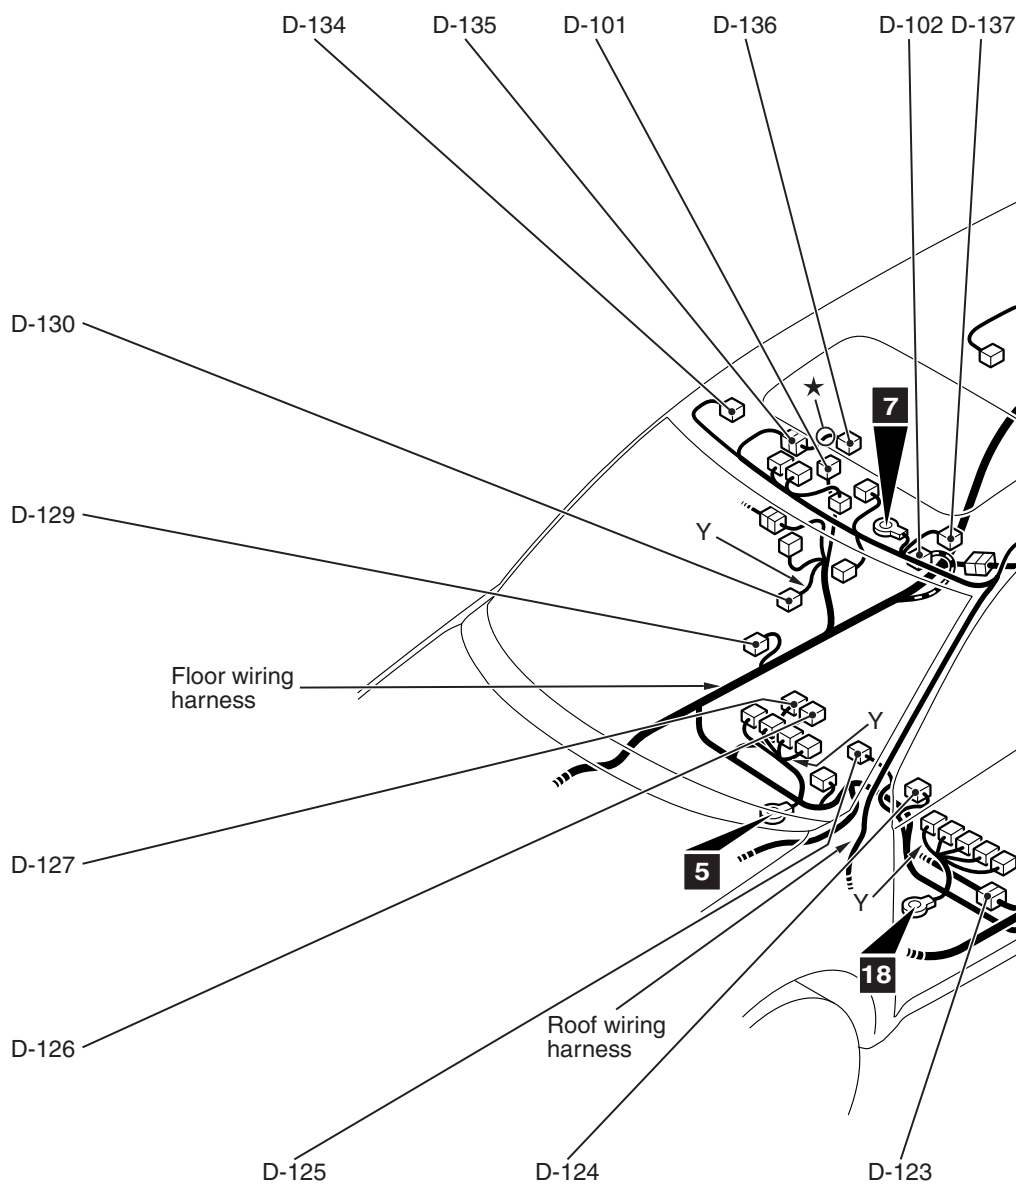Connector
symbol**D** -101
thru
-138Connector color
codeB: Black
BR: Brown
G: Green
GR: Gray
L: Blue
NONE: Milk white
O: Orange
R: Red
V: Violet
Y: Yellow

ACA01905AC


D-101 (3)	Outside transmission antenna assembly (Passenger's side)	D-114 (2-B)	Rear wheel speed sensor (LH)
D-102 (6-B)	Foot light (RH)	D-115 (4-Y)	Side impact sensor (Rear: LH)
D-104 (2-B)	Curtain air bag module (squib) (RH)	D-116 (2-B)	Evaporative emission ventilation solenoid
D-105 (10)	Spare connector (for switch box)	D-117 (3)	No connection
D-106 (3)	Inside transmission antenna assembly (Rear: Passenger's side)	D-119 (2)	Electronic control coupling solenoid <Electronic controlled AWD>
D-108 (2)	Accessory socket (Lower quarter trim)	D-120 (6-B)	Foot light (LH)
D-109 (2-B)	Curtain air bag module (squib) (LH)	D-121 (2-B)	Seat belt pre-tensioner (LH)
D-113 (4)	Floor wiring harness and evaporative emission ventilation solenoid sub wiring harness combination	D-122 (4-Y)	Side impact sensor (Front: LH)

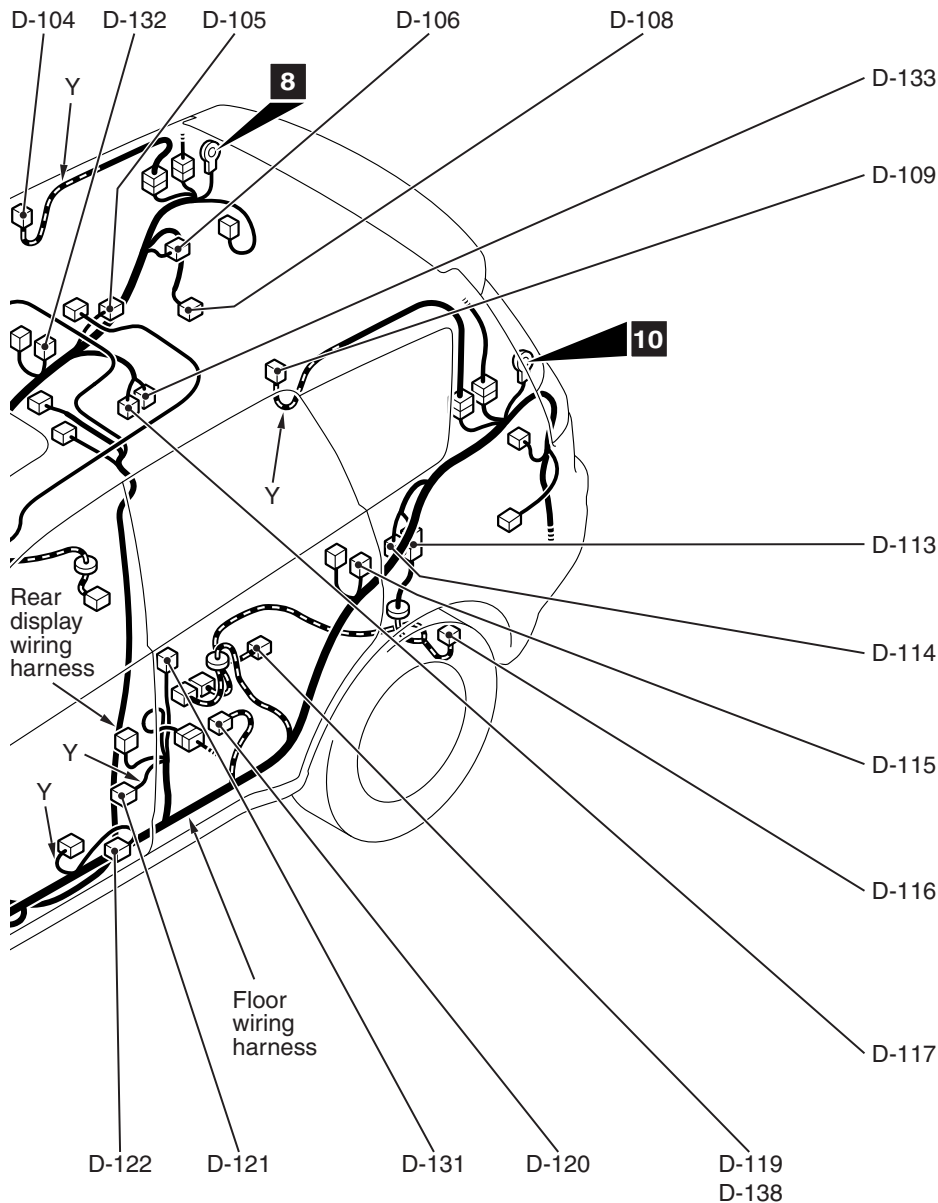

AC900430AC

D-123 (24)	Instrument panel wiring harness and rear display wiring harness combination	D-132 (4-Y)	Side impact sensor (Rear: RH)
D-124 (3)	Inside transmission antenna assembly (Front)	D-133 (2-B)	Rear wheel speed sensor (RH)
D-125 (1-B)	Parking brake switch	D-134 (2)	Vanity mirror light (RH)
D-126 (18)	Audio amplifier	D-135 (3)	Roof wiring harness and theft-alarm sensor wiring harness combination
D-127 (14)	Audio amplifier	D-136 (4-B)	Theft-alarm sensor
D-129 (4-Y)	Side impact sensor (Front: RH)	D-137 (2)	Vanity mirror light (LH)
D-130 (2-B)	Seat belt pre-tensioner (RH)	D-138 (2)	Electronic control coupling solenoid (Center) <S-AWC>
D-131 (3)	Outside transmission antenna assembly (Driver's side)		


DOOR

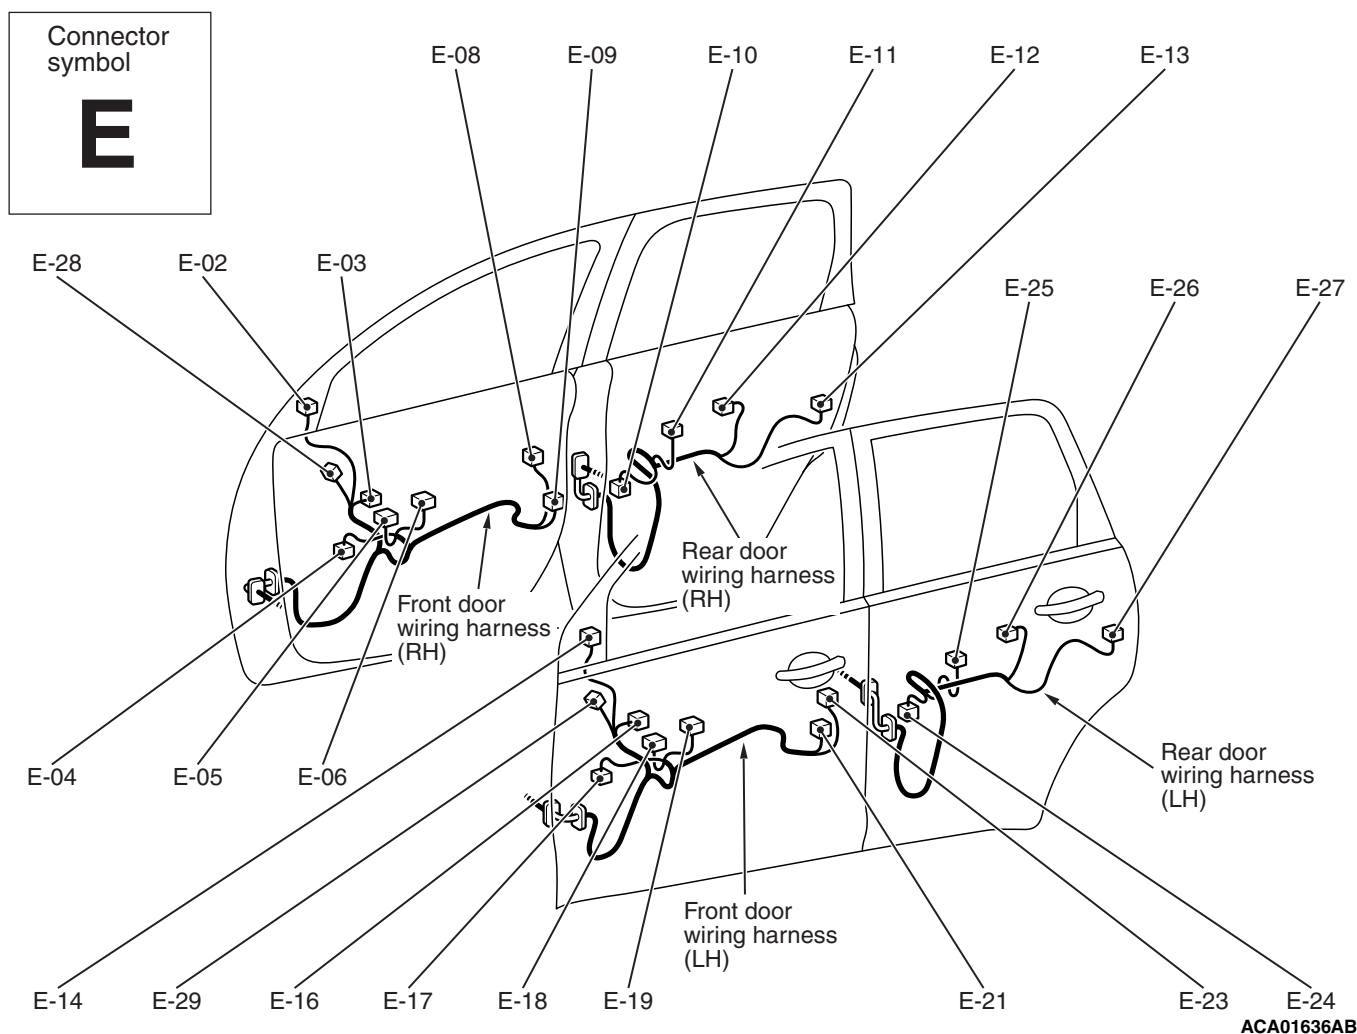

E-02	(2-B)	Tweeter (RH)	E-16	(6-GR)	Front power window motor (LH)
E-03	(6-GR)	Front power window motor (RH)	E-17	(2)	Front door speaker (LH)
E-04	(2)	Front door speaker (RH)	E-18	(11-L)	Remote controlled mirror switch
E-05	(4)	Front power window sub switch	E-19	(19)	Power window main switch
E-06	(8)	Front power window sub switch	E-21	(6-B)	Front door lock actuator (LH)
E-08	(2-GR)	Lock/unlock switch (Front door: RH) <Vehicles with KOS>	E-23	(2-GR)	Lock/unlock switch (Front door: LH) <Vehicles with KOS>
E-09	(6-B)	Front door lock actuator (RH)	E-24	(2)	Rear door speaker (LH)
E-10	(2)	Rear door speaker (RH)	E-25	(8)	Rear power window sub switch (LH)
E-11	(8)	Rear power window sub switch (RH)	E-26	(6-GR)	Rear power window motor (LH)
E-12	(6-GR)	Rear power window motor (RH)	E-27	(6-B)	Rear door lock actuator (LH)
E-13	(6-B)	Rear door lock actuator (RH)	E-28	(16)	Door mirror assembly (RH)
E-14	(2-B)	Tweeter (LH)	E-29	(16)	Door mirror assembly (LH)

M1801001901486

LIFTGATE

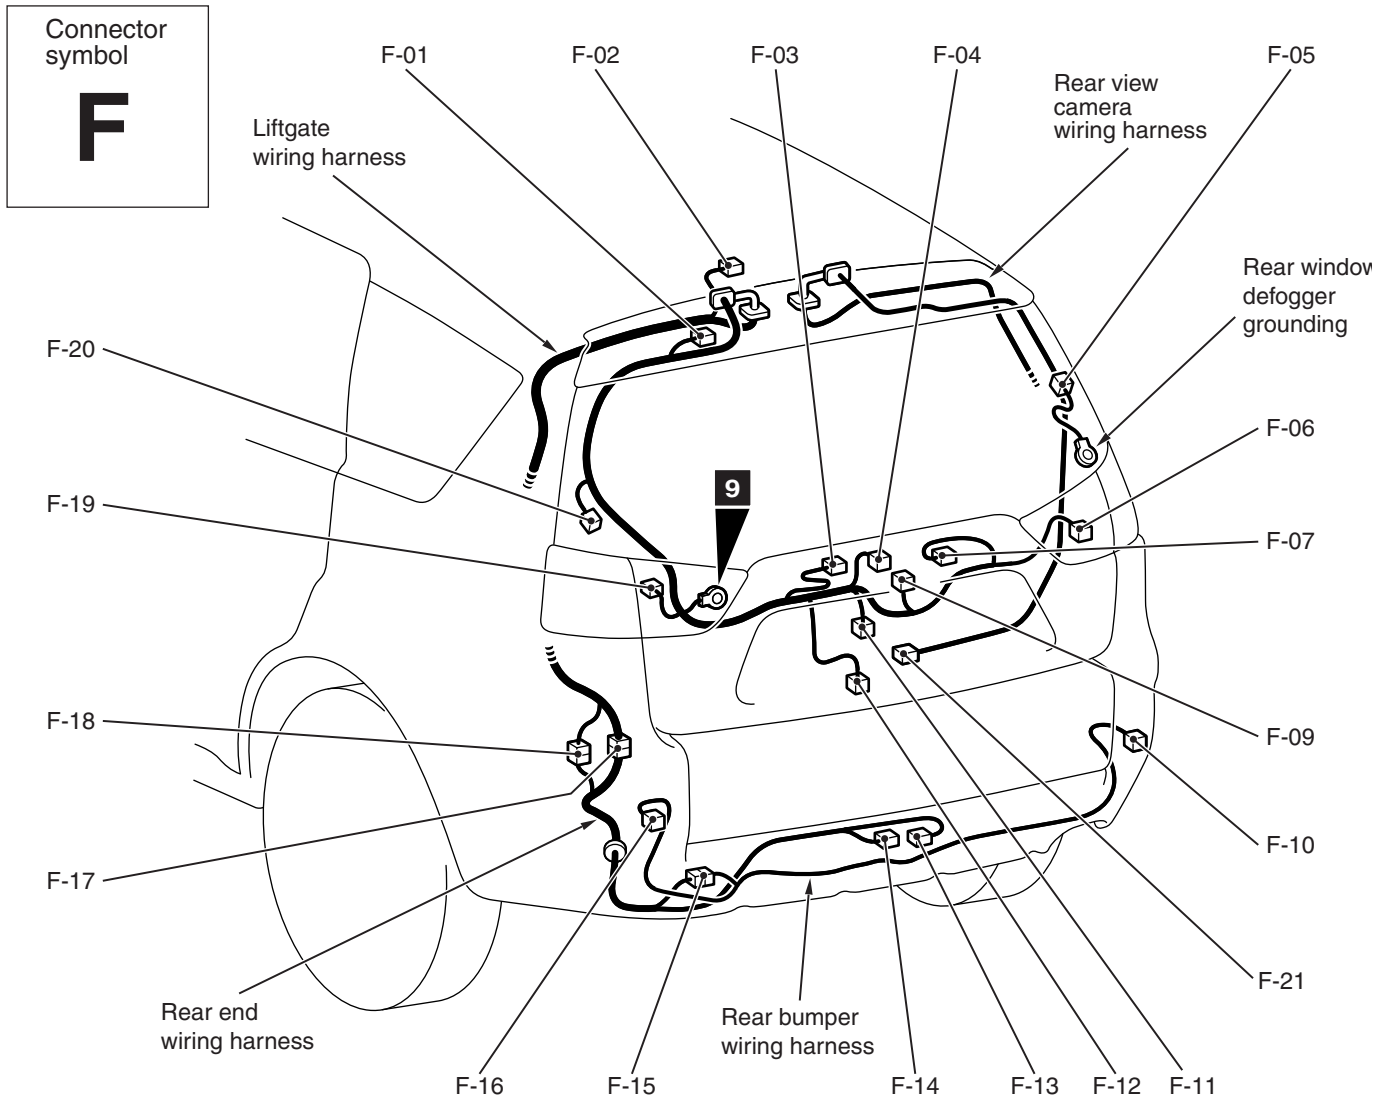

ACA01899AB

F-01	(2)	High-mounted stoplight	F-14	(3-GR)	Outside transmission antenna assembly (Liftgate)
F-02	(2-GR)	Luggage compartment light	F-15	(4-B)	Rear end wiring harness and rear bumper wiring harness combination
F-03	(2)	License plate light (LH)	F-16	(2)	Rear side marker light (LH)
F-04	(4-B)	Rear wiper motor	F-17	(16)	Floor wiring harness and rear end wiring harness combination
F-05	(1-B)	Rear window defogger (-)	F-18	(6)	Floor wiring harness and rear end wiring harness combination
F-06	(2)	Backup light (RH)	F-19	(2)	Backup light (LH)
F-07	(2)	License plate light (RH)	F-20	(1-B)	Rear window defogger (+)
F-09	(3)	Liftgate lock release handle	F-21	(6)	Rear view camera
F-10	(2)	Rear side marker light (RH)			
F-11	(2-B)	Liftgate lock actuator			
F-12	(1-B)	Liftgate switch			
F-13	(2-GR)	Outer tone alarm			

NOTES