

GROUP 70

 
COMPONENT
LOCATIONS

CONTENTS


RELAY	70-2	FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR	70-20
CONTROL UNIT.....	70-4	OTHER DEVICES	70-22
INSPECTION TERMINAL	70-7	GROUNDING CABLE.....	70-22
SENSOR.....	70-8	GROUNDING	70-23
SOLENOID AND SOLENOID VALVE	70-17		

RELAY


Name	Symbol	Name	Symbol
A/C compressor relay	A	Heated seat relay	B
A/T control relay <3.0L Engine>	A	Horn relay	A
Blower relay	B	Injector relay	A
Condenser fan relay	A	MFI relay	A
CVT control relay <2.4L Engine>	A	Radiator fan relay	A
Daytime running light relay <Vehicles with discharge type headlight>	A	Rear window defogger relay	B
Fan control relay	A	Starter relay	A
Fog light relay	A	Stoplight relay	C
Headlight relay (High)	A	Theft-alarm horn relay <Vehicles without theft-alarm sensor>	A
Headlight relay (Low)	A	Throttle actuator control motor relay	A

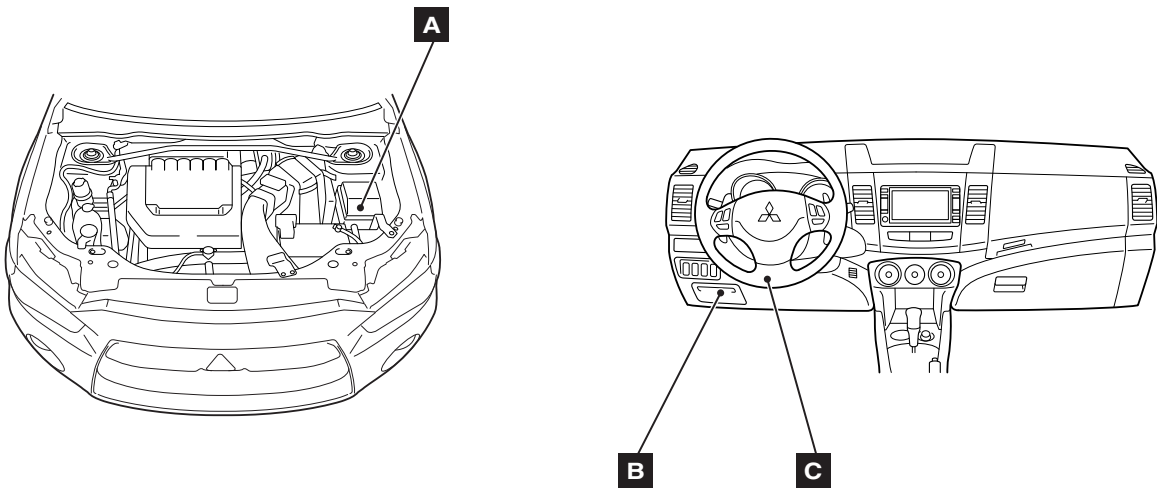

AC900431AH

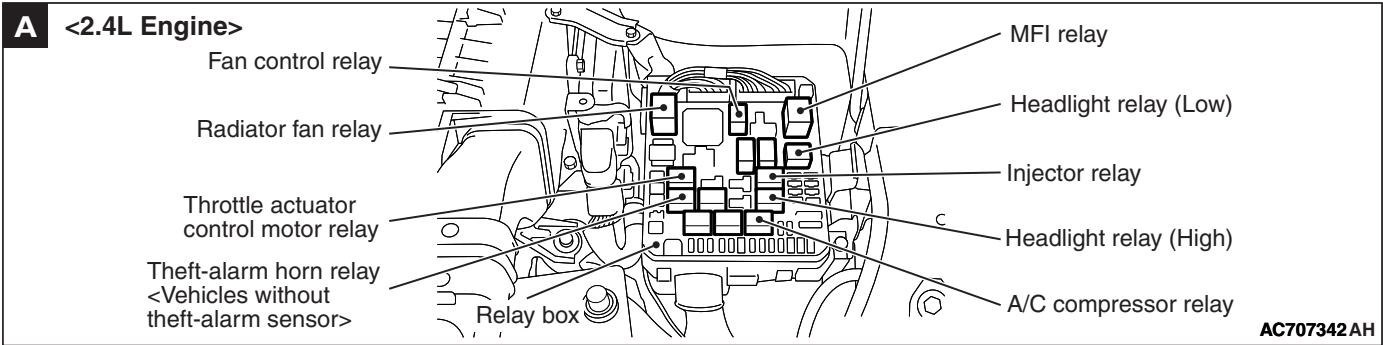 


A <2.4L Engine>

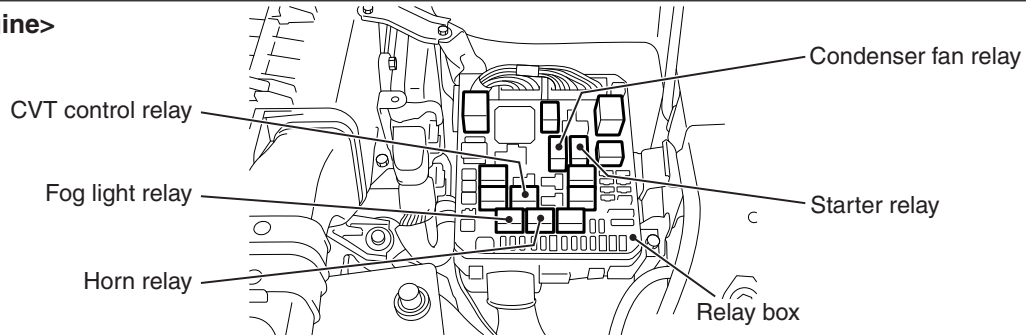 


AC707342AE

 A <3.0L Engine>

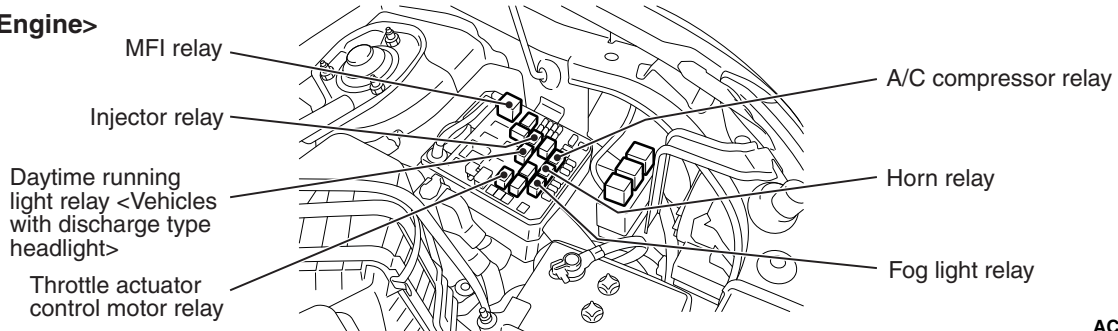


AC702518AC

 A <3.0L Engine>

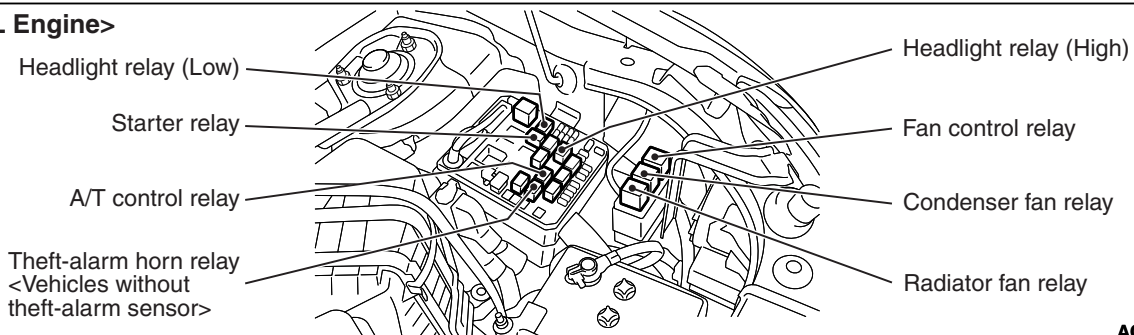


AC702519AD

 B

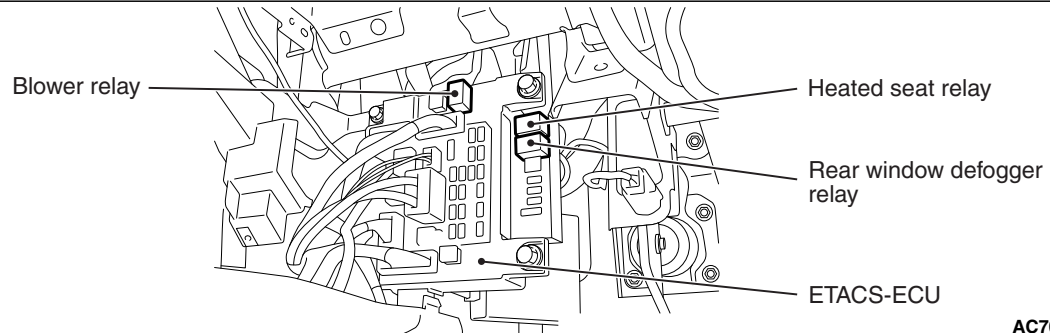

AC702540AB

 C


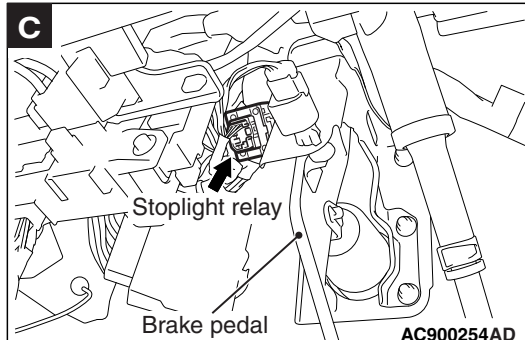


AC900254AD


CONTROL UNIT

M1701000701051

Name	Symbol	Name	Symbol
A/C-ECU	N	Headlight control unit <Vehicles with discharge type headlight>	C
ABS-ECU	A	KOS-ECU	K
ASC-ECU	A	Multivision display	G
AWC-ECU <S-AWC>	I	Occupant classification-ECU	P
AWD-ECU <Electronic controlled AWD>	I	Power window main switch (incorporating CPU)	Q
CAN box unit	G	Receiver antenna module <Vehicles with KOS>	J
Column switch (incorporating column-ECU)	D	SRS-ECU	L
Combination meter (incorporating CPU)	E	Sunroof motor assembly (incorporating CPU)	O
Engine control module	B	Transaxle control module	I
ETACS-ECU	H	USB box	M
Hands free module	M	Wireless control module <Vehicles without KOS>	J





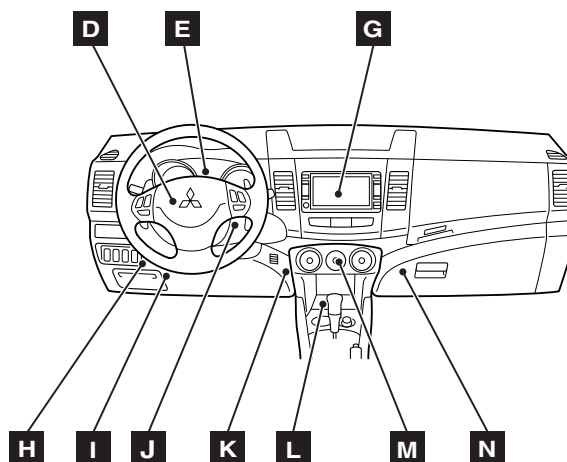 
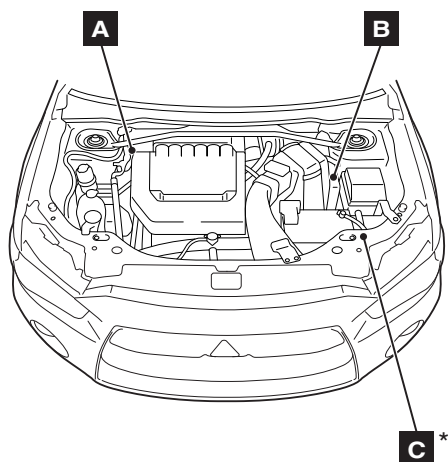 








AC900431 AC





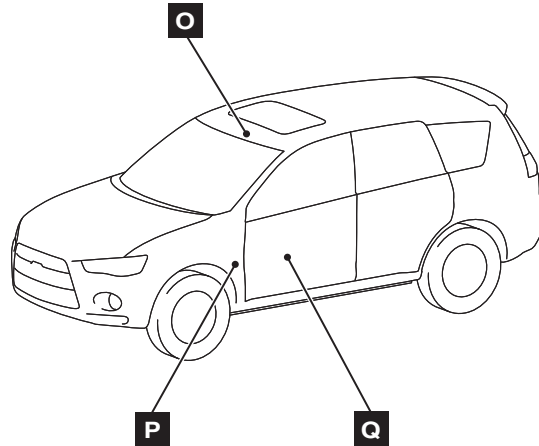 


AC900356AH

                 NOTE: The * symbols indicate equipment at both sides.

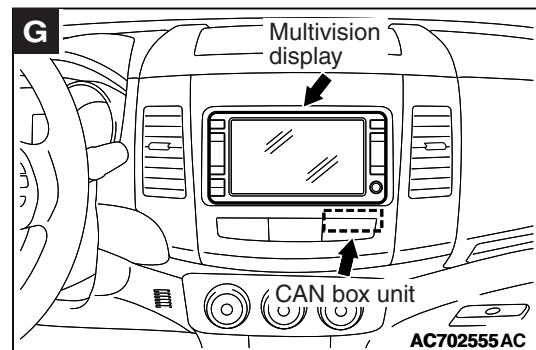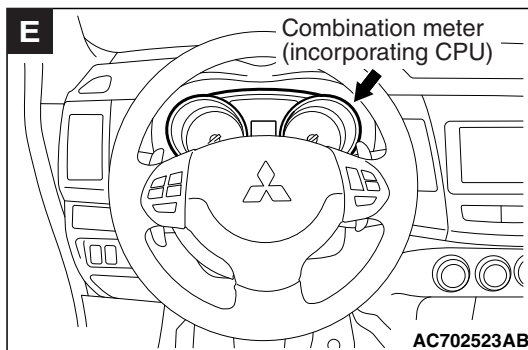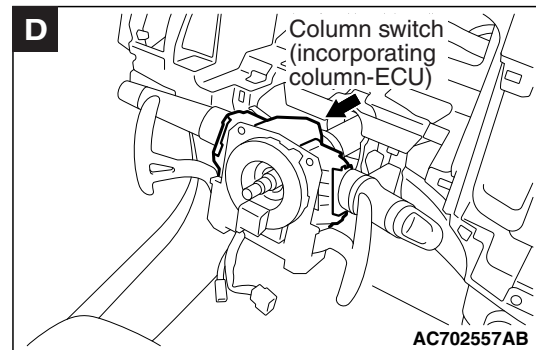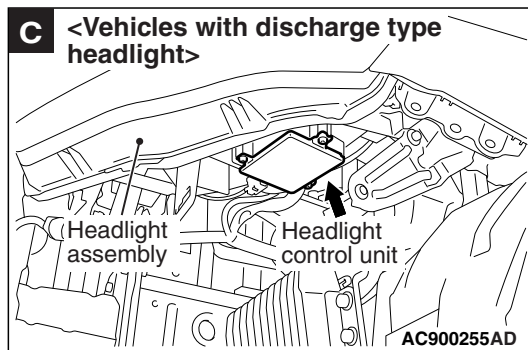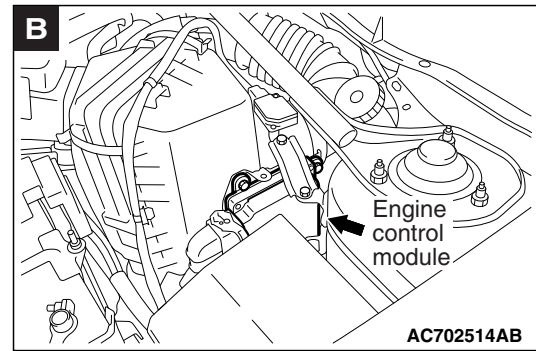
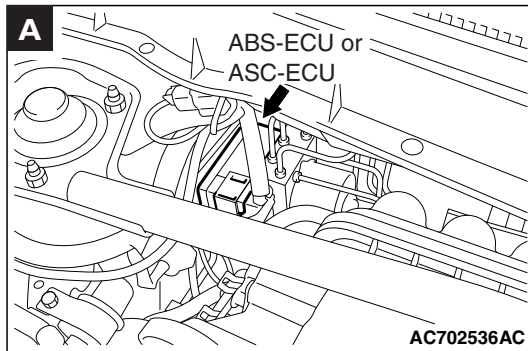


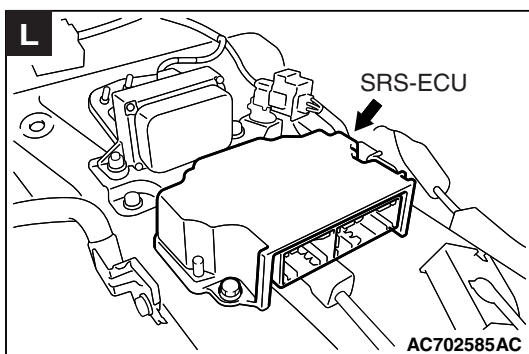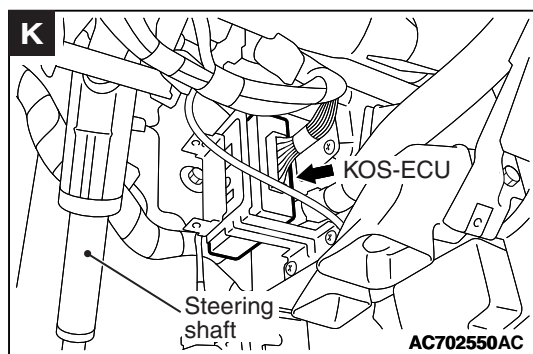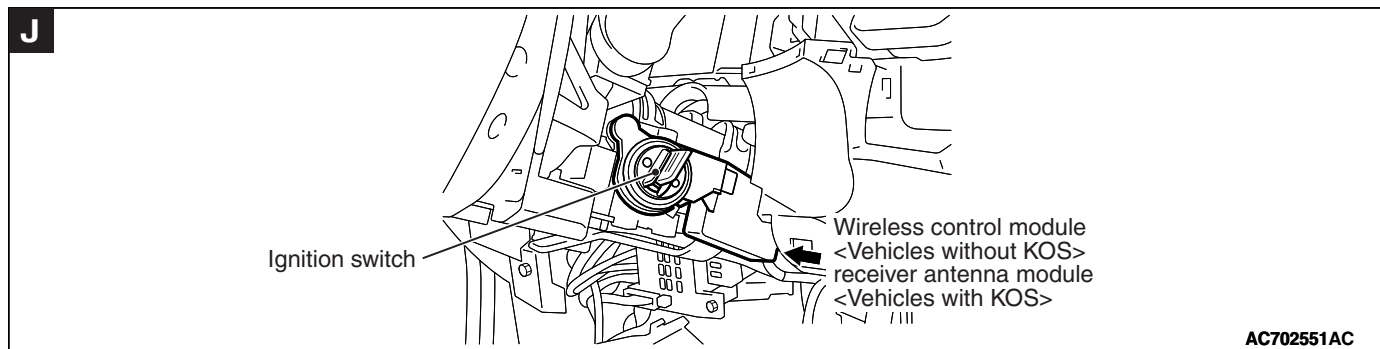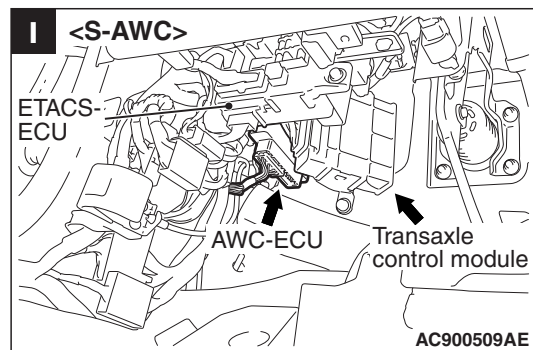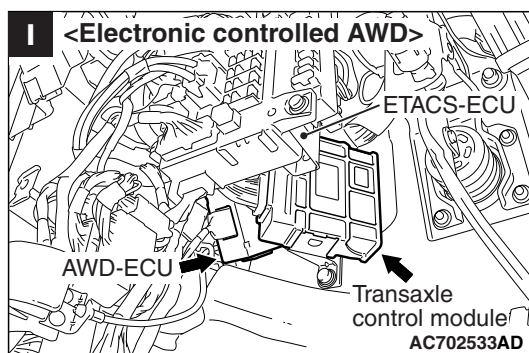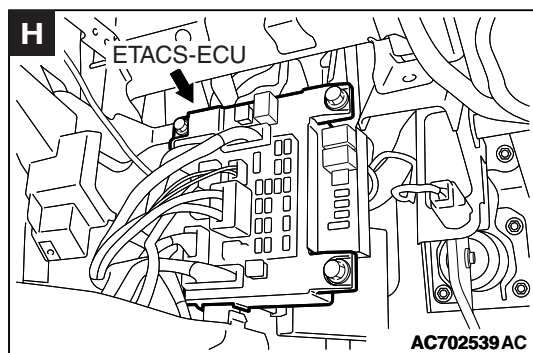

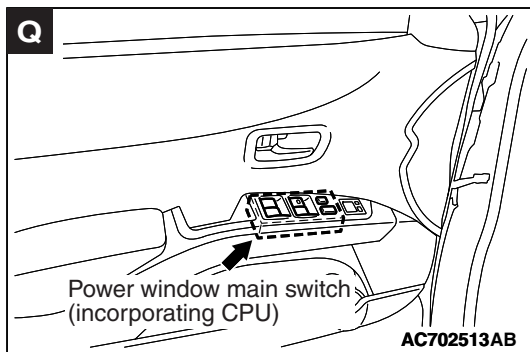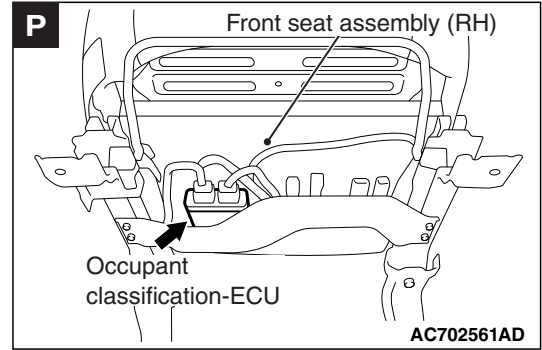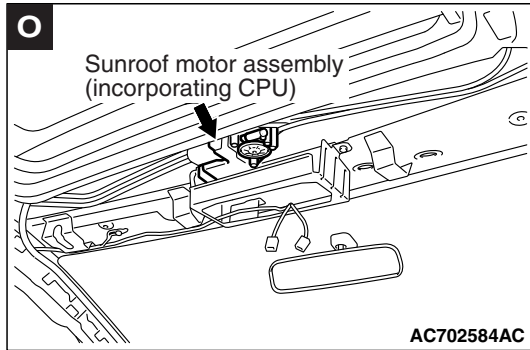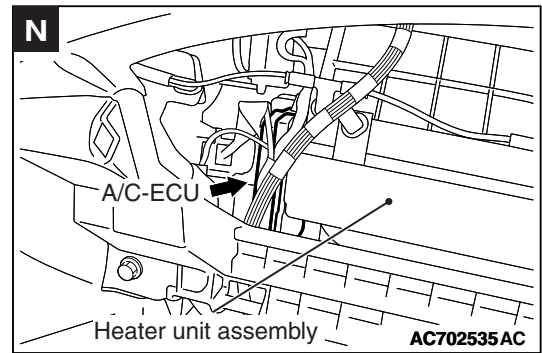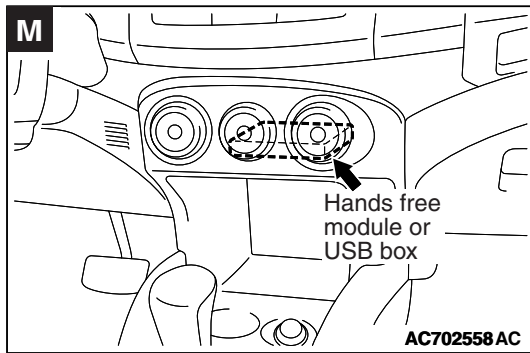

INSPECTION TERMINAL

  M1701000200923

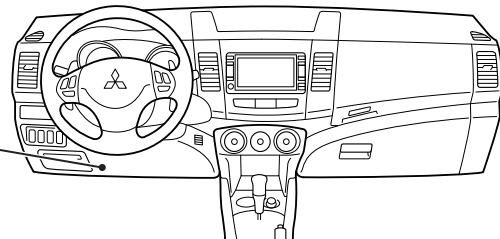
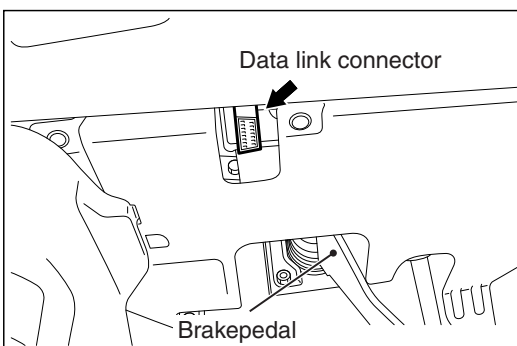


AC702583 AB


SENSOR

M1701000602819



Name	Symbol	Name	Symbol
A/C pressure sensor	H	Knock sensor 2 <3.0L Engine>	O
Accelerator pedal position sensor	T	Left bank heated oxygen sensor (front) <3.0L Engine>	Q
Air thermo sensor	W	Left bank heated oxygen sensor (rear) <3.0L Engine>	a
Ambient air temperature sensor	M	Lighting control sensor <Vehicles with automatic light>	b
Battery current sensor <2.4L engine>	G	Linear air-fuel ratio sensor <2.4L Engine>	f
Camshaft position sensor <3.0L Engine>	R	Manifold absolute pressure sensor	l
Crankshaft position sensor	B	Mass airflow sensor	E
Engine coolant temperature sensor	C	Output shaft speed sensor <3.0L Engine>	d
Exhaust camshaft position sensor <2.4L Engine>	D	Primary pulley speed sensor <2.4L Engine>	L
Front impact sensor	N	Rear wheel speed sensor	k
Front wheel speed sensor	e	Right bank heated oxygen sensor (front) <3.0L Engine>	Z
Fuel level sensor (sub) <AWD>	X	Right bank heated oxygen sensor (rear) <3.0L Engine>	Z
Fuel pump module (incorporating fuel level sensor (main) and fuel tank temperature sensor)	j	Seat slide sensor	g
Fuel tank differential pressure sensor	j	Secondary pulley speed sensor <2.4L Engine>	F
G and yaw rate sensor <Vehicles with ASC>	V	Side impact sensor (front)	i
Heated oxygen sensor <2.4L Engine>	h	Side impact sensor (rear)	m
Input shaft speed sensor <3.0L Engine>	P	Steering wheel sensor <Vehicles with ASC>	S
Intake camshaft position sensor <2.4L Engine>	J	Theft-alarm sensor	c
Interior temperature sensor <Vehicles with automatic air conditioning system>	U	Throttle body assembly (incorporating throttle position sensor)	K
Knock sensor <2.4L Engine>	A	Weight sensor	Y
Knock sensor 1 <3.0L Engine>	O		

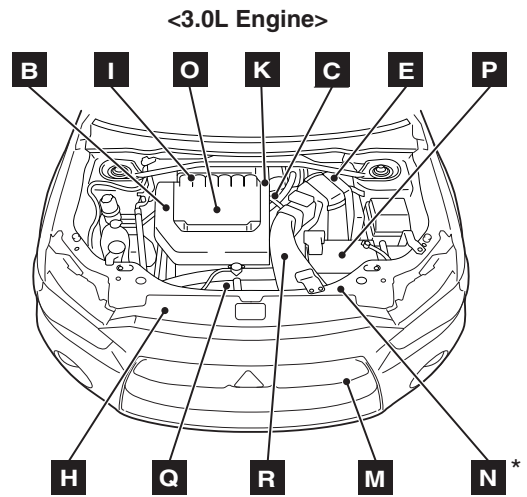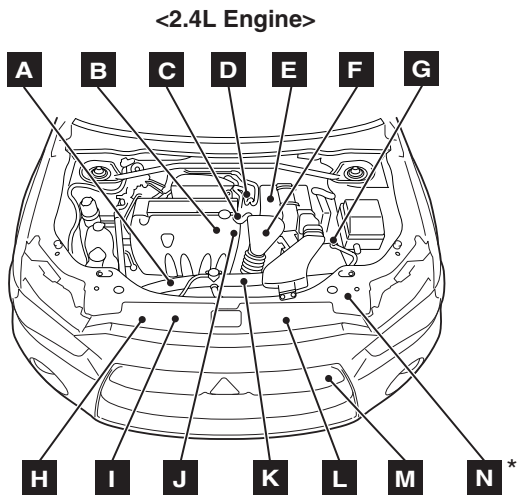  

AC900359AL








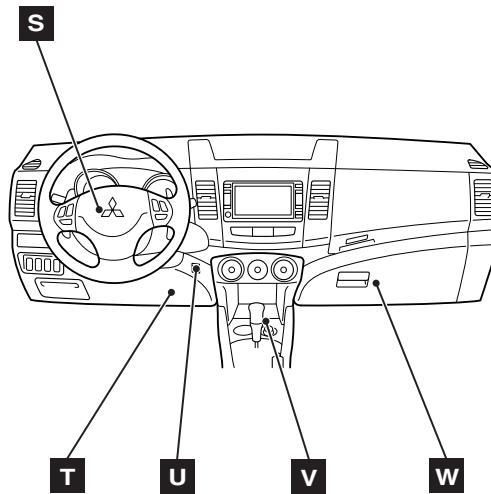 










AC709356AD






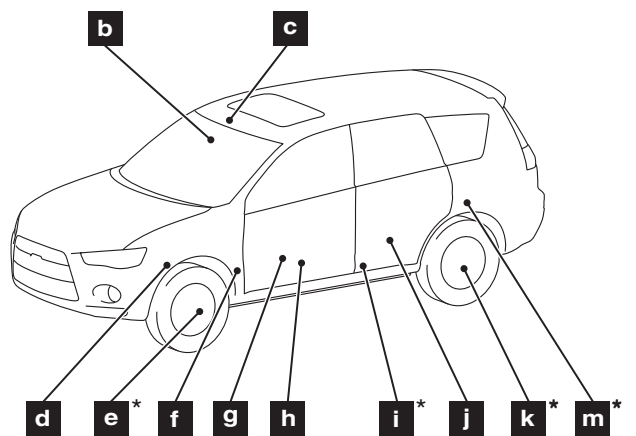 
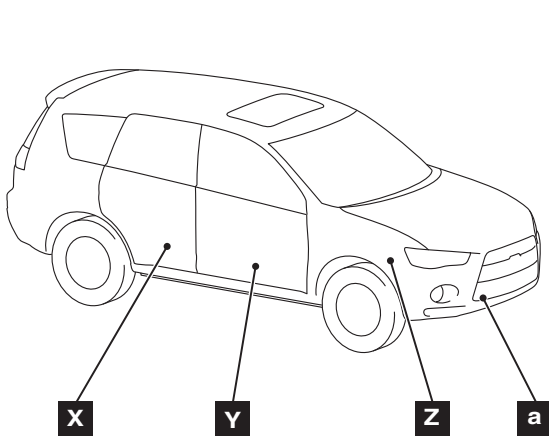 









AC900778AD

                               
NOTE: The * symbols indicate equipment at both sides.

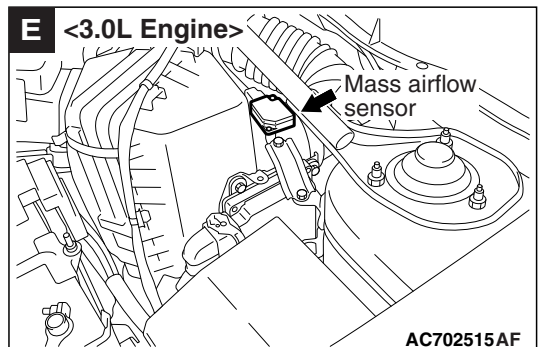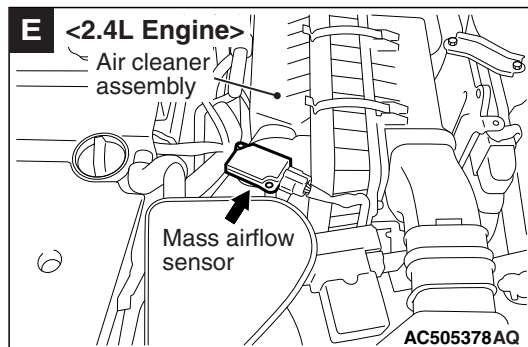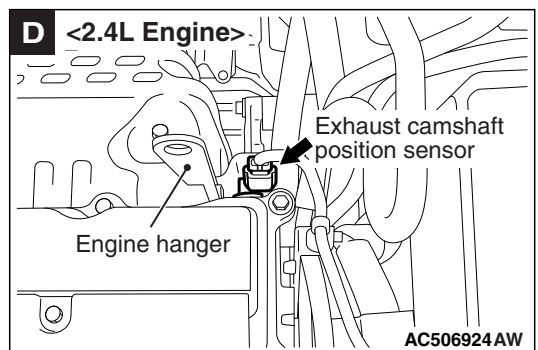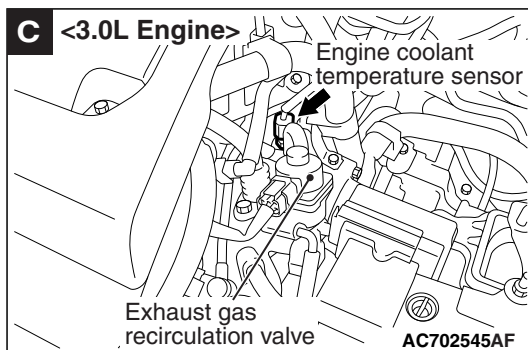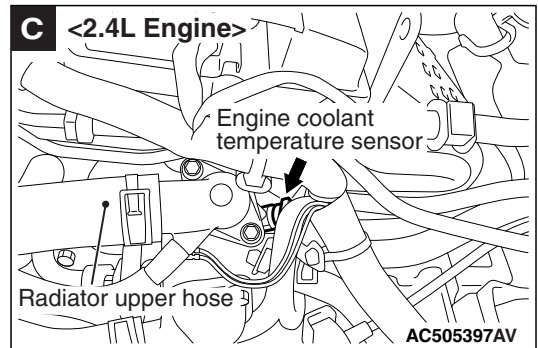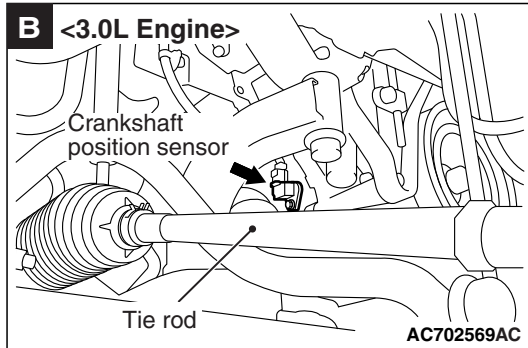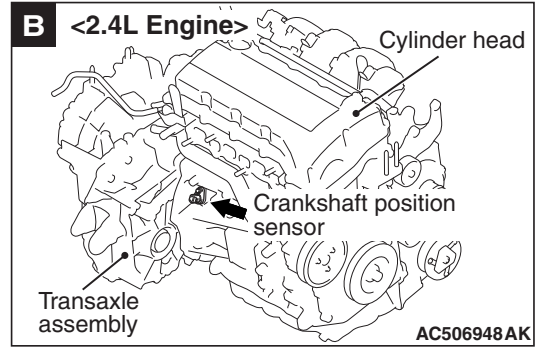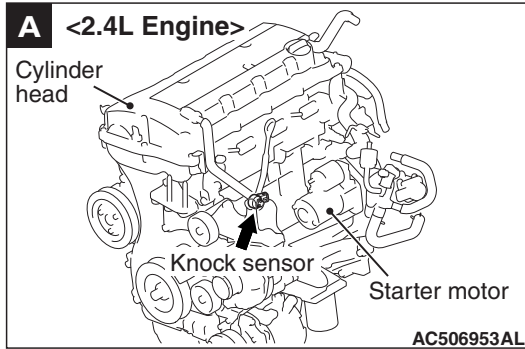

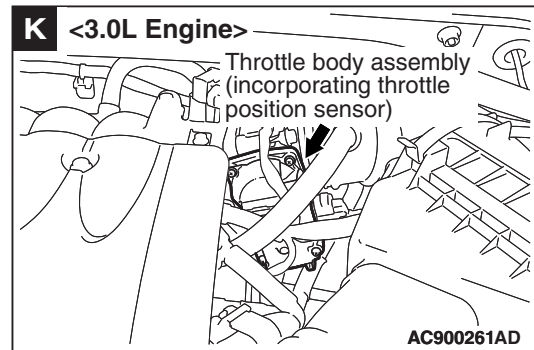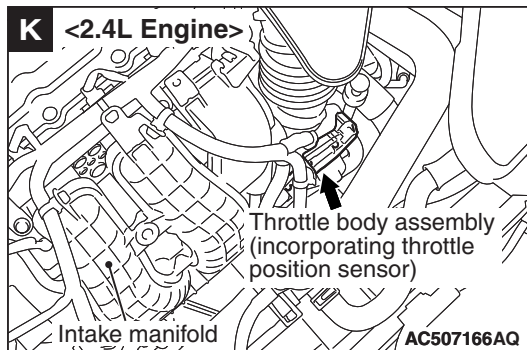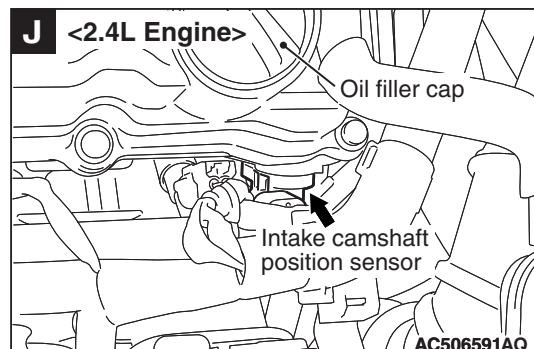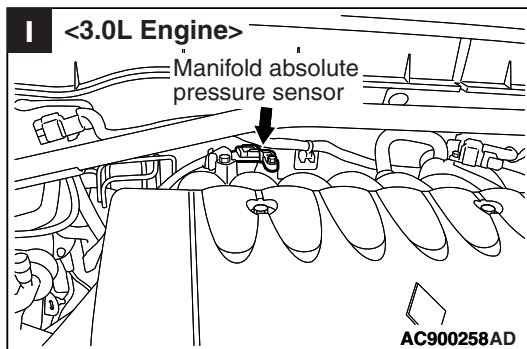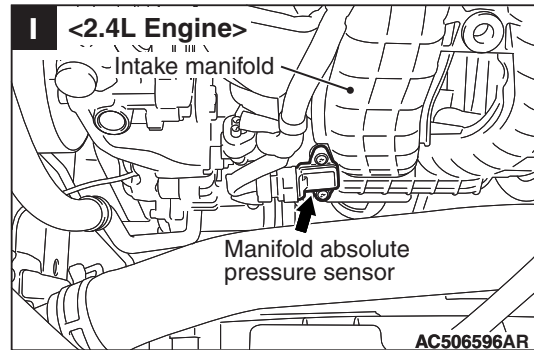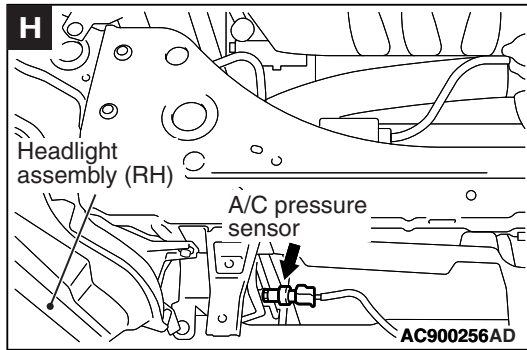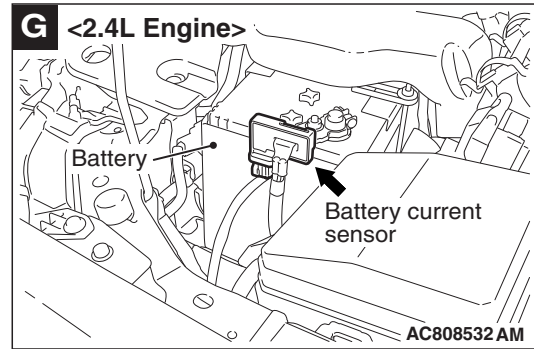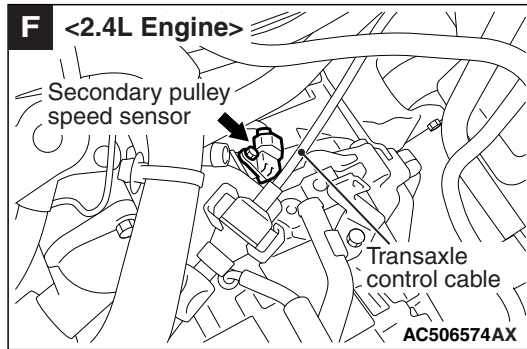

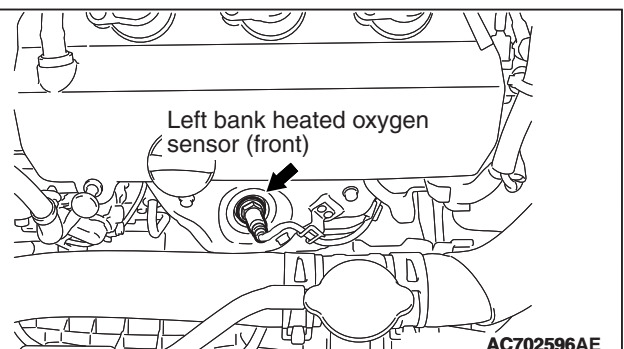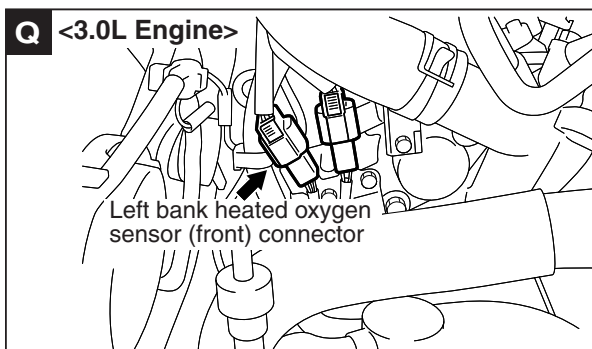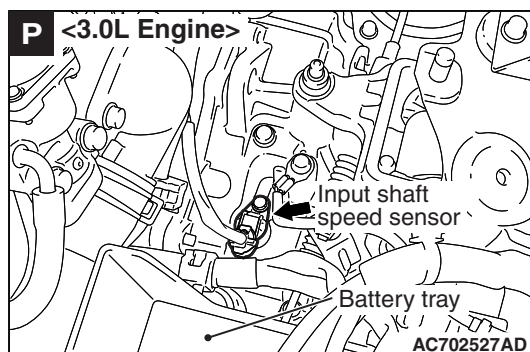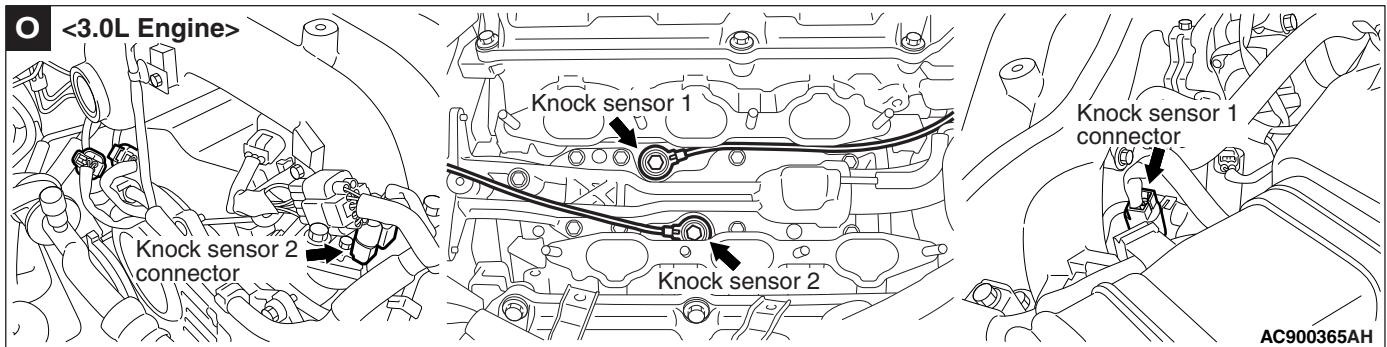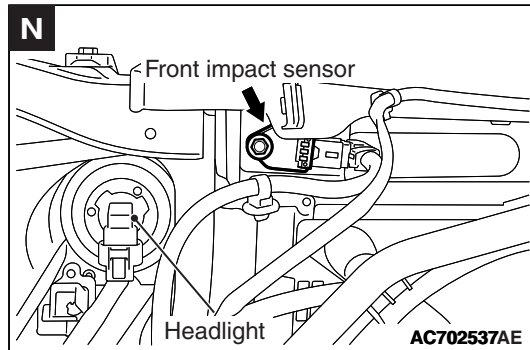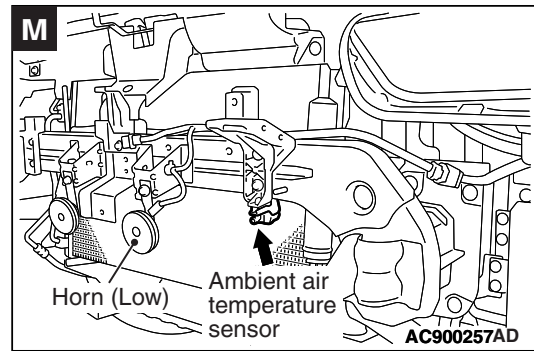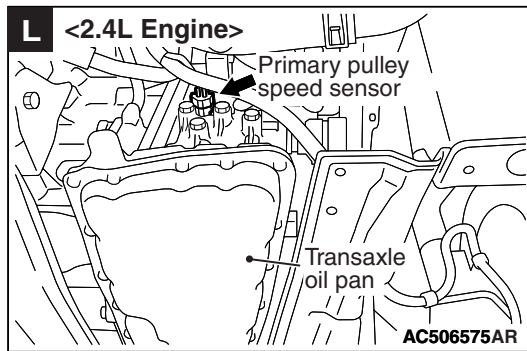

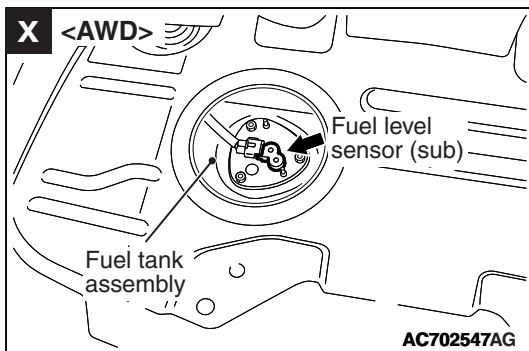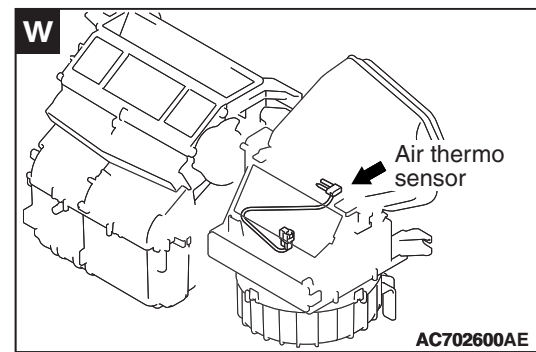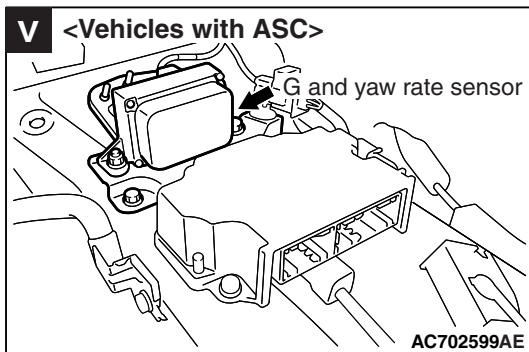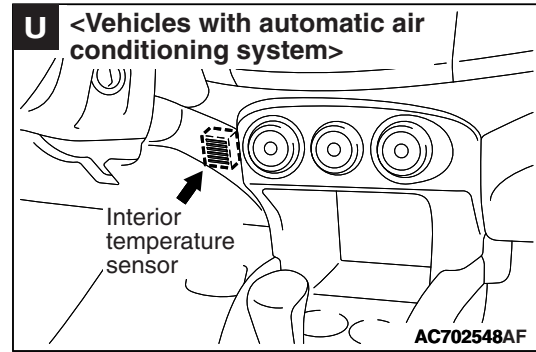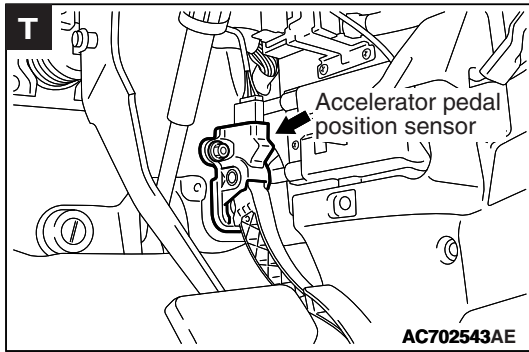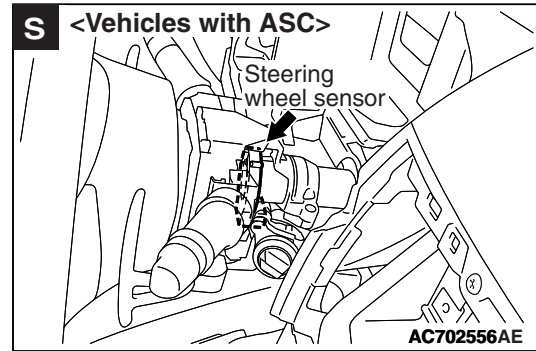
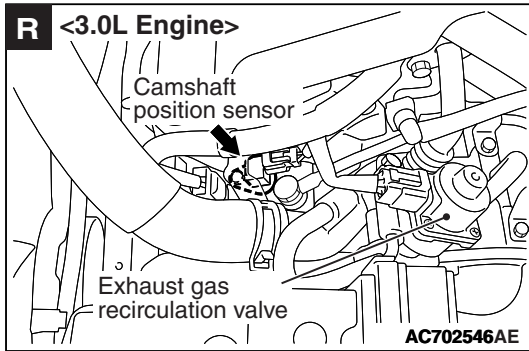


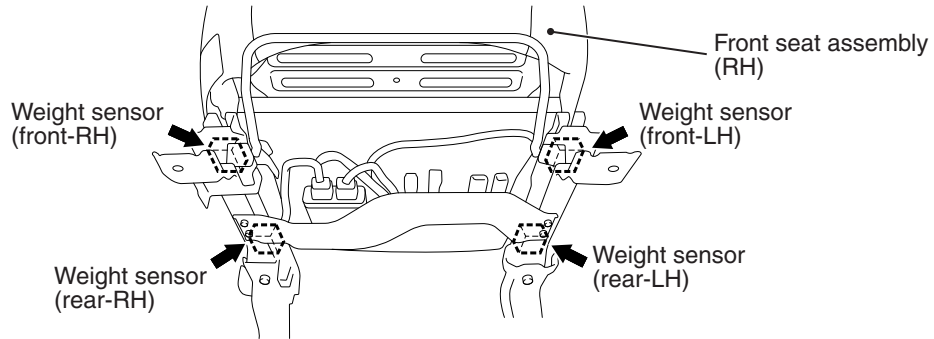Y

AC702560AG

Z

 
 
<3.0L Engine>

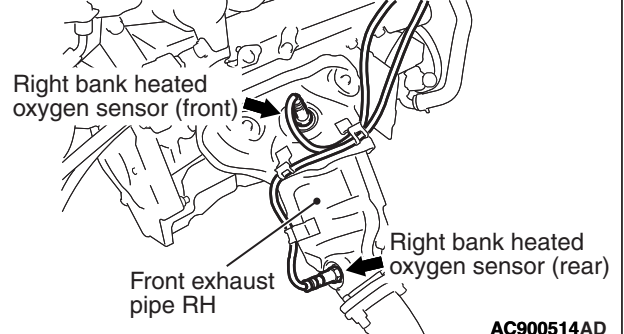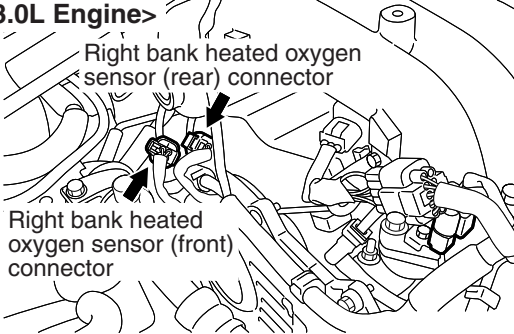

AC900514AD

a

  
<3.0L Engine>

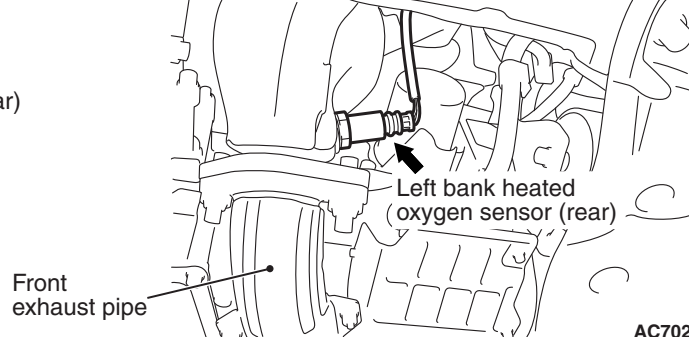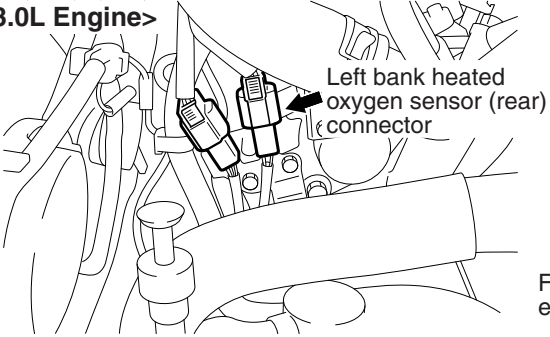


AC702610AE

b
 
<Vehicles with automatic light>

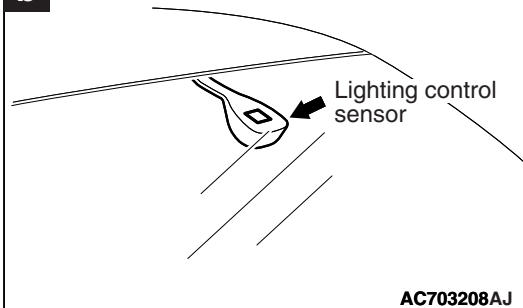


AC703208AJ

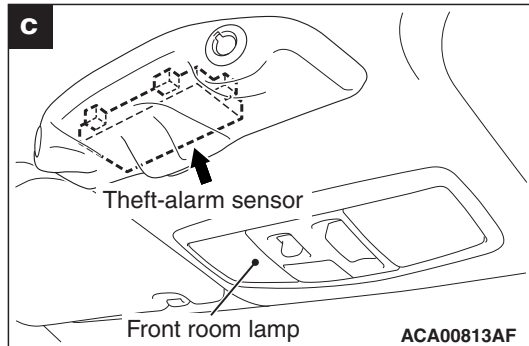 
c

ACA00813AF

 
d <3.0L Engine>

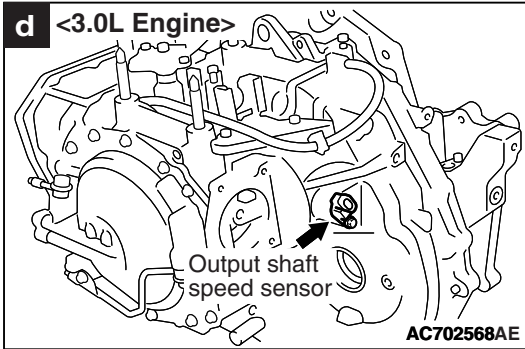


e

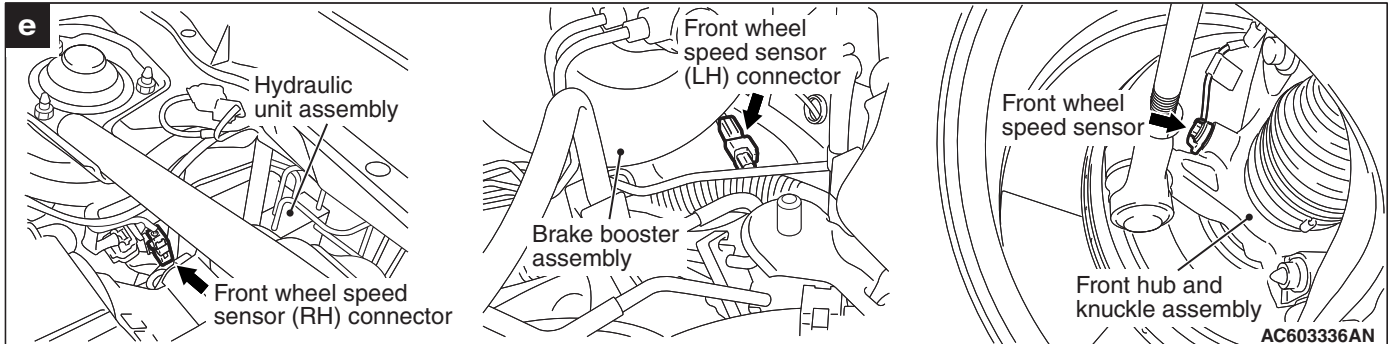 


f <2.4L Engine>




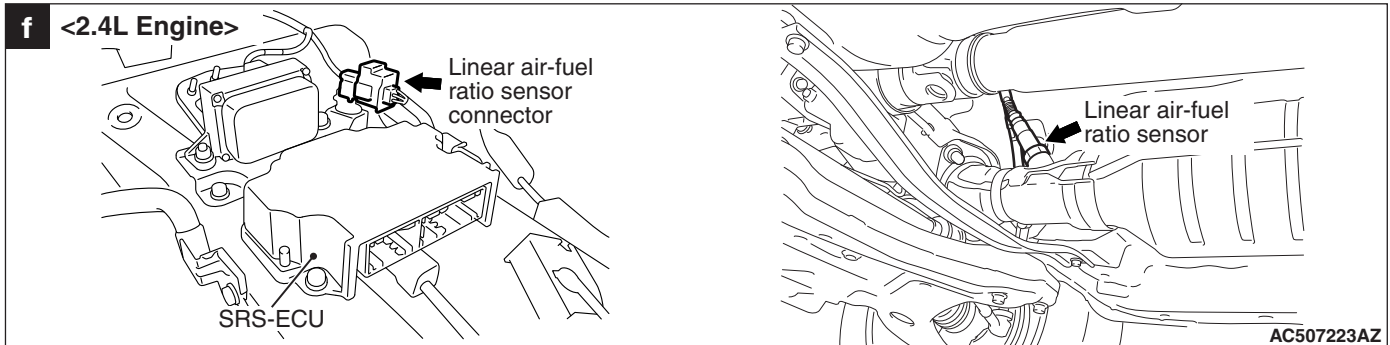 


g

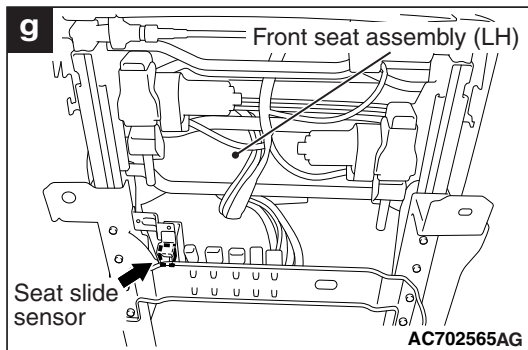 

h <2.4L Engine>

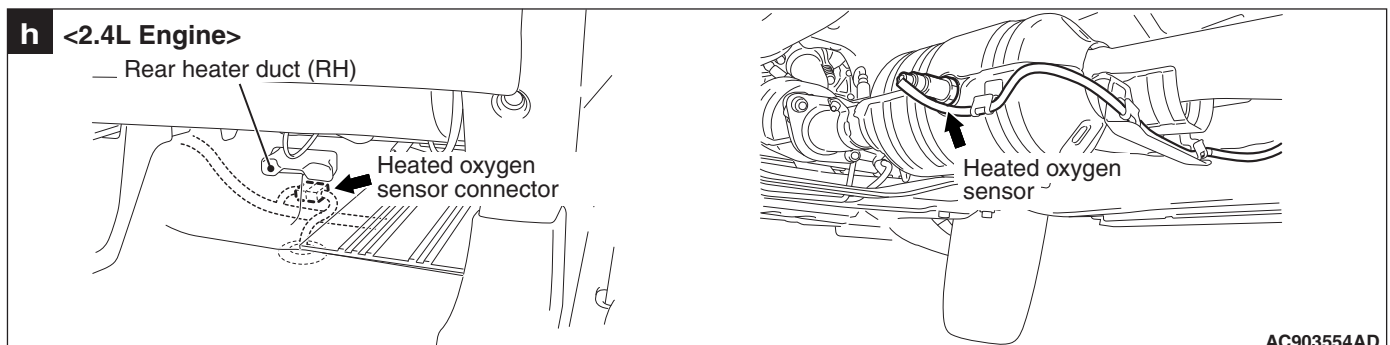 

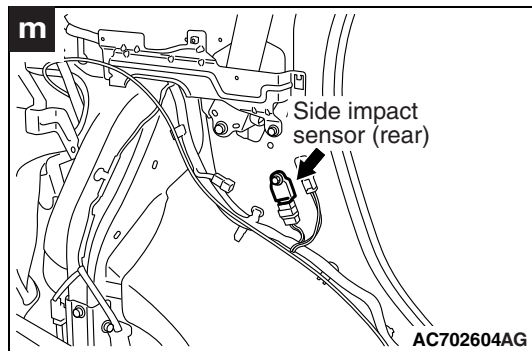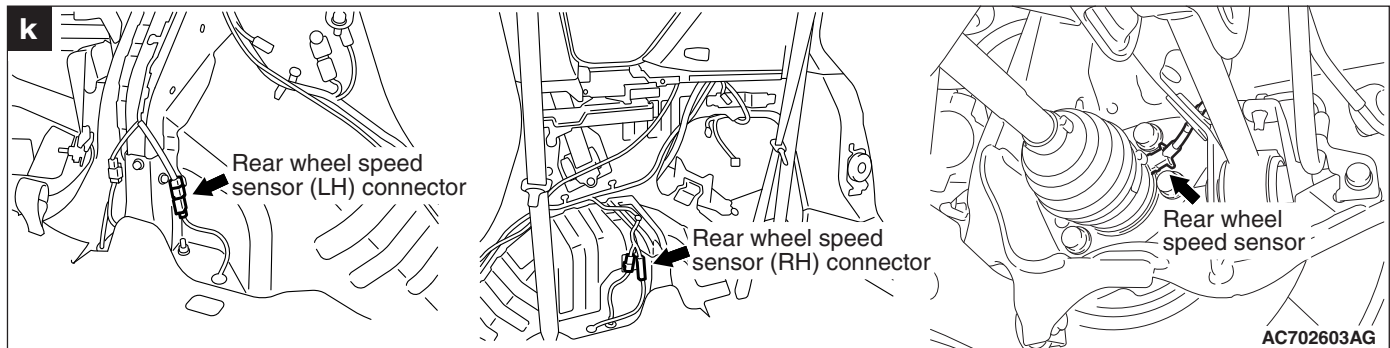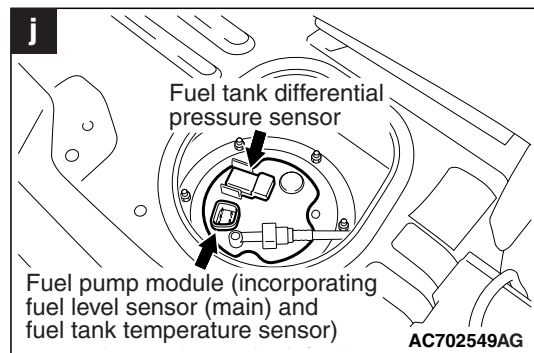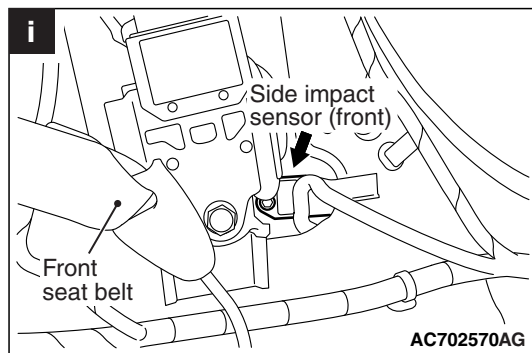    


SOLENOID AND SOLENOID VALVE


M1701000802147

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly <3.0L Engine>	I	Evaporative emission purge solenoid <3.0L Engine>	F
CVT assembly (incorporating CVT control solenoid valve) <2.4L Engine>	E	Evaporative emission ventilation solenoid	M
Electronic control coupling solenoid <Electronic controlled AWD>	L	Exhaust engine oil control valve <2.4L Engine>	A
Electronic control coupling solenoid (Center) <S-AWC>	L	Exhaust gas recirculation valve <2.4L Engine>	D
Electronic control coupling solenoid (Front) <S-AWC>	K	Exhaust gas recirculation valve <3.0L Engine>	H
Engine oil control valve <3.0L Engine>	G	Hydraulic unit (incorporating solenoid valve)	B
Evaporative emission purge solenoid <2.4L Engine>	D	Intake engine oil control valve <2.4L Engine>	C
		Shift lock solenoid	J


 
<2.4L Engine>

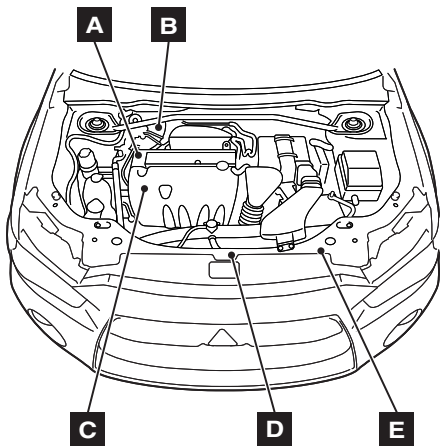








<3.0L Engine>





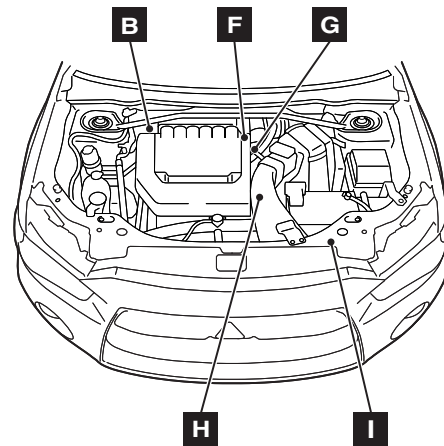 



AC900359AG

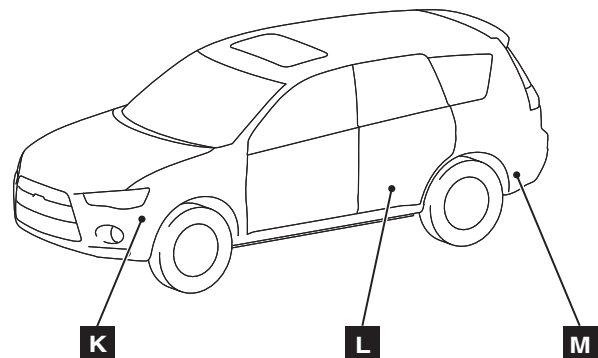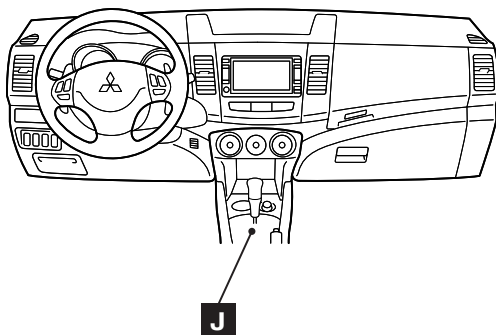  

AC900360AD

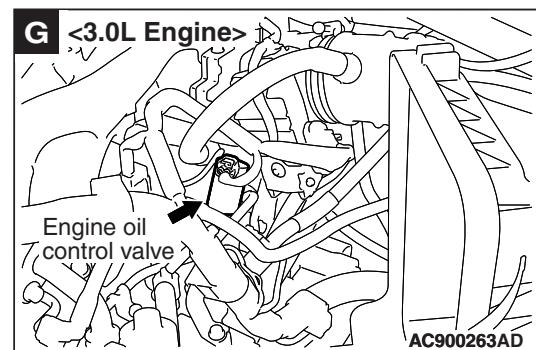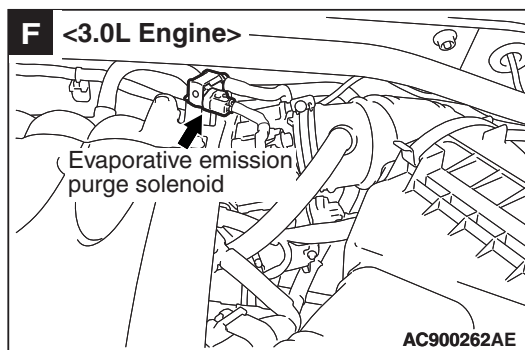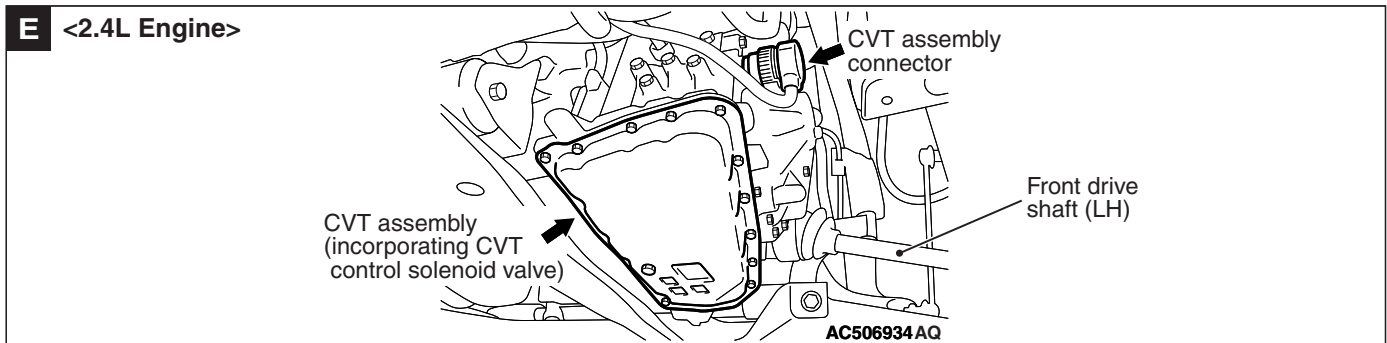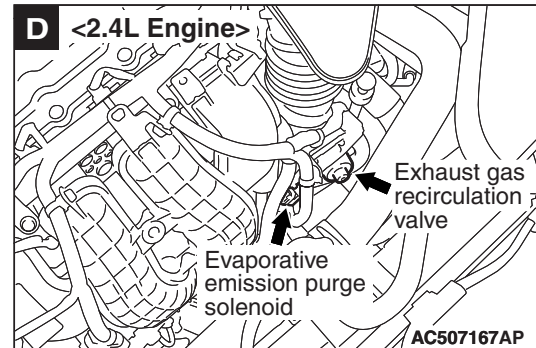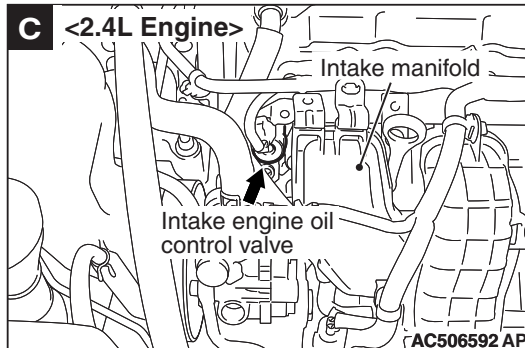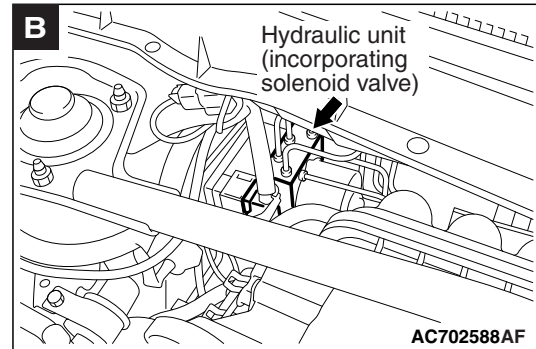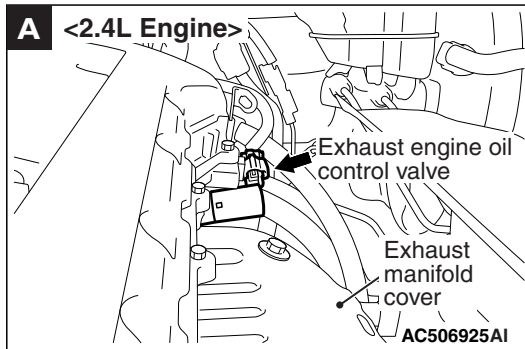       

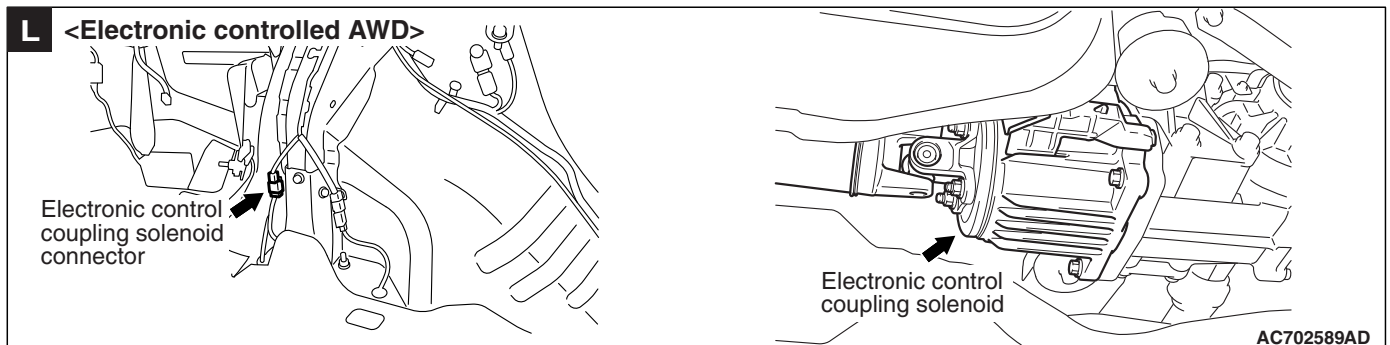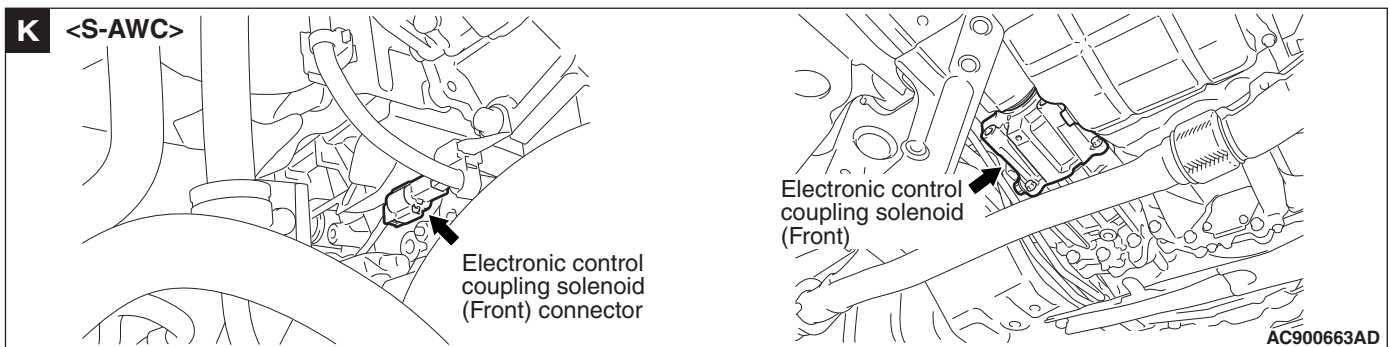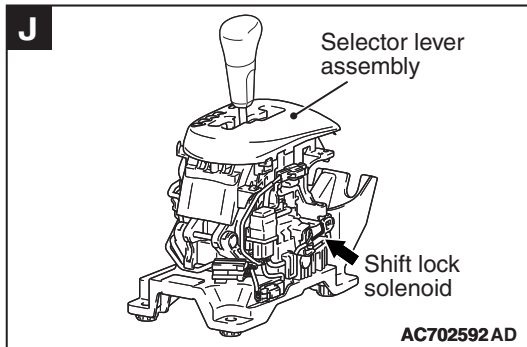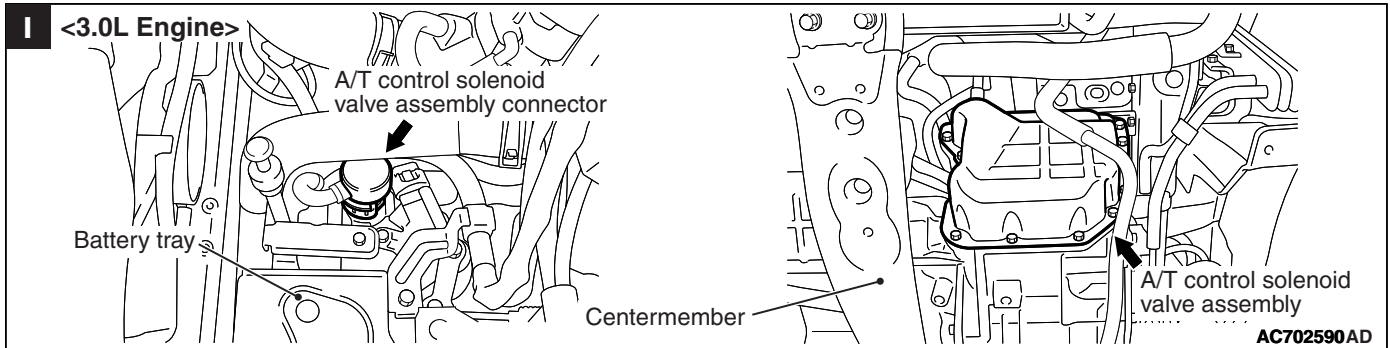    
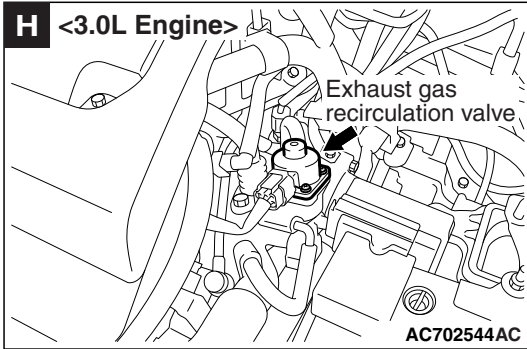 


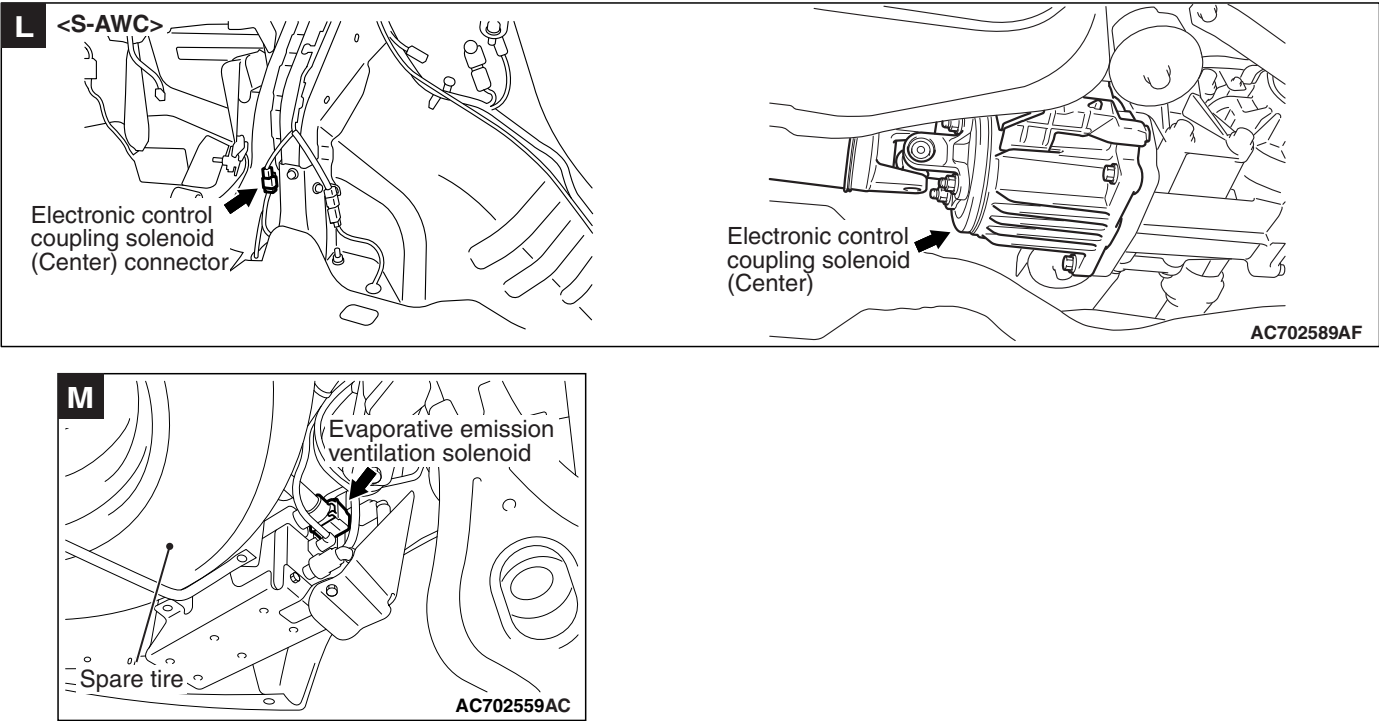 

FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR






M1701000101509

Name	Symbol	Name	Symbol
Fuse Nos.1 to 23 and No.31 to 32 (engine compartment relay box)	B	Fusible link Nos.21 (passenger compartment relay box)	C
Fuse Nos.2 to 19 (ETACS-ECU)	C	Fusible link Nos.24 to 30 (engine compartment relay box)	B
Fuse Nos.22 to 25 (passenger compartment relay box)	C	Fusible link Nos.33 to 37 (connected directly to battery positive terminal)	A
Fusible link No.1 and No.20 (ETACS-ECU)	C	IOD or storage connector	B

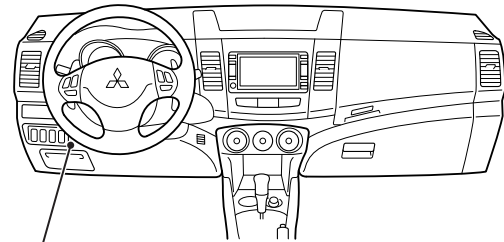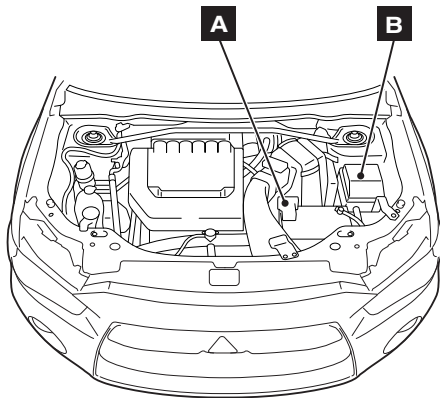  


C

     AC900431AD

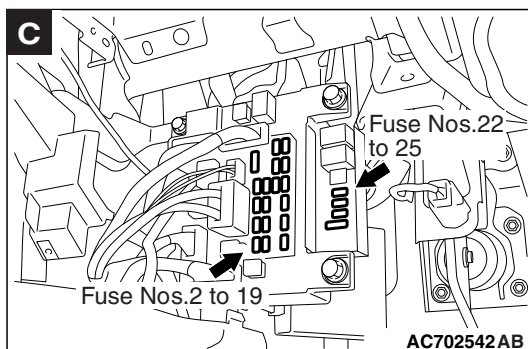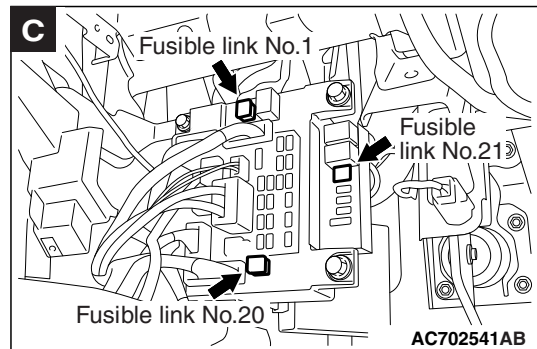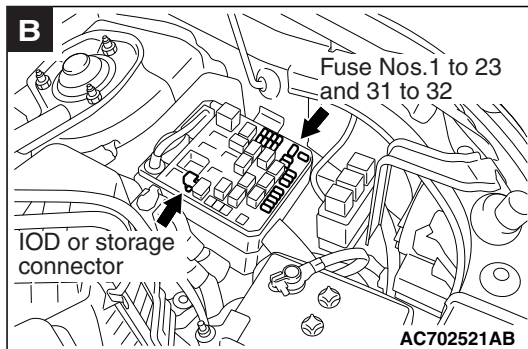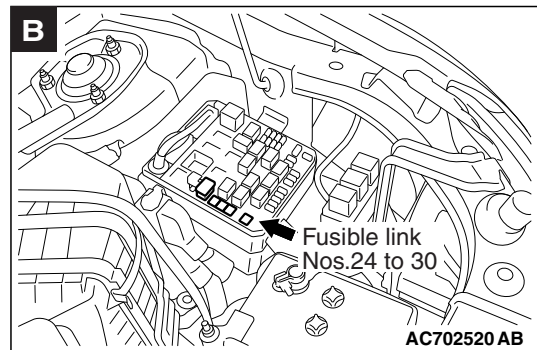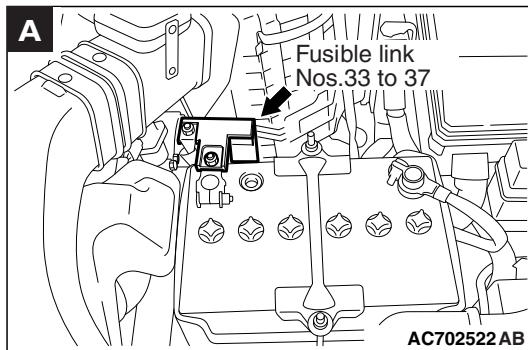

OTHER DEVICES

 M1701005600551

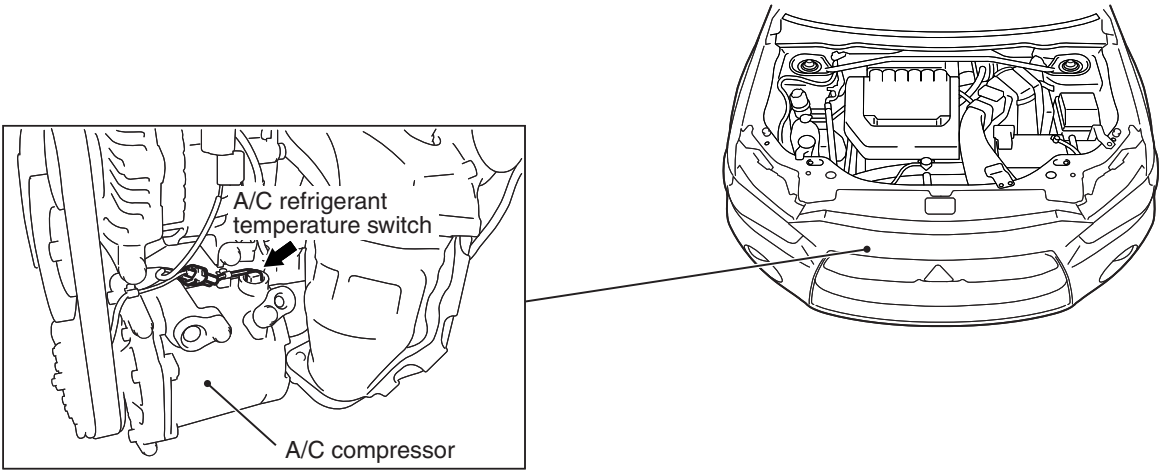


AC900779AB

GROUNDING CABLE


M1701001001334
 
<2.4L Engine>

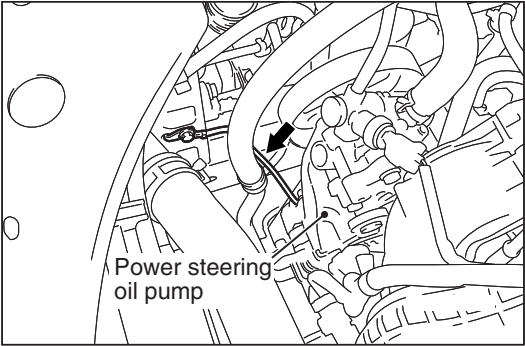

AC900362AD

 
<3.0L Engine>

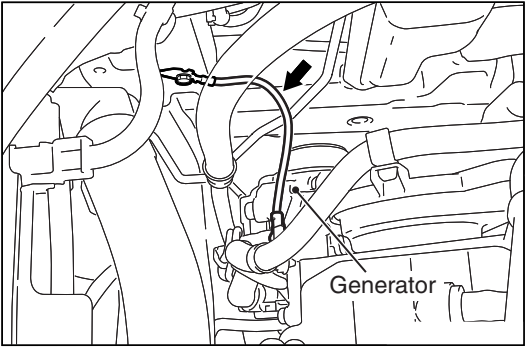

AC900363AD

GROUNDING

 M1701000302078

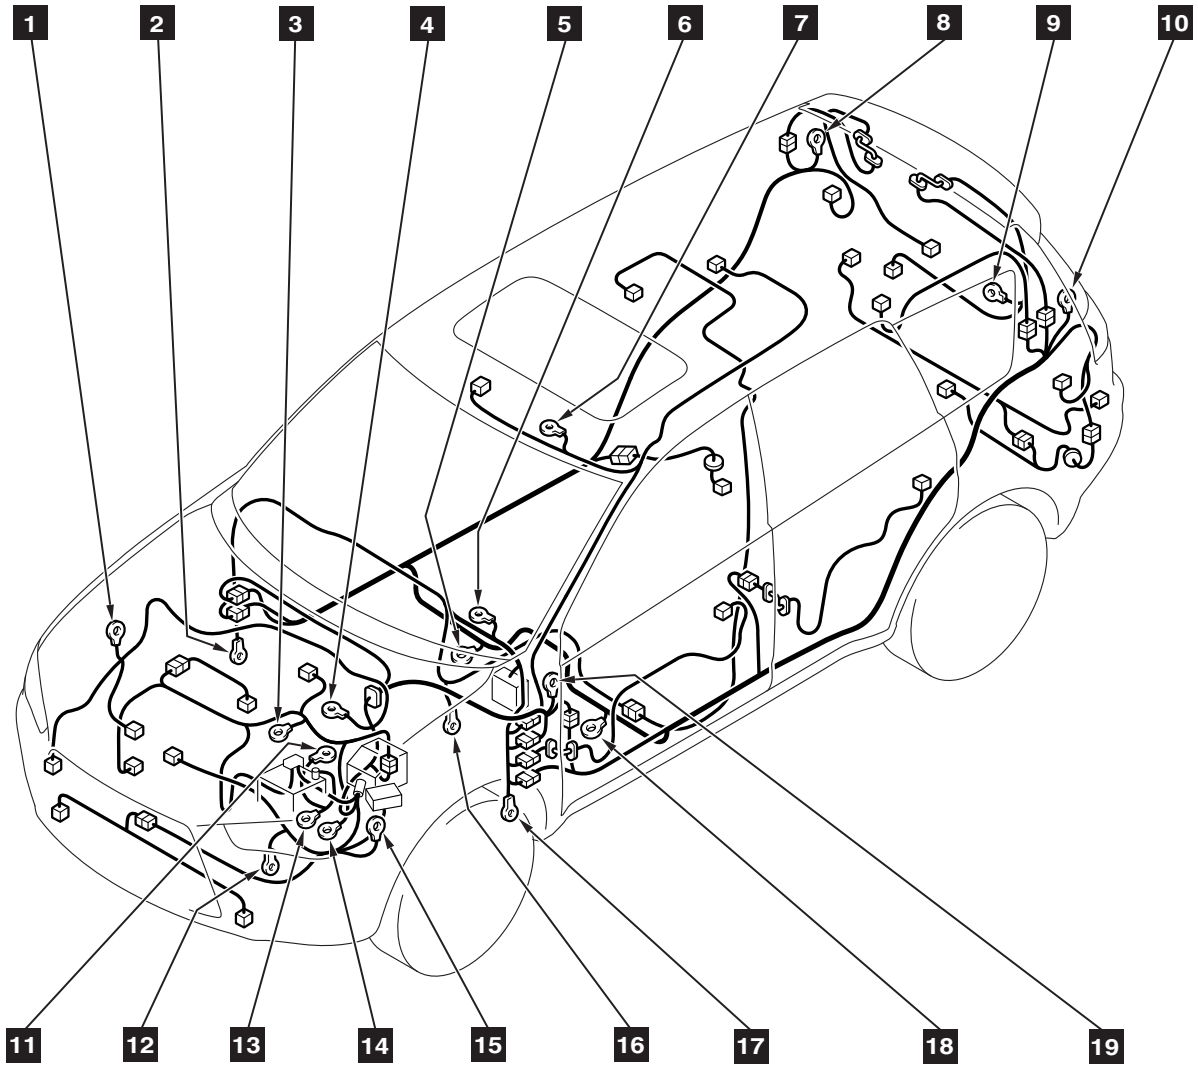

AC900249AE

NOTE: 1 to 19 numbers correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

