

A

A/C control panel assembly		DTC No. C102A: mutual monitoring of RL wheel speed sensor	35B-65
Removal and installation	55A-116	DTC U0001 bus off	35B-142
A/C-ECU		DTC U0100 engine time-out errorDTC U0141 ETACS time-out error	35B-143
Removal and installation	55A-124	DTC U1415 variant coding not completed	35B-145
A/T fluid cooler line		DTC U1417 variant coding value invalid (includes faulty installation)	35B-146
Removal and installation	23C-297	Introduction	35B-4
Thermo valve check	23C-298	Symptom chart.....	35B-149
A/T key interlock and shift lock mechanisms		Symptom procedures	
Removal and installation	23C-285	Inspection procedure 1: scan tool cannot communicate only with ABS-ECU	35B-150
ABS diagnosis		Inspection procedure 10: the initial check sound of hydraulic unit is loud.	35B-178
ABS diagnostic troubleshooting strategy.....	35B-4	Inspection procedure 2: brake warning light stays on with the parking brake lever released.....	35B-151
ABS warning light and brake warning light check.....	35B-5	Inspection procedure 3: ABS warning light does not illuminate when ignition switch is turned to the on position (engine stopped).....	35B-157
Actuator test reference table	35B-179	Inspection procedure 4: brake warning light does not illuminate when the ignition switch is turned to on position (engine stopped).....	35B-159
Check at ECU terminals	35B-180	Inspection procedure 5: ABS warning light stays on after the engine is started.	35B-161
Data list reference table.....	35B-179	Inspection procedure 6: abnormality in brake operation	35B-163
Diagnosis function	35B-5	Inspection procedure 7: ABS system inoperative.	35B-163
Diagnostic trouble code chart	35B-15	Inspection procedure 8: ABS-ECU power supply circuit system	35B-165
Diagnostic trouble code procedures		Inspection procedure 9: ABS operates too frequently.....	35B-175
DTC C1000 abnormality in stop light switch circuit....	35B-121	Accessory socket.....	90-240
DTC C100A: abnormality in FL wheel speed sensor circuit	35B-17	Accessory socket	
DTC C1011: abnormality in FL wheel speed sensor signal	35B-39	General information	54A-314
DTC C1014: mutual monitoring of FL wheel speed sensor	35B-58	Removal and installation.....	54A-315
DTC C1015: abnormality in FR wheel speed sensor circuit	35B-22	Actuator test table.....	27C-92
DTC C101C abnormality in FR wheel speed sensor signal	35B-43	Adhesive.....	52A-2
DTC C101F mutual monitoring of FR wheel speed sensor	35B-61	Adjusting plate, snap ring, shim, spacer, needle bearing, thrust washer and bearing race.....	23D-4
DTC C1020: abnormality in RL wheel speed sensor circuit	35B-28	Air bag module and seat belt pre-tensioner disposal procedures	52B-461
DTC C1027: abnormality in RL wheel speed sensor signal	35B-48	Air bag module(s) and clock spring	
DTC C102B: abnormality in RR wheel speed sensor circuit	35B-33	Inspection	52B-447
DTC C1032: abnormality in RR wheel speed sensor signal	35B-53	Removal and installation.....	52B-439
DTC C1035: mutual monitoring of RR wheel speed sensor	35B-68	Air cleaner	
DTC C1041: abnormality in periodical signal for FL wheel speed sensor	35B-72	Removal and installation 2.4L engine.....	15-4
DTC C1042: abnormality in periodical signal for FR wheel speed sensor	35B-75	Removal and installation 3.0L engine.....	15-5
DTC C1043: abnormality in periodical signal for RL wheel speed sensor	35B-79	Air conditioning system.....	90-196
DTC C1044: abnormality in periodical signal for RR wheel speed sensor	35B-82	Ambient air temperature sensor	
DTC C1046: FL wheel speed sensor control phase time exceeded	35B-86	Inspection	55A-123
DTC C1047: FR wheel speed sensor control phase time exceeded	35B-90	Removal and installation.....	55A-123
DTC C1048: RL wheel speed sensor control phase time exceeded	35B-95	Amplifier	
DTC C1049: RR wheel speed sensor control phase time exceeded	35B-99	General information	54A-688
DTC C104B: abnormality in FL wheel inlet valve systemDTC C104F: abnormality in FR wheel inlet valve systemDTC C1053: abnormality in RL wheel inlet valve systemDTC C1057: abnormality in RR wheel inlet valve systemDTC C105F:	35B-104	Removal and installation.....	54A-688
DTC C1073 faulty motor drive circuit.....	35B-111	Antenna	
DTC C1395 brake fluid filling not complete	35B-134	General information	54A-696
DTC C1608 implausible diagnosis data.....	35B-137	Removal and installation.....	54A-697
DTC C2100 abnormality in battery voltage (low voltage)	35B-125	Anti-lock braking system (ABS).....	90-312
DTC C2101 abnormality in battery voltage (high voltage)	35B-133	Anti-lock braking system (ABS) and active stability control system (ASC).....	90-318
DTC C2104 faulty valve power supply circuit	35B-106	ASC off switch	
DTC C2116 abnormality in power supply voltage in pump motor.....	35B-116	Inspection	35C-286
DTC C2200 abnormality in ABS-ECU	35B-124	Removal and installation.....	35C-285
DTC C2203 vin not recorded	35B-135	Audio system <vehicles with audio amplifier>	90-230
		Audio system <vehicles without audio amplifier>	90-224

Automatic A/C diagnosis		Primary check.....	23C-17
Actuator test reference.....	55B-17	Road test.....	23C-24
Automatic A/C troubleshooting strategy.....	55B-4	Symptom chart.....	23C-28
Check at AC-ECU terminal.....	55B-18	Symptom procedures	
Data list reference table.....	55B-12	Inspection procedure 1: the vehicle does not run at any range (including low power).....	23C-137
Diagnostic function.....	55B-4	Inspection procedure 10: the select shock is large when the transmission range is shifted from "N" to "D", and "N" to "r.".....	23C-146
Diagnostic trouble code chart.....	55B-8	Inspection procedure 11: abnormal sound occurs during idling.....	23C-147
Diagnostic trouble code procedures		Inspection procedure 12: abnormal sound occurs during driving.....	23C-148
DTC B10C0, B10C1: interior temperature sensor system	55B-9	Inspection procedure 13: abnormal sound occurs during gear shift.....	23C-149
Introduction.....	55B-3	Inspection procedure 14: engine stall.....	23C-150
Symptom chart.....	55B-12	Inspection procedure 15: oil leaks from the air breather.....	23C-151
Automatic transaxle diagnosis A/T		Inspection procedure 16: the starter does not rotate at the "P" or "N" range. (the engine does not start.).....	23C-152
AT diagnostic troubleshooting strategy.....	23C-17	Inspection procedure 2: the vehicle does not run at the "D" or the "R" range.....	23C-138
Data list reference table.....	23C-153	Inspection procedure 3: the acceleration is poor.....	23C-139
Diagnosis function.....	23C-18	Inspection procedure 4: the vehicle moves at the "N" range.....	23C-140
Diagnostic trouble code chart.....	23C-27	Inspection procedure 5: gears cannot be shifted at all, or a certain gear shift (1st to 2nd, 2nd to 3rd, etc.) is not made. ..	23C-141
Diagnostic trouble code procedures		Inspection procedure 6: the torque converter is not locked up.....	23C-142
Code No. P0720: output shaft speed sensor system	23C-51	Inspection procedure 7: the clutch slips when the vehicle starts or during gear shift.....	23C-143
Code No. P1796: idle neutral control malfunction.....	23C-130	Inspection procedure 8: the engine brake is not applied.....	23C-144
DTC P0703: stoplight switch malfunction.....	23C-29	Inspection procedure 9: the shift shock is large at a certain gear shift. (1st to 2nd, 2nd to 3rd, etc.).....	23C-145
DTC P0705: transmission range switch system.....	23C-34	Tcm terminal voltage reference chart for transaxle operation	23C-158
DTC P0712: transmission fluid temperature sensor system (short circuit).....	23C-39	Torque converter stall test.....	23C-24
DTC P0713: transmission fluid temperature sensor system (open circuit).....	23C-43	AWC-ECU vehicles with s-AWC	
DTC P0715: input shaft speed sensor system.....	23C-46	Removal and installation.....	23C-295
DTC P0729, P0732, P0733, P0734, P0735: 6th, 2nd, 3rd, 4th, 5th gear ratio.....	23C-57	AWD-ECU	
DTC P0731: 1st gear incorrect ratio.....	23C-62	Removal and installation.....	27C-95
DTC P0736: reverse gear incorrect ratio.....	23C-65		
DTC P0741: torque converter clutch system (stuck off), P0742 torque converter clutch system (stuck on).....	23C-68		
DTC P0743: lock-up and low-reverse brake linear solenoid valve system.....	23C-72		
DTC P0748: line pressure linear solenoid valve system	23C-76		
DTC P0753: low clutch linear solenoid valve system	23C-80		
DTC P0758: 2-6 brake linear solenoid valve system.....	23C-83		
DTC P0763: 3-5 reverse clutch linear solenoid valve system	23C-86		
DTC P0768: high clutch linear solenoid valve system	23C-89		
DTC P0815: paddle shift switch (up) system.....	23C-93		
DTC P0816: paddle shift switch (down) system.....	23C-95		
DTC P0826: shift switch assembly system.....	23C-97		
DTC P0846: 2-6 brake pressure switch system.....	23C-100		
DTC P0876: high clutch pressure switch system.....	23C-105		
DTC P0893: interlock detection.....	23C-109		
DTC P0988: low-reverse brake pressure switch system	23C-112		
DTC P1705: throttle position sensor information (engine)	23C-116		
DTC P1706: accelerator pedal position information ..	23C-118		
DTC P1731: 1st engine brake detection.....	23C-120		
DTC P1753: low clutch shift solenoid valve system ..	23C-122		
DTC P1758: low-reverse brake shift solenoid valve system	23C-125		
DTC P1773: ABS information (ABSASC).....	23C-128		
DTC U0001: can bus off.....	23C-131		
DTC U0100: ECM time-out.....	23C-133		
DTC U0121: ABSASC-ECU time out.....	23C-135		
DTC U0141: ETACS-ECU time out.....	23C-136		
Diagnostic troubleshooting flow.....	23C-16		
Fail-safebackup function.....	23C-22		
How to initialize AT learned value.....	23C-21		
Hydraulic pressure tests.....	23C-26		
Introduction to AT diagnosis.....	23C-17		

B

Backup light.....	90-158
Balancer chain	
Removal and installation.....	11B-57
Balancer shaft and oil pump module	
Removal and installation.....	11A-81
Balancer timing chain, balancer shaft and oil pump module	
Removal and installation.....	11A-77
Basic brake system diagnosis.....	35A-6
Basic brake system diagnosis	
Basic brake system diagnostic troubleshooting strategy	35A-6
Introduction to basic brake system diagnosis.....	35A-6
Symptom chart.....	35A-6

Symptom procedures		Service specifications	16-4
Inspection procedure 1: vehicle pulls to one side when brakes are applied	35A-6	Special tool	16-7
Inspection procedure 2: insufficient braking power....	35A-7	Check at ECU terminals	27C-93
Inspection procedure 3: increased pedal stroke (reduced pedal-to-floor board clearance).....	35A-8	Column switch	
Inspection procedure 4: brake drag	35A-9	Diagnostic trouble code procedures	
Inspection procedure 5: scraping or grinding noise when brakes are applied	35A-10	DTC B2350: malfunction of lighting switch, DTC B2351: malfunction of wiper/washer switch.....	54A-321
Inspection procedure 6: squealing, groaning or chattering noise when brakes are applied.....	35A-11	General information	54A-317
Inspection procedure 7: squealing noise when brakes are not applied	35A-12	Inspection	
Inspection procedure 8: groaning, clicking or rattling noise when brakes are not applied	35A-13	Column switch (switch body part) continuity check....	54A-325
Battery		Wiper/washer switch continuity check	54A-324
General information	54A-7	Removal and installation.....	54A-323
Inspection		Special tools.....	54A-318
Battery current sensor check 2.4L engine	54A-12	Troubleshooting	
On-vehicle service		Diagnostic function.....	54A-319
Battery charging.....	54A-8	Diagnostic trouble code table.....	54A-321
Battery check	54A-7	Standard flow of diagnostic troubleshooting	54A-319
Battery test.....	54A-9	Combination meter	
Removal and installation	54A-11	Actuator test table.....	54A-91
Brake pedal		Check at ECU terminals	54A-104
Inspection		Check procedure for each multi information display screen vehicles with color liquid crystal display.....	54A-98
Brake pedal distortion check.....	35A-29	Check procedure for each multi information display screen vehicles without color liquid crystal display.....	54A-92
Stoplight switch check.....	35A-29	Combination meter	
Removal and installation	35A-28	Disassembly and assembly	54A-119
Brake warning light, fuel warning light and oil pressure warning light.....	90-166	Removal and installation.....	54A-118
		Combination meters diagnostic	
		Diagnostic function.....	54A-31
		Standard flow of diagnostic troubleshooting	54A-31
		Diagnostic trouble code chart	54A-34
		Diagnostic trouble code procedures	
		DTC B1200: malfunction of odometer.....	54A-35
		DTC B1201: abnormal fuel information.....	54A-37
		DTC B1208: malfunction of lcd heater	54A-42
		DTC B1209: test mode	54A-42
		DTC B2203: chassis No. not programmed	54A-43
		DTC B2463: the sticking of rheostat switch	54A-44
		DTC B2464: the sticking of meter information switch	54A-46
		DTC B2465: ignition switch signal error.....	54A-48
		DTC U0019: bus off(CAN-B).....	54A-50
		DTC U0100: engine control module CAN timeout	54A-51
		DTC U0141: ETACS CAN timeout.....	54A-53
		DTC U0151: SRS-ECU CAN timeout	54A-55
		DTC U0154: occupant classification-ECU CAN timeout	54A-57
		DTC U0164: AC-ECU CAN timeout.....	54A-59
		DTC U0168: KOS-ECU or WCM CAN timeout.....	54A-61
		DTC U0184: audio CAN timeout.....	54A-63
		DTC U0245: audio visual navigation unit CAN timeout	54A-65
		DTC U1415: coding not completeddata fail	54A-67
		General information	54A-28
		On-vehicle service	
		Fuel gauge unit check.....	54A-107
		Meter information switch check.....	54A-109
		Service reminder function set	54A-110
		Speedometer check	54A-105
		Tachometer check.....	54A-107
		Service data.....	54A-89
		Service specification(s).....	54A-29
		Special tools.....	54A-30

C

Camshaft	
Inspection	11B-46
Removal and installation	
Engine mechanical 2.4L engine.....	11A-26
Engine overhaul 2.4L engine	11B-43
Camshaft and valve stem seal	
Removal and installation	11C-32
Camshaft oil seal	
Removal and installation	11C-29
CAN communication-related DTC (u-code) table.....	54C-220
Central door locking system	90-176
Centralized junction.....	90-14
Charging system	90-42
Charging system	
Charging system diagnosis	16-5
General information	16-3
General specifications	16-4
Generator assembly	
Disassembly and reassembly	16-19
Inspection	16-25
Removal and installation 2.4L engine.....	16-15
Removal and installation 3.0L engine.....	16-17
On-vehicle service	
Generator output line voltage drop test	16-8
Output current test	16-9
Regulated voltage test.....	16-11
Wave pattern check using an oscilloscope	16-12

Symptom procedures		Diagnostic trouble code procedures	
Inspection procedure 1: power supply circuit check	54A-70	DTC 15: cruise control switch system	17-16
Inspection procedure 2: the speedometer does not work (the other meters work).	54A-75	DTC 22: stoplight switch system	17-29
Inspection procedure 3: the tachometer does not work (the other meters work).	54A-77	DTC 23: ECM and its related component	17-36
Inspection procedure 4: tone alarm does not sound normally.	54A-79	ECM terminal voltage reference chart for cruise control system operation	17-59
Inspection procedure 5: the combination meter light does not illuminate normally or the multi information display is not displayed normally.	54A-82	General information	17-11
Inspection procedure 6: the multi information display screen cannot be changed with the operation of the meter information switch.	54A-86	On-vehicle service	
Trouble symptom chart	54A-69	Cruise control system component check	17-64
Component identification	27B-5	Cruise control system operation check	17-62
Compressor assembly		Special tools	17-60
Disassembly and reassembly	55A-127	Symptom chart	17-38
Inspection		Symptom procedures	
Heater, air conditioning and ventilation	55A-127	Inspection procedure 1: when the brake pedal is depressed, cruise control system is not cancelled.	17-39
Heater, air conditioning and ventilation	55A-132	Inspection procedure 2: when the selector lever is moved to "N" position, cruise control system is not cancelled.	17-41
Removal and installation	55A-125	Inspection procedure 3: when the "CANCEL" switch is set to on, cruise control system is not cancelled.	17-45
Condenser assembly		Inspection procedure 4: cruise control cannot be set (No response "coastset" switch and "ACCres" switch is pressed).	17-46
Removal and installation	55A-133	Inspection procedure 5: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed	17-52
Control link, upper arm and lower arm	34-12	Inspection procedure 6: when "on/off" switch is turned on, "CRUISE" indicator light inside combination meter does not illuminate (however, cruise control system is normal).	17-55
Control link, upper arm and lower arm		Cruise control system	90-354
Lower arm bushing replacement	34-14	Curtain air bag module(s)	
Removal and installation	34-12	Inspection	52B-456
Control unit	70-4	Removal and installation	52B-453
Controller area network (CAN)	90-418	CVT key interlock and shift lock mechanisms	
Coolant	14-3	Removal and installation	23A-155
Cooling system <2.4L engine>	90-72	Cylinder head and valves	
Cooling system <3.0L engine>	90-76	Inspection	
Crankshaft and cylinder block		Engine overhaul 2.4L engine	11B-53
Cylinder block inspection	11D-77	Engine overhaul 3.0L engine	11D-49
Inspection	11B-79	Removal and installation	
Removal and installation		Engine overhaul 2.4L engine	11B-49
Engine overhaul 2.4L engine	11B-74	Engine overhaul 3.0L engine	11D-45
Engine overhaul 3.0L engine	11D-71	Cylinder head gasket	
Crankshaft front oil seal		Removal and installation	
Removal and installation	11C-47	Engine mechanical 2.4L engine	11A-55
Crankshaft oil seal		Engine mechanical 3.0L engine	11C-51
Removal and installation	11A-52		
Crankshaft pulley			
Removal and installation			
Engine mechanical 2.4L engine	11A-21		
Engine mechanical 3.0L engine	11C-23		
Crankshaft rear oil seal			
Removal and installation	11C-49		
Crossmember			
Removal and installation 2.4L engine	32-13		
Removal and installation 3.0L engine	32-17		
Cruise control			
Cruise control switch			
Removal and installation	17-65		
Cruise control system diagnosis			
Diagnostic function	17-12		
Diagnostic troubleshooting strategy	17-12		
Introduction to cruise control system diagnosis	17-12		
Data list reference table	17-58		
Diagnostic trouble code chart	17-15		

D

Dash panel			
Configuration diagrams	80A-18		
Splice locations	80B-6		
Data list reference table	27C-90		
Daytime running light (DRL) <vehicles with discharge type headlight>	90-136		
Daytime running light (DRL) <vehicles with halogen type headlight>	90-132		
Defogger			
On-vehicle service			
Printed heater check	54A-726		
Rear window defogger relay check	54A-727		
Troubleshooting	54A-726		
Diagnosis			
ABS warning light, ASC warning/operation light and brake warning light check	35C-4		
Actuator test reference table	35C-273		
Actuator test table	42B-185		
ASC diagnostic troubleshooting strategy	35C-3		
CAN bus diagnostics			
Diagnostic item 1: diagnose when the scan tool cannot receive the data sent by ETACS-ECU	54C-27		
Diagnostic item 10: diagnose when the scan tool cannot receive the data sent by ABS-ECU vehicles without ASC.	54C-91		
Diagnostic item 11: diagnose when the scan tool cannot receive the data sent by ASC-ECU vehicles with ASC.	54C-94		
Diagnostic item 12: diagnose when the scan tool cannot receive the data sent by ECM.	54C-97		
Diagnostic item 13: diagnose the lines between the ETACS-ECU and joint connector (can2).	54C-100		
Diagnostic item 14: diagnose the lines between joint connector (can2) and joint connector (can3).	54C-104		
Diagnostic item 15: diagnose when the scan tool cannot receive the data sent by combination meter.	54C-107		
Diagnostic item 16: diagnose when the scan tool cannot receive the data sent by KOS-ECU vehicles with KOS>	54C-110		
Diagnostic item 17: diagnose when the scan tool cannot receive the data sent by WCM vehicles without KOS.	54C-113		
Diagnostic item 18: diagnose when the scan tool cannot receive the data sent by SRS-ECU.	54C-116		
Diagnostic item 19: diagnose when the scan tool cannot receive the data sent by occupant classification-ECU.	54C-119		
Diagnostic item 2: malfunction of the ETACS-ECU. ..	54C-33		
Diagnostic item 20: diagnose when the scan tool cannot receive the data sent by A/C-ECU.	54C-122		
Diagnostic item 21: diagnose when the scan tool cannot receive the data sent by radio and CD player vehicles with radio and CD player or radio and CD changer vehicles with radio and CD changer.	54C-125		
Diagnostic item 22: diagnose when the scan tool cannot receive the data sent by CAN box unit vehicles with MMCS.	54C-128		
Diagnostic item 23: diagnose when the scan tool cannot receive the data sent by satellite radio tuner vehicles with satellite radio.	54C-131		
Diagnostic item 24: short to power supply or ground in both CANh and CANl lines of the CAN-B bus lines.	54C-134		
Diagnostic item 25: diagnose the ETACS-ECU, joint connector (can1) or lines between ETACS-ECU and joint connector (can1).	54C-167		
Diagnostic item 26: short to power supply or ground, open circuit or line-to-line short in the CAN-B bus lines.	54C-171		
Diagnostic item 3: abnormal short between the CAN-C bus lines.	54C-34		
Diagnostic item 4: diagnose shorts in the ground to CAN-C bus line.	54C-47		
Diagnostic item 5: diagnose shorts in the power supply to CAN-C bus line.	54C-63		
Diagnostic item 6: diagnose when the scan tool cannot receive the data sent by AWD-ECU electronic controlled AWD. ..	54C-79		
Diagnostic item 7: diagnose when the scan tool cannot receive the data sent by AWC-ECU s-AWC.	54C-82		
Diagnostic item 8: diagnose when the scan tool cannot receive the data sent by steering wheel sensor vehicles with ASC.	54C-85		
Diagnostic item 9: diagnose when the scan tool cannot receive the data sent by tcm CVT, A/T.	54C-88		
CAN bus diagnostics table	54C-17		
CAN-related connector position	54C-25		
Check at ECU terminals			
Active stability control system (ASC)	35C-274		
Wireless control module (WCM)	42C-98		
Check of drive mode indicators (4WDlock)	27C-8		
CVT diagnostic troubleshooting strategy	23A-14		
Data list reference table			
CVT	23A-127		
Active stability control system (ASC)	35C-270		
Keyless operation system (KOS)	42B-184		
Wireless control module (WCM)	42C-97		
Diagnostic function			
CVT	23A-14		
Electronic control AWD	27C-8		
Active stability control system (ASC)	35C-4		
Active stability control system (ASC)	35C-8		
Keyless operation system (KOS)	42B-13		
Wireless control module (WCM)	42C-7		
Diagnostic trouble code chart			
CVT	23A-29		
Electronic control AWD	27C-11		
Active stability control system (ASC)	35C-18		
Keyless operation system (KOS)	42B-35		
Wireless control module (WCM)	42C-18		
Diagnostic trouble code procedures			
Code No. C102A: mutual monitoring of RL wheel speed sensor	35C-70		
Code No.B1A10 keylessKOS key 1 low batterycode No.B1A11 keylessKOS key 2 low batterycode No.B1A12 keylessKOS key 3 low batterycode No.B1A13 keylessKOS key 4 low batterycode No.B1A14 keyless key 5 low ba	42C-25		
Code No.U1417 implausible coding data			
Keyless operation system (KOS)	42B-125		
Wireless control module (WCM)	42C-78		
DTC B1731: engine control module communication timeout			
Keyless operation system (KOS)	42B-37		
Wireless control module (WCM)	42C-20		
DTC B1761: vin code not programmed			
Keyless operation system (KOS)	42B-39		
Wireless control module (WCM)	42C-22		
DTC B1A08: keylessKOS key1 performanceDTC B1A09: keylessKOS key2 performanceDTC B1A0A: keylessKOS key3 performanceDTC B1A0B: keylessKOS key4 performance.	42B-41		
DTC B1A08: keylessKOS key1 performanceDTC B1A09: keylessKOS key2 performanceDTC B1A0A: keylessKOS key3 performanceDTC B1A0B: keylessKOS key4 performanceDTC B1A0C: keyless key 5 performanceDTC B1A	42C-24		
DTC B1A10 keylessKOS key 1 low batteryDTC B1A11 keylessKOS key 2 low batteryDTC B1A12 keylessKOS key 3 low batteryDTC B1A13 keylessKOS key 4 low battery	42B-42		
DTC B1A24: key id not registered			
Keyless operation system (KOS)	42B-43		
Wireless control module (WCM)	42C-26		

DTC B1A25: key id unmatched		DTC C1046: FL wheel speed sensor control phase time exceeded	35C-94
Keyless operation system (KOS).....	42B-44	DTC C1047: FR wheel speed sensor control phase time exceeded	35C-99
Wireless control module (WCM).....	42C-28	DTC C1048: RL wheel speed sensor control phase time exceeded	35C-104
DTC B1A28: engine control module authenticate error		DTC C1049: RR wheel speed sensor control phase time exceeded	35C-109
Keyless operation system (KOS).....	42B-46	DTC C104B abnormality in FL wheel inlet valve systemDTC C104F abnormality in FR wheel inlet valve systemDTC C1053 abnormality in RL wheel inlet valve systemDTC C1057 abnormality in RR wheel inlet valve systemDTC C105F abno ...	35C-114
Wireless control module (WCM).....	42C-30	DTC C1073: faulty motor drive circuit.....	35C-121
DTC B1A35: transponder read error		DTC C1078: tire with incorrect diameter equipped	27C-12
Keyless operation system (KOS).....	42B-48	DTC C1210: abnormality in G and yaw rate sensor ..	35C-156
Wireless control module (WCM).....	42C-32	DTC C1219: abnormality in steering wheel sensor signal	35C-180
DTC B2101: IG sw start pos.circuit lowDTC B2102: IG sw start pos.circuit high		DTC C121A: abnormality in steering wheel sensor initialization	35C-183
Keyless operation system (KOS).....	42B-51	DTC C121C: torque request signal rejection	35C-147
Wireless control module (WCM).....	42C-35	DTC C121D: abnormality in brake fluid pressure sensor circuit.....	35C-131
DTC B2204: coding data mismatch		DTC C121E: abnormality in brake fluid pressure sensor output signal	35C-133
Keyless operation system (KOS).....	42B-54	DTC C123A: abnormality in sensor calibration	35C-178
Wireless control module (WCM).....	42C-38	DTC C123B: prolonged operation of ASC	35C-140
DTC B2206: vin code mismatch		DTC C123C: abnormality in G and yaw rate sensor abnormality in lateral G and yaw rate output value (incorrect installation)	35C-163
Keyless operation system (KOS).....	42B-55	DTC C1242: abnormality in G and yaw rate sensor (abnormality in longitudinal G sensor output signal).....	35C-159
Wireless control module (WCM).....	42C-40	DTC C1290: CAN time-out error.....	35C-149
DTC B2352: antenna fail		DTC C1395: brake fluid filling not completed.....	35C-146
Keyless operation system (KOS).....	42B-57	DTC C1456: wiring harness or coupling coil overcurrent failure	27C-14
Wireless control module (WCM).....	42C-41	DTC C145A: wiring harness and coupling coil short circuit failure	27C-19
DTC B2400: KOS key registration fail	42B-59	DTC C145D: wiring harness and coupling coil open circuit failure	27C-24
DTC B2401: keylessKOS key id not register	42C-42	DTC C145F: coupling overload.....	27C-28
DTC B2401: keylessKOS key id not registered	42B-61	DTC C1460: drive mode selector circuit failure	27C-31
DTC B2402: stl unit comm. (system id), DTC B2403: stl unit comm. (crc), DTC B2404: stl unit comm. (function code), DTC B2405: stl unit comm. (rolling code), DTC B2406: stl unit comm. (ptc operate), DTC B2407: stl un ...	42B-63	DTC C1608: EEPROM error	
DTC B2409: stl unit comm.(No response).....	42B-66	Keyless operation system (KOS).....	42B-94
DTC B240A dr side antenna(outdoor) open	42B-69	Wireless control module (WCM)	42C-45
DTC B240B ps side antenna(outdoor) open.....	42B-72	DTC C1608: implausible diagnosis data.....	35C-191
DTC B240C liftgate antenna(outdoor) open	42B-75	DTC C1900: No registration	
DTC B240D front antenna(indoor) open.....	42B-78	Keyless operation system (KOS).....	42B-95
DTC B240E RR antenna(indoor) open	42B-81	Wireless control module (WCM)	42C-46
DTC B2412 antenna power voltage.....	42B-84	DTC C1901: vehicle speed information abnormality	
DTC B2413: stl unit power voltage	42B-88	Keyless operation system (KOS).....	42B-97
DTC B2415: ra module power voltage.....	42B-91	Wireless control module (WCM)	42C-48
DTC B2416: ECU internal error		DTC C1910: transmitter low battery voltage abnormality 1DTC C1920: transmitter low battery voltage abnormality 2DTC C1930: transmitter low battery voltage abnormality 3DTC C1940: transmitter low battery voltage abnormality 4 ...	42B-99
Keyless operation system (KOS).....	42B-93	Keyless operation system (KOS).....	42B-99
Wireless control module (WCM)	42C-44	Wireless control module (WCM)	42C-50
DTC C1000: abnormality in stoplight switch circuit....	35C-136	DTC C1912: tire inflation pressure warning 1DTC C1922: tire inflation pressure warning 2DTC C1932: tire inflation pressure warning 3DTC C1942: tire inflation pressure warning 4	
DTC C100A: abnormality in FL wheel speed sensor circuit	35C-21	Keyless operation system (KOS).....	42B-100
DTC C1011: abnormality in FL wheel speed sensor signal	35C-43	Wireless control module (WCM)	42C-51
DTC C1014 mutual monitoring of FL wheel speed sensor	35C-63	DTC C1913: acceleration sensor abnormality 1DTC C1923: acceleration sensor abnormality 2DTC C1933: acceleration sensor abnormality 3DTC C1943: acceleration sensor abnormality 4DTC C1914: pressure sensor abnormality 1 ...	
DTC C1015 abnormality in FR wheel speed sensor circuit	35C-26	Keyless operation system (KOS).....	42B-103
DTC C101C abnormality in FR wheel speed sensor signal	35C-48	Wireless control module (WCM)	42C-54
DTC C101F mutual monitoring of FR wheel speed sensor	35C-67		
DTC C1020 abnormality in RL wheel speed sensor circuit	35C-32		
DTC C1027: abnormality in RL wheel speed sensor signal	35C-53		
DTC C102B abnormality in RR wheel speed sensor circuit	35C-37		
DTC C1032: abnormality in RR wheel speed sensor signal	35C-58		
DTC C1035 mutual monitoring of RR wheel speed sensor	35C-74		
DTC C1041 abnormality in periodical signal for FL wheel speed sensor.....	35C-78		
DTC C1042 abnormality in periodical signal for FR wheel speed sensor.....	35C-82		
DTC C1043: abnormality in periodical signal for RL wheel speed sensor.....	35C-85		
DTC C1044 abnormality in periodical signal for RR wheel speed sensor.....	35C-89		

DTC C1915: transmitter off mode 1DTC C1925: transmitter off mode 2DTC C1935: transmitter off mode 3DTC C1945: transmitter off mode 4			DTC P1773: malfunction of ABS.....	23A-103
Keyless operation system (KOS).....		42B-105	DTC P1777: malfunction of stepper motor.....	23A-105
Wireless control module (WCM).....		42C-56	DTC P1778: abnormality in stepper motor function ...	23A-109
DTC C2002: valve calibration not completed		35C-186	DTC P1902: malfunction of engine system.....	23A-110
DTC C2003: control parameter not implement.....		35C-187	DTC U0001: bus-off	35C-196
DTC C2100: abnormal battery voltage (too low)		27C-35	DTC U0001: bus-off error	27C-62
DTC C2101: abnormal battery voltage (too high)		27C-39	DTC U0001: malfunction of CAN communication circuit	23A-110
DTC C2101: abnormality in battery voltage (high voltage)		35C-144	DTC U0019: bus off(CAN-B)	
DTC C2104: faulty valve power supply circuit		35C-116	Keyless operation system (KOS).....	42B-106
DTC C2111: brake fluid pressure sensor power supply circuit (high input)DTC C2112: brake fluid pressure sensor power supply circuit (low input)		35C-171	Wireless control module (WCM)	42C-57
DTC C2114: abnormality in G and yaw rate sensor operation voltage (low voltage)DTC C2115: abnormality in G and yaw rate sensor operation voltage (high voltage)		35C-173	DTC U0100: CAN time-out error (engine).....	23A-112
DTC C2116: low or high power supply voltage in pump motor.....		35C-126	DTC U0100: engine CAN time-out.....	27C-63
DTC C211C: abnormal ig1 power supply low voltage		27C-43	DTC U0100: engine time-out errorDTC U0101: A/T or CVT time-out errorDTC U0114: AWD time-out errorDTC U0126: steering wheel sensor time-out errorDTC U0141: ETACS time-out error	35C-198
DTC C211D: abnormal ig1 power supply high voltage		27C-47	DTC U0121: ABS CAN time-out	27C-65
DTC C211E: abnormal power supply voltage (too low)		27C-51	DTC U0121: CAN time-out error (ABS)	23A-114
DTC C211F: abnormal power supply voltage (too high)		27C-55	DTC U0125: G and yaw rate sensor message time-out error.....	35C-201
DTC C2200: abnormality in ASC-ECU		35C-143	DTC U0141: CAN time-out error (ETACS).....	23A-115
DTC C2203: vin not recorded		35C-152	DTC U0141: ETACS CAN time-out.....	27C-67
DTC C2204: internal abnormality in G and yaw rate sensor		35C-167	DTC U0141: ETACS-ECU CAN timeout	
DTC C2205: internal malfunction of steering wheel sensor		35C-184	Keyless operation system (KOS).....	42B-108
DTC C2206: re-execution of variant coding.....		35C-154	Wireless control module (WCM)	42C-58
DTC C2208: AWD-ECU internal error		27C-59	DTC U0151: SRS-ECU CAN timeout	
DTC P0703: malfunction of stoplight switch		23A-31	Keyless operation system (KOS).....	42B-109
DTC P0705: malfunction of transmission range switch		23A-36	Wireless control module (WCM)	42C-60
DTC P0711: malfunction of transmission fluid temperature sensor		23A-41	DTC U0154: occupant classification-ECU CAN timeout	
DTC P0712: malfunction of transmission fluid temperature sensor (short)DTC P0713: malfunction of transmission fluid temperature sensor (open).....		23A-44	Keyless operation system (KOS).....	42B-111
DTC P0715: malfunction of primary pulley speed sensor		23A-49	Wireless control module (WCM)	42C-62
DTC P0720: malfunction of secondary pulley speed sensor		23A-54	DTC U0155: combination meter CAN timeout	
DTC P0725: malfunction of engine speed		23A-59	Keyless operation system (KOS).....	42B-113
DTC P0740: malfunction of lockup solenoid valve		23A-62	Wireless control module (WCM)	42C-64
DTC P0741: abnormality in lock-up function		23A-65	DTC U0164: AC-ECU CAN timeout	
DTC P0745: malfunction of line pressure solenoid valve		23A-67	Keyless operation system (KOS).....	42B-115
DTC P0746: abnormality in hydraulic control system function		23A-70	Wireless control module (WCM)	42C-66
DTC P0776: abnormality in secondary pressure solenoid valve function.....		23A-73	DTC U0184: audio CAN timeout	
DTC P0778: malfunction of secondary pressure solenoid valve		23A-74	Keyless operation system (KOS).....	42B-117
DTC P0815: malfunction of paddle shift up switch		23A-76	Wireless control module (WCM)	42C-68
DTC P0816: malfunction of paddle shift down switch		23A-78	DTC U0195: satellite radio tuner CAN timeout	42C-70
DTC P0826: malfunction of shift switch assembly		23A-79	DTC U0245: audio visual navigation unit CAN timeout	
DTC P0840: malfunction of secondary pressure sensor		23A-81	Keyless operation system (KOS).....	42B-119
DTC P0841: abnormality in line pressure sensor function		23A-85	Wireless control module (WCM)	42C-72
DTC P0868: secondary pressure drop		23A-86	DTC U0401: engine CAN data error.....	27C-69
DTC P0882: malfunction of power supply system (low)DTC P0883: malfunction of power supply system (high).....		23A-89	DTC U0401: engine malfunction detected	35C-203
DTC P1637: malfunction of memory backup		23A-91	DTC U0415: ABS CAN data error.....	27C-71
DTC P1706: malfunction of throttle signal		23A-93	DTC U0428: communication error in steering wheel sensor	35C-205
DTC P1710: malfunction of vehicle speed signal		23A-95	DTC U1003: G and yaw rate sensor bus-off	35C-207
DTC P1723: abnormality in speed sensor system function		23A-97	DTC U113C: wheel speed sensor data error	27C-72
DTC P1740: malfunction of lockupselect switching solenoid valve		23A-100	DTC U1412: implausible vehicle speed signal received	
DTC P1745: monitoring of percentage change in pulley ratio.....		23A-103	Keyless operation system (KOS).....	42B-121
			Wireless control module (WCM)	42C-74
			DTC U1415 variant coding not implemented	27C-74
			DTC U1415: coding not completeddata fail	
			Keyless operation system (KOS).....	42B-123
			Wireless control module (WCM)	42C-76
			DTC U1415: variant coding not completed	35C-210
			DTC U1417: variant coding value invalid (includes faulty installation).....	35C-212
			Diagnostic troubleshooting flow	23A-13

Fail-safe function/backup function	23A-19	Inspection procedure 3: brake warning light stays on with the parking brake lever released.....	35C-219
Freeze frame data reference table	27C-10	Inspection procedure 3: engine does not start.....	42C-84
How to initialize CVT learned value	23A-17	Inspection procedure 3: keyless operation warning display does not disappear.	42B-132
Hydraulic pressure test.....	23A-27	Inspection procedure 3: shock is experienced during n to d and/or n to r shifting operation.	23A-119
Id codes registration judgment table		Inspection procedure 4: abnormality in WCM power supply and ground circuits.....	42C-86
Keyless operation system (KOS).....	42B-15	Inspection procedure 4: ABS warning light does not illuminate when ignition switch is turned to the on position (engine stopped).....	35C-225
Wireless control module (WCM)	42C-10	Inspection procedure 4: IG knob will not turn (keyless operation is not recognized).	42B-134
Introduction to ASC diagnosis	35C-3	Inspection procedure 4: poor acceleration or incomplete shifting operation.....	23A-119
Introduction to CVT diagnosis	23A-13	Inspection procedure 5: brake warning light does not illuminate when the ignition switch is turned to on position (engine stopped).....	35C-227
Learning procedure for CVT hydraulic control.....	23A-18	Inspection procedure 5: cannot be changed in sport mode.....	23A-120
Oscilloscope inspection procedures.....	23A-133	Inspection procedure 5: keyless entry system does not work.	42C-89
Precautions for diagnosis	27C-7	Inspection procedure 5: the engine will not start with KOS (IG knob operates normally).	42B-139
Road test	23A-20	Inspection procedure 6: ABS warning light stays on after the engine is started.....	35C-229
Standard flow of diagnostic troubleshooting		Inspection procedure 6: cannot be changed with the paddle shift.	23A-123
Electronic control AWD	27C-7	Inspection procedure 6: No door will be locked or unlocked by operating a lock/unlock switch on any door.....	42B-141
Keyless operation system (KOS).....	42B-13	Inspection procedure 6: the dome light, the turn-signal lights and the horn do not operate through the answerback function.....	42C-92
Wireless control module (WCM)	42C-7	Inspection procedure 7: ASC warning display stays on after the engine is started.....	35C-232
Symptom chart	35C-216	Inspection procedure 7: drivers door lock/unlock switch does not work.	42B-145
Symptom procedures		Inspection procedure 7: the fluid temperature warning lamp illuminates too frequently.....	23A-125
Inspection procedure 1: cannot communicate with KOS-ECU using the scan tool.	42B-128	Inspection procedure 7: the timer lock function does not work after the doors have been unlocked by the keyless entry system.....	42C-95
Inspection procedure 1: scan tool cannot communicate with WCM.....	42C-81	Inspection procedure 8: ASC off display or ASC off light stays on after the engine is started.	35C-234
Inspection procedure 1: scan tool communication only with ABST-CLskid control system is impossible.	35C-217	Inspection procedure 8: front passengers door lock/unlock switch does not work.....	42B-148
Inspection procedure 1: tcm cannot communication with scan tool.....	23A-116	Inspection procedure 8: power door locks with selective unlocking does not work.....	42C-96
Inspection procedure 10: after ASC off switch is turned off, TCLskid control system cannot be disabled.	35C-240	Inspection procedure 9: ASC operation display stays on after the engine is started.....	35C-238
Inspection procedure 10: the lock switch of the liftgate lock release handle does not perform the locking operation.....	42B-155	Inspection procedure 9: the lock switch and open switch of the liftgate lock release handle do not work.	42B-152
Inspection procedure 11: abnormality in brake operation	35C-243	Tcm terminal voltage reference chart for transaxle operation	23A-131
Inspection procedure 11: the open switch of the liftgate lock release handle does not perform the unlocking operation.....	42B-159	Terminal voltage reference chart	42B-186
Inspection procedure 12: ASC system does not operate or faulty ASC operate.	35C-244	Torque converter stall test.....	23A-25
Inspection procedure 12: keyless entry system does not work.	42B-162	Trouble symptom chart	
Inspection procedure 13: ASC-ECU power supply circuit system	35C-247	CVT.....	23A-30
Inspection procedure 13: KOS timer lock function does not work.	42B-168	Keyless operation system (KOS).....	42B-128
Inspection procedure 14: steering wheel sensor power supply circuit system	35C-258	Wireless control module (WCM)	42C-80
Inspection procedure 14: the dome light, the turn-signal lights and the horn do not operate through the answerback function.....	42B-169	Warning and warning indicator list vehicles with color liquid crystal display	42B-27
Inspection procedure 15: hsa (hill start assist) does not work.	35C-262	Warning and warning indicator list vehicles without color liquid crystal display.....	42B-19
Inspection procedure 15: outer tone alarm does not sound.....	42B-173	Warningsalarms vehicles with color liquid crystal display	42C-16
Inspection procedure 16: hsa (hill start assist) works on a flat road.....	35C-267	Warningsalarms vehicles without color liquid crystal display	42C-13
Inspection procedure 16: the keyless operation key cannot be registered using scan tool.....	42B-177	Diagnosis s-AWC(super all wheel control)	
Inspection procedure 17: engine does not start with emergency key (cranking but no initial combustion).	42B-180	Check at AWC-ECU terminal.....	23C-258
Inspection procedure 17: the initial check sound of hydraulic unit is loud.	35C-268	Check chart for diagnostic trouble code	23C-164
Inspection procedure 18: power door locks with selective unlocking does not work.	42B-182	Data list reference table.....	23C-254
Inspection procedure 2: abnormality in KOS-ECU power supply and ground circuits.	42B-130	Diagnosis function	23C-160
Inspection procedure 2: ASC off display flashes at a rate of 2hz	35C-218		
Inspection procedure 2: the ignition key cannot be registered using scan tool.	42C-82		
Inspection procedure 2: vehicle creeps in the n range.	23A-118		

Diagnostic trouble code procedures

Code No. C1626: actuator power supply voltage malfunction	23C-198
Code No. C1627: abnormal electronic control solenoid (front) current.....	23C-202
Code No. C1628: abnormal electronic control solenoid (center) current.....	23C-204
Code No. C1629: ASC CAN data (not received)	23C-206
Code No. C1630: steering wheel sensor CAN data (not received).....	23C-207
Code No. C1631: ETACS CAN data (not received)...	23C-208
Code No. C1632: engine CAN data (not received)....	23C-209
Code No. C1633: AT CAN data (not received)	23C-210
Code No.C100A FL, C1015 FR, C1020 RL, C102B RR: wheel speed sensor system (faulty circuit)	23C-166
Code No.C1011 FL, C101C FR, C1027 RL, C1032 RR: wheel speed sensor system (faulty signal)	23C-167
Code No.C1014 FL, C101F FR, C102A RL, C1035 RR: wheel speed sensor system (characteristics abnormality)...	23C-168
Code No.C1078: tire turning malfunction.....	23C-169
Code No.C1219: steering wheel sensor system (faulty signal)	23C-171
Code No.C121A: steering wheel sensor system (neutral learning abnormality).....	23C-173
Code No.C123C: G and yaw rate sensor (faulty signal)	23C-174
Code No.C1242: G and yaw rate sensor system (abnormality of longitudinal G sensor output signal)	23C-177
Code No.C145F: system disable mode (over temperature).....	23C-179
Code No.C1460: s-AWC control mode selector circuit malfunction	23C-181
Code No.C1610: AWC power supply electronic relay malfunction	23C-184
Code No.C1614: parking brake switch system (stuck on)	23C-187
Code No.C1616: cranking signal system (stuck on)...	23C-190
Code No.C161F: AWC actuator protection 1	23C-193
Code No.C1621: AWC actuator protection 2	23C-195
Code No.C1624: AWC-ECU system (internal error)...	23C-197
Code No.C2100: battery voltage malfunction (low voltage).....	23C-212
Code No.C2101: battery voltage malfunction (high voltage).....	23C-218
Code No.C2203: chassis No. not recorded	23C-221
Code No.C2205: steering wheel sensor system (internal error).....	23C-222
Code No.U0001: bus-off	23C-223
Code No.U0100: engine time-out error.....	23C-224
Code No.U0101: transaxle time-out error	23C-225
Code No.U0121: ASC time-out error	23C-226
Code No.U0126: steering wheel sensor time-out error	23C-227
Code No.U0141: ETACS time-out error	23C-228
Code No.U0401: engine data malfunction	23C-229
Code No.U0428: steering wheel sensor data malfunction	23C-231
Code No.U0431: ETACS data malfunction	23C-232
Code No.U1415: coding incomplete fail	23C-233
Code No.U1417: coding data malfunction	23C-234
Code No.U1425: transaxle data malfunction	23C-236
Code No.U1427: wheel speed sensor data malfunction	23C-237
Code No.U1428: G and yaw rate sensor data malfunction	23C-238
Special function	23C-256
Symptom chart	23C-165
Symptom procedures	23C-240

Symptom procedures

Inspection procedure 1: communication between scan tool and AWC-ECU cannot be established.....	23C-240
Inspection procedure 2 : malfunction of power supply circuit system	23C-241

Inspection procedure 3: shifting the s-AWC control mode selector does not change the mode	23C-248
Inspection procedure 4: the tight corner braking phenomenon (difficult to turn) appears frequently with the s-AWC control mode selector in the normal or snow mode	23C-251
Troubleshooting strategy	23C-160
Diagnostic trouble code diagnosis	54C-16
Differential	
Differential inspection	23B-79
Disassembly and assembly	
Continuously variable transaxle overhaul	23B-76
Automatic transaxle overhaul.....	23D-88
Differential carrier assembly	
Assembly	27B-39
Disassembly	27B-33
Removal and installation.....	27B-31
Differential sub-assembly	
Assembly	23B-79
Dome light	
Diagnosis	
Diagnostic function.....	54A-280
Standard flow of diagnostic troubleshooting	54A-280
General information	54A-277
On-vehicle service	
Customization function.....	54A-302
Removal and installation.....	54A-302
Special tools.....	54A-277
Symptom procedures	
Inspection procedure 1: the front dome light does not illuminate normally.....	54A-282
Inspection procedure 2: the rear dome light does not illuminate normally.....	54A-286
Inspection procedure 3: the luggage compartment light does not illuminate normally.....	54A-291
Inspection procedure 4: the foot light does not illuminate normally.....	54A-296
Inspection procedure 5: the interior light auto-cut function does not operate correctly.	54A-299
Trouble symptom chart	54A-281
Dome light, luggage compartment light and ignition key hole illumination light	90-140
Door	
Configuration diagrams.....	80A-28
Splice locations	80B-9
Door	
Central door locking system diagnosis	
Input signal chart <central door locking system>	42A-37
Trouble symptom chart <central door locking system>	42A-37
Troubleshooting strategy	42A-36
Check at ECU terminal	42A-128
Diagnostic trouble code procedures power window	
Code no. L0730: pw (dr) sw pulse 1 disconnection ...	42A-82
Code no. L0732: pw (dr) sw pulse 2 disconnection ...	42A-84
Code no. L0734: pw (dr) above window position	42A-86
Code no. L0736: pw (dr) sensor fail (ground)	42A-87
Code no. L0740: pw (dr) 3 times jam - protection.....	42A-88
Code no. L0746: pw (dr) parameter read failcode no. L0750: pw (dr) position read fail.....	42A-89

Door assembly		Inspection procedure A-2: central door locking system does not operate even when door lock switch of power window main switch operated (door lock switch of front power window sub switch operates normally).	42A-41
Inspection	42A-147		
Removal and installation.....	42A-145		
Door diagnosis		Inspection procedure A-3: central door locking system does not operate even when door lock switch of front power window sub switch operated (door lock switch of power window main switch operates normally).	42A-45
Glass and door diagnostic troubleshooting strategy..	42A-129		
Introduction to glass and door diagnosis	42A-129		
Symptom chart.....	42A-129		
Door glass and regulator		Inspection procedure A-4: a door or a liftgate cannot be locked or unlocked by the central door locking system.	42A-50
Inspection	42A-150		
Removal and installation.....	42A-148		
Door handle and latch		Inspection procedure A-5: the liftgate does not open.	42A-64
Inspection	42A-156		
Removal and installation.....	42A-153		
General information	42A-34		
How to locate wind noise.....	42A-132		
Input signal procedures central door locking system		Inspection procedure A-6: selector "P" position-linked door unlock function does not operate.	42A-70
Inspection procedure B-1: the liftgate lock release handle signal is not received.	42A-76		
On-vehicle service		Inspection procedure A-7: ignition "lock (off)" position-linked door unlock function does not operate.	42A-72
Adjustment of faulty power window	42A-139	Symptom procedures power window	
Central door locking system check	42A-141	Inspection procedure B-7: window glass lowers automatically while it is rising <drivers side only>.....	42A-127
Customization function	42A-144	Inspection procedure C-1: power windows do not work at all.....	42A-91
Door fit adjustment.....	42A-136	Inspection procedure C-2: drivers power window does not work by means of the power window main switch.....	42A-99
Door inside handle check	42A-142	Inspection procedure C-3: relevant power window(s) does not work by means of the front and rear passengers power window sub switches.	42A-102
Door outside handle play check.....	42A-142	Inspection procedure C-4: front and/or rear passengers power window(s) do not work by means of the power window main switch.	42A-117
Door window glass adjustment.....	42A-138	Inspection procedure C-5: the power window timer function does not work normally.	42A-121
Ignition "lock (off)" position-linked door unlocking function check	42A-141	Inspection procedure C-6: power window anti-trap function does not work normally <drivers side only>.....	42A-124
Key-in prevention function check.....	42A-141	Window glass runchannel and door opening weatherstrip	
Learning procedures of the power window fully closed position <drivers side only>.....	42A-140	Removal and installation.....	42A-159
Power window check	42A-138	Door ajar warning tone alarm	90-382
Power window operating current check	42A-140	Door sash tape	
Power window safety mechanism check	42A-139	Removal and installation.....	51-16
Power window timer function check.....	42A-139	Special tool	51-16
Selector "P" position-linked door unlocking function check	42A-141	Drive mode selector	
Power window diagnosis		Drive mode selector check	27C-96
Diagnostic trouble code chart power window	42A-81	Removal and installation.....	27C-96
Trouble symptom chart <power window>	42A-81	Driveshaft assembly	
Troubleshooting strategy	42A-81	Disassembly and assembly	27B-28
Special tools	42A-134	Disassembly and assembly 2.4L engine- FWD	26-29
Specification(s)	42A-36	Disassembly and assembly 3.0L engine- FWD	26-33
Specification(s)		Disassembly and assembly AWD	26-37
Component identifications	42A-36	Ebj boot replacement.....	26-40
Sealant.....	42A-36	Inspection	26-40
Service specification	42A-36	Removal and installation	
Symptom procedures		Front axle	26-23
Inspection procedure 1: water leak through door window glass	42A-129	Rear axle AWD	27B-24
Inspection procedure 2: door window glass malfunction	42A-130	Ducts	
Inspection procedure 3: water leak through door edge	42A-130	Removal and installation.....	55A-135
Inspection procedure 4: water leak from door center	42A-130		
Inspection procedure 5: door hard to open.....	42A-131		
Inspection procedure 6: door does not open or close completely.....	42A-131		
Inspection procedure 7: uneven gap between body..	42A-131		
Inspection procedure 8: wind noise around door.....	42A-131		
Symptom procedures central door locking system			
Inspection procedure A-1: central door locking system does not work at all.....	42A-38		

E

Electronic control coupling			
Removal and installation.....			27C-97
Electronic controlled AWD			90-340
Emission control MFI			
Catalytic converter			
Removal and installation.....			17-89
Diagnosis.....			17-66
Evaporative emission canister and fuel tank pressure relief valve			
Inspection.....			17-88
Removal and installation.....			17-87

E

Electronic control coupling	
Removal and installation.....	27C-97
Electronic controlled AWD	90-340
Emission control MFI	
Catalytic converter	
Removal and installation.....	17-89
Diagnosis.....	17-66
Evaporative emission canister and fuel tank pressure relief valve	
Inspection.....	17-88
Removal and installation.....	17-87

Evaporative emission control system		Removal and installation	
Barometric pressure sensor check	17-79	Multiport fuel injection (MFI) 2.4L engine	13A-887
Component location	17-76	Multiport fuel injection (MFI) 3.0L engine	13B-903
Engine coolant temperature sensor check	17-79	Engine cooling diagnosis	
Evaporative emission purge solenoid check	17-78	Introduction	14-4
Evaporative emission ventilation solenoid check	17-80	Symptom chart	14-4
Fuel tank differential pressure sensor check	17-80	Symptom procedures	
General information (evaporative emission system) ..	17-75	Inspection procedure 1: coolant leak	14-5
Intake air temperature sensor check	17-79	Inspection procedure 2: engine overheating	14-6
Mass airflow sensor check	17-79	Inspection procedure 3: radiator fan and condenser fan do not operate 2.4L engine	14-7
Purge control system check (purge flow check)	17-77	Inspection procedure 4: radiator fan and condenser fan do not operate 3.0L engine	14-15
Exhaust gas recirculation (EGR) system		Troubleshooting strategy	14-4
Component location	17-81	Engine diagnosis	
Crankshaft position sensor check	17-83	Engine mechanical 2.4L engine	11A-3
EGR valve (stepper motor) check	17-81	Engine mechanical 3.0L engine	11C-3
Engine coolant temperature sensor check	17-83	Engine mounting	
General information (exhaust gas recirculation system)	17-80	Removal and installation <3.0L engine>	32-5
Mass airflow sensor check	17-83	Removal and installation 2.4L engine	32-3
Removal and installation 2.4L engine	17-84	Engine oil pressure switch	
Removal and installation 3.0L engine	17-86	Removal and installation <2.4L engine>	12-9
General information	17-66	Removal and installation <3.0L engine>	12-11
Positive crankcase ventilation system		Engine roll stopper and centermember	
Component location	17-73	Removal and installation	32-11
General information (positive crankcase ventilation system)	17-72	ETACS	
Positive crankcase ventilation (pcv) system check		Check with terminal voltage	54A-827
Engine and emission control	17-74	Data list reference table	54A-777
Engine and emission control	17-74	Diagnostic trouble code chart	54A-733
Service specifications	17-66	Diagnostic trouble code procedures	
Special tools	17-67	DTC B1761: chassis number not recorded	54A-766
Vacuum hoses		DTC B210A: b power supply (low input) DTC B210B: b power supply (high input)	54A-767
Vacuum circuit diagram	17-70	DTC B2206: chassis number does not match	54A-772
Vacuum hose check	17-71	DTC B2215: ECU internal error	54A-774
Vacuum hose installation	17-71	DTC B222C: coding incomplete	54A-771
Vacuum hose routing	17-68	DTC B2353: ignition power supply (low input) DTC B2354: ignition power supply (high input)	54A-774
Engine and transaxle <2.4L engine>	80A-10	DTC U0001: bus off (CAN-C) DTC U0019: bus off (CAN-B)	54A-735
Engine and transaxle <3.0L engine>	80A-14	DTC U0100: engine control module CAN timeout	54A-736
Engine and transaxle 2.4L engine	80B-5	DTC U0101: transaxle control module CAN timeout	54A-738
Engine and transaxle 3.0L engine	80B-5	DTC U0114: AWD-ECU CAN timeout	54A-740
Engine assembly		DTC U0121: ABS-ECU or ASC-ECU CAN timeout	54A-742
Removal and installation		DTC U0126: steering wheel sensor CAN timeout	54A-744
Engine mechanical 2.4L engine	11A-86	DTC U0151: SRS-ECU CAN timeout	54A-746
Engine mechanical 3.0L engine	11C-61	DTC U0154: occupant classification-ECU CAN timeout	54A-748
Engine compartment	80B-4	DTC U0155: combination meter CAN timeout	54A-750
Engine compartment <2.4L engine>	80A-6	DTC U0164: A/C-ECU CAN timeout	54A-752
Engine compartment <3.0L engine>	80A-8	DTC U0168: WCM or KOS-ECU CAN timeout	54A-754
Engine control		DTC U0184: audio CAN timeout	54A-756
Accelerator pedal		DTC U0195: satellite radio tuner CAN timeout	54A-758
Removal and installation	17-9	DTC U0245: CAN box unit CAN timeout	54A-760
Engine control system diagnosis		DTC U0331: ECU internal error	54A-765
Introduction	17-4	DTC U1108: excess CAN-B ECU detection	54A-762
Troubleshooting strategy	17-4	DTC U1120: bus line (CAN-C) low input DTC U1121: bus line (CAN-C) high input	54A-764
General information	17-3	ETACS-ECU	
Special tool	17-8	Removal and installation	54A-826
Symptom chart	17-4	General information	54A-728
Symptom procedures		Input signal procedures	
Inspection procedure 1: throttle valve will not fully open or close	17-4		
Inspection procedure 2: accelerator pedal operation not smooth (over acceleration)	17-6		
Engine control module (ECM)			

Inspection procedure 1: ETACS-ECU does not receive any signal from the ignition switch (ACC).....	54A-787	Configuration diagrams.....	80A-24
Inspection procedure 10: ETACS-ECU does not receive any signal from the hood switch.....	54A-814	Splice locations.....	80B-8
Inspection procedure 11: ETACS-ECU does not receive any signal from the hazard warning light switch.....	54A-817	Floor console assembly	
Inspection procedure 12: ETACS-ECU does not receive any signal from the column switch signal.....	54A-819	Front floor console assembly	
Inspection procedure 2: ETACS-ECU does not receive any signal from the ignition switch (ig1).....	54A-789	Removal and installation.....	52A-7
Inspection procedure 3: ETACS-ECU does not receive any signal from the key reminder switch.....	54A-792	Rear floor console assembly	
Inspection procedure 4: ETACS-ECU cannot receive the signal of front door lock actuator (LH) or front door lock actuator (RH).....	54A-795	Removal and installation.....	52A-8
Inspection procedure 5: ETACS-ECU does not receive any signal from the front door switch (LH).....	54A-802	Fog light.....	90-130
Inspection procedure 6: ETACS-ECU does not receive any signal from the front door switch (RH).....	54A-804	Fog light	
Inspection procedure 7: ETACS-ECU does not receive any signal from the rear door switch (LH).....	54A-806	Diagnosis	
Inspection procedure 8: ETACS-ECU does not receive any signal from the rear door switch (RH).....	54A-809	Diagnostic function.....	54A-257
Inspection procedure 9: ETACS-ECU does not receive any signal from the liftgate switch.....	54A-811	Standard flow of diagnostic troubleshooting.....	54A-256
On-vehicle service		Inspection	
Customization function.....	54A-821	Fog light relay check.....	54A-274
Special tool.....	54A-729	On-vehicle service	
Symptom procedures		Bulb replacement.....	54A-273
Malfunction of ETACS-ECU power supply circuit.....	54A-783	Front fog light aiming.....	54A-271
Trouble symptom chart.....	54A-782	Removal and installation.....	54A-273
Trouble symptom chart for input signal.....	54A-786	Service specifications.....	54A-255
Troubleshooting		Special tools.....	54A-255
Diagnostic function.....	54A-730	Symptom procedures	
Standard flow of diagnostic troubleshooting.....	54A-730	Inspection procedure 1: none of the front fog lights illuminates.....	54A-259
ETACS-ECU.....	90-10	Inspection procedure 2: one of the front fog lights does not illuminate.....	54A-266
Exhaust manifold		Inspection procedure 3: fog light indicator does not illuminate/go out normally.....	54A-269
Inspection.....	15-21	Trouble symptom chart.....	54A-258
Removal and installation		Foot light.....	90-148
Engine overhaul 2.4L engine.....	11B-21	Forward clutch	
Engine overhaul 3.0L engine.....	11D-33	Disassembly and assembly.....	23B-67
Removal and installation 2.4L engine.....	15-15	Inspection.....	23B-70
Removal and installation 3.0L engine.....	15-18	Front axle diagnosis	
Exhaust pipe and main muffler		Symptom chart.....	26-6
Removal and installation 2.4L engine.....	15-22	Symptom procedures	
Removal and installation 3.0L engine.....	15-25	Inspection procedure 1: noise during wheel rotation.....	26-6
Explanation about the sCAN tool (M.U.T.-III) CAN bus diagnostics.....	54C-10	Inspection procedure 2: noise due to excessive play of wheel in turning direction.....	26-7
Exterior transmitter antenna assembly, interior transmitter antenna assembly, receiver antenna module		Troubleshooting strategy.....	26-6
Removal and installation.....	42B-202	Front axle hub assembly	
		Disassembly and assembly.....	26-18
		Inspection	
		Front axle.....	26-17
		Front axle.....	26-22
		Removal and installation.....	26-13
		Front bumper assembly	
		Disassembly and reassembly.....	51-5
		Removal and installation.....	51-4
		Front disc brake assembly	
		Disassembly and assembly.....	35A-35
		Inspection	
		Basic brake.....	35A-34
		Basic brake.....	35A-37
		Removal and installation.....	35A-33
		Front impact sensors	
		Inspection.....	52B-435
		Removal and installation.....	52B-433
		Front suspension diagnosis	
		Front suspension diagnosis troubleshooting strategy....	33-4
		Introduction to front suspension diagnosis.....	33-4

F

Fastener tightening specifications

Engine overhaul 3.0L engine.....	11D-5
Continuously variable transaxle overhaul.....	23B-6
Front suspension.....	33-2
Rear suspension.....	34-4
Supplemental restraint system (SRS).....	52B-3
Fender.....	42A-9
Fender	
Removal and installation.....	42A-9
Floor and roof	

Symptom chart	33-4
Symptom procedures	
Inspection procedure 1: steering wheel is heavy, vibrates or pulls to one side	33-4
Inspection procedure 2: excessive body rolling	33-5
Inspection procedure 3: poor ride	33-5
Inspection procedure 4: unequal ride height	33-5
Inspection procedure 5: noise	33-6
Fuel filler lid	
Removal and installation	42A-11
Fuel supply diagnosis	
Introduction	13C-6
Symptom procedures	13C-6
Troubleshooting strategy	13C-6
Fuel tank	
Disassembly and assembly	
Fuel supply	13C-19
Fuel supply	13C-25
Inspection	13C-27
Removal and installation AWD	13C-20
Removal and installation FWD	13C-15
Fusible link, fuse and id or storage connector	70-20

G

G and yaw rate sensor	
Removal and installation	35C-290
Garnishes	
Removal and installation	51-14
Special tool	51-14
General data and specifications	00-29
General information	
Engine mechanical 2.4L engine	11A-2
Engine mechanical 3.0L engine	11C-2
Engine lubrication	12-2
Multiport fuel injection (MFI) 2.4L engine	13A-3
Multiport fuel injection (MFI) 3.0L engine	13B-3
Fuel supply	13C-2
Engine cooling	14-2
CVT	23A-3
Continuously variable transaxle overhaul	23B-2
Automatic transaxle	23C-3
Propeller shaft	25-2
Front axle	26-2
Rear axle FWD	27A-2
Rear axle AWD	27B-2
Electronic control AWD	27C-2
Power plant mount	32-2
Front suspension	33-2
Rear suspension	34-2
Basic brake	35A-2
Anti-lock braking system (ABS)	35B-2
Parking brakes	36-2
Power steering	37-2
Keyless operation system (KOS)	42B-2
Wireless control module (WCM)	42C-2
Supplemental restraint system (SRS)	52B-3
Local interconnect network (LIN)	54B-2
Controller area network (CAN)	54C-2

Heater, air conditioning and ventilation	55A-3
Automatic air conditioning	55B-2
General specification(s)	
Multiport fuel injection (MFI) 2.4L engine	13A-6
Multiport fuel injection (MFI) 3.0L engine	13B-6
General specifications	
Engine overhaul 2.4L engine	11B-2
Engine overhaul 3.0L engine	11D-2
Continuously variable transaxle overhaul	23B-5
Automatic transaxle overhaul	23D-2
Propeller shaft	25-3
Front axle	26-4
Rear axle AWD	27B-4
Front suspension	33-3
Rear suspension	34-5
Basic brake	35A-4
Heater, air conditioning and ventilation	55A-5
Generator and drive belt	
Removal and installataion	11D-12
Generator and ignition system	
Removal and installation	11B-10
Glove box light	90-146
Grounding	70-23
Grounding cable	70-22

H

Hands free module	
Diagnosis	
Diagnosis function	54A-583
Diagnosis mode <vehicles with radio and CD player>	54A-584
Diagnosis mode vehicles with MMCS	54A-586
Introduction to diagnosis	54A-581
Standard flow of diagnostic troubleshooting	54A-583
General information	54A-577
Inspection	
Steering wheel voice-control switch continuity check	54A-634
Usb adapter inspection	54A-635
On-vehicle service	
Erase the password	54A-630
Pairing a device or deleting a device	54A-625
Pairing the bluetooth device	54A-626
Removal and installation	
Chassis electrical	54A-631
Chassis electrical	54A-631
Chassis electrical	54A-632
Chassis electrical	54A-633
Chassis electrical	54A-634
Special tools	54A-579
Symptom procedures	
Inspection procedure 1: check the hands free module power supply circuit	54A-593
Inspection procedure 2: the usb adapter data cannot be replayed. <vehicles with radio and CD player>	54A-598
Inspection procedure 2: the usb adapter data cannot be replayed. vehicles with MMCS	54A-601
Inspection procedure 3: when the speech switch is pressed, the voice information is output, but the voice recognition is not performed	54A-604

Inspection procedure 4: when the speech switch is pressed, the voice information is not output. <vehicles with radio and CD player>	54A-607	Headlight aiming	54A-205
Inspection procedure 4: when the speech switch is pressed, the voice information is not output. vehicles with MMCS.	54A-611	Headlight auto light function check	54A-210
Inspection procedure 5: diagnosis mode cannot be made an entry. <vehicles with radio and CD player>	54A-614	Headlight automatic-shutdown function check.....	54A-210
Inspection procedure 6: diagnosis mode cannot be made an entry. mobile phone item is not displayed on the infor screen of MMCS. vehicles with MMCS	54A-616	Luminous intensity measurement	54A-208
Inspection procedure 7: steering wheel voice control switch illumination does not come on.	54A-618	Replace the bulb	54A-208
Inspection procedure 8: voice guide "unable to obtain vehicle speed. please try again or contact your dealer for service" is sent from the speaker. <vehicles with radio and CD player>.....	54A-621	Service specifications	54A-120
Inspection procedure 8:voice guide "unable to obtain vehicle speed. please try again or contact your dealer for service" is sent from the speaker. <vehicles with MMCS>.....	54A-623	Special tools.....	54A-121
Trouble symptom chart.....	54A-592	Symptom procedures	
Hands-free interface system	90-278	Inspection procedure 1: none of headlights (low-beam) illuminates.	54A-154
Harness connector inspection	00E-2	Inspection procedure 10: none of turn-signal lights illuminates.	54A-195
Hazard warning light switch		Inspection procedure 10: the auto light function does not work normally.....	54A-193
Diagnosis		Inspection procedure 11: the comfort flashing function does not work normally.	54A-196
Diagnostic function	54A-305	Inspection procedure 12: the turn-signal indicator light do not illuminate.	54A-198
Standard flow of diagnostic troubleshooting	54A-305	Inspection procedure 13: the welcome light function does not work normally.....	54A-200
Diagnostic trouble code chart	54A-307	Inspection procedure 14: the coming home light function does not work normally.	54A-201
Diagnostic trouble code procedures		Inspection procedure 2: none of headlights (high-beam) illuminates.	54A-159
DTC B16A6: turn-signal fuse blown.....	54A-307	Inspection procedure 3: the headlights illuminate at low-beam (high-beam does not illuminate) regardless of the lighting switch positions.....	54A-163
Inspection		Inspection procedure 4: headlights do not illuminate when the passing switch is operate.	54A-165
Continuity check for hazard warning light switch	54A-311	Inspection procedure 5: one of the headlights does not illuminate.....	54A-167
Removal and installation	54A-311	Inspection procedure 6: high-beam indicator light does not illuminate normally.....	54A-171
Special tools	54A-304	Inspection procedure 7: the headlight automatic shutdown function does not work normally.	54A-173
Symptom procedures		Inspection procedure 8: daytime running light function does not work normally. <discharge type headlight>	54A-180
Inspection procedure 1: the hazard warning lights do not illuminate.....	54A-309	Inspection procedure 8: daytime running light function does not work normally. halogen type headlight.....	54A-176
Trouble symptom chart.....	54A-308	Inspection procedure 9: one of the position lights, side marker lights or the license plate lights does not illuminate.	54A-187
Headlight		Trouble symptom chart	54A-153
Bracket repair of headlight assembly	54A-221	Headlight <discharge type>.....	90-110
Data list reference table.....	54A-204	Headlight <halogen type>.....	90-102
Diagnosis		Headlight manual leveling system	90-126
Diagnostic function	54A-123	Headlining	
Service precautions discharge headlight.....	54A-125	Removal and installation.....	52A-15
Standard flow of diagnostic troubleshooting	54A-123	Heated door mirror	90-218
Diagnostic trouble code chart	54A-127	Heated seat	90-372
Diagnostic trouble code procedures		Heater unit, heater core, blower assembly and evaporator unit	
DTC B16A2: blown turn-signal light (LH) bulb	54A-128	Disassembly and assembly	55A-119
DTC B16A3: turn-signal light (LH) short circuit.....	54A-135	Heater unit and front deck crossmember assembly removal and installation	55A-117
DTC B16A4: blown turn-signal light (RH) bulb	54A-139	Inspection	55A-120
DTC B16A5: turn-signal light (RH) short circuit	54A-146	High-mounted stoplight	
DTC L0432: rls rs adaptation error	54A-149	Removal and installation.....	54A-302
DTC L0434: rls rain sensor errorDTC L0436: rls light sensor error	54A-151	Hood	
General information	54A-119	Hood	
Headlight leveling switch removal and installation	54A-216	Inspection.....	42A-8
Headlight removal and installation.....	54A-212	Removal and installation.....	42A-7
Inspection		Hood diagnosis	
Daytime running light relay check vehicles with discharge headlight	54A-220	Hood diagnostic troubleshooting strategy.....	42A-4
Headlight leveling switch check	54A-220	Introduction to hood diagnosis	42A-4
Headlight relay check	54A-219	On-vehicle service	
Lighting control sensor (light sensor) check	54A-220	Adjustment of clearance around hood	42A-5
Lighting control sensor removal and installation.....	54A-217		
On-vehicle service			
Customization function	54A-210		

Adjustment of hood height.....	42A-6	Troubleshooting	
Adjustment of hood level and hood striker engagement.....	42A-5	Diagnosis function.....	54A-14
Symptom chart	42A-4	Standard flow of diagnostic trouble shooting	54A-14
Symptom procedures		Ignition system	
Inspection procedure 1: difficult locking and unlocking.....	42A-4	Camshaft position sensor	
Inspection procedure 2: uneven body clearance	42A-5	Removal and installation 2.4L engine	16-50
Inspection procedure 3: uneven height.....	42A-5	Removal and installation 3.0L engine	16-51
Horn.....	90-160	Crankshaft position sensor	
Horn		Removal and installation 2.4L engine	16-52
Inspection		Removal and installation 3.0L engine	16-53
Horn relay check.....	54A-313	General information	16-41
Removal and installation	54A-312	General specifications	16-43
How to diagnose		Ignition coil	
Battery handling.....	00E-12	Removal and installation 2.4L engine	16-48
Cables and wires check.....	00E-12	Removal and installation 3.0L engine	16-49
Checking fuses.....	00E-9	Knock sensor	
Checking relays.....	00E-11	Removal and installation 2.4L engine	16-54
Checking switches.....	00E-10	Removal and installation 3.0L engine	16-55
General electrical system check.....	00E-13	On-vehicle service	
How to diagnose.....	00E-6	Camshaft position sensor check	16-47
Information for diagnosis	00E-7	Crankshaft position sensor check	16-47
Inspection	00E-7	Ignition coil check.....	16-44
Inspection instruments.....	00E-8	Knock control system check	16-43
Troubleshooting steps	00E-6	Spark plug check and cleaning	16-45
How to read circuit diagrams.....	90-4	Spark plug test	16-45
How to read configuration diagrams.....	80A-4	Service specifications	16-43
How to read splice locations.....	80B-2	Special tool	16-43
How to use this manual.....	00-3	Ignition system <2.4L engine>.....	90-34
How to use troubleshooting/inspection service points		Ignition system <3.0L engine>.....	90-38
Connector inspection service points.....	00-14	Immobilizer system.....	90-336
Connector measurement service points	00-12	Index.....	80B-3
How to cope with intermittent malfunctions	00-15	Individual component service	52B-430
How to treat past trouble	00-17	Injector	
How to use the inspection procedures	00-10	Removal and installation	
Inspection service points for a blown fuse.....	00-17	Multiport fuel injection (MFI) 2.4L engine.....	13A-880
Troubleshooting contents	00-7	Multiport fuel injection (MFI) 3.0L engine.....	13B-897
Hydraulic unit		Inspection terminal	70-7
Removal and installation		Instrument panel assembly	
Anti-lock braking system (ABS).....	35B-188	Disassembly and assembly	52A-6
Active stability control system (ASC).....	35C-287	Removal and installation.....	52A-2
		Intake and exhaust diagnosis	15-2
		Intake and exhaust diagnosis	
		Introduction	15-2
Ignition key reminder tone alarm <vehicles with KOS>.....	90-378	Symptom chart.....	15-3
Ignition key reminder tone alarm <vehicles without KOS>.....	90-376	Symptom procedures	
Ignition switch		Inspection procedure 1: exhaust leakage	15-3
Inspection		Inspection procedure 2: abnormal noise.....	15-3
Ignition switch continuity check.....	54A-26	Troubleshooting strategy	15-2
Key reminder switch continuity check.....	54A-27	Intake manifold	
On-vehicle service		Inspection	15-14
Check of ignition key reminder warning function (steering lock reminder tone alarm by KOS).....	54A-23	Removal and installation.....	11D-26
Removal and installation	54A-24	Removal and installation 2.4L engine.....	15-9
Special tools	54A-13	Removal and installation 3.0L engine.....	15-11
Symptom procedures		Intake manifold and fuel system	
Inspection procedure 1: ignition key cylinder illumination light does not illuminateextinguish normally. vehicles with WCM.....	54A-17	Removal and installation.....	11B-17
Inspection procedure 2: defective power supply system of the ignition switch.....	54A-21	Intake manifold plenum 3.0L engine	
Trouble symptom chart.....	54A-16	Removal and installation.....	15-6
		Intake manifold plenum and throttle body assembly	
		Removal and installation.....	11D-15

Interior mirror	52A-16	Front axle	26-5
INVECS-II 6A/T	90-92	Rear axle AWD	27B-5
INVECS-III CVT	90-82	Basic brake	35A-5
		Heater, air conditioning and ventilation	55A-5
		Lubrication and maintenance	00-61
K			
Keyless operating system (KOS)	90-186	M	
Keyless operation key		Main sealant and adhesive table	00-88
Disassembly and assembly	42B-204	Maintenance service	
KOS-ECU		1. fuel system (tank, pipe line and connection, and fuel tank filler tube cap) (check for leaks)	00-69
Removal and installation	42B-201	10. engine oil (change)	00-75
L			
License plate light		11. engine oil filter (replace)	00-77
Removal and installation	54A-303	12. transmission fluid (CVT fluid) (check fluid level and condition/change)	00-78
Liftgate		13. transfer oil (check oil level and condition/change) ...	00-82
Configuration diagrams	80A-29	14. engine coolant	00-83
Splice locations	80B-9	15. coolant hoses (radiator hose, heater hose) (inspect)	00-85
Liftgate		16. disk brake pads, rotors (inspect for wear)	00-85
General information	42A-165	17. brake hoses (check for deterioration or leaks)	00-86
Liftgate	42A-171	18. ball joint and steering linkage seals (inspect for grease leaks and damage)	00-86
Liftgate		19. drive shaft boots (inspect for grease leaks and damage)	00-87
Removal and installation <liftgate lower>	42A-173	2. fuel hoses (check condition)	00-69
Removal and installation <liftgate upper>	42A-171	20. suspension system (inspect for looseness and damage)	00-87
Liftgate diagnosis		21. rear axle oil (check oil level)	00-87
Introduction to liftgate diagnosis	42A-165	22. tires (rotate)	00-87
Liftgate diagnostic troubleshooting strategy	42A-165	23. air filter (replace)	00-88
Liftgate handle and latch		3. air cleaner element (replace)	00-69
Inspection	42A-175	4. evaporative emission control system (except evaporative emission canister) (check for leaks and clogging)	00-69
Removal and installation <liftgate lower>	42A-177	5. spark plugs (replace)	00-70
Removal and installation <liftgate upper>	42A-174	6. intake and exhaust valve clearance (inspect and adjust)	00-70
On-vehicle service		7. timing belt (replace)	00-74
Adjustment of liftgate height	42A-170	8. drive belt (for generator, power steering oil pump) (check condition)	00-74
Liftgate alignment	42A-168	9. exhaust system (connections portion of muffler, muffler pipes and converter heat shields) (check and service as required)	00-75
Sealant	42A-165	Manual A/C diagnosis	
Special tool	42A-167	Actuator test reference	55A-102
Symptom chart	42A-165	Check at AC-ECU terminal	55A-102
Symptom procedures		Data list reference table	55A-102
Inspection procedure 1: difficult locking and unlocking	42A-166	Diagnostic function	55A-7
Inspection procedure 2: uneven body clearance	42A-166	Diagnostic trouble code chart	55A-11
Inspection procedure 3: uneven height	42A-166	Diagnostic trouble code procedures	
Liftgate spoiler		DTC B1000: control panel communication error	55A-12
Removal and installation	51-24	DTC B1003: mode dial sw error	55A-16
Loose panel		DTC B1018: temperature control dial sw error	55A-20
Removal and installation	42A-222	DTC B1021: fan dial sw error	55A-23
Lower arm		DTC B1031, B1032: air thermo sensor system	55A-26
Lower arm ball joint dust cover replacement	33-18	DTC B1034, B1035: ambient air temperature sensor system	55A-29
Lower arm bushing replacement	33-18	DTC B1079: refrigerant leaks	55A-32
Lower arm check	33-17	DTC B2214: control panel failure	55A-36
Removal and installation	33-16	DTC B223B: control panel improperly assembled	55A-39
Lubricant		DTC U0019: bus off (can1)	55A-44
Propeller shaft	25-3	DTC U0141: ETACS-ECU time-out	55A-45
Front suspension	33-3	DTC U0151: SRS-ECU time-out	55A-47
Lubricant(s)	23B-10	DTC U0154: occupant classification-ECU time-out ...	55A-49
Lubricants		DTC U0155: combination meter time-out	55A-52
Engine lubrication	12-2	DTC U0168: WCM time-out	55A-54
CVT	23A-12		
Automatic transaxle overhaul	23D-6		

DTC U0184: audio time-out.....	55A-57	Audio and video adapter check.....	54A-560
DTC U0195: satellite radio tuner time-out	55A-59	Main unit terminal voltage.....	54A-555
DTC U1415: coding not completed.....	55A-41	Removal and installation.....	54A-559
Heater, air conditioning and ventilation diagnostic troubleshooting strategy.....	55A-6	Special tools.....	54A-439
Introduction to heater, air conditioning and ventilation diagnosis.....	55A-6	Symptom procedures	
Symptom chart	55A-63	Inspection procedure 1: No navigation screen is displayed.....	54A-487
Symptom procedures		Inspection procedure 10: sound of a DVD can be played, but no image is played.....	54A-542
Inspection procedure 1: when the AC is operation, temperature inside the passenger compartment does not decrease (cool air is not emitted).....	55A-63	Inspection procedure 11: the picture and sound of external input are not played.....	54A-543
Inspection procedure 10: blower motor power supply system.....	55A-98	Inspection procedure 12: check the CAN box unit power supply circuit.....	54A-546
Inspection procedure 2: malfunction of the A/C-ECU power supply system.....	55A-65	Inspection procedure 2: No sound is heard. vehicles with audio amplifier.....	54A-498
Inspection procedure 3: the compressor does not work.....	55A-69	Inspection procedure 2: No sound is heard. vehicles without audio amplifier.....	54A-494
Inspection procedure 4: blower fan and motor do not turn.....	55A-77	Inspection procedure 3: No sound is heard from one of the speakers. vehicles with audio amplifier.....	54A-518
Inspection procedure 5: blower air amount cannot be changed.....	55A-82	Inspection procedure 3: No sound is heard from one of the speakers. vehicles without audio amplifier.....	54A-506
Inspection procedure 6: outside/inside air changeover is not possible.....	55A-85	Inspection procedure 4: the navigation system can be operated while the vehicle is driven.....	54A-531
Inspection procedure 7: AC outlet air temperature does not increase.....	55A-87	Inspection procedure 5: the screen is not normal in the navigation mode. (the displayed position of the vehicle mark deviates.).....	54A-534
Inspection procedure 8: air outlet vent cannot be changed.....	55A-89	Inspection procedure 6: the AMFM radio broadcasting cannot be received.....	54A-537
Inspection procedure 9: rear window defogger does not operate.....	55A-91	Inspection procedure 7: GPS signal can not be received.....	54A-538
Mark		Inspection procedure 8: CDDVD cannot be played. ..	54A-539
Removal and installation	51-106	Inspection procedure 9: image of a DVD is played, but no sound is played.....	54A-541
Master cylinder assembly and brake booster assembly		Trouble symptom chart.....	54A-486
Removal and installation	35A-30	Moldings	
Meter and gauge	90-162	Removal and installation.....	51-10
MFI system <2.4L engine>.....	90-48	Motors and transistor	
MFI system <3.0L engine>.....	90-60	Inspection	55A-122
Mitsubishi multi-communication system (MMCS) <vehicles with audio amplifier>.....	90-254	Removal and installation.....	55A-121
Mitsubishi multi-communication system (MMCS) <vehicles without audio amplifier>.....	90-242	Multiport fuel injection (MFI) diagnosis	
MMCS		Actuator test reference table	
Diagnosis		Multiport fuel injection (MFI) 2.4L engine.....	13A-838
Diagnostic function	54A-458	Multiport fuel injection (MFI) 3.0L engine.....	13B-858
Error message	54A-441	Check at the engine control module (ECM)	
Precautions on servicing MMCS.....	54A-440	Multiport fuel injection (MFI) 2.4L engine.....	13A-840
Service mode.....	54A-443	Multiport fuel injection (MFI) 3.0L engine.....	13B-860
Standard flow of diagnostic troubleshooting	54A-440	Data list reference table	
Diagnostic trouble code chart.....	54A-460	Multiport fuel injection (MFI) 2.4L engine.....	13A-818
Diagnostic trouble code procedures		Multiport fuel injection (MFI) 3.0L engine.....	13B-836
DTC B2226: and audio visual navigation (hdd) unit error.....	54A-461	Diagnostic function	
DTC B2240: communication error with CAN box	54A-463	Multiport fuel injection (MFI) 2.4L engine.....	13A-11
DTC B2477: vin not programmed.....	54A-465	Multiport fuel injection (MFI) 3.0L engine.....	13B-11
DTC U0019: bus off (CAN-B)	54A-467	Diagnostic trouble code chart	
DTC U0141: ETACS CAN timeout.....	54A-468	Multiport fuel injection (MFI) 2.4L engine.....	13A-49
DTC U0151: SRS-abg CAN timeout.....	54A-470	Multiport fuel injection (MFI) 3.0L engine.....	13B-50
DTC U0154: ocm (occupant classification-ECU) CAN timeout.....	54A-472	Diagnostic trouble code procedures	
DTC U0155: meter CAN timeout	54A-474	DTC P0010: intake engine oil control valve circuit.....	13A-58
DTC U0164: AC CAN timeout	54A-476	DTC P0011: intake variable valve timing system target error.....	13A-64
DTC U0168: WCM/KOS CAN timeout.....	54A-478	DTC P0013: exhaust engine oil control valve circuit..	13A-68
DTC U0195: satellite radio CAN timeout.....	54A-480	DTC P0014: exhaust variable valve timing system target error	13A-74
DTC U1415: coding not completed data fail	54A-482	DTC P0016: crankshaft/camshaft (intake) position sensor phase problem.....	13A-77
DTC U1417: implausible coding data	54A-484	DTC P0017: crankshaft/camshaft (exhaust) position sensor phase problem.....	13A-82
ETACS customization function	54A-551		
General information	54A-437		
Inspection			

DTC P001A: camshaft profile control (engine oil control valve) circuit	13B-58	Multiport fuel injection (MFI) 3.0L engine	13B-171
DTC P0031: heated oxygen sensor heater circuit low (bank 1, sensor 1)	13B-64	DTC P0113: intake air temperature circuit high input	
DTC P0031: linear air-fuel ratio sensor heater control circuit low	13A-86	Multiport fuel injection (MFI) 2.4L engine	13A-171
DTC P0032: heated oxygen sensor heater circuit high (bank 1, sensor 1)	13B-70	Multiport fuel injection (MFI) 3.0L engine	13B-175
DTC P0032: linear air-fuel ratio sensor heater control circuit high	13A-93	DTC P0116: engine coolant temperature circuit range/performance problem	
DTC P0037: heated oxygen sensor (rear) heater control circuit low	13A-98	Multiport fuel injection (MFI) 2.4L engine	13A-177
DTC P0037: heated oxygen sensor heater circuit low (bank 1, sensor 2)	13B-74	Multiport fuel injection (MFI) 3.0L engine	13B-180
DTC P0038: heated oxygen sensor (rear) heater control circuit high	13A-105	DTC P0117: engine coolant temperature circuit low input	
DTC P0038: heated oxygen sensor heater circuit high (bank 1, sensor 2)	13B-80	Multiport fuel injection (MFI) 2.4L engine	13A-183
DTC P003C: mitsubishi innovative valve timing electronic control system (MIVEC) performance problem	13B-84	Multiport fuel injection (MFI) 3.0L engine	13B-185
DTC P0051: heated oxygen sensor heater circuit low (bank 2, sensor 1)	13B-92	DTC P0118: engine coolant temperature circuit high input	
DTC P0052: heated oxygen sensor heater circuit high (bank 2, sensor 1)	13B-98	Multiport fuel injection (MFI) 2.4L engine	13A-187
DTC P0053: heated oxygen sensor heater resistance (bank 1, sensor 1)	13B-102	Multiport fuel injection (MFI) 3.0L engine	13B-189
DTC P0053: linear air-fuel ratio sensor heater resistance	13A-109	DTC P0121: throttle position sensor (main) plausibility	
DTC P0057: heated oxygen sensor heater circuit low (bank 2, sensor 2)	13B-108	Multiport fuel injection (MFI) 2.4L engine	13A-193
DTC P0058: heated oxygen sensor heater circuit high (bank 2, sensor 2)	13B-114	Multiport fuel injection (MFI) 3.0L engine	13B-195
DTC P0059: heated oxygen sensor heater resistance (bank 2, sensor 1)	13B-118	DTC P0122: throttle position sensor (main) circuit low input	
DTC P0068: mass airflow sensor plausibility		Multiport fuel injection (MFI) 2.4L engine	13A-197
Multiport fuel injection (MFI) 2.4L engine	13A-113	Multiport fuel injection (MFI) 3.0L engine	13B-199
Multiport fuel injection (MFI) 3.0L engine	13B-123	DTC P0123: throttle position sensor (main) circuit high input	
DTC P0069: abnormal correlation between manifold absolute pressure sensor and barometric pressure sensor		Multiport fuel injection (MFI) 2.4L engine	13A-201
Multiport fuel injection (MFI) 2.4L engine	13A-116	Multiport fuel injection (MFI) 3.0L engine	13B-207
Multiport fuel injection (MFI) 3.0L engine	13B-127	DTC P0125: insufficient coolant temperature for closed loop fuel control	
DTC P0101: mass airflow circuit range/performance problem		Multiport fuel injection (MFI) 2.4L engine	13A-208
Multiport fuel injection (MFI) 2.4L engine	13A-121	Multiport fuel injection (MFI) 3.0L engine	13B-212
Multiport fuel injection (MFI) 3.0L engine	13B-132	DTC P0128: coolant thermostat (coolant temperature below thermostat regulating temperature)	
DTC P0102: mass airflow circuit low input		Multiport fuel injection (MFI) 2.4L engine	13A-216
Multiport fuel injection (MFI) 2.4L engine	13A-127	Multiport fuel injection (MFI) 3.0L engine	13B-219
Multiport fuel injection (MFI) 3.0L engine	13B-139	DTC P0130: linear air-fuel ratio sensor circuit	13A-218
DTC P0103: mass airflow circuit high input		DTC P0131: heated oxygen sensor circuit low voltage (bank 1, sensor 1)	13B-222
Multiport fuel injection (MFI) 2.4L engine	13A-134	DTC P0131: linear air-fuel ratio sensor circuit low voltage	13A-223
Multiport fuel injection (MFI) 3.0L engine	13B-145	DTC P0132: heated oxygen sensor circuit high voltage (bank 1, sensor 1)	13B-228
DTC P0106: manifold absolute pressure circuit range/performance problem		DTC P0132: linear air-fuel ratio sensor circuit high voltage	13A-228
Multiport fuel injection (MFI) 2.4L engine	13A-139	DTC P0133: heated oxygen sensor circuit slow response (bank 1, sensor 1)	13B-232
Multiport fuel injection (MFI) 3.0L engine	13B-150	DTC P0133: linear air-fuel ratio sensor circuit slow response	13A-233
DTC P0107: manifold absolute pressure circuit low input		DTC P0134: heated oxygen sensor circuit No activity detected (bank 1, sensor 1)	13B-236
Multiport fuel injection (MFI) 2.4L engine	13A-148	DTC P0134: linear air-fuel ratio sensor circuit No activity detected	13A-236
Multiport fuel injection (MFI) 3.0L engine	13B-156	DTC P0137: heated oxygen sensor (rear) circuit low voltage	13A-241
DTC P0108: manifold absolute pressure circuit high input		DTC P0137: heated oxygen sensor circuit low voltage (bank 1, sensor 2)	13B-244
Multiport fuel injection (MFI) 2.4L engine	13A-156	DTC P0138: heated oxygen sensor (rear) circuit high voltage	13A-249
Multiport fuel injection (MFI) 3.0L engine	13B-162	DTC P0138: heated oxygen sensor circuit high voltage (bank 1, sensor 2)	13B-250
DTC P0111: intake air temperature circuit range/performance problem		DTC P0139: heated oxygen sensor (rear) circuit slow response	13A-253
Multiport fuel injection (MFI) 2.4L engine	13A-161	DTC P0139: heated oxygen sensor circuit slow response (bank 1, sensor 2)	13B-254
Multiport fuel injection (MFI) 3.0L engine	13B-167	DTC P0140: heated oxygen sensor (rear) circuit No activity detected	13A-258
DTC P0112: intake air temperature circuit low input		DTC P0140: heated oxygen sensor circuit No activity detected (bank 1, sensor 2)	13B-259
Multiport fuel injection (MFI) 2.4L engine	13A-167	DTC P0151: heated oxygen sensor circuit low voltage (bank 2, sensor 1)	13B-263

DTC P0152: heated oxygen sensor circuit high voltage (bank 2, sensor 1).....	13B-269	Multiport fuel injection (MFI) 2.4L engine.....	13A-360
DTC P0153: heated oxygen sensor circuit slow response (bank 2, sensor 1).....	13B-273	Multiport fuel injection (MFI) 3.0L engine.....	13B-420
DTC P0154: heated oxygen sensor circuit No activity detected (bank 2, sensor 1).....	13B-277	DTC P0305: cylinder 5 misfire detected	13B-423
DTC P0157: heated oxygen sensor circuit low voltage (bank 2, sensor 2).....	13B-284	DTC P0306: cylinder 6 misfire detected	13B-426
DTC P0158: heated oxygen sensor circuit high voltage (bank 2, sensor 2).....	13B-290	DTC P0327: knock sensor circuit low	13A-364
DTC P0159: heated oxygen sensor circuit slow response (bank 2, sensor 2).....	13B-294	DTC P0327: knock sensor circuit low (bank 1).....	13B-430
DTC P0160: heated oxygen sensor circuit No activity detected (bank 2, sensor 2).....	13B-299	DTC P0328: knock sensor circuit high.....	13A-368
DTC P0171: system too lean.....	13A-262	DTC P0328: knock sensor circuit high (bank 1).....	13B-433
DTC P0171: system too lean (bank 1).....	13B-303	DTC P0332: knock sensor circuit low (bank 2).....	13B-437
DTC P0172: system too rich.....	13A-268	DTC P0333: knock sensor circuit high (bank 2).....	13B-441
DTC P0172: system too rich (bank 1).....	13B-310	DTC P0335: crankshaft position sensor circuit	
DTC P0174: system too lean (bank 2).....	13B-316	Multiport fuel injection (MFI) 2.4L engine.....	13A-372
DTC P0175: system too rich (bank 2).....	13B-323	Multiport fuel injection (MFI) 3.0L engine.....	13B-445
DTC P0181: fuel tank temperature sensor circuit rangeperformance		DTC P0340: camshaft position sensor circuit.....	13B-452
Multiport fuel injection (MFI) 2.4L engine.....	13A-274	DTC P0340: intake camshaft position sensor circuit .	13A-381
Multiport fuel injection (MFI) 3.0L engine.....	13B-329	DTC P0365: exhaust camshaft position sensor circuit	13A-390
DTC P0182: fuel tank temperature sensor circuit low input		DTC P0401: exhaust gas recirculation flow insufficient detected	
Multiport fuel injection (MFI) 2.4L engine.....	13A-280	Multiport fuel injection (MFI) 2.4L engine.....	13A-399
Multiport fuel injection (MFI) 3.0L engine.....	13B-334	Multiport fuel injection (MFI) 3.0L engine.....	13B-460
DTC P0183: fuel tank temperature sensor circuit high input		DTC P0420: warm up catalyst efficiency below threshold	13A-401
Multiport fuel injection (MFI) 2.4L engine.....	13A-285	DTC P0421: warm up catalyst efficiency below threshold (bank 1).....	13B-463
Multiport fuel injection (MFI) 3.0L engine.....	13B-339	DTC P0431: warm up catalyst efficiency below threshold (bank 2).....	13B-465
DTC P0201: injector circuit - cylinder 1	13B-345	DTC P0441: evaporative emission control system incorrect purge flow	
DTC P0201: injector circuit-cylinder 1	13A-292	Multiport fuel injection (MFI) 2.4L engine.....	13A-403
DTC P0202: injector circuit - cylinder 2	13B-353	Multiport fuel injection (MFI) 3.0L engine.....	13B-467
DTC P0202: injector circuit-cylinder 2	13A-302	DTC P0442: evaporative emission control system leak detected (small leak)	
DTC P0203: injector circuit - cylinder 3	13B-360	Multiport fuel injection (MFI) 2.4L engine.....	13A-407
DTC P0203: injector circuit-cylinder 3	13A-312	Multiport fuel injection (MFI) 3.0L engine.....	13B-471
DTC P0204: injector circuit - cylinder 4	13B-368	DTC P0443: evaporative emission control system purge control valve circuit	
DTC P0204: injector circuit-cylinder 4	13A-322	Multiport fuel injection (MFI) 2.4L engine.....	13A-419
DTC P0205: injector circuit - cylinder 5	13B-375	Multiport fuel injection (MFI) 3.0L engine.....	13B-483
DTC P0206: injector circuit - cylinder 6	13B-383	DTC P0446: evaporative emission control system vent control circuit	
DTC P0221: throttle position sensor (sub) plausibility		Multiport fuel injection (MFI) 2.4L engine.....	13A-426
Multiport fuel injection (MFI) 2.4L engine.....	13A-331	Multiport fuel injection (MFI) 3.0L engine.....	13B-490
Multiport fuel injection (MFI) 3.0L engine.....	13B-390	DTC P0450: evaporative emission control system pressure sensor malfunction	
DTC P0222: throttle position sensor (sub) circuit low input		Multiport fuel injection (MFI) 2.4L engine.....	13A-433
Multiport fuel injection (MFI) 2.4L engine.....	13A-335	Multiport fuel injection (MFI) 3.0L engine.....	13B-497
Multiport fuel injection (MFI) 3.0L engine.....	13B-393	DTC P0451: evaporative emission control system pressure sensor range/performance	
DTC P0223: throttle position sensor (sub) circuit high input		Multiport fuel injection (MFI) 2.4L engine.....	13A-442
Multiport fuel injection (MFI) 2.4L engine.....	13A-341	Multiport fuel injection (MFI) 3.0L engine.....	13B-506
Multiport fuel injection (MFI) 3.0L engine.....	13B-400	DTC P0452: evaporative emission control system pressure sensor low input	
DTC P0300: randommultiple cylinder misfire detected		Multiport fuel injection (MFI) 2.4L engine.....	13A-451
Multiport fuel injection (MFI) 2.4L engine.....	13A-346	Multiport fuel injection (MFI) 3.0L engine.....	13B-515
Multiport fuel injection (MFI) 3.0L engine.....	13B-406	DTC P0453: evaporative emission control system pressure sensor high input	
DTC P0301: cylinder 1 misfire detected		Multiport fuel injection (MFI) 2.4L engine.....	13A-462
Multiport fuel injection (MFI) 2.4L engine.....	13A-351	Multiport fuel injection (MFI) 3.0L engine.....	13B-525
Multiport fuel injection (MFI) 3.0L engine.....	13B-411	DTC P0455: evaporative emission control system leak detected (gross leak)	
DTC P0302: cylinder 2 misfire detected		Multiport fuel injection (MFI) 2.4L engine.....	13A-470
Multiport fuel injection (MFI) 2.4L engine.....	13A-354	Multiport fuel injection (MFI) 3.0L engine.....	13B-532
Multiport fuel injection (MFI) 3.0L engine.....	13B-414	DTC P0456: evaporative emission control system leak detected (very small leak)	
DTC P0303: cylinder 3 misfire detected		Multiport fuel injection (MFI) 2.4L engine.....	13A-481
Multiport fuel injection (MFI) 2.4L engine.....	13A-357		
Multiport fuel injection (MFI) 3.0L engine.....	13B-417		
DTC P0304: cylinder 4 misfire detected			

Multiport fuel injection (MFI) 3.0L engine.....	13B-544	Multiport fuel injection (MFI) 2.4L engine.....	13A-553
DTC P0461: fuel level sensor <FWD> or fuel level sensor (main) <AWD> circuit range/performance	13B-556	Multiport fuel injection (MFI) 3.0L engine.....	13B-611
DTC P0461: fuel level sensor <FWD> or fuel level sensor (main) <AWD> circuit range/performance	13A-492	DTC P061F: internal control module throttle actuator controller performance problem	
DTC P0462: fuel level sensor <FWD> or fuel level sensor (main) <AWD> circuit low input		Multiport fuel injection (MFI) 2.4L engine.....	13A-556
Multiport fuel injection (MFI) 2.4L engine.....	13A-495	Multiport fuel injection (MFI) 3.0L engine.....	13B-614
Multiport fuel injection (MFI) 3.0L engine.....	13B-559	DTC P0620: generator control circuit.....	13A-558
DTC P0463: fuel level sensor <FWD> or fuel level sensor (main) <AWD> circuit high input	13B-561	DTC P0622: generator FR terminal circuit malfunction	
DTC P0463: fuel level sensor circuit high input.....	13A-497	Multiport fuel injection (MFI) 2.4L engine.....	13A-562
DTC P0489: EGR valve (stepper motor) circuit malfunction (ground short)		Multiport fuel injection (MFI) 3.0L engine.....	13B-616
Multiport fuel injection (MFI) 2.4L engine.....	13A-500	DTC P062F: internal control module EEPROM error	
Multiport fuel injection (MFI) 3.0L engine.....	13B-564	Multiport fuel injection (MFI) 2.4L engine.....	13A-567
DTC P0490: EGR valve (stepper motor) circuit malfunction (battery short).....	13B-570	Multiport fuel injection (MFI) 3.0L engine.....	13B-621
DTC P0490: EGR valve (stepper motor) circuit malfunction (battery short).....	13A-508	DTC P0630: vehicle identification number (vin) malfunction	
DTC P0506: idle control sytem rpm lower than expected		Multiport fuel injection (MFI) 2.4L engine.....	13A-568
Multiport fuel injection (MFI) 2.4L engine.....	13A-512	Multiport fuel injection (MFI) 3.0L engine.....	13B-623
Multiport fuel injection (MFI) 3.0L engine.....	13B-574	DTC P0638: throttle actuator control motor circuit range/performance problem	
DTC P0507: idle control sytem rpm higher than expected		Multiport fuel injection (MFI) 2.4L engine.....	13A-571
Multiport fuel injection (MFI) 2.4L engine.....	13A-515	Multiport fuel injection (MFI) 3.0L engine.....	13B-626
Multiport fuel injection (MFI) 3.0L engine.....	13B-577	DTC P0642: throttle position sensor power supply	
DTC P050B: ignition timing retard insufficient		Multiport fuel injection (MFI) 2.4L engine.....	13A-574
Multiport fuel injection (MFI) 2.4L engine.....	13A-518	Multiport fuel injection (MFI) 3.0L engine.....	13B-628
Multiport fuel injection (MFI) 3.0L engine.....	13B-580	DTC P0657: throttle actuator control motor relay circuit malfunction	
DTC P0513: immobilizer malfunction		Multiport fuel injection (MFI) 2.4L engine.....	13A-576
Multiport fuel injection (MFI) 2.4L engine.....	13A-521	Multiport fuel injection (MFI) 3.0L engine.....	13B-630
Multiport fuel injection (MFI) 3.0L engine.....	13B-583	DTC P1231: active stability control plausibility	13A-583
DTC P0515: battery temperature sensor circuit	13A-523	DTC P1231: active stability control plausibility <vehicles with ASC>	13B-635
DTC P0551: power steering pressure switch circuit range/performance		DTC P1238: mass airflow sensor plausibility (torque monitor)	
Multiport fuel injection (MFI) 2.4L engine.....	13A-528	Multiport fuel injection (MFI) 2.4L engine.....	13A-584
Multiport fuel injection (MFI) 3.0L engine.....	13B-585	Multiport fuel injection (MFI) 3.0L engine.....	13B-636
DTC P0554: power steering pressure switch circuit intermittent		DTC P1240: ignition angle	
Multiport fuel injection (MFI) 2.4L engine.....	13A-535	Multiport fuel injection (MFI) 2.4L engine.....	13A-588
Multiport fuel injection (MFI) 3.0L engine.....	13B-591	Multiport fuel injection (MFI) 3.0L engine.....	13B-640
DTC P0602: control module programming error		DTC P1242: fail safe control monitor	
Multiport fuel injection (MFI) 2.4L engine.....	13A-539	Multiport fuel injection (MFI) 2.4L engine.....	13A-589
Multiport fuel injection (MFI) 3.0L engine.....	13B-595	Multiport fuel injection (MFI) 3.0L engine.....	13B-641
DTC P0604: internal control module random access memory (ram) error		DTC P1243: inquiry/response error	
Multiport fuel injection (MFI) 2.4L engine.....	13A-540	Multiport fuel injection (MFI) 2.4L engine.....	13A-590
Multiport fuel injection (MFI) 3.0L engine.....	13B-597	Multiport fuel injection (MFI) 3.0L engine.....	13B-642
DTC P0606: engine control module main processor malfunction		DTC P1247: A/T plausibility	13B-643
Multiport fuel injection (MFI) 2.4L engine.....	13A-541	DTC P1247: CVT plausibility	13A-591
Multiport fuel injection (MFI) 3.0L engine.....	13B-598	DTC P1248: AWD plausibility <AWD>	13B-645
DTC P060B: internal control module a/d processing performance problem		DTC P1506: idle control system rpm lower than expected at low temperature.....	13A-593
Multiport fuel injection (MFI) 2.4L engine.....	13A-546	DTC P1506: idle control sytem rpm lower than expected at low temperature.....	13B-646
Multiport fuel injection (MFI) 3.0L engine.....	13B-602	DTC P1507: idle control system rpm higher than expected at low temperature.....	13A-596
DTC P060D: internal control module accelerator pedal position performance problem		DTC P1507: idle control sytem rpm higher than expected at low temperature.....	13B-649
Multiport fuel injection (MFI) 2.4L engine.....	13A-547	DTC P1590: tcm to ECM communication error in torque reduction request	
Multiport fuel injection (MFI) 3.0L engine.....	13B-603	Multiport fuel injection (MFI) 2.4L engine.....	13A-599
DTC P061A: internal control module torque performance problem		Multiport fuel injection (MFI) 3.0L engine.....	13B-652
Multiport fuel injection (MFI) 2.4L engine.....	13A-549	DTC P1603: battery backup line malfunction	
Multiport fuel injection (MFI) 3.0L engine.....	13B-606	Multiport fuel injection (MFI) 2.4L engine.....	13A-602
DTC P061C: internal control module engine rpm performance problem		Multiport fuel injection (MFI) 3.0L engine.....	13B-655
		DTC P1608: battery current sensor circuit.....	13A-606
		DTC P1609: battery current sensor range/performance	13A-611

DTC P2066: fuel level sensor (sub) circuit range/performance <AWD>		DTC U0101: tcm time-out	13A-700
Multiport fuel injection (MFI) 2.4L engine.....	13A-614	DTC U0101: transmission control module time-out ...	13B-728
Multiport fuel injection (MFI) 3.0L engine.....	13B-659	DTC U0114: AWD-ECU time-out <AWD>	13B-731
DTC P2096: post catalyst fuel trim system too lean ..	13A-617	DTC U0121: ABS-ECU/ASC-ECU time-out	13B-734
DTC P2097: post catalyst fuel trim system too rich ...	13A-620	DTC U0121: ASC-ECU time-out	13A-704
DTC P2100: throttle actuator control motor circuit (open)		DTC U0141: ETACS-ECU time-out	
Multiport fuel injection (MFI) 2.4L engine.....	13A-624	Multiport fuel injection (MFI) 2.4L engine	13A-707
Multiport fuel injection (MFI) 3.0L engine.....	13B-663	Multiport fuel injection (MFI) 3.0L engine	13B-737
DTC P2101: throttle actuator control motor magneto malfunction		DTC U0167: immobilizer communication error	13A-711
Multiport fuel injection (MFI) 2.4L engine.....	13A-629	DTC U0167: KOS-ECU/WCM communication error..	13B-741
Multiport fuel injection (MFI) 3.0L engine.....	13B-667	DTC U0415: invalid data received from ASC-ECU	13A-713
DTC P2122: accelerator pedal position sensor (main) circuit low input		DTC U0415: invalid data received from ASC-ECU <vehicles with ASC>	13B-744
Multiport fuel injection (MFI) 2.4L engine.....	13A-633	DTC U1180: combination meter time-out	
Multiport fuel injection (MFI) 3.0L engine.....	13B-670	Multiport fuel injection (MFI) 2.4L engine	13A-715
DTC P2123: accelerator pedal position sensor (main) circuit high input		Multiport fuel injection (MFI) 3.0L engine	13B-746
Multiport fuel injection (MFI) 2.4L engine.....	13A-639	Fail-safe function reference table	
Multiport fuel injection (MFI) 3.0L engine.....	13B-675	Multiport fuel injection (MFI) 2.4L engine	13A-47
DTC P2127: accelerator pedal position sensor (sub) circuit low input		Multiport fuel injection (MFI) 3.0L engine	13B-48
Multiport fuel injection (MFI) 2.4L engine.....	13A-644	General scan tool (gst) mode 01 reference table	
Multiport fuel injection (MFI) 3.0L engine.....	13B-679	Multiport fuel injection (MFI) 2.4L engine	13A-833
DTC P2128: accelerator pedal position sensor (sub) circuit high input		Multiport fuel injection (MFI) 3.0L engine	13B-853
Multiport fuel injection (MFI) 2.4L engine.....	13A-650	Inspection procedure using an oscilloscope	
Multiport fuel injection (MFI) 3.0L engine.....	13B-683	Multiport fuel injection (MFI) 2.4L engine	13A-848
DTC P2135: throttle position sensor (main and sub) range/performance problem		Multiport fuel injection (MFI) 3.0L engine	13B-868
Multiport fuel injection (MFI) 2.4L engine.....	13A-654	Symptom chart	
Multiport fuel injection (MFI) 3.0L engine.....	13B-686	Multiport fuel injection (MFI) 2.4L engine	13A-54
DTC P2138: accelerator pedal position sensor (main and sub) circuit range/performance problem.....	13A-660	Multiport fuel injection (MFI) 3.0L engine	13B-55
DTC P2138: accelerator pedal position sensor (main and sub) range/performance problem	13B-691	Symptom procedures	
DTC P2195: heated oxygen sensor inactive (bank 1, sensor 1).....	13B-695	Inspection procedure 1: communication with ECM only is not possible	13A-719
DTC P2197: heated oxygen sensor inactive (bank 2, sensor 1).....	13B-698	Inspection procedure 1: scan tool communication with ECM is not possible	13B-750
DTC P2228: barometric pressure circuit low input		Inspection procedure 10: when the engine is cold, it stalls at idle (die out)	13A-748
Multiport fuel injection (MFI) 2.4L engine.....	13A-667	Inspection procedure 10: when the engine is cold, it stalls at idle (die out)	13B-779
Multiport fuel injection (MFI) 3.0L engine.....	13B-700	Inspection procedure 11: when the engine is hot, it stalls at idle (die out)	13B-781
DTC P2229: barometric pressure circuit high input		Inspection procedure 11: when the engine is hot, it stalls at idle (die out)	13A-751
Multiport fuel injection (MFI) 2.4L engine.....	13A-669	Inspection procedure 12: the engine stalls accelerating (pass out)	13A-754
Multiport fuel injection (MFI) 3.0L engine.....	13B-702	Inspection procedure 12: the engine stalls when accelerating (pass out)	13B-784
DTC P2237: linear air-fuel ratio sensor positive current control circuit/open	13A-672	Inspection procedure 13: the engine stalls decelerating	13A-756
DTC P2243: linear air-fuel ratio sensor reference voltage circuit/open	13A-677	Inspection procedure 13: the engine stalls when decelerating	13B-786
DTC P2251: linear air-fuel ratio sensor negative current control circuit/open	13A-682	Inspection procedure 14: hesitation, sag, stumble, poor acceleration or surge	13A-758
DTC P2252: heated oxygen sensor offset circuit low voltage		Inspection procedure 14: hesitation, sag, stumble, poor acceleration or surge	13B-788
Multiport fuel injection (MFI) 2.4L engine.....	13A-686	Inspection procedure 15: acceleration shock	13A-761
Multiport fuel injection (MFI) 3.0L engine.....	13B-704	Inspection procedure 15: acceleration shock	13B-791
DTC P2253: heated oxygen sensor offset circuit high voltage		Inspection procedure 16: knocking	
Multiport fuel injection (MFI) 2.4L engine.....	13A-691	Multiport fuel injection (MFI) 2.4L engine	13A-763
Multiport fuel injection (MFI) 3.0L engine.....	13B-713	Multiport fuel injection (MFI) 3.0L engine	13B-792
DTC P2530: ignition switch run position circuit		Inspection procedure 17: too high co and hc concentration when idling	
Multiport fuel injection (MFI) 2.4L engine.....	13A-696	Multiport fuel injection (MFI) 2.4L engine	13A-764
Multiport fuel injection (MFI) 3.0L engine.....	13B-723	Multiport fuel injection (MFI) 3.0L engine	13B-794
DTC U0001: bus off		Inspection procedure 18: transient, mass emission tailpipe test failure	13A-767
Multiport fuel injection (MFI) 2.4L engine.....	13A-699		
Multiport fuel injection (MFI) 3.0L engine.....	13B-726		

Inspection procedure 18: transient, mass emission tailpipe test failure.....	13B-797	Removal and installation.....	11A-49
Inspection procedure 19: purge flow test of the evaporative emission canister failure.....	13A-771	Oil pan and oil pump	
Inspection procedure 19: purge flow test of the evaporative emission canister failure.....	13B-801	Removal and installation.....	11D-53
Inspection procedure 2: the malfunction indicator lamp (service engine soon or check engine lamp) does not illuminate right after the ignition switch is turned to the "ON" position.....	13A-722	Oil pan and oil strainer	
Inspection procedure 2: the malfunction indicator lamp (service engine soon or check engine lamp) does not illuminate right after the ignition switch is turned to the "ON" position.....	13B-753	Inspection.....	11C-47
Inspection procedure 20: pressure test of the evaporative system failure		Removal and installation.....	11C-43
Multiport fuel injection (MFI) 2.4L engine.....	13A-772	Oil pan and timing chain case	
Multiport fuel injection (MFI) 3.0L engine.....	13B-802	Removal and installation.....	11B-27
Inspection procedure 21: generator output voltage is low (approximately 12.3 volts).....	13A-773	On-vehicle service	
Inspection procedure 21: power supply system and ignition switch - IG system.....	13B-804	Multiport fuel injection (MFI) 3.0L engine.....	13B-877
Inspection procedure 22: fuel pump system.....	13B-810	Rear axle AWD.....	27B-15
Inspection procedure 22: power supply system and ignition switch - IG system.....	13A-777	On-vehicle service	
Inspection procedure 23: fuel pump system.....	13A-788	AT control component layout.....	23C-261
Inspection procedure 23: ignition switch-st system and transmission range switch system.....	13B-816	A/C compressor clutch test.....	55A-107
Inspection procedure 24: ignition circuit system.....	13B-823	Accuracy check of occupant classification sensor.....	52B-431
Inspection procedure 24: ignition switch-st system and starter relay system.....	13A-795	All sensor calibration (G and yaw rate sensor, steering wheel sensor, brake fluid pressure sensor).....	35C-281
Inspection procedure 25: AC system.....	13B-829	Antenna communication test.....	42B-197
Inspection procedure 25: ignition circuit system.....	13A-807	Automatic transaxle control component check	
Inspection procedure 26: A/C system.....	13A-812	AT control relay check.....	23C-274
Inspection procedure 26: engine oil pressure switch (for warning lamp) system.....	13B-832	Electronic control coupling solenoid (center) check <vehicles with s-AWC>.....	23C-277
Inspection procedure 27: engine oil pressure switch system.....	13A-814	Electronic control coupling solenoid (front) check <vehicles with s-AWC>.....	23C-277
Inspection procedure 3: the malfunction indicator lamp (service engine soon or check engine lamp) remains illuminated and never goes out.....	13A-723	Paddle shift switch check.....	23C-276
Inspection procedure 3: the malfunction indicator lamp (service engine soon or check engine lamp) remains illuminated and never goes out.....	13B-754	Solenoid valve check.....	23C-275
Inspection procedure 4: cranks, wont start.....	13B-755	Stoplight switch check.....	23C-274
Inspection procedure 4: cranks, wont start.....	13A-725	Transmission fluid temperature sensor check.....	23C-275
Inspection procedure 5: starts up and dies.....	13A-732	Transmission range switch check.....	23C-274
Inspection procedure 5: starts up and dies.....	13B-763	Auto-tensioner check	
Inspection procedure 6: hard starting		Engine mechanical 2.4L engine.....	11A-9
Multiport fuel injection (MFI) 2.4L engine.....	13A-736	Engine mechanical 3.0L engine.....	11C-9
Multiport fuel injection (MFI) 3.0L engine.....	13B-767	Ball joint dust cover check	
Inspection procedure 7: unstable idle (rough idle, hunting).....	13A-741	Front suspension.....	33-9
Inspection procedure 7: unstable idle (rough idle, hunting).....	13B-773	Power steering.....	37-22
Inspection procedure 8: idle speed is high (improper idle speed).....	13A-745	Bleeding.....	35A-20
Inspection procedure 8: idle speed is high (improper idle speed).....	13B-776	Brake booster operation check.....	35A-17
Inspection procedure 9: idle speed is low (improper idle speed).....	13A-747	Brake disc check.....	35A-24
Inspection procedure 9: idle speed is low (improper idle speed).....	13B-778	Brake drag force check.....	35A-27
Troubleshooting strategy		Brake fluid level switch check.....	35A-20
Multiport fuel injection (MFI) 2.4L engine.....	13A-10	Brake fluid pressure sensor calibration.....	35C-284
Multiport fuel injection (MFI) 3.0L engine.....	13B-10	Brake pad check.....	35A-21
		Brake pad replacement.....	35A-21
		Brake pedal inspection.....	35A-15
		Check of electronic control coupling.....	27C-94
		Check valve operation check.....	35A-19
		Component location	
		Multiport fuel injection (MFI) 2.4L engine.....	13A-860
		Multiport fuel injection (MFI) 3.0L engine.....	13B-877
		Compression pressure check	
		Engine mechanical 2.4L engine.....	11A-18
		Engine mechanical 3.0L engine.....	11C-18
		Compressor drive belt adjustment.....	55A-108
		Compressor noise check.....	55A-111
		Control system component part configuration diagram.....	23A-137
		Cooling fan motor check.....	14-33
		Cooling fan relay continuity check 2.4L engine.....	14-30
		Curb idle speed check	
		Engine mechanical 2.4L engine.....	11A-15
		Engine mechanical 3.0L engine.....	11C-15
Oil pan			
Inspection.....	11A-51		

O

Customization function		Fluid replacement	37-24
Keyless operation system (KOS).....	42B-199	Front wheel alignment check and adjustment	33-8
Wireless control module (WCM).....	42C-112	Fuel level sensor (sub) replacement <AWD>	13C-13
CVT control component check		Fuel level sensor check	13C-8
Accelerator pedal position sensor (aps) check	23A-145	Fuel pressure test	
CVT control relay check.....	23A-146	Multiport fuel injection (MFI) 2.4L engine.....	13A-868
Paddle shift switch check.....	23A-148	Multiport fuel injection (MFI) 3.0L engine.....	13B-883
Solenoid valve check.....	23A-146	Fuel pump connector disconnection (how to reduce pressurized fuel lines)	
Stoplight switch check.....	23A-145	Multiport fuel injection (MFI) 2.4L engine.....	13A-866
Transmission fluid temperature sensor check	23A-147	Multiport fuel injection (MFI) 3.0L engine.....	13B-886
Transmission range switch check.....	23A-145	Fuel pump module replacement <FWD>	13C-9
Differential carrier oil seal replacement	27B-18	Fuel pump module replacement AWD	13C-11
Drive belt tension check		Fuel pump operation check	13C-8
Engine mechanical 2.4L engine.....	11A-9	Fuel pump relay continuity check	
Power steering.....	37-24	Multiport fuel injection (MFI) 2.4L engine.....	13A-872
EGR valve check		Multiport fuel injection (MFI) 3.0L engine.....	13B-887
Multiport fuel injection (MFI) 2.4L engine.....	13A-879	Fuel tank pump operation check	
Multiport fuel injection (MFI) 3.0L engine.....	13B-896	Multiport fuel injection (MFI) 2.4L engine.....	13A-867
Electronic control coupling (center) operation check vehicles with s-AWC	23C-273	Multiport fuel injection (MFI) 3.0L engine.....	13B-886
Electronic control coupling (front) operation check vehicles with s-AWC	23C-272	G and yaw rate sensor calibration	35C-282
Engine coolant change	14-26	Gear oil level check	27B-16
Engine coolant concentration test	14-29	Gear oil replacement	27B-16
Engine coolant leak check.....	14-25	Generator drive belt tension check.....	11C-8
Engine coolant temperature sensor check		Heated oxygen sensor check	
Multiport fuel injection (MFI) 2.4L engine.....	13A-874	Multiport fuel injection (MFI) 2.4L engine.....	13A-875
Multiport fuel injection (MFI) 3.0L engine.....	13B-889	Multiport fuel injection (MFI) 3.0L engine.....	13B-889
Engine oil check	12-4	Hub bolt replacement	
Engine oil control valve check		Front axle	26-12
Multiport fuel injection (MFI) 2.4L engine.....	13A-878	Rear axle FWD	27A-7
Multiport fuel injection (MFI) 3.0L engine.....	13B-895	Rear axle AWD	27B-17
Engine oil filter replacement	12-6	Hydraulic unit check	
Engine oil pressure check	12-8	Anti-lock braking system (ABS)	35B-184
Engine oil replacement.....	12-5	Active stability control system (ASC)	35C-277
Essential service		Id codes registration procedure	
Flushing coolers and tubes		Keyless operation system (KOS).....	42B-188
CVT.....	23A-141	Wireless control module (WCM)	42C-99
Automatic transaxle	23C-266	Idle mixture check	
Oil cooler flow check		Engine mechanical 2.4L engine.....	11A-16
CVT.....	23A-143	Engine mechanical 3.0L engine.....	11C-16
Automatic transaxle	23C-268	Idle-up operation check	55A-115
Transmission fluid change	23C-265	Ignition timing check	
Transmission fluid check		Engine mechanical 2.4L engine.....	11A-13
CVT.....	23A-139	Engine mechanical 3.0L engine.....	11C-13
Automatic transaxle	23C-264	In the event of a discharged battery	
Transmission fluid replacement	23A-140	Anti-lock braking system (ABS)	35B-187
Transmission range switch and control cable adjustment		Active stability control system (ASC)	35C-281
CVT.....	23A-144	Injector check	
Automatic transaxle	23C-269	Multiport fuel injection (MFI) 2.4L engine.....	13A-877
Transmission range switch check.....	23C-269	Multiport fuel injection (MFI) 3.0L engine.....	13B-894
Transmission range switch continuity check.....	23A-143	Injector relay and throttle actuator control motor relay continuity check	13B-888
Evaporative emission purge solenoid check		Injector relay continuity check.....	13A-873
Multiport fuel injection (MFI) 2.4L engine.....	13A-879	Inspection of keyless entry timer lock function	
Multiport fuel injection (MFI) 3.0L engine.....	13B-896	Keyless operation system (KOS)	42B-198
Evaporative emission ventilation solenoid check		Wireless control module (WCM)	42C-111
Multiport fuel injection (MFI) 2.4L engine.....	13A-879	Inspection of steering column shaft assembly impact absorbing mechanism	37-29
Multiport fuel injection (MFI) 3.0L engine.....	13B-896	Intake air temperature sensor check	
Fan control relay continuity check 3.0L engine	14-31	Multiport fuel injection (MFI) 2.4L engine.....	13A-874
Fluid level check	37-24		

Multiport fuel injection (MFI) 3.0L engine.....	13B-888	Tie rod end ball joint rotation torque check.....	37-22
Key interlock mechanism check/adjustment		Tie-rod looseness check.....	37-17
CVT.....	23A-149	Tire inflation pressure check.....	31-8
Automatic transaxle.....	23C-278	Tire pressure sensor check	
Keyless entry system check		Keyless operation system (KOS).....	42B-199
Keyless operation system (KOS).....	42B-197	Wireless control module (WCM).....	42C-112
Wireless control module (WCM).....	42C-111	Tire pressure sensor id check	
Lash adjuster check.....	11C-20	Keyless operation system (KOS).....	42B-199
Linear air-fuel ratio sensor check.....	13A-876	Wireless control module (WCM).....	42C-112
Lower arm ball joint end play check.....	33-9	Tire wear check.....	31-8
Manifold vacuum check		Transfer oil check AWD.....	23A-144
Engine mechanical 2.4L engine.....	11A-19	Transfer oil level check.....	23C-271
Engine mechanical 3.0L engine.....	11C-19	Transfer oil replacement.....	23C-272
Multiport fuel injection (MFI) relay continuity check		Transfer oil replacement AWD.....	23A-145
Multiport fuel injection (MFI) 2.4L engine.....	13A-871	Valve clearance check and adjustment	
Multiport fuel injection (MFI) 3.0L engine.....	13B-886	Engine mechanical 2.4L engine.....	11A-13
Oil filter stud replacement <3.0L engine>.....	12-7	Engine mechanical 3.0L engine.....	11C-11
Oil pump pressure test.....	37-28	Water pump coolant leak check.....	14-28
Parking brake lever stroke check and adjustment.....	36-9	Wheel bearing end play check	
Parking brake lining seating procedure.....	36-10	Front axle.....	26-11
Parking brake switch check.....	36-10	Rear axle FWD.....	27A-6
Performance test.....	55A-109	Rear axle AWD.....	27B-17
Power door locks with selective unlocking inspection		Wheel runout check.....	31-8
Keyless operation system (KOS).....	42B-198	Wheel speed sensor output current measurement	
Wireless control module (WCM).....	42C-111	Anti-lock braking system (ABS).....	35B-184
Power relay check.....	55A-111	Active stability control system (ASC).....	35C-277
Power steering oil pump drive belt inspection.....	11C-11	Other devices.....	70-22
Power steering oil pump drive belt tension check.....	11C-9	Other parts	
Power steering pressure switch check.....	37-29	Other parts maintenance service points.....	55B-23
Power steering system air bleeding.....	37-25	Outside mirror	
Propeller shaft universal joint check.....	25-5	General information.....	51-110
Radiator cap opening pressure check.....	14-25	Heated door mirror diagnosis	
Rear axle total backlash check.....	27B-15	Trouble symptom chart.....	51-110
Rear hub rotary-sliding resistance check.....	27A-6	Troubleshooting strategy.....	51-110
Rear wheel alignment check and adjustment.....	34-10	Outside mirror	
Refrigerant leak repair procedure.....	55A-110	Inspection.....	51-126
Refrigerant level check, draining, and charging.....	55A-108	Removal and installation.....	51-120
Replace the clean air filter.....	55A-115	Symptom procedures	
Rocker arm piston operation check.....	11C-12	Inspection procedure 1: none of the heated door mirrors operate.....	51-111
Selector lever operation check		Inspection procedure 2: left or right side heated door mirror does not operate.....	51-114
CVT.....	23A-149	Overall configuration diagram <2.4L engine>.....	80A-2
Automatic transaxle.....	23C-278	Overall configuration diagram <3.0L engine>.....	80A-3
Shift lock mechanism check			
CVT.....	23A-151		
Automatic transaxle.....	23C-280		
Simple inspection of the AC pressure sensor.....	55A-107		
Stabilizer link ball joint dust cover inspection.....	34-11		
Stationary steering effort check.....	37-23		
Steering angle check.....	37-17		
Steering wheel free play check.....	37-16		
Steering wheel return to center check.....	37-23		
Steering wheel sensor calibration.....	35C-283		
Throttle actuator control motor check			
Multiport fuel injection (MFI) 2.4L engine.....	13A-877		
Multiport fuel injection (MFI) 3.0L engine.....	13B-894		
Throttle actuator control motor relay continuity check...	13A-873		
Throttle body (throttle valve area) cleaning			
Multiport fuel injection (MFI) 2.4L engine.....	13A-865		
Multiport fuel injection (MFI) 3.0L engine.....	13B-882		

P

Panic alarm	
Diagnosis	
Diagnostic function.....	54A-882
Standard flow of diagnostic troubleshooting.....	54A-882
General information.....	54A-880
On-vehicle service	
Customization function.....	54A-886
Removal and installation.....	54A-886
Special tools.....	54A-881
Symptom procedures	
Panic alarm does not work normally.....	54A-884
Trouble symptom chart.....	54A-883
Parking brake cable	

Removal and installation	36-13	Precautions before service	
Parking brake diagnosis		Application of anti-corrosion agents and undercoats	00-58
Introduction	36-3	Battery current sensor calibration <2.4L engine>	00-56
Symptom chart	36-3	Cautions for working in engine compartment	00-38
Symptom procedures		Coding list	00-44
Inspection procedure 1: insufficient parking brake function	36-4	Engine idling learning procedure	00-54
Inspection procedure 2: when the parking brake lever is pulled, the brake warning light does not illuminate.....	36-5	Forminplace gasket (figp)	00-59
Troubleshooting strategy	36-3	How to perform vehicle identification number (vin) writing	00-40
Parking brake lever		How to shift lock forced release	00-58
Removal and installation	36-11	Initialization procedure for learning value in MFI engine	00-53
Parking brake lining and drum		Scan tool (multi use tester M.U.T.-III sub assembly) ...	00-39
Brake drum inside diameter check	36-21	Servicing electrical system	00-57
Brake lining thickness check	36-21	Supplemental restraint system (SRS).....	00-38
Removal and installation 2.4L engine: 5 persons seat ..	36-15	Timing chain learned value reset <2.4L engine>	00-55
Removal and installation 2.4L engine: 7 persons seat, 3.0L engine.....	36-18	Vehicle washing	00-58
Parking brake reminder tone alarm	90-390	Precautions on how to repair the CAN bus lines	54C-8
Piston and connecting rod		Propeller shaft	
Inspection	11B-72	Inspection	25-9
Piston and connecting rod inspection.....	11D-69	Removal and installation.....	25-7
Removal and installation		Propeller shaft diagnosis	
Engine overhaul 2.4L engine	11B-65	Introduction to propeller shaft diagnosis	25-3
Engine overhaul 3.0L engine	11D-62	Propeller shaft diagnostic troubleshooting strategy	25-3
Post-collision diagnosis	52B-424	Symptom chart.....	25-4
Power distribution system	90-24	Symptom procedures	
Power seat	90-370	Inspection procedure 1: noise at start.....	25-4
Power steering diagnosis		Inspection procedure 2: noise and vibration at high speed	25-4
Introduction to power steering diagnosis	37-4		
Power steering diagnosis troubleshooting strategy	37-4		
Symptom chart	37-5		
Symptom procedures			
Inspection procedure 1: excessive play of steering wheel	37-5		
Inspection procedure 10: oil leakage from hose connection	37-12		
Inspection procedure 11: oil leakage from hose assembly	37-12		
Inspection procedure 12: oil leakage from oil reservoir	37-13		
Inspection procedure 13: oil leakage from oil pump ..	37-13		
Inspection procedure 14: oil leakage from steering gear	37-13		
Inspection procedure 2: difficult steering wheel operation (insufficient power assist)	37-6		
Inspection procedure 3: rattling noise	37-8		
Inspection procedure 4: shrill noise	37-9		
Inspection procedure 5: squealing noise	37-9		
Inspection procedure 6: hissing noise	37-10		
Inspection procedure 7: droning noise	37-10		
Inspection procedure 8: squeaking noise	37-11		
Inspection procedure 9: vibration.....	37-12		
Power steering gear box and linkage			
Disassembly and assembly	37-45		
Inspection	37-44		
Removal and installation	37-40		
Power steering hoses			
Removal and installation	37-55		
Power steering oil pump assembly			
Disassembly and assembly	37-51		
Inspection			
Power steering	37-50		
Power steering	37-54		
Removal and installation	37-48		
Power windows	90-170		

R

Radiator	
Removal and installation 2.4L engine.....	14-49
Removal and installation 3.0L engine.....	14-52
Radiator grille	
Removal and installation.....	51-9
Radio and CD player	
Diagnosis	
Diagnosis function.....	54A-331
Introduction to audio system diagnosis.....	54A-328
Standard flow of diagnostic troubleshooting	54A-331
Diagnostic trouble code chart	54A-333
Diagnostic trouble code procedures	
Code No.B2450 switch panel communication	54A-357
DTC B2420: power integrated circuit.....	54A-351
DTC B2421: radio tuner	54A-352
DTC B2423: 6 CD player error.....	54A-353
DTC B2424: CD player error.....	54A-355
DTC B2451: audio panel type error	54A-362
DTC U0019: bus off (CAN-B).....	54A-334
DTC U0141: ETACS CAN timeout.....	54A-335
DTC U0151: SRS-abg CAN timeout	54A-337
DTC U0154: ocm (occupant classification-ECU) CAN timeout	54A-339
DTC U0155: meter CAN timeout	54A-341
DTC U0164: AC CAN timeout.....	54A-343
DTC U0168: WCM/KOS CAN timeout	54A-345
DTC U0195: satellite radio CAN timeout	54A-347
DTC U1415: coding not completeddata fail	54A-349
General information	54A-325
Inspection	

Audio adapter inspection	54A-425	Inspection procedure 3: gear noise while driving differential	27B-9
On-vehicle service		Inspection procedure 4: gear noise while coasting <differential>	27B-10
Adjustment of volume and sound quality automatic correction function	54A-423	Inspection procedure 5: bearing noise while driving or coasting <differential>	27B-10
Removal and installation	54A-423	Inspection procedure 6: noise while turning <differential>	27B-10
Service data	54A-423	Inspection procedure 7: heat differential	27B-11
Special tools	54A-327	Inspection procedure 8: oil leakage differential	27B-11
Symptom procedures		Troubleshooting strategy	27B-6
Inspection procedure 1: power is not turned on when the power switch is turned on	54A-364	Rear axle hub assembly	
Inspection procedure 10: broadcasts can be heard, but both AM and FM have a lot of noise	54A-412	Inspection	
Inspection procedure 11: there is more noise on either AM or FM	54A-413	Rear axle FWD	27A-10
Inspection procedure 12: noise sometimes appears on FM during traveling	54A-414	Rear axle AWD	27B-23
Inspection procedure 13: noise is detected with engine running	54A-415	Removal and installation	
Inspection procedure 14: noise appears during vibration or shocks	54A-416	Rear axle FWD	27A-8
Inspection procedure 15: ever-present noise	54A-417	Rear axle AWD	27B-19
Inspection procedure 16: noise comes out, but neither AM nor FM sounds	54A-417	Rear bumper assembly	
Inspection procedure 17: poor reception	54A-417	Disassembly and assembly	51-8
Inspection procedure 18: distortion on AM or on both AM and FM	54A-419	Removal and installation	51-7
Inspection procedure 19: distortion on FM only	54A-419	Rear combination light	
Inspection procedure 2: No sound is heard. <vehicles with audio amplifier>	54A-368	Diagnosis	
Inspection procedure 20: using the auto select function, too few automatic stations are selected	54A-419	Diagnostic function	54A-227
Inspection procedure 21: preset stations are erased	54A-420	Standard flow of diagnostic troubleshooting	54A-226
Inspection procedure 22: CD can not be inserted.	54A-420	Diagnostic trouble code chart	54A-228
Inspection procedure 23: No sound. (CD only)	54A-421	Diagnostic trouble code procedures	
Inspection procedure 24: CD sound skips	54A-421	DTC B16A0: taillight (RH) circuit open open circuit in the position light (RH) circuit, rear side marker light (RH) circuit and the taillight (RH) circuit DTC B16A7: taillight (RH) circuit short short circuit in the position light (.....	54A-229
Inspection procedure 25: sound quality is poor.	54A-422	DTC B16A1: taillight (LH) circuit open open circuit in the position light (LH) circuit, rear side marker light (LH) circuit, taillight (LH) and the license plate light circuit DTC B16A8: taillight (LH) circuit short short circuit in	54A-236
Inspection procedure 26: CD can not be ejected	54A-422	General information	54A-225
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles with audio amplifier>	54A-386	Rear combination light removal and installation	54A-254
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles without audio amplifier>	54A-375	Special tools	54A-225
Inspection procedure 4: the audio does not operate normally by operating the radio and CD player of the center panel unit	54A-399	Symptom procedures	
Inspection procedure 5: audio illuminations does not work normally	54A-403	Inspection procedure 1: none of taillights illuminates	54A-244
Inspection procedure 6: the sound of external input are not played. vehicles with audio adapter)	54A-408	Inspection procedure 2: one of the taillights does not illuminate	54A-246
Inspection procedure 7: noise appears at certain places when traveling (AM)	54A-410	Inspection procedure 3: stoplight does not illuminate or go out normally	54A-249
Inspection procedure 8: noise is present while moving (FM)	54A-411	Trouble symptom chart	54A-243
Inspection procedure 9: sound mixed with noise, only at night (AM)	54A-412	Rear disc brake assembly	
Trouble symptom chart	54A-363	Disassembly and assembly	35A-41
Rear axle diagnosis		Inspection	
Introduction	27B-6	Basic brake	35A-40
Introduction to rear axle diagnosis	27A-4	Basic brake	35A-44
Rear axle diagnostic troubleshooting strategy	27A-4	Removal and installation 2.4L engine: 5 persons seat ..	35A-39
Symptom chart		Removal and installation 2.4L engine: 7 persons seat, 3.0L engine	35A-40
Rear axle FWD	27A-4	Rear display	
Rear axle AWD	27B-6	General information	54A-698
Symptom procedures		Inspection	
Inspection procedure 1: abnormal noise	27A-4	Audio and video adapter check	54A-725
Inspection procedure 1: noise during wheel rotation <driveshaft>	27B-6	Main unit terminal voltage	54A-723
Inspection procedure 2: constant noise differential ...	27B-7	Removal and installation	54A-724
		Special tools	54A-700
		Symptom procedures	
		Inspection procedure 1: the rear display unit does not display at all	54A-702
		Inspection procedure 2: the rear display DVD player does not play the inserted DVD	54A-707

TSB Revision

Heater, air conditioning and ventilation.....	55A-5	Engine cooling.....	14-3
Sealant and adhesive		Intake and exhaust.....	15-2
Multiport fuel injection (MFI) 2.4L engine.....	13A-7	CVT.....	23A-12
Multiport fuel injection (MFI) 3.0L engine.....	13B-7	Automatic transaxle overhaul.....	23D-2
Rear axle AWD.....	27B-5	Propeller shaft.....	25-3
Sealant(s) and adhesive(s).....	23B-9	Front axle.....	26-5
Sealants		Rear axle FWD.....	27A-3
Engine overhaul 2.4L engine.....	11B-7	Rear axle AWD.....	27B-5
Automatic transaxle overhaul.....	23D-5	Electronic control AWD.....	27C-5
Sealants and adhesive		Wheel and tire.....	31-3
Engine mechanical 2.4L engine.....	11A-4	Front suspension.....	33-3
Engine mechanical 3.0L engine.....	11C-4	Rear suspension.....	34-6
Sealants and adhesives.....	11D-8	Basic brake.....	35A-5
Seat assembly		Anti-lock braking system (ABS).....	35B-3
Front seat assembly		Active stability control system (ASC).....	35C-3
Disassembly and assembly.....	52A-19	Parking brakes.....	36-3
Inspection.....		Heater, air conditioning and ventilation.....	55A-5
Interior.....	52A-19	Shift lock mechanism.....	90-80
Interior.....	52A-22	Shock absorber assembly	
Removal and installation.....	52A-17	Disassembly and assembly 2.4L engine: 5 persons seat.....	34-31
Second seat assembly		Disassembly and assembly 2.4L engine: 7 persons seat, 3.0L engine.....	34-34
Disassembly and assembly.....	52A-26	Inspection.....	34-30
Inspection.....	52A-38	Removal and installation.....	34-28
Removal and installation.....	52A-25	Side air dam	
Second seat adjustment.....	52A-24	Removal and installation.....	51-20
Third seat assembly		Side cover	
Disassembly and assembly.....	52A-39	Disassembly and assembly.....	23D-84
Removal and installation.....	52A-38	Side impact sensor	
Seat belt		Inspection.....	52B-452
Front seat belt		Removal and installation.....	52B-450
Inspection.....	52A-40	Side turn-signal light	
Removal and installation.....	52A-40	Removal and installation.....	54A-275
Rear seat belt		Snap ring, needle bearing and shim for adjustment.....	23B-7
Removal and installation.....	52A-42	Solenoid and solenoid valve.....	70-17
Seat belt warning tone alarm.....	90-386	Spare connector (for hands-free interface system).....	90-412
Seat belts with pre-tensioner		Spare connector (for navigation system).....	90-302
Inspection.....	52B-461	Spare connector (for rear display).....	90-306
Removal and installation.....	52B-457	Spare connector (for satellite radio).....	90-300
Sensor.....	70-8	Spare connector (for trailer lights).....	90-416
Sensors		Spare tire carrier	
Inspection.....	55B-22	Removal and installation.....	31-9
Removal and installation.....	55B-22	Speaker	
Service precautions		General information.....	54A-688
Electronic control AWD.....	27C-5	On-vehicle service	
Supplemental restraint system (SRS).....	52B-25	Speaker test.....	54A-691
Controller area network (CAN).....	54C-7	Removal and installation.....	54A-693
Service precautions		Special tool	
Caution labels.....	55A-6	Multiport fuel injection (MFI) 2.4L engine.....	13A-8
Service specification.....	13C-4	Multiport fuel injection (MFI) 3.0L engine.....	13B-8
Service specification(s)		CVT.....	23A-134
Multiport fuel injection (MFI) 2.4L engine.....	13A-7	Propeller shaft.....	25-5
Multiport fuel injection (MFI) 3.0L engine.....	13B-7	Power plant mount.....	32-3
Continuously variable transaxle overhaul.....	23B-6	Parking brakes.....	36-8
Service specifications		Interior.....	52A-2
Engine mechanical 2.4L engine.....	11A-4	Special tool(s).....	23B-11
Engine overhaul 2.4L engine.....	11B-2	Special tools	
Engine mechanical 3.0L engine.....	11C-4	Engine mechanical 2.4L engine.....	11A-5
Engine overhaul 3.0L engine.....	11D-2	Engine overhaul 2.4L engine.....	11B-8
Engine lubrication.....	12-3		

Engine mechanical 3.0L engine	11C-5	DTC B1B8D: driver seat slide sensor open circuit.....	52B-364
Engine overhaul 3.0L engine.....	11D-9	DTC B1B8E: driver seat slide sensor short (power supply side) circuit	52B-367
Engine lubrication	12-4	DTC B1B91: driver seat slide sensor configuration mismatch.....	52B-371
Fuel supply	13C-5	DTC B1BA7: occupant classification system verification required	52B-373
Engine cooling	14-23	DTC B1BA8: occupant classification-ECU out of calibration/not calibrated	52B-374
Intake and exhaust	15-2	DTC B1BBA: passenger seat weight sensor power supply circuit.....	52B-376
Automatic transaxle	23C-259	DTC B1BBC: occupant classification system negative system weight.....	52B-378
Automatic transaxle overhaul	23D-7	DTC B1BBD: occupant classification-ECU current configuration table unprogrammed.....	52B-380
Front axle.....	26-8	DTC B1C23: passenger seat weight sensor (front: LH) configuration mismatchDTC B1C24: passenger seat weight sensor (front: RH) configuration mismatchDTC B1C25: passenger seat weight sensor (rear: LH) configuration mismatchDTC B1C2	52B-381
Rear axle FWD	27A-5	DTC B1CB2: occupant classification-ECU parameter table incompatibleDTC B2212: occupant classification-ECU internal failureDTC B2250: occupant classification-ECU not parameter flash required-DTC B2262: occupant classification-ECU e	52B-383
Rear axle AWD	27B-12	DTC B210D: battery voltage lowDTC B210E: battery voltage high	52B-385
Electronic control AWD	27C-6	DTC B2206: chassis number does not match	52B-389
Front suspension	33-6	DTC U0020: CAN-B bus off performanceDTC U0021: CAN-B bus(H1) circuit openDTC U0022: CAN-B bus(H1) shorted to circuit groundDTC U0023: CAN-B bus(H1) shorted to circuit power supply-DTC U0024: CAN-B bus(L0) circuit open	52B-391
Rear suspension.....	34-8	DTC U0141: ETACS CAN timeout.....	52B-392
Basic brake.....	35A-15	DTC U0151: SRS-ECU CAN timeout	52B-394
Anti-lock braking system (ABS).....	35B-182	DTC U0155: combination meter CAN timeout.....	52B-396
Active stability control system (ASC).....	35C-276	DTC U0164: AC-ECU CAN timeout.....	52B-398
Power steering.....	37-14	DTC U0168: KOS-ECU or WCM CAN timeout.....	52B-400
Keyless operation system (KOS).....	42B-12	DTC U0184: audio CAN timeout.....	52B-402
Wireless control module (WCM).....	42C-6	DTC U0195: satellite radio tuner CAN timeout	52B-404
Supplemental restraint system (SRS)	52B-422	DTC U0245: CAN box unit CAN timeout	52B-406
Local interconnect network (LIN).....	54B-3	DTC U1419: the signal from a weight sensor (front: LH) is unusualDTC U141A: the signal from a weight sensor (front: RH) is unusualDTC U141B: the signal from a weight sensor (rear: LH) is unusualDTC U141C: the signal from a weight	52B-408
Controller area network (CAN)	54C-5	Diagnostic trouble code procedures SRS-ECU	
Heater, air conditioning and ventilation.....	55A-104	DTC B1206: passengers air bag off indicator light (open circuit)	52B-35
Automatic air conditioning	55B-20	DTC B1207: passengers air bag off indicator light (short circuit between circuit terminal).....	52B-40
Specification(s)		DTC B1B00: drivers air bag module (1st squib) system (shorted to squib circuit ground)DTC B1B04: drivers air bag module (2nd squib) system (shorted to squib circuit ground).....	52B-44
Adhesives	51-3	DTC B1B01: drivers air bag module (1st squib) system (shorted to squib circuit power supply)DTC B1B05: drivers air bag module (2nd squib) system (shorted to squib circuit power supply	52B-52
Lubricant.....	51-3	DTC B1B02: drivers air bag module (1st squib) system (squib circuit open)DTC B1B06: drivers air bag module (2nd squib) system (squib circuit open)	52B-60
Service specifications	51-3	DTC B1B03: drivers air bag module (1st squib) system (short circuit between squib circuit terminals)DTC B1B07: drivers air bag module (2nd squib) system (short circuit between squib circuit terminals)	52B-67
Specifications	31-2	DTC B1B08: passengers (front) air bag module (1st squib) system (shorted to squib circuit ground)DTC B1B0C: passengers (front) air bag module (2nd squib) system (shorted to squib circuit ground).....	52B-76
Specifications		DTC B1B09: passengers (front) air bag module (1st squib) system (shorted to squib circuit power supply)DTC B1B0D: passengers (front) air bag module (2nd squib) system (shorted to squib circuit power supply	52B-83
General specifications	37-3	DTC B1B0A: passengers (front) air bag module (1st squib) system (squib circuit open)DTC B1B0E: passengers (front) air bag module (2nd squib) system (squib circuit open)	52B-90
Lubricant.....	23C-15		
Lubricants	37-4		
Sealant	37-4		
Service specifications			
Automatic transaxle	23C-15		
Power steering.....	37-3		
Splash shield			
Removal and installation	42A-10		
SRS air bag diagnosis			
Accuracy check of occupant classification sensor.....	52B-421		
Actuator test reference table	52B-420		
Check chart for diagnosis codes	52B-31		
Data list reference table.....	52B-419		
Diagnostic function	52B-28		
Diagnostic trouble code chart occupant classification-ECU	52B-344		
Diagnostic trouble code procedures occupant classification-ECU			
DTC B1B78: passenger seat weight sensor (front: LH) performanceDTC B1B7D: passenger seat weight sensor (front: RH) performanceDTC B1B82: passenger seat weight sensor (rear: LH) performanceDTC B1B87: passenger seat weight sensor (.....	52B-346		
DTC B1B79: passenger seat weight sensor (ground side) short-circuited (front: LH)DTC B1B7E: passenger seat weight sensor (ground side) short-circuited (front: RH)DTC B1B83: passenger seat weight sensor (ground side) short-circuited (rea	52B-350		
DTC B1B7A: passenger seat weight sensor (power supply side) short-circuited or open (front: LH)DTC B1B7F: passenger seat weight sensor (power supply side) short-circuited or open (front: RH)DTC B1B84: passenger seat weight sensor (power	52B-354		
DTC B1B8C: driver seat slide sensor circuit performance	52B-359		

DTC B1B0B: passengers (front) air bag module (1st squib) system (short circuit between squib circuit terminals)	DTC B1B0F: passengers (front) air bag module (2nd squib) system (short circuit between squib circuit terminals)
DTC B1B18: curtain air bag module (LH) (squib) system (shorted to squib circuit ground)	DTC B1B19: curtain air bag module (LH) (squib) system (shorted to squib circuit power supply)
DTC B1B1A: curtain air bag module (LH) (squib) system (squib circuit open)	DTC B1B1B: curtain air bag module (LH) (squib) system (short circuit between squib circuit terminals)
DTC B1B20: curtain air bag module (RH) (squib) system (shorted to squib circuit ground)	DTC B1B21: curtain air bag module (RH) (squib) system (shorted to squib circuit power supply)
DTC B1B22: curtain air bag module (RH) (squib) system (squib circuit open)	DTC B1B23: curtain air bag module (RH) (squib) system (short circuit between squib circuit terminals)
DTC B1B54: seat belt buckle switch (RH) circuit (ground side) shorted	DTC B1B55: seat belt buckle switch (RH) circuit (power supply side) shorted
DTC B1B70: malfunction of G-sensor inside front impact sensor (LH)	DTC B1B71: malfunction of G-sensor inside front impact sensor (RH)
DTC B1B72: malfunction of G-sensor inside side impact sensor (front) (LH)	DTC B1B75: malfunction of G-sensor inside side impact sensor (front) (RH)
DTC B1B73: malfunction of G-sensor inside side impact sensor (rear) (LH)	DTC B1B76: malfunction of G-sensor inside side impact sensor (rear) (RH)
DTC B1BA3: drivers seat slide sensor malfunction (occupant classification-ECU)	DTC B1BA4: passengers seat slide sensor malfunction (occupant classification-ECU)
DTC B1BA5: SRS-ECU squib count mismatch	DTC B1BAA: occupant classification-ECU configuration mismatch
DTC B1BC7: SRS-ECU (record data full) system	DTC B1BCF: roll over sensor malfunction
DTC B2207: occupant restraint controller internal 1DTC B2208: occupant restraint controller internal 2DTC B2209: occupant restraint controller internal 3DTC B220A: occupant restraint	DTC B220B: occupant restraint controller internal 4DTC B220C: occupant restraint controller internal 5
DTC B1C27: side-air bag module (LH) (squib) system (shorted to squib circuit ground)	DTC B1C28: side-air bag module (LH) (squib) system (shorted to squib circuit power supply)
DTC B1C29: side-air bag module (LH) (squib) system (squib circuit open)	DTC B1C2A: side-air bag module (LH) (squib) system (short circuit between squib circuit terminals)
DTC B1C2B: side-air bag module (RH) (squib) system (shorted to squib circuit ground)	DTC B1C2C: side-air bag module (RH) (squib) system (shorted to squib circuit power supply)
DTC B1C2D: side-air bag module (RH) (squib) system (squib circuit open)	DTC B1C2E: side-air bag module (RH) (squib) system (short circuit between squib circuit terminals)
DTC B1C33: drivers lap pre-tensioner (squib) system (shorted to squib circuit ground)	DTC B1C34: drivers lap pre-tensioner (squib) system (shorted to squib circuit power supply)
DTC B1C35: drivers lap pre-tensioner (squib) system (squib circuit open)	DTC B1C36: drivers lap pre-tensioner (squib) system (short circuit between squib circuit terminals)
DTC B1C38: drivers seat belt pre-tensioner (squib) system (shorted to squib circuit ground)	DTC B1C39: drivers seat belt pre-tensioner (squib) system (shorted to squib circuit power supply)
DTC B1C3A: drivers seat belt pre-tensioner (squib) system (squib circuit open)	DTC B1C3B: drivers seat belt pre-tensioner (squib) system (short circuit between squib circuit terminals)
DTC B1C47: front passengers seat belt pre-tensioner (squib) system (shorted to squib circuit ground)	DTC B1C48: front passengers seat belt pre-tensioner (squib) system (shorted to squib circuit power supply)
DTC B1C49: front passengers seat belt pre-tensioner (squib) system (squib circuit open)	DTC B1C4A: front passengers seat belt pre-tensioner (squib) system (short circuit between squib circuit terminals)
DTC B210D: battery abnormal low voltage	DTC B212C: open circuit to ig1 power supply (fuse No.12 circuit)
DTC B212D: open circuit to ig1 power supply (fuse No.18 circuit)	DTC B2207: occupant restraint controller internal 1DTC B2208: occupant restraint controller internal 2DTC B2209: occupant restraint controller internal 3DTC B220A: occupant restraint controller internal 4DTC B220B: occupant restraint controller internal 5
DTC B223D: ocm (occupant classification-ECU) DTC present	DTC B2255: occupant restraint controller roll-over feature disabled
DTC U0019: bus off (CAN-B)	DTC U0141: ETACS CAN timeout
DTC U0154: occupant classification-ECU CAN timeout	DTC U0155: combination meter CAN timeout
DTC U0164: AC-ECU CAN timeout	DTC U0168: KOS-ECU or WCM CAN timeout
DTC U0170: front impact sensor (LH) communication error	DTC U0171: front impact sensor (RH) communication error
DTC U0172: side impact sensor (front) (LH) communication error	DTC U0173: side impact sensor (rear) (LH) communication error
DTC U0175: side impact sensor (front) (RH) communication error	DTC U0176: side impact sensor (rear) (RH) communication error
DTC U0184: audio CAN timeout	DTC U0195: satellite radio tuner CAN timeout
DTC U0212: steering wheel sensor CAN timeout	DTC U1414: defective coding data
DTC U1415: coding not completed data fail	Fail-safe function reference table
Introduction to diagnosis	Passengers air bag off indicator light check
Passengers seat belt warning light check	SRS warning light check
Symptom procedures	Inspection procedure 1: communication between the scan tool and the SRS-ECU is not possible
Inspection procedure 2: power supply circuit system	Inspection procedure 3: the SRS warning light does not illuminate
Inspection procedure 4: the SRS warning light does not go out	Trouble symptom chart
Troubleshooting strategy	SRS control unit (SRS-ECU)
Inspection	Removal and installation
Stabilizer bar	Inspection
Front suspension	

Rear suspension.....	34-37	Code No. L0640 sr over load.....	42A-186
Removal and installation		General information.....	42A-179
Front suspension.....	33-20	On-vehicle service	
Rear suspension.....	34-36	Learning procedures of the sunroof fully closed position	42A-212
Stabilizer link ball joint cover check.....	34-38	Sunroof check.....	42A-211
Stabilizer link ball joint rotation torque check.....	34-37	Sunroof fit adjustment.....	42A-211
Starting system.....	90-32	Sunroof lid glass operation current check.....	42A-212
Starting system		Sunroof operation check.....	42A-214
General information.....	16-27	Sunroof safety function check.....	42A-211
General specifications.....	16-28	Sunroof timer function check.....	42A-212
On-vehicle service		Water test.....	42A-211
Starter relay check.....	16-31	Special tools.....	42A-209
Service specifications.....	16-29	Specification(s)	
Starter motor assembly inspection		Sealant.....	42A-179
Disassembly and reassembly.....	16-37	Service specification.....	42A-179
Inspection		Sunroof	
Engine electrical.....	16-39	Disassembly and assembly.....	42A-220
Engine electrical.....	16-34	Inspection.....	42A-219
Removal and installation 2.4L engine.....	16-32	Removal and installation.....	42A-217
Removal and installation 3.0L engine.....	16-33	Sunroof diagnosis	
Starting system diagnosis.....	16-29	Diagnostic trouble code chart.....	42A-180
Steering column.....	80B-7	Trouble symptom chart.....	42A-180
Steering column shaft assembly		Troubleshooting strategy.....	42A-179
Disassembly and assembly.....	37-38	Sunroof motor assembly terminal check.....	42A-208
Removal and installation.....	37-35	Symptom procedures	
Steering wheel		Inspection procedure 1: sunroof does not work at all.....	42A-187
Removal and installation.....	37-31	Inspection procedure 2: the sunroof lid glass does not tilt-up (tilt-down, open and close normally).....	42A-195
Steering wheel audio remote control switch		Inspection procedure 3: the sunroof lid glass does not open (tilt-up, tilt-down and close normally).....	42A-198
Diagnosis		Inspection procedure 4: the sunroof lid glass does not tilt-down or close (tilt-up and open normally).....	42A-201
Standard flow of diagnostic troubleshooting.....	54A-563	Inspection procedure 5: sunroof safety function does not work normally.....	42A-204
Trouble symptom chart.....	54A-563	Inspection procedure 6: sunroof timer lock function does not work normally.....	42A-205
General information.....	54A-561	Super all wheel control (s-AWC).....	90-346
Removal and installation.....	54A-575	Supplemental restraint system (SRS).....	90-326
Special tools.....	54A-562	Symptom procedures	
Steering wheel audio remote control switch inspection.....	54A-576	Inspection procedure 1: scan tool mb991958 cannot communicate with the electronic control AWD system.....	27C-77
Symptom procedures		Inspection procedure 2: the switch position of the drive mode selector does not match with the indicator display in the combination meter.....	27C-80
Inspection procedure 1: steering wheel audio remote control switch does not function. <vehicles with radio and CD player>.....	54A-564	Inspection procedure 3: the tight corner braking phenomenon appears with the drive mode selector in the FWD or AWD position.....	27C-85
Inspection procedure 2: steering wheel audio remote control switch does not function. <vehicles with MMCS>.....	54A-568	Inspection procedure 4: No DTC is set even when the AWDlock indicator lights flash.....	27C-89
Inspection procedure 3: the illumination of the steering wheel audio remote control switch does not come on.....	54A-572		
Steering wheel sensor			
Removal and installation.....	35C-291		
Stoplight.....	90-156		
Strut assembly			
Disassembly and assembly.....	33-12		
Inspection			
Front suspension.....	33-11		
Front suspension.....	33-15		
Removal and installation.....	33-10		
Strut tower bar			
Removal and installation.....	42A-12		
Sunroof.....	90-366		
Sunroof			
Diagnostic trouble code procedures			
Code No. L0630: sr power supply.....	42A-181		
Code No. L0632: sr switch fail.....	42A-183		
Code No. L0634: sr sensor signal.....	42A-185		
Code No. L0637 sr position.....	42A-185		

T

Taillight, position light, rear side marker light, license plate light and lighting monitor tone alarm.....	90-118
Test equipment	
Supplemental restraint system (SRS).....	52B-423
Controller area network (CAN).....	54C-7
Theft alarm	
Diagnosis	
Diagnostic function.....	54A-839
Standard flow of diagnostic troubleshooting.....	54A-839
Diagnosis code chart.....	54A-841
Diagnostic trouble code procedures vehicles with theft alarm sensor	
DTC B120A theft alarm siren error.....	54A-842

DTC B120B theft alarm sensor error	54A-844	Engine overhaul 2.4L engine	11B-4
DTC B120C theft alarm siren flat battery	54A-847	Automatic transaxle overhaul	23D-3
DTC No.U1539 theft alarm siren LIN checksum	54A-848	TPMS transmitter	
DTC No.U1540 theft alarm snsr. LIN checksum	54A-849	Removal and installation	
General information	54A-835	Keyless operation system (KOS)	42B-206
Inspection		Wireless control module (WCM)	42C-117
LIN cutoff control unit check	54A-879	Trailing arm assembly	
Theft-alarm indicator check	54A-879	Inspection	34-24
On-vehicle service		Removal and installation 2.4L engine: 5 persons seat ..	34-16
Customization function	54A-875	Removal and installation 2.4L engine: 7 persons seat, 3.0L engine	34-20
Removal and installation		Trailing arm bushing replacement 2.4L engine: 5 persons seat	34-24
Chassis electrical	54A-876	Trailing arm bushing replacement 2.4L engine: 7persons seat, 3.0L engine	34-26
Chassis electrical	54A-877	Transaxle	
Chassis electrical	54A-878	Disassembly and assembly	
Special tools	54A-838	Continuously variable transaxle overhaul	23B-16
Symptom procedures		Automatic transaxle overhaul	23D-11
Inspection procedure 1: the theft-alarm is not armed (the theft-alarm indicator does not illuminate)	54A-851	Transaxle (transmission) mounting	
Inspection procedure 2: the interior alarm does not work normally while the theft-alarm is triggered	54A-857	Removal and installation <3.0L engine>	32-9
Inspection procedure 3: theft-alarm horn does not sound while the theft-alarm system is triggered.	54A-859	Removal and installation 2.4L engine	32-7
Inspection procedure 4: horns do not sound while the theft-alarm system is triggered	54A-864	Transaxle assembly	
Inspection procedure 5: the activated theft alarm siren sounds even though no faulty operation is made.vehicles with theft alarm sensor	54A-870	Removal and installation	
Inspection procedure 6: theft alarm siren does not sound. vehicles with theft alarm sensor	54A-873	CVT	23A-157
Trouble symptom chart	54A-850	Automatic transaxle	23C-287
Theft-alarm system <vehicles with theft-alarm sensor>	90-402	Transaxle control	
Theft-alarm system <vehicles without theft-alarm sensor>	90-394	Removal and installation	
Thermostat		CVT	23A-153
Inspection	14-38	Automatic transaxle	23C-282
Removal and installation 2.4L engine	14-34	Shift switch assembly continuity check	
Removal and installation 3.0L engine	14-36	CVT	23A-154
Throttle body and EGR system	11B-14	Automatic transaxle	23C-284
Throttle body and EGR system		Transaxle control module (tcm)	
Removal and installation	11B-14	Removal and installation	
Throttle body assembly		CVT	23A-165
Removal and installation		Automatic transaxle	23C-294
Multiport fuel injection (MFI) 2.4L engine	13A-885	Transaxle models	23D-2
Multiport fuel injection (MFI) 3.0L engine	13B-901	Transfer	
Tightening torque	00-60	Disassembly and assembly	
Timing belt	11D-18	Continuously variable transaxle overhaul	23B-81
Timing belt		Automatic transaxle overhaul	23D-92
Inspection		Transfer assembly AWD	
Engine mechanical 3.0L engine	11C-59	Removal and installation	23A-163
Engine overhaul 3.0L engine	11D-23	Removal and installation <vehicles with s-AWC>	23C-292
Removal and installation		Removal and installation <vehicles without s-AWC>	23C-293
Engine mechanical 3.0L engine	11C-55	Transmission fluid cooler and cooler line	
Engine overhaul 3.0L engine	11D-18	Removal and installation	23A-166
Timing chain		Thermo valve check	23A-167
Inspection	11B-39	Transmitter	
Removal and installation		Disassembly and assembly	42C-115
Engine mechanical 2.4L engine	11A-67	Trims	
Engine overhaul 2.4L engine	11B-34	Door trim	
Tire pressure monitoring system (TPMS)	90-362	Removal and installation	52A-11
Tire pressure monitoring system (TPMS)		Interior trim	
Removal and installation	31-9	Removal and installation	52A-10
Torque specifications		Liftgate trim	
		Removal and installation	52A-14
		Trouble symptom chart	27C-76
		Troubleshooting	
		Diagnosis function	54B-4

Diagnostic trouble code chart	54B-6		
Diagnostic trouble code procedures			W
Code No.U1006 theft-alarm siren LIN timeout vehicles with theft-alarm sensor	54B-23	Water hose and pipe	
Code No.U1007 theft-alarm sensor LIN timeout <vehicles with theft-alarm sensor>	54B-30	Removal and installation	
DTC U0169: sunroof LIN timeout <vehicles with sunroof>	54B-6	Engine overhaul 2.4L engine	11B-25
DTC U0215: P/W sw (dr) LIN timeout	54B-10	Engine overhaul 3.0L engine	11D-29
DTC U0231: lighting control sensor LIN timeout <vehicles with auto light function>	54B-15	Water hose and water pipe	
DTC U1109: column sw LIN timeout	54B-19	Inspection	14-48
DTC U150B: column sw checksum error	54B-34	Removal and installation 2.4L engine	14-41
DTC U150C: P/W sw (dr) checksum error	54B-35	Removal and installation 3.0L engine	14-45
DTC U1511: sun roof checksum error <vehicles with sunroof>	54B-36	Water pump	
DTC U1512: lighting control sensor checksum error vehicles with auto light function	54B-37	Removal and installation 2.4L engine	14-39
DTC U1514: bit error (LIN)	54B-38	Removal and installation 3.0L engine	14-40
DTC U1515: No-bus activity error (LIN)	54B-40	WCM	
Troubleshooting guidelines	00-6	Removal and installation	42C-114
Turn-signal light and hazard warning light	90-150	Wheel and tire	
		Installation service point	31-8
		Wheel and tire diagnosis	
		Diagnosis	31-3
		Wheel balance accuracy	31-5
		Wheel speed sensor	
		Inspection	35B-193
		Removal and installation	
		Anti-lock braking system (ABS)	35B-189
		Active stability control system (ASC)	35C-288
		Wheel and tire inspection	35C-289
		Window glass	
		General	42A-13
		Liftgate window glass	
		Removal and installation	42A-27
		Quarter window glass	
		Removal and installation	42A-23
		Special tool	42A-16
		Specification(s)	
		Adhesive	42A-13
		Lubricant	42A-13
		Symptom procedures	
		Inspection procedure 1: water leak through windshield glass/water leak through quarter window glass/water leak through liftgate window glass	42A-16
		Window glass diagnosis	
		Introduction to window glass diagnosis	42A-15
		Window glass diagnostic troubleshooting strategy	42A-15
		Window glass diagnostic trouble symptom chart	42A-15
		Windshield	
		Removal and installation	42A-17
		Windshield wiper and washer	90-208
		Windshield wiper and washer	
		Data list reference table	51-73
		General information	51-25
		Lighting control sensor	
		Adaptation	51-85
		Removal and installation	51-85
		On-vehicle service	
		Configuration function	51-75
		Delayed finishing wipe function inspection	51-74
		Intelligent washing function inspection	51-74
		Lighting control sensor (rain sensor) inspection	51-74
		Windshield intermittent wiper inspection	51-74
		Special tools	51-31

U

Under cover	
Removal and installation	51-22
Universal serial bus (usb) box	90-268
Usb box	
General information	54A-636
Removal and installation	
Chassis electrical	54A-650
Chassis electrical	54A-651
Chassis electrical	54A-652
Special tools	54A-636
Symptom procedures	
The usb adapter data cannot be replayed. <vehicles with radio and CD player>	54A-640
The usb adapter data cannot be replayed. vehicles with MMCS	54A-645
Trouble symptom chart	54A-639
Troubleshooting	
Diagnosis mode <vehicles with MMCS>	54A-639
Diagnosis mode <vehicles with radio and CD player>	54A-637
Standard flow of diagnostic troubleshooting	54A-637
Usb adapter inspection	54A-652

V

Valve stem seal	
Removal and installation	11A-40
Vanity mirror light	90-149
Vehicle identification	
Engine model stamping	00-28
Theft protection label	00-25
Tire and loading information placard	00-24
Vehicle identification code plate	00-24
Vehicle identification number (chassis number)	00-22
Vehicle identification number plate	00-17
Ventilators	
Removal and installation	55A-136

Symptom procedures

Inspection procedure 1: the windshield wipers do not work at all.	51-34
Inspection procedure 10: the windshield washer does not work normally.....	51-66
Inspection procedure 11: the intelligent washing function does not work normally.....	51-70
Inspection procedure 12: delayed finishing wipe function does not work normally.....	51-71
Inspection procedure 2: the windshield wipers do not work when the wiper switch is at the "INT", "washer" or "mist" position. however, the wipers work at low speed when the switch is at the "lo" or "hi" position.	51-39
Inspection procedure 3: windshield wipers do not stop at the specified park position.....	51-41
Inspection procedure 4: windshield wipers do not work normally.	51-44
Inspection procedure 5: the windshield intermittent wiper interval cannot be adjusted by operating the windshield intermittent wiper volume control switch.	51-50
Inspection procedure 6: the windshield intermittent wiper interval is not changed according to the vehicle speed.	51-52
Inspection procedure 7: the rain sensitive auto wiper function does not work at all vehicles with lighting control sensor. ..	51-55
Inspection procedure 8: the rain sensitive auto wiper function works even though there is no rainfall vehicles with lighting control sensor.	51-60
Inspection procedure 9: sometimes the rain sensitive auto wiper function works even though there is no rainfall vehicles with lighting control sensor.	51-63
Windshield washer	
Inspection	51-82
Removal and installation.....	51-81
Windshield wiper	
Inspection	51-79
Removal and installation.....	51-76
Windshield wiper and washer diagnosis	
Trouble symptom chart.....	51-32
Troubleshooting strategy	51-32