

GROUP 70

COMPONENT
LOCATIONS

 
CONTENTS

RELAY	70-2	FUSIBLE LINK AND FUSE	70-13
ECU	70-3	INSPECTION CONNECTOR AND SPARE CONNECTOR	70-14
SENSOR.....	70-6	EARTH CABLE.....	70-16
SOLENOID AND SOLENOID VALVE	70-11	EARTH	70-17


RELAY

M1701000402417


Name	Symbol	Name	Symbol
A/C compressor relay	A	Headlamp relay (LO)	A
Blower relay	B	Headlamp washer relay	A
Condenser fan relay	A	Heated seat relay	B
CVT control relay	A	Horn relay	A
Engine control relay	A	Radiator fan relay	A
Fan control relay	A	Starter relay	A
Front fog lamp relay	A	Throttle valve control servo relay	A
Headlamp relay (HI)	A	Wiper deicer relay	A

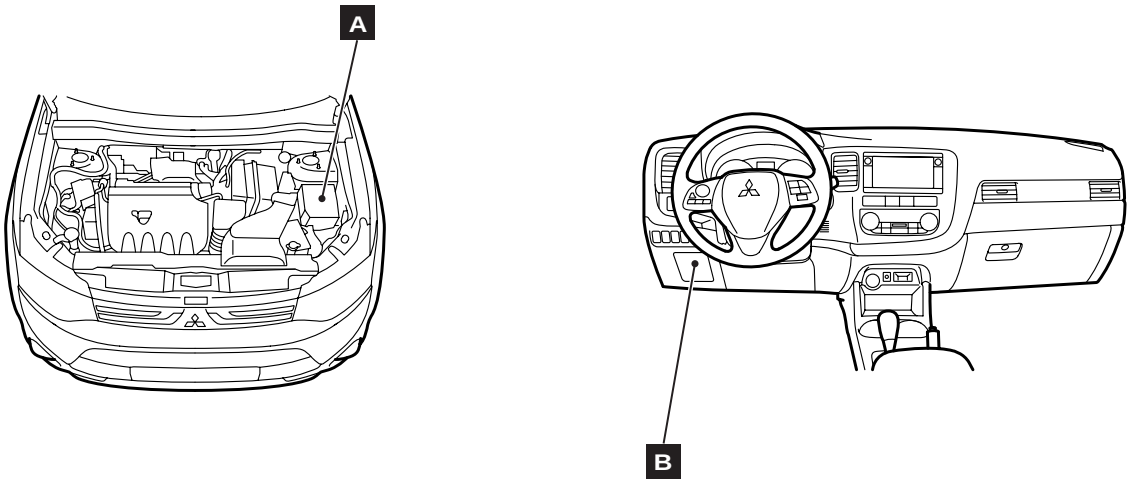


ACB04465AB

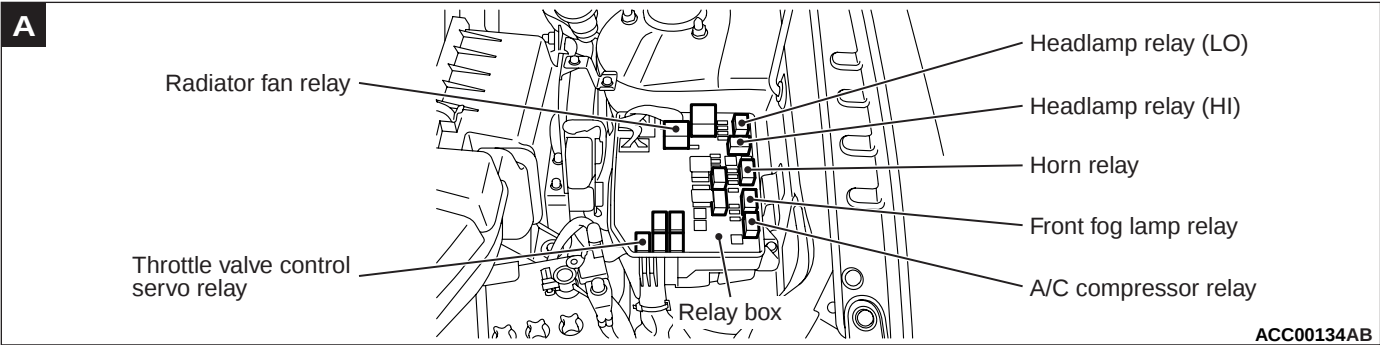 

ACC00134AB

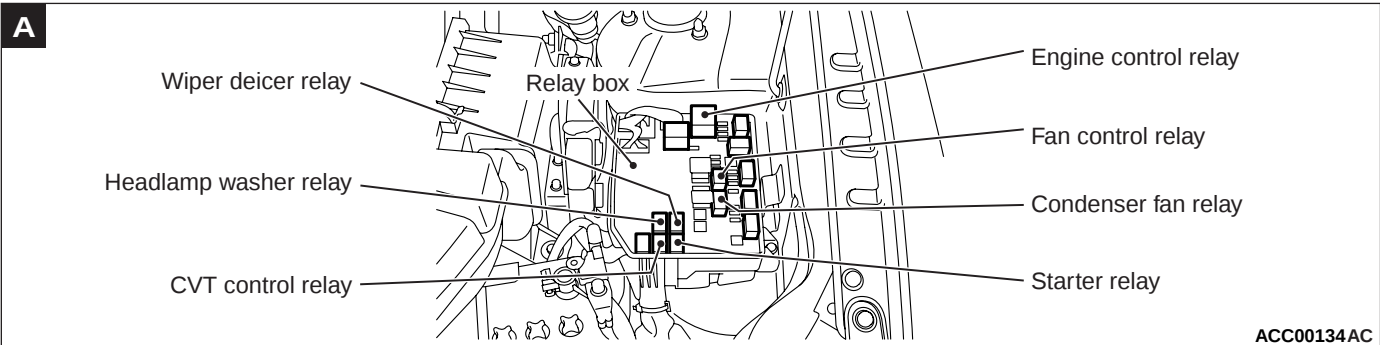 


ACC00134AC

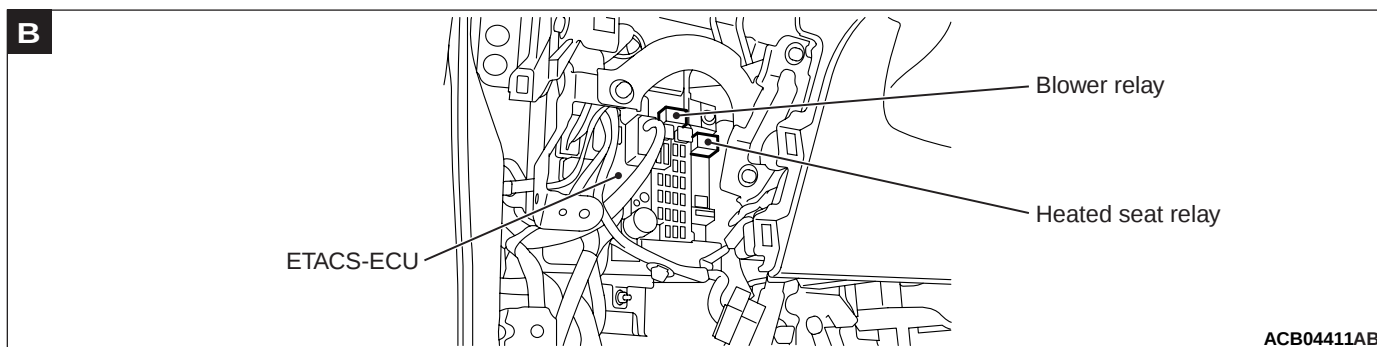 


ECU

M1701000501972

Name	Symbol	Name	Symbol
4WD-ECU	C	ETACS-ECU	J
ABS-ECU	A	Hands free-ECU	N
ASC-ECU	A	Hazard indicator assembly (incorporating CPU)	G
CAN box unit <Vehicles with MMCS>	H	Headlamp control unit <Vehicles with discharge type headlamp>	Q
Column switch (incorporating column-ECU)	D	Heater controller assembly (A/C-ECU)	G
Combination meter (incorporating CPU)	E	KOS-ECU	I
Corner sensor/back sensor-ECU <Vehicles with reversing sensor system>	L	OSS-ECU	I
CVT-ECU	C	Power window main switch (incorporating CPU)	R
Electric tailgate unit assembly (incorporating electric tailgate control unit)	P	Receiver antenna module <Vehicles without KOS>	I
Electrical steering lock <Vehicles with KOS>	F	SRS-ECU	M
Engine-ECU	B	Sunroof motor assembly (incorporating CPU)	O
EPS-ECU	K	USB box	N

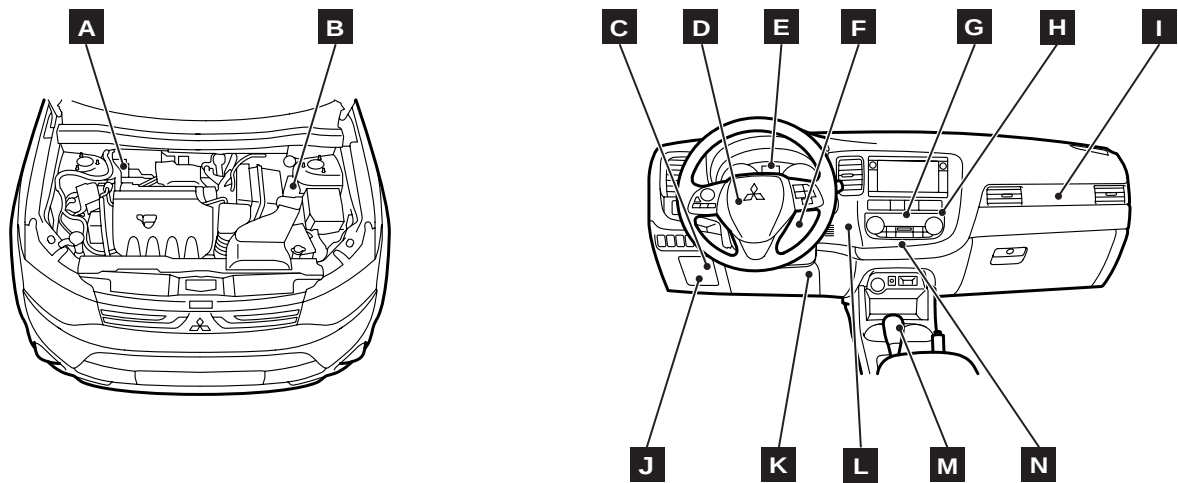 


ACB04465AC

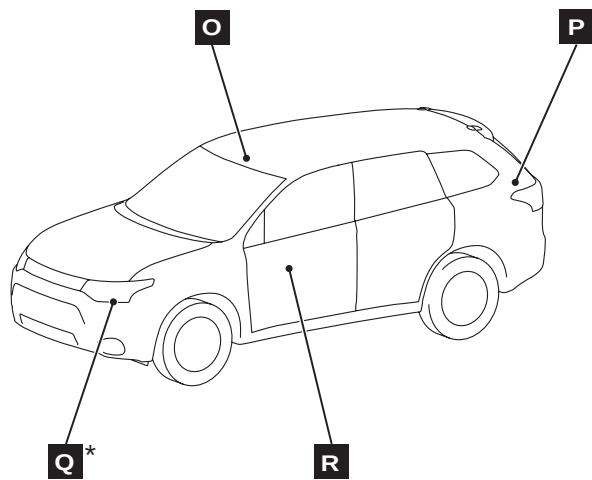 


ACB04714AB

 
NOTE: *:also equipped at right side.

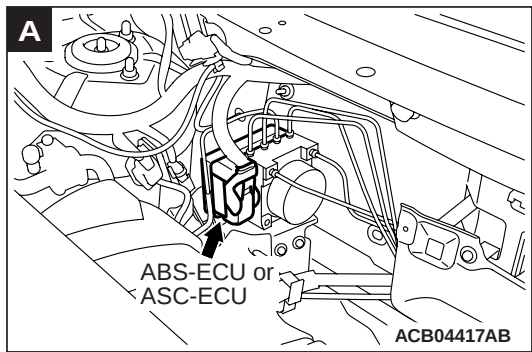









ACB04417AB







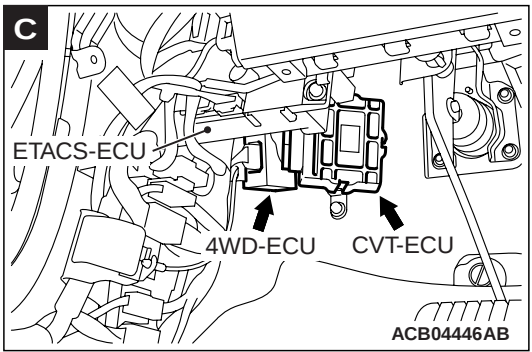 


ACB04446AB

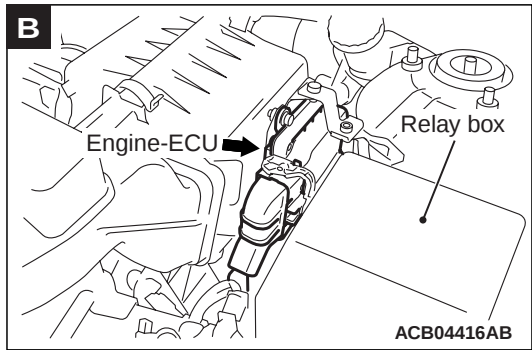 

ACB04416AB

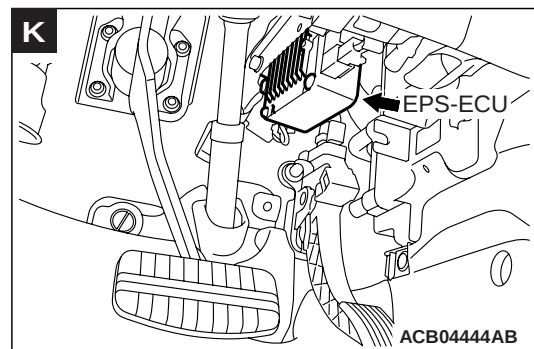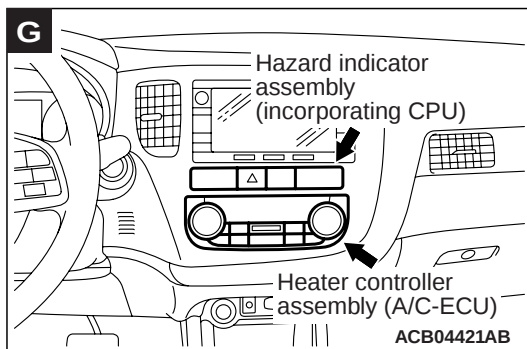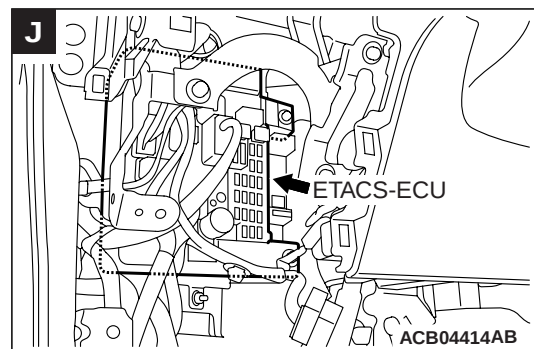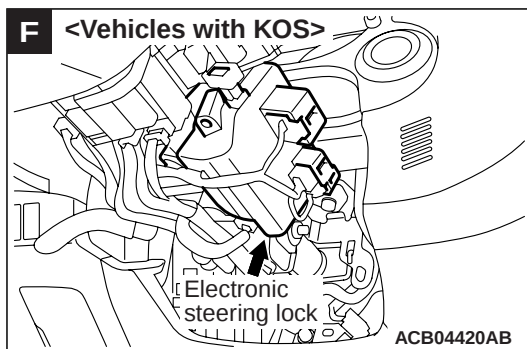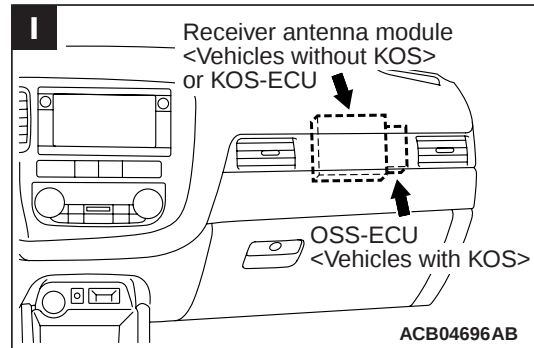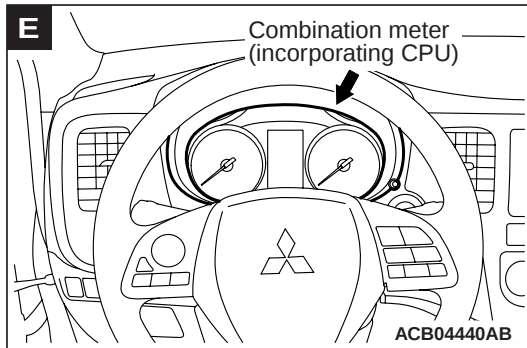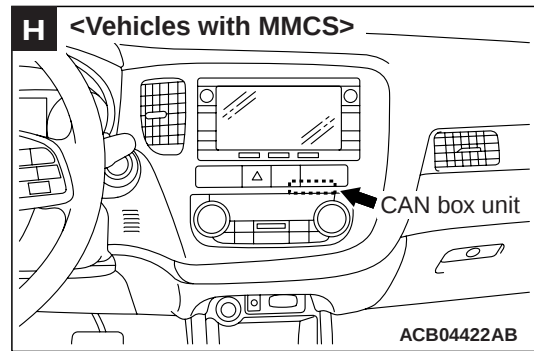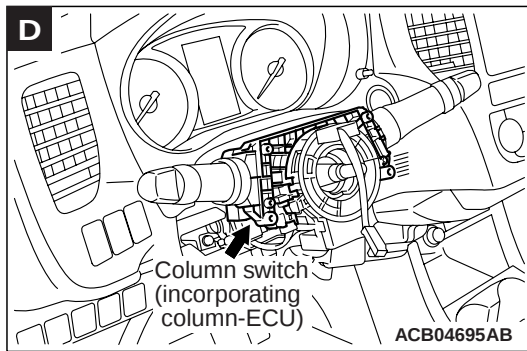        

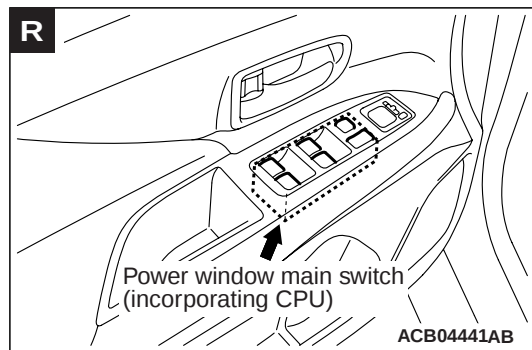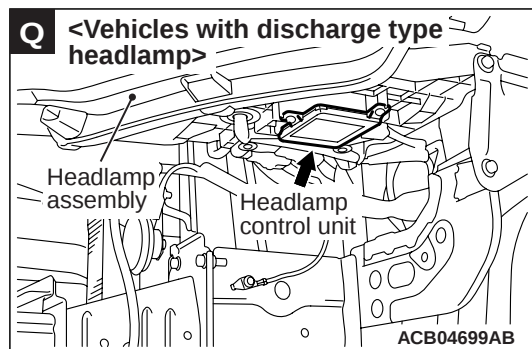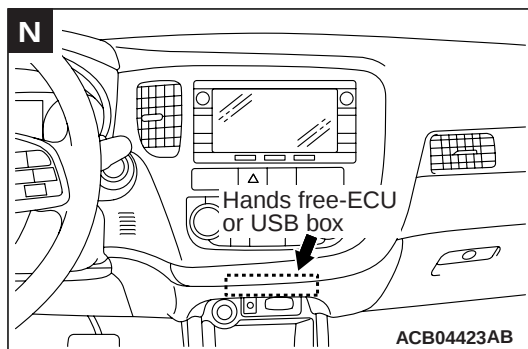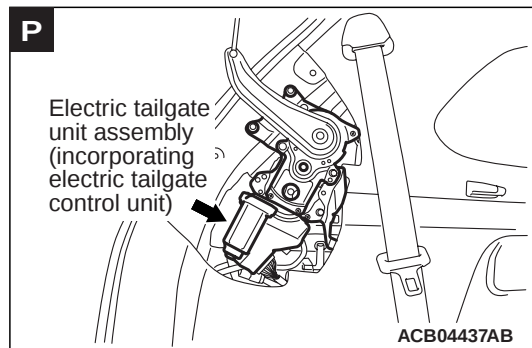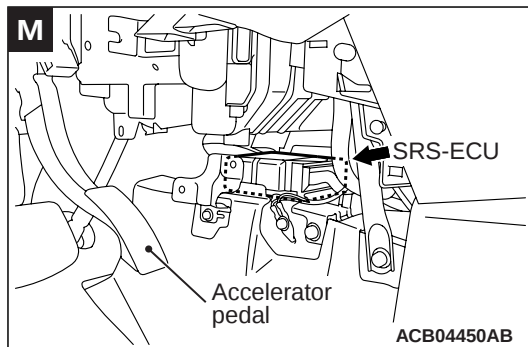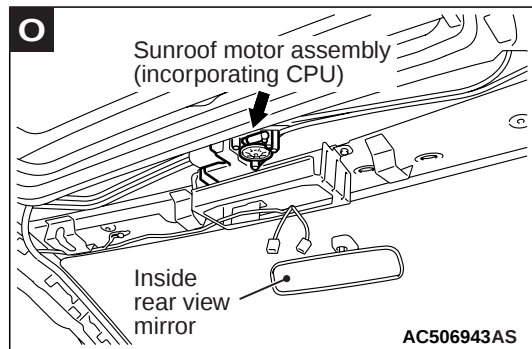      
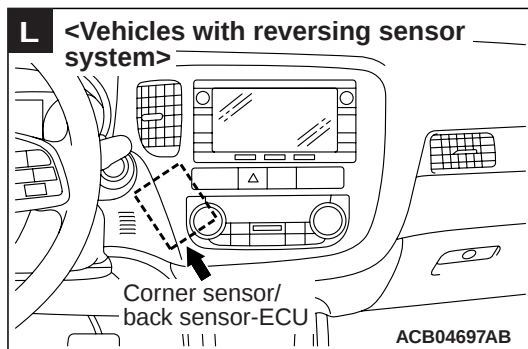 


SENSOR


M1701000603265

Name	Symbol	Name	Symbol
A/C pressure sensor	A	Interior temperature sensor	O
Accelerator pedal position sensor	P	Lighting control sensor <Vehicles with auto lamp and rain sensitive AUTO wiper>	R
Air flow sensor	F		

Name	Symbol	Name	Symbol
Ambient temperature sensor	L	Manifold absolute pressure sensor	H
Back sensor <Vehicles with reversing sensor system>	Z	Oxygen sensor (front)	C
Crank angle sensor	I	Oxygen sensor (rear)	V
Detonation sensor	B	Primary pulley speed sensor	M
Electronic-controlled throttle valve (incorporating throttle position sensor)	J	Rear corner sensor <Vehicles with reversing sensor system>	Z
Engine coolant temperature sensor	E	Rear height sensor <Vehicles with headlamp automatic levelling system>	X
Fin thermo sensor	Q	Rear wheel speed sensor	Y
Front height sensor <Vehicles with headlamp automatic levelling system>	T	Secondary pulley speed sensor	K
Front impact sensor	G	Side impact sensor	W
Front wheel speed sensor	U	Steering wheel sensor <Vehicles with ASC>	N
Inlet camshaft position sensor	D	Tailgate sensor <Vehicles with electric tailgate>	S







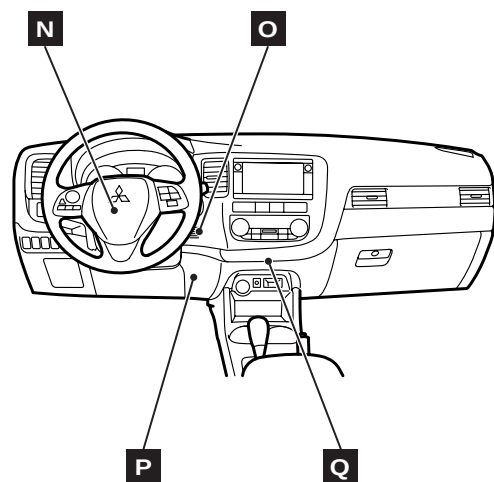 
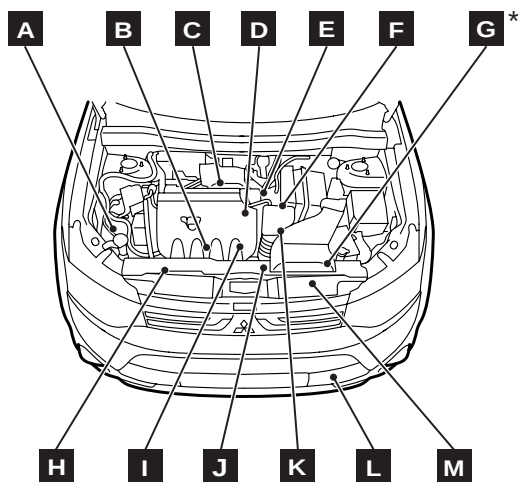 










ACB04465AD








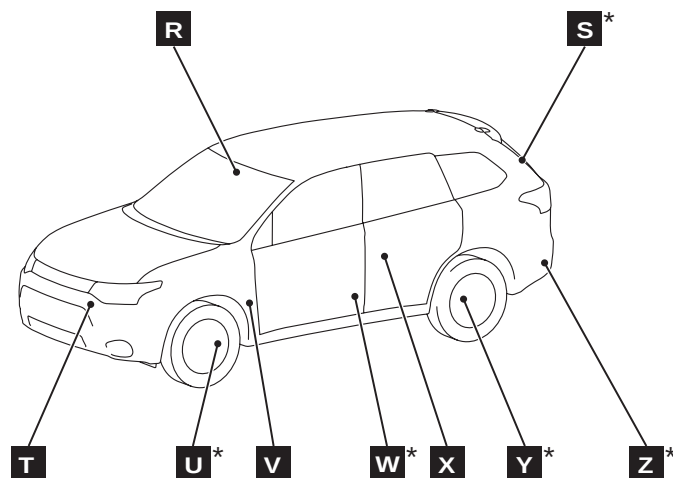 




ACB04714AC

                          NOTE: *:also equipped at the right side.

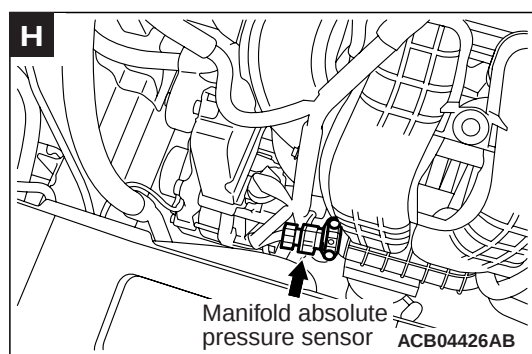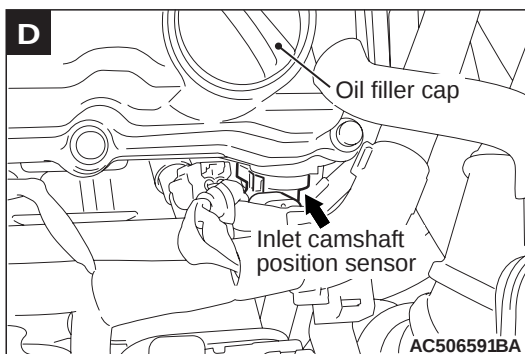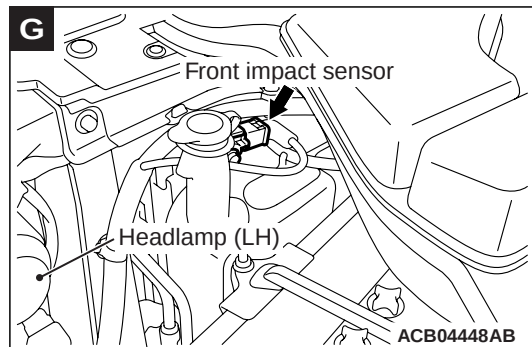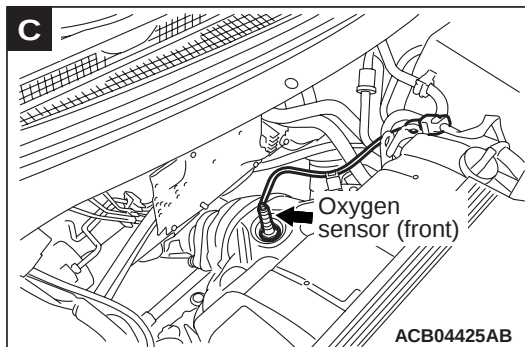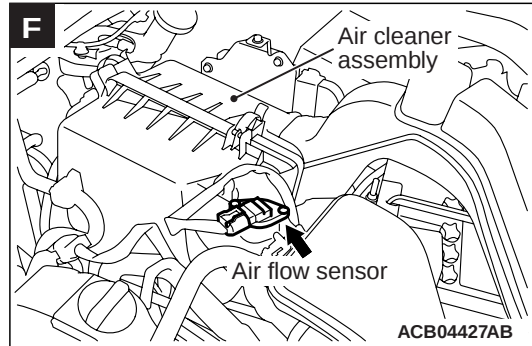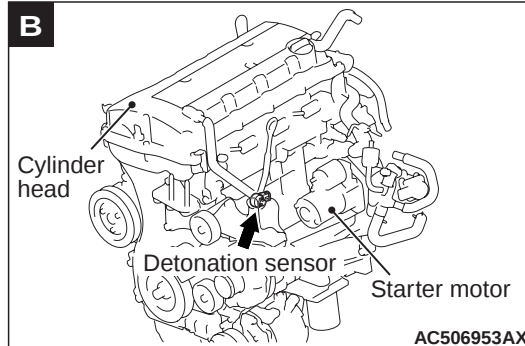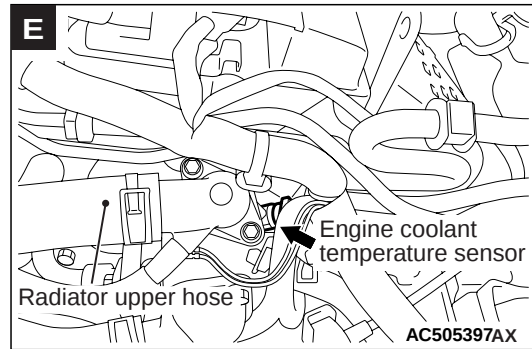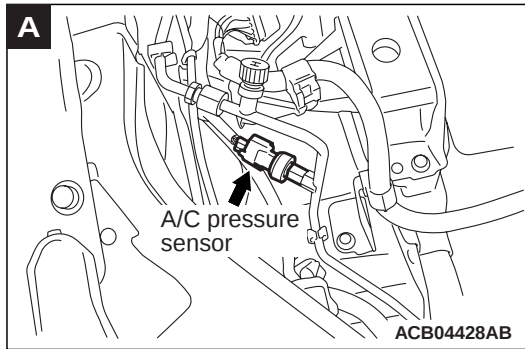

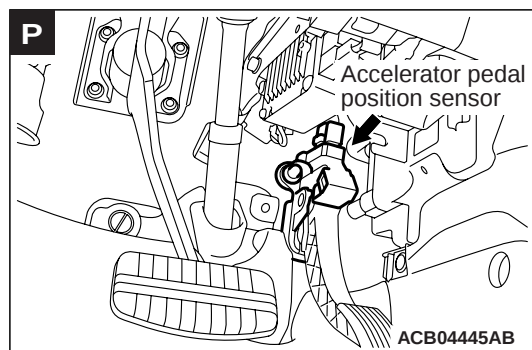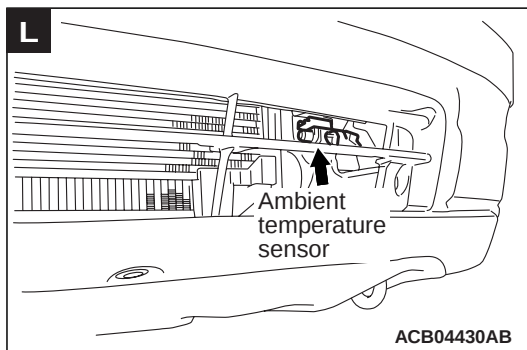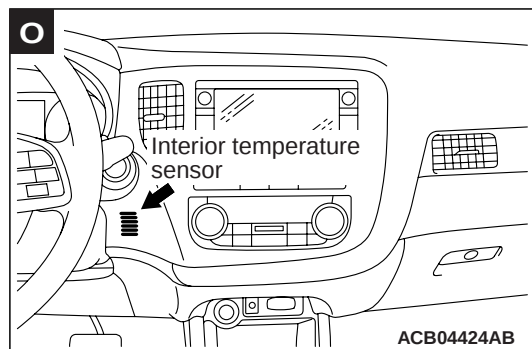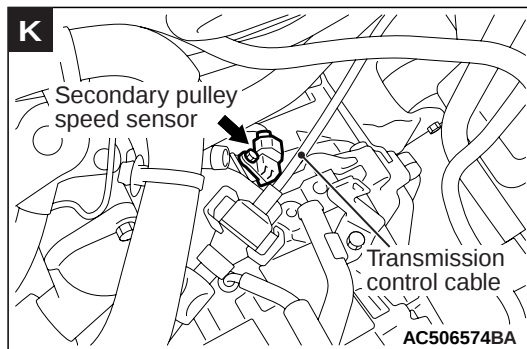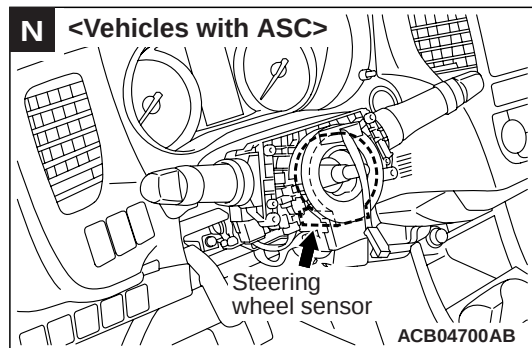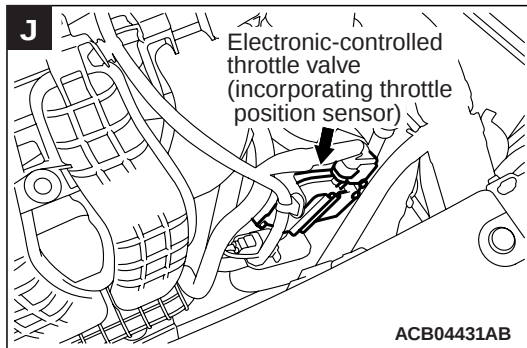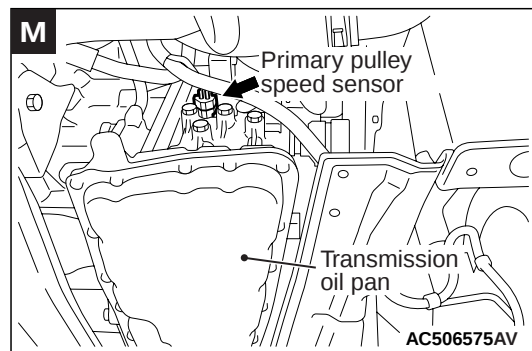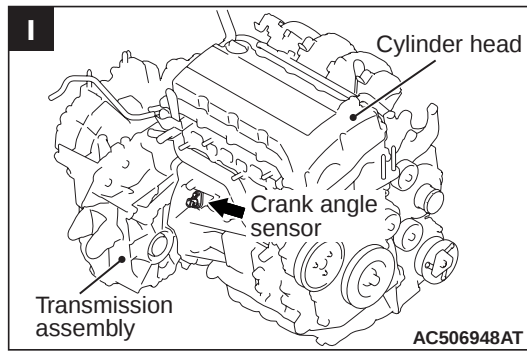

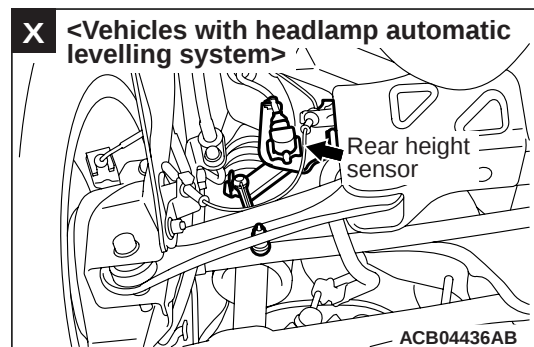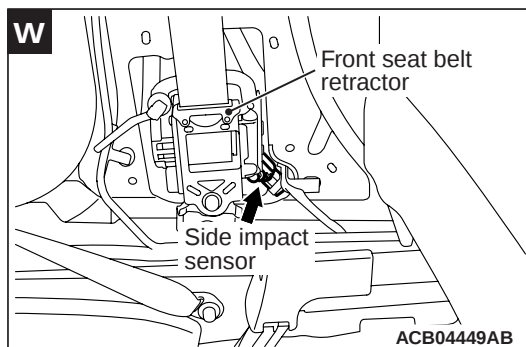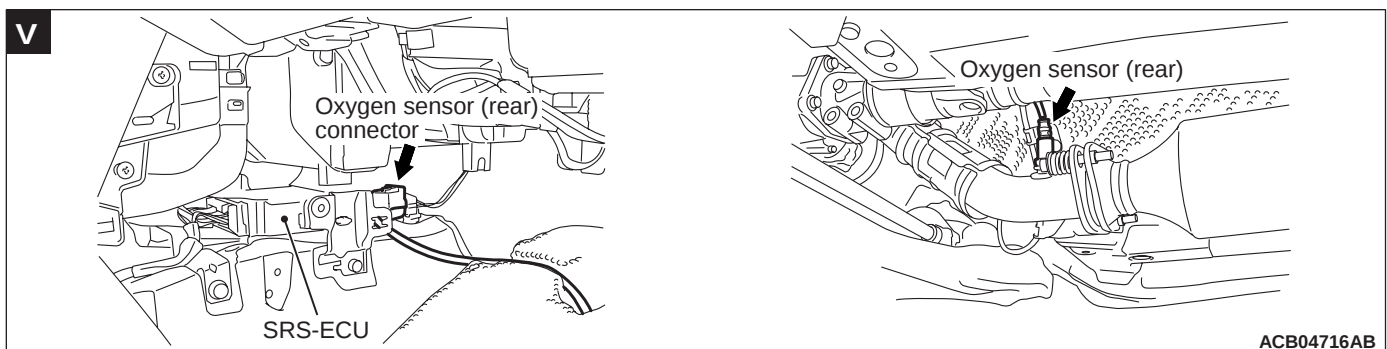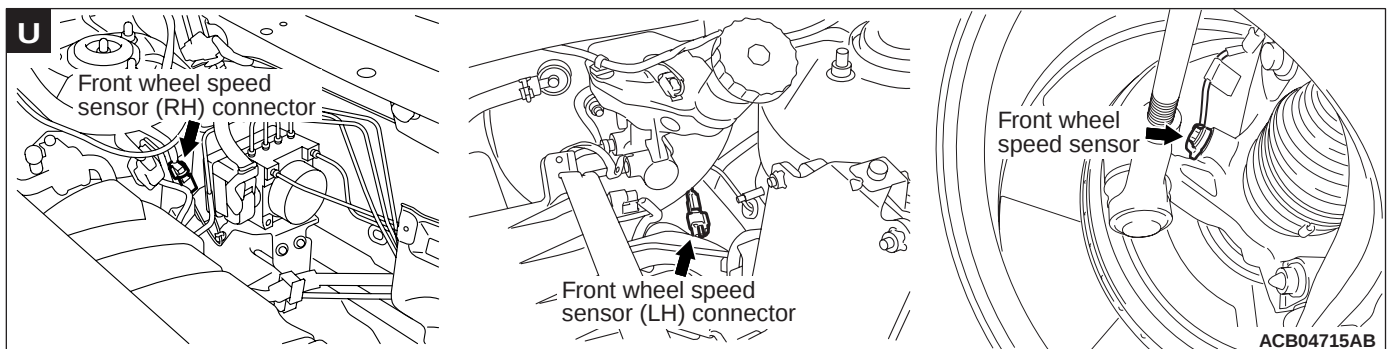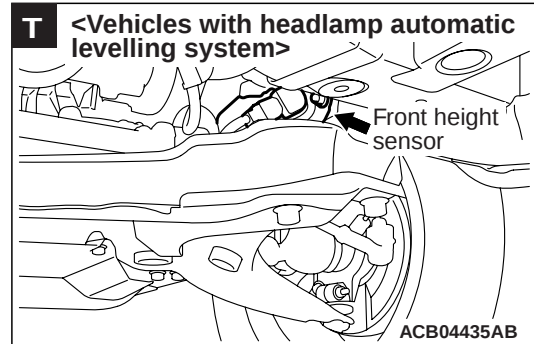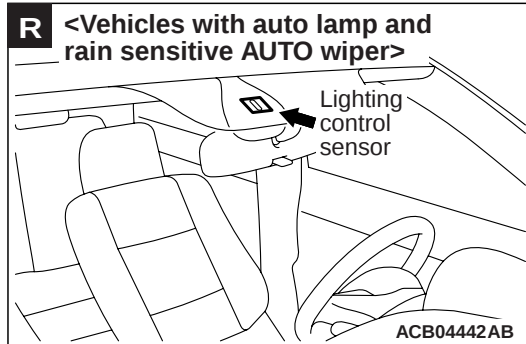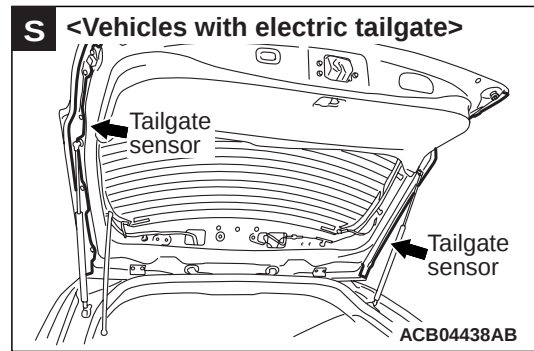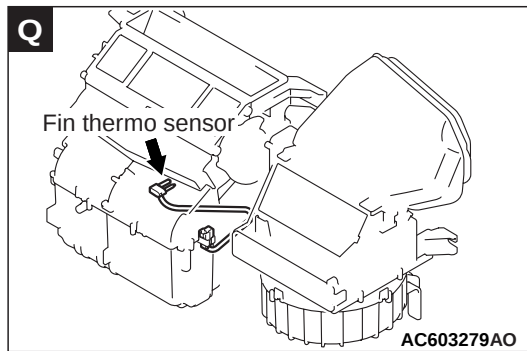


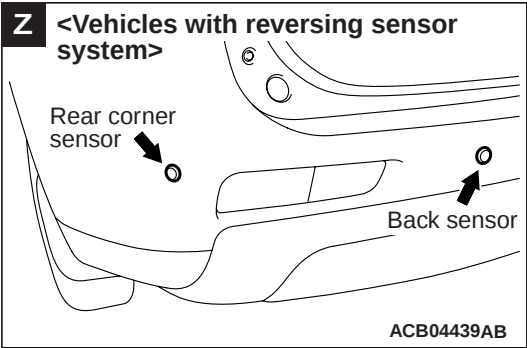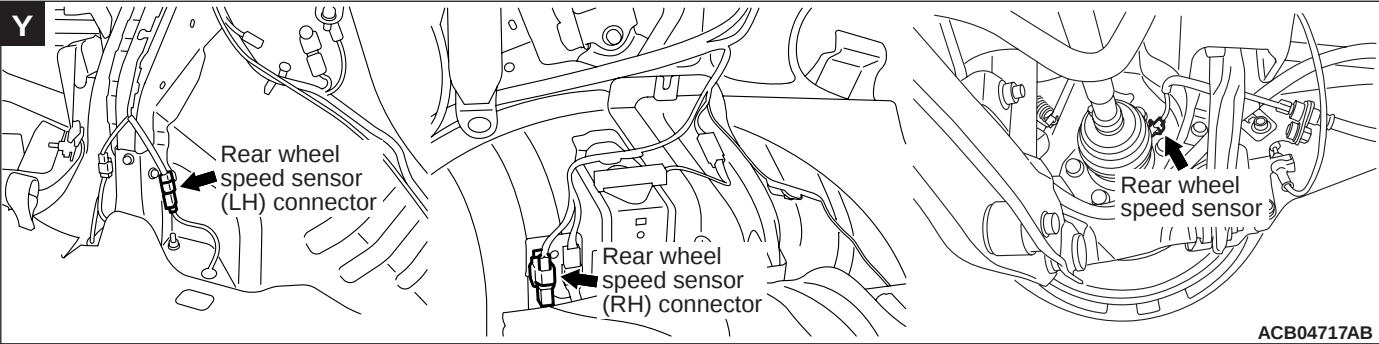


SOLENOID AND SOLENOID VALVE

M1701000802363





Name	Symbol	Name	Symbol
CVT assembly (incorporating CVT control solenoid valve)	D	Purge control solenoid valve	C
Electronic control coupling solenoid <4WD>	G	Selector lever assembly (incorporating shift lock solenoid)	F
Hydraulic unit (incorporating solenoid valve)	A	Steering lock solenoid <Vehicles without KOS>	E
Inlet oil feeder control valve	B		



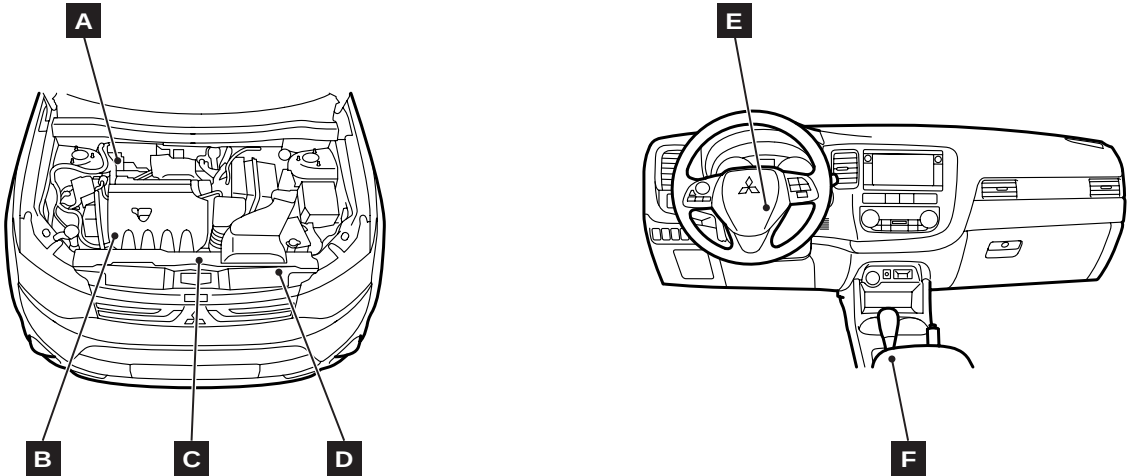 


ACB04465AE

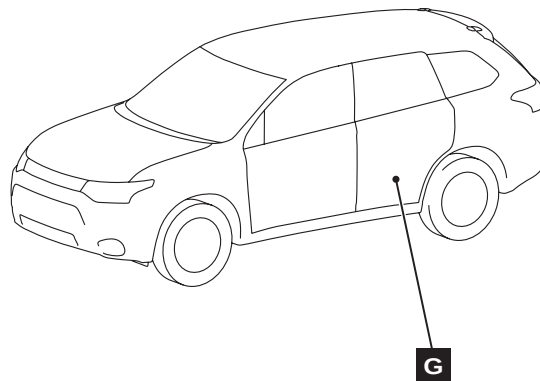 

ACB04714AD

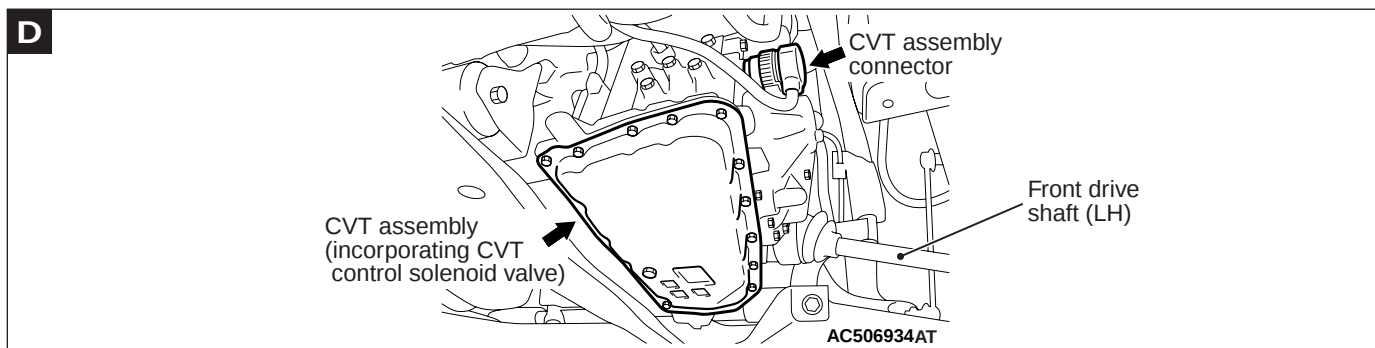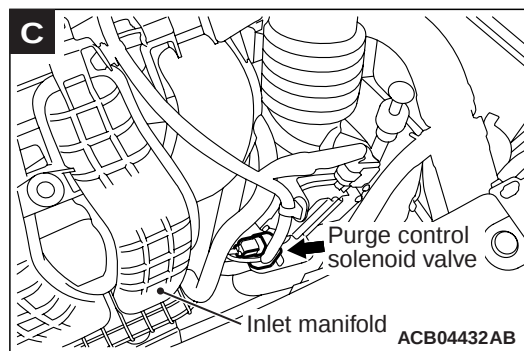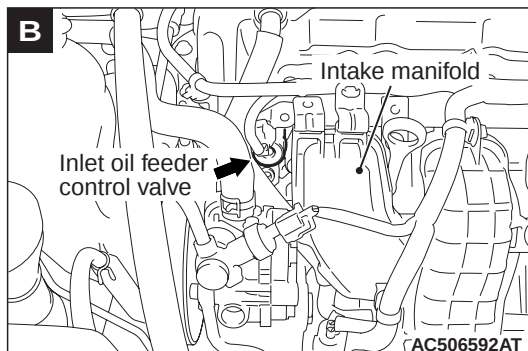   
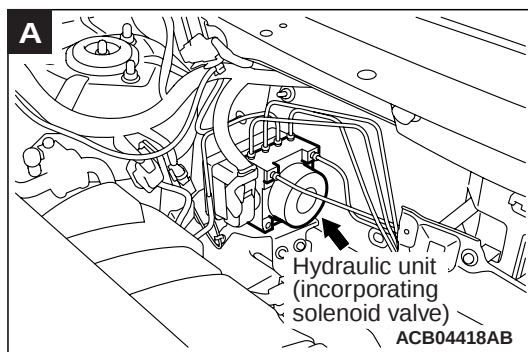 


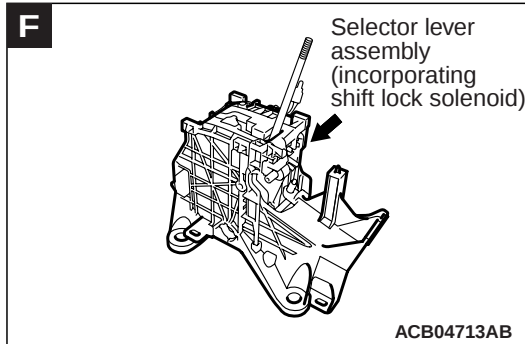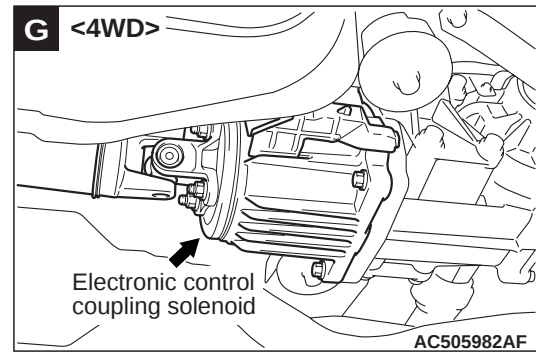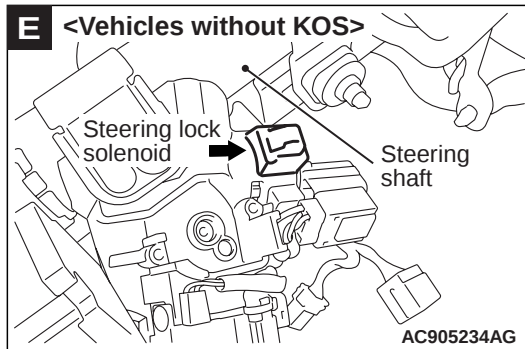   






FUSIBLE LINK AND FUSE

M1701000101714

Name	Symbol	Name	Symbol
Fuse Nos.3 to 23 and 25 (Passenger compartment)	C	Fusible link Nos.SBF1 to SBF7 (Engine compartment)	B
Fuse Nos.BF1 to BF3 and F1 to F22 (Engine compartment)	B	Fusible link Nos.1 to 5 (Connected directly to battery positive terminal)	A
Fusible link Nos.1, 2 and 24 (Passenger compartment)	C		

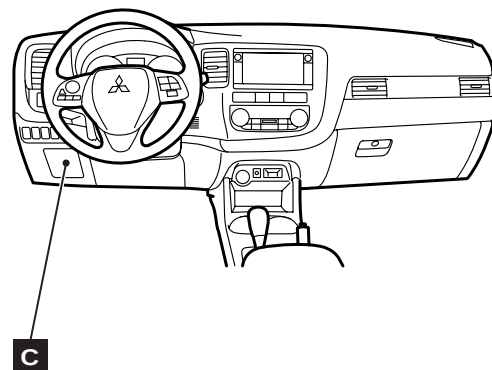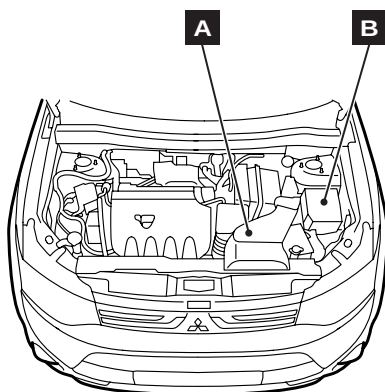  


ACB04465AF

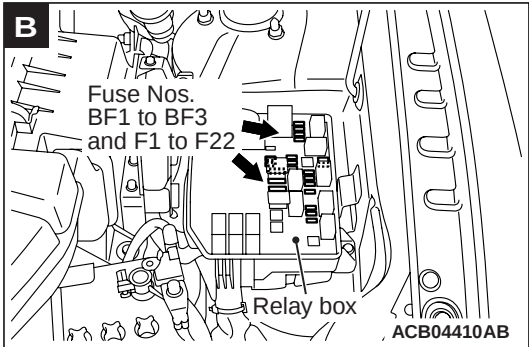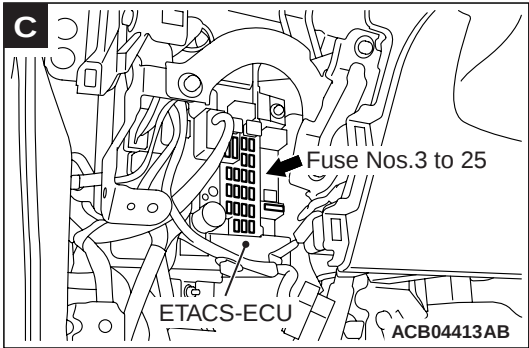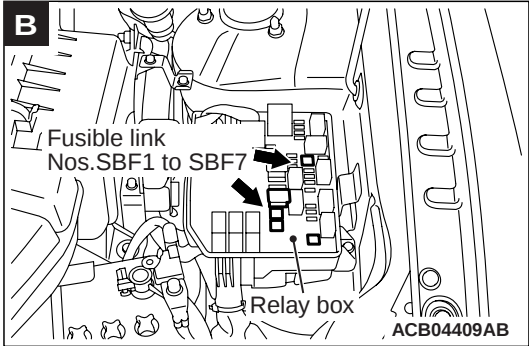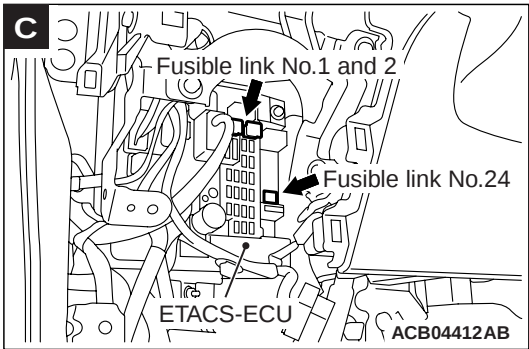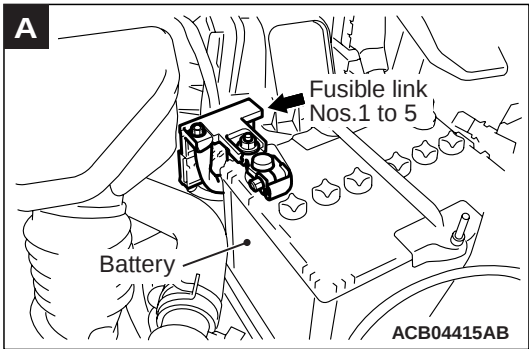     


INSPECTION CONNECTOR AND SPARE CONNECTOR

M1701000201250

Name	Symbol	Name	Symbol
Diagnosis connector	B	Spare connector (for trailer harness)	A
Spare connector (for switch box)	C		

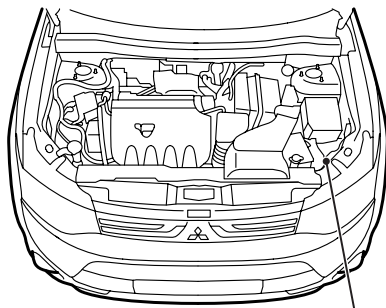 


A

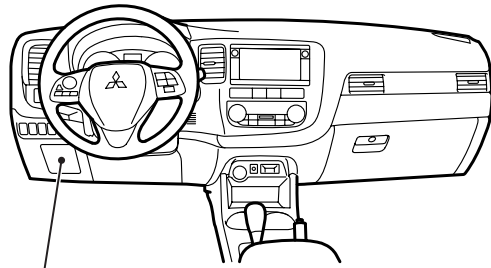 


B

 ACB04465AG

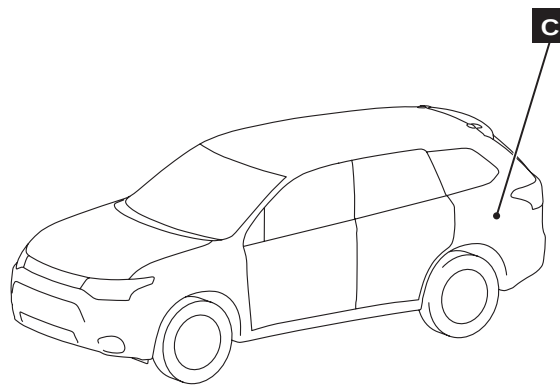

C

 
ACB04714AE

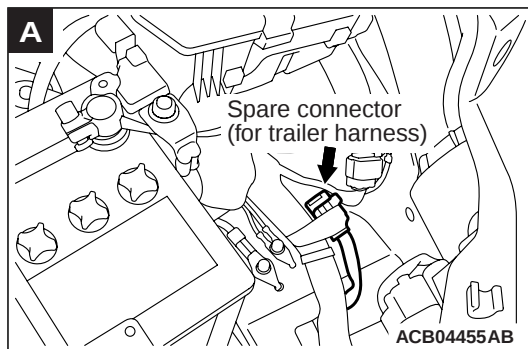

A

Spare connector
(for trailer harness)

 
ACB04455AB

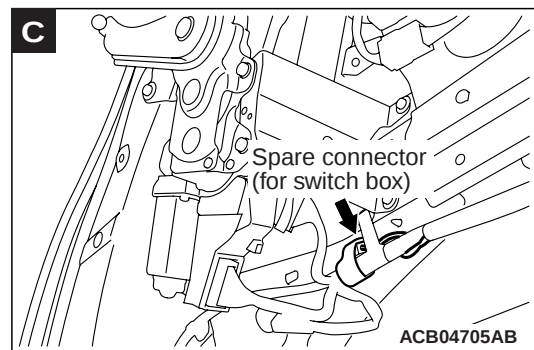

C

Spare connector
(for switch box)

 ACB04705AB

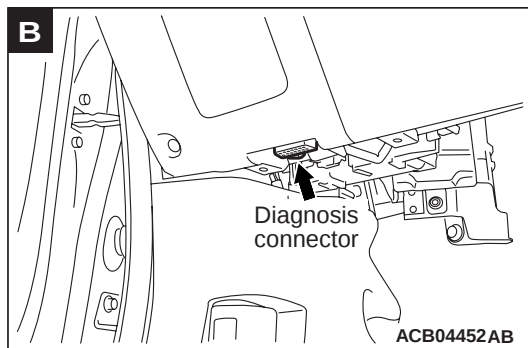



B

Diagnosis
connector

ACB04452AB

EARTH CABLE

  
M1701001001602

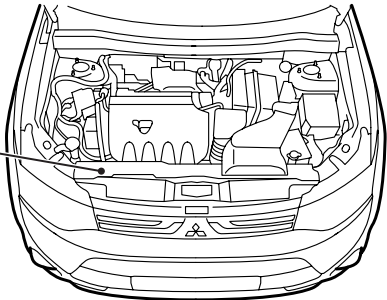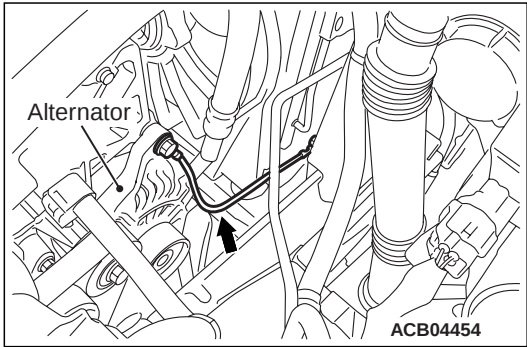

ACB04718AB

EARTH

 M1701000302250

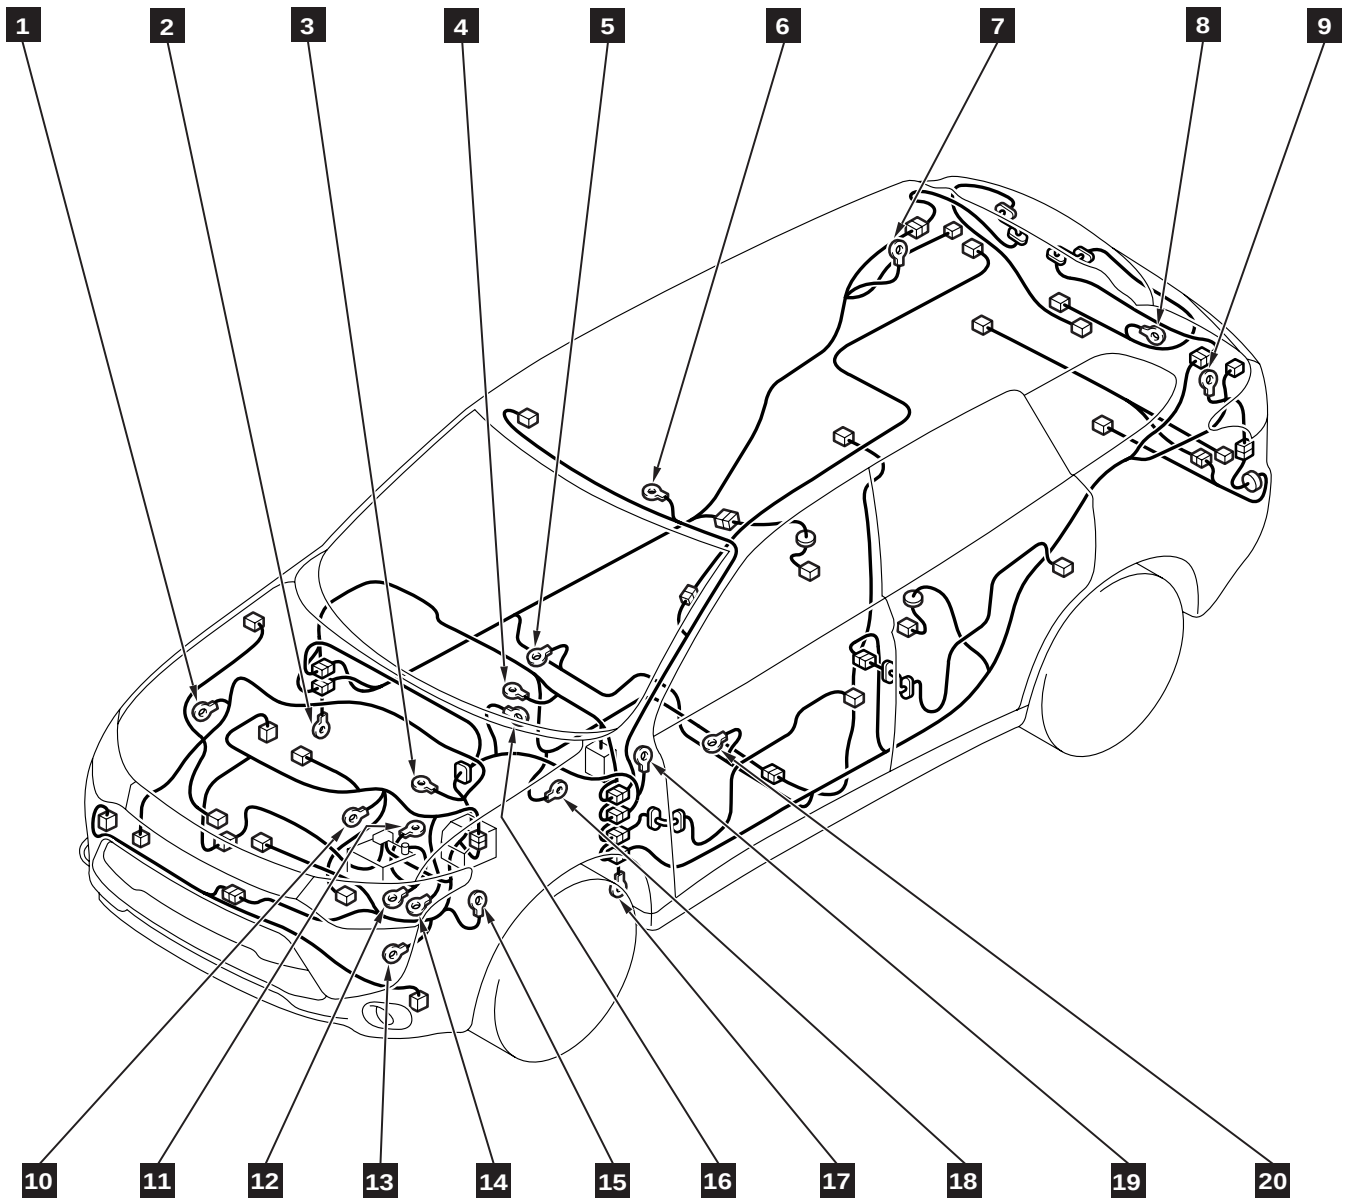

ACC00135AB

NOTE: Same earth numbers are used in the circuit diagram.

